

CODiScan™ HS7600

PRODUCT REFERENCE GUIDE



Wearable Bluetooth® Bar Code Reader

 **DATALOGIC**

Datalogic S.r.l.

Via S. Vitalino, 13
40012 Calderara di Reno (BO)
Italy
Tel. +39 051 3147011
Fax +39 051 3147205

© 2024 Datalogic S.p.A. and /or its affiliates

All rights reserved. Without limiting the rights under copyright, no part of this documentation may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means, or for any purpose, without the express written permission of Datalogic S.p.A. and/or its affiliates.

Owners of Datalogic products are hereby granted a non-exclusive, revocable license to reproduce and transmit this documentation for the purchaser's own internal business purposes. Purchaser shall not remove or alter any proprietary notices, including copyright notices, contained in this documentation and shall ensure that all notices appear on any reproductions of the documentation.

Electronic versions of this document may be downloaded from the Datalogic website (www.datalogic.com). If you visit our website and would like to make comments or suggestions about this or other Datalogic publications, please let us know via the "Contact" page.

Disclaimer

Datalogic has taken reasonable measures to provide information in this manual that is complete and accurate, however, Datalogic shall not be liable for technical or editorial errors or omissions contained herein, nor for incidental or consequential damages resulting from the use of this material. Datalogic reserves the right to change any specification at any time without prior notice.

Trademarks

Datalogic and the Datalogic logo are registered trademarks of Datalogic S.p.A. in many countries, including the U.S.A. and the E.U.

CODiScan is a trademark of Datalogic S.p.A. and/or its affiliates, registered in the U.S. The Bluetooth word mark and logos are owned by Bluetooth SIG, Inc and any use of such marks by Datalogic S.p.A and/or its affiliates is under license. All other brand and product names may be trademarks of their respective owners.

Patents

See www.patents.datalogic.com for patent list.

TABLE OF CONTENTS

| | |
|---|-------------|
| PREFACE | XIII |
| About this Manual | xiii |
| Overview | xiii |
| Manual Conventions | xiv |
| Technical Support | xiv |
| Support Through the Website | xiv |
| Reseller Technical Support | xiv |
| WARRANTY | xv |
| | |
| CHAPTER 1. INTRODUCTION | 1 |
| About the Reader | 1 |
| General Features | 2 |
| Battery Safety | 2 |
| Programming the Reader | 4 |
| Configuration Methods | 4 |
| Programming Bar Codes | 4 |
| Datalogic Aladdin™ | 4 |
| Aladdin™ App | 4 |
| | |
| CHAPTER 2. SETUP | 5 |
| Unpacking | 5 |
| Setting up the CODiScan™ HS7600 Reader | 5 |
| Using the CODiScan™ HS7600 | 6 |
| Charging the Batteries | 6 |
| Mounting the Reader | 8 |
| Wearing the Hand Trigger | 9 |
| Maintenance and Disposal | 11 |
| Lanyard | 12 |
| Removing the Device from the Portable Holder | 13 |
| Linking the Reader | 14 |
| Link Reader as Serial Device to a Bluetooth Host | 14 |
| Link Reader as HID device to a Bluetooth host | 14 |
| Link Reader as HOGP device to a Bluetooth (LE) host | 15 |
| Bluetooth Passkey or Pin Code Entry Request | 16 |
| Power Off | 16 |
| Parts of the Reader | 17 |
| Multifunctional Button | 17 |
| Scanner LEDs | 18 |
| Connecting the Device | 19 |
| Interface Selection | 19 |
| Configuring THE GATEWAY Interface | 19 |
| Customizing Configuration Settings | 22 |
| Using the Programming Bar Codes | 22 |
| Datalogic Aladdin™ Utility | 22 |
| Aladdin™APP | 22 |
| Interface Settings | 23 |
| Configuring Other Features | 23 |
| Software Version Transmission | 23 |

| | |
|--|-----------|
| Resetting the Product Configuration to Defaults | 24 |
| Restore Custom Default Configuration | 24 |
| Restore Factory Configuration | 24 |
| CHAPTER 3. CONFIGURATION WITH BAR CODES..... | 25 |
| Configuration Parameters | 25 |
| Gateway Interface Configuration: | 25 |
| Parameters common to all interface applications: | 25 |
| Symbology-specific parameters: | 26 |
| GLOBAL INTERFACE FEATURES | 27 |
| Host Commands — Obey/Ignore | 27 |
| USB-COM INTERFACES | 28 |
| USB-COM SETTINGS | 29 |
| Intercharacter Delay | 29 |
| Beep On ASCII BEL | 30 |
| Beep On Not on File | 30 |
| ACK NAK Options | 31 |
| ACK Character | 32 |
| NAK Character | 32 |
| ACK NAK Timeout Value | 33 |
| ACK NAK Retry Count | 33 |
| ACK NAK Error Handling | 34 |
| Indicate Transmission Failure | 34 |
| Disable Character | 35 |
| Enable Character | 35 |
| KEYBOARD INTERFACE | 37 |
| COUNTRY MODE | 38 |
| Setup on PC to use ALT Universal | 38 |
| Setting Country Mode | 39 |
| OTHER KEYBOARD PARAMETERS | 53 |
| Encoding Type | 53 |
| ALT Output Type | 60 |
| Keyboard Numeric Keypad | 61 |
| Keyboard Send Control Characters | 61 |
| Intercharacter Delay | 62 |
| Intercode Delay | 62 |
| USB Keyboard Speed | 63 |
| USB-OEM INTERFACE | 64 |
| USB-OEM Device Usage | 65 |
| DATA FORMAT | 66 |
| GLOBAL SETTINGS | 67 |
| Global Prefix/Suffix | 67 |
| Case Conversion | 68 |
| Character Conversion | 68 |
| Global AIM ID | 69 |
| GS1-128 AIM ID | 69 |
| LABEL ID | 70 |
| Label ID: Pre-loaded Sets | 70 |
| Label ID: Set Individually Per Symbology | 71 |
| Label ID Control | 71 |
| Label ID Symbology Selection | 72 |
| READING PARAMETERS | 77 |
| SCANNING FEATURES | 78 |
| Scan Mode | 78 |
| Scanning Active Time | 79 |
| Flash On Time | 79 |
| Flash Off Time | 80 |
| Double Read Timeout | 80 |
| Object Detection Sensitivity | 82 |
| Object Detection Illumination Off Time | 83 |
| LED AND BEEPER INDICATORS | 84 |

| | |
|--|-----------|
| Power On Alert | 84 |
| Good Read Beep Type | 84 |
| Good Read Beep Frequency | 85 |
| Good Read Beep Length | 86 |
| Good Read Beep Volume | 87 |
| Silent Mode | 88 |
| Good Read LED Duration | 89 |
| Good Read: When to Indicate | 90 |
| Green Spot Duration | 91 |
| Good Read Vibration Duration | 91 |
| CAMERA CONTROL | 92 |
| Aiming Pointer | 92 |
| Pick Mode | 92 |
| Mobile Phone Mode | 93 |
| Mobile Phone Saturation Rate | 93 |
| Decode Negative Image | 94 |
| Image Capture | 94 |
| MULTIPLE LABEL READING | 95 |
| Multiple Labels per Frame | 95 |
| Multiple Labels Ordering by Code Symbology | 95 |
| Multiple Labels Ordering by Code Length | 96 |
| 1D SYMBOLOGIES | 97 |
| DISABLE ALL SYMBOLOGIES | 98 |
| COUPON CONTROL | 98 |
| Coupon Control | 98 |
| UPC-A | 99 |
| UPC-A Enable/Disable | 99 |
| UPC-A Check Character Transmission | 99 |
| Expand UPC-A to EAN-13 | 100 |
| UPC-A Number System Character Transmission | 100 |
| UPC-E | 101 |
| UPC-E Enable/Disable | 101 |
| UPC-E Check Character Transmission | 101 |
| Expand UPC-E to EAN-13 | 102 |
| Expand UPC-E to UPC-A | 102 |
| UPC-E Number System Character Transmission | 102 |
| GTIN Formatting | 103 |
| EAN-13 | 104 |
| EAN-13 Enable/Disable | 104 |
| EAN-13 Check Character Transmission | 104 |
| EAN-13 Flag 1 Character | 105 |
| EAN-13 to ISBN Conversion | 105 |
| EAN-13 to ISSN Conversion | 106 |
| EAN-8 | 107 |
| EAN-8 Enable/Disable | 107 |
| EAN-8 Check Character Transmission | 107 |
| Expand EAN-8 to EAN-13 | 108 |
| UPC/EAN GLOBAL SETTINGS | 109 |
| UPC/EAN Price Weight Check | 109 |
| UPC/EAN Quiet Zones | 110 |
| Add-Ons | 111 |
| Optional Add-ons | 111 |
| Optional Add-On Timer | 112 |
| GS1 DATABAR™ OMNIDIRECTIONAL | 113 |
| GS1 DataBar Omnidirectional Enable/Disable | 113 |
| GS1 DataBar Omnidirectional to GS1-128 Emulation | 113 |
| GS1 DATABAR™ EXPANDED | 114 |
| GS1 DataBar Expanded Enable/Disable | 114 |
| GS1 DataBar Expanded to GS1-128 Emulation | 114 |
| GS1 DataBar Expanded Length Control | 115 |
| GS1 DataBar Expanded Set Length 1 | 115 |

| | |
|--|-----|
| GS1 DataBar Expanded Set Length 2 | 116 |
| GS1 DATABAR™ LIMITED | 117 |
| GS1 DataBar Limited Enable/Disable | 117 |
| GS1 DataBar Limited to GS1-128 Emulation | 117 |
| CODE 39 | 118 |
| Code 39 Enable/Disable | 118 |
| Code 39 Check Character Calculation | 118 |
| Code 39 Check Character Transmission | 119 |
| Code 39 Start/Stop Character Transmission | 119 |
| Code 39 Full ASCII | 120 |
| Code 39 Quiet Zones | 120 |
| Code 39 Length Control | 121 |
| Code 39 Set Length 1 | 121 |
| Code 39 Set Length 2 | 122 |
| TRIOPTIC CODE | 123 |
| Trioptic Code Enable/Disable | 123 |
| CODE 39 DANISH PPT | 123 |
| Code 39 Danish PPT Enable/Disable | 123 |
| CODE 39 PZN | 124 |
| Code 39 PZN Enable/Disable | 124 |
| CODE 39 LA POSTE | 124 |
| Code 39 La Poste Enable/Disable | 124 |
| CODE 32 (ITALIAN PHARMACEUTICAL) | 125 |
| Code 32 Enable/Disable | 125 |
| Code 32 Feature Setting Exceptions | 125 |
| Code 32 Check Character Transmission | 125 |
| Code 32 Start/Stop Character Transmission | 126 |
| CODE 39 CIP HR (FRENCH PHARMACEUTICAL) | 126 |
| Code 39 CIP HR Enable/Disable | 126 |
| CODE 128 | 127 |
| Code 128 Enable/Disable | 127 |
| Expand Code 128 to Code 39 | 127 |
| Code 128 Check Character Transmission | 128 |
| Code 128 Function Character Transmission | 128 |
| Code 128 Quiet Zones | 129 |
| Code 128 Length Control | 129 |
| Code 128 Set Length 1 | 130 |
| Code 128 Set Length 2 | 130 |
| GS1-128 | 131 |
| GS1-128 Enable | 131 |
| INTERLEAVED 2 OF 5 (1 2 OF 5) | 132 |
| 1 2 of 5 Enable/Disable | 132 |
| 1 2 of 5 Check Character Calculation | 133 |
| 1 2 of 5 Check Character Transmission | 134 |
| 1 2 of 5 Length Control | 135 |
| 1 2 of 5 Set Length 1 | 135 |
| 1 2 of 5 Set Length 2 | 136 |
| INTERLEAVED 2 OF 5, FEBRABAN | 137 |
| Interleaved 2 of 5, Febraban format Enable / Disable | 137 |
| INTERLEAVED 2 OF 5 CIP HR | 137 |
| Interleaved 2 of 5 CIP HR Enable/Disable | 137 |
| MATRIX 2 OF 5 | 137 |
| Matrix 2 of 5 Enable/Disable | 138 |
| Matrix 2 of 5 Check Character Calculation | 138 |
| Matrix 2 of 5 Check Character Transmission | 139 |
| Matrix 2 of 5 Length Control | 139 |
| Matrix 2 of 5 Set Length 1 | 140 |
| Matrix 2 of 5 Set Length 2 | 140 |
| STANDARD 2 OF 5 | 141 |
| Standard 2 of 5 Enable/Disable | 141 |
| Standard 2 of 5 Check Character Calculation | 141 |

| | |
|--|-----|
| Standard 2 of 5 Check Character Transmission | 142 |
| Standard 2 of 5 Length Control | 142 |
| Standard 2 of 5 Set Length 1 | 143 |
| Standard 2 of 5 Set Length 2 | 143 |
| COMPRESSED 2 OF 5 | 144 |
| Compressed 2 of 5 Enable/Disable | 144 |
| Compressed 2 of 5 Check Character Calculation | 144 |
| Compressed 2 of 5 Check Character Transmission | 145 |
| Compressed 2 of 5 Length Control | 145 |
| Compressed 2 of 5 Set Length 1 | 146 |
| Compressed 2 of 5 Set Length 2 | 146 |
| DATALOGIC 2 OF 5 | 147 |
| Datalogic 2 of 5 Enable/Disable | 147 |
| Datalogic 2 of 5 Check Character Calculation | 147 |
| Datalogic 2 of 5 Check Character Transmission | 148 |
| Datalogic 2 of 5 Length Control | 148 |
| Datalogic 2 of 5 Set Length 1 | 149 |
| Datalogic 2 of 5 Set Length 2 | 149 |
| INDUSTRIAL 2 OF 5 | 150 |
| Industrial 2 of 5 Enable/Disable | 150 |
| Industrial 2 of 5 Check Character Calculation | 150 |
| Industrial 2 of 5 Check Character Transmission | 151 |
| Industrial 2 of 5 Length Control | 151 |
| Industrial 2 of 5 Set Length 1 | 152 |
| Industrial 2 of 5 Set Length 2 | 152 |
| IATA | 153 |
| IATA Enable/Disable | 153 |
| IATA Check Character Transmission | 153 |
| FOLLETT 2 OF 5 | 154 |
| Follett 2 of 5 Enable/Disable | 154 |
| CODABAR | 155 |
| Codabar Enable/Disable | 155 |
| Codabar Check Character Calculation | 155 |
| Codabar Check Character Transmission | 156 |
| Codabar Start/Stop Character Transmission | 156 |
| Codabar Start/Stop Character Set | 157 |
| Codabar Start/Stop Character Match | 157 |
| Codabar Quiet Zones | 158 |
| Codabar Length Control | 159 |
| Codabar Set Length 1 | 159 |
| Codabar Set Length 2 | 160 |
| ABC CODABAR | 161 |
| ABC Codabar Enable/Disable | 161 |
| ABC Codabar Concatenation Mode | 161 |
| ABC Codabar Dynamic Concatenation Timeout | 162 |
| ABC Codabar Force Concatenation | 162 |
| ISBT 128 | 163 |
| ISBT 128 Concatenation | 163 |
| ISBT 128 Concatenation Mode | 163 |
| ISBT 128 Dynamic Concatenation Timeout | 164 |
| ISBT 128 Force Concatenation | 165 |
| ISBT 128 Advanced Concatenation Options | 165 |
| CODE 11 | 166 |
| Code 11 Enable/Disable | 166 |
| Code 11 Check Character Calculation | 166 |
| Code 11 Check Character Transmission | 167 |
| Code 11 Length Control | 167 |
| Code 11 Set Length 1 | 168 |
| Code 11 Set Length 2 | 168 |
| CODE 93 | 169 |
| Code 93 Enable/Disable | 169 |

| | |
|---|------------|
| Code 93 Check Character Calculation | 169 |
| Code 93 Check Character Transmission | 170 |
| Code 93 Length Control | 170 |
| Code 93 Set Length 1 | 171 |
| Code 93 Set Length 2 | 171 |
| Code 93 Quiet Zones | 172 |
| MSI | 173 |
| MSI Enable/Disable | 173 |
| MSI Check Character Calculation | 173 |
| MSI Check Character Transmission | 174 |
| MSI Length Control | 174 |
| MSI Set Length 1 | 175 |
| MSI Set Length 2 | 175 |
| PLESSEY | 176 |
| Plessey Enable/Disable | 176 |
| Plessey Check Character Calculation | 176 |
| Plessey Check Character Transmission | 177 |
| Plessey Length Control | 177 |
| Plessey Set Length 1 | 178 |
| Plessey Set Length 2 | 178 |
| BC412 | 179 |
| BC412 Enable/Disable | 179 |
| BC412 Check Character Calculation | 179 |
| BC412 Length Control | 180 |
| BC412 Set Length 1 | 181 |
| BC412 Set Length 2 | 181 |
| 2D SYMBOLOGIES | 182 |
| 2D GLOBAL FEATURES | 183 |
| 2D Structured Append | 184 |
| 2D Normal/Inverse Symbol Control | 184 |
| AZTEC CODE | 185 |
| Aztec Code Enable / Disable | 185 |
| Aztec Code Length Control | 185 |
| Aztec Code Set Length 1 | 186 |
| Aztec Code Set Length 2 | 186 |
| CHINA SENSIBLE CODE | 187 |
| China Sensible Code Enable / Disable | 187 |
| China Sensible Code Length Control | 187 |
| China Sensible Code Set Length 1 | 188 |
| China Sensible Code Set Length 2 | 188 |
| DATA MATRIX | 189 |
| Data Matrix Enable / Disable | 189 |
| Data Matrix Square/Rectangular Style | 189 |
| Data Matrix Length Control | 190 |
| Data Matrix Set Length 1 | 190 |
| Data Matrix Set Length 2 | 191 |
| GS1 DOTCODE | 192 |
| DotCode Enable | 192 |
| DotCode High Resolution Enable | 192 |
| DotCode Position-based Decoding | 193 |
| Additional Options | 193 |
| MAXICODE | 194 |
| Maxicode Enable / Disable | 194 |
| Maxicode Primary Message Transmission | 194 |
| Maxicode Length Control | 195 |
| Maxicode Set Length 1 | 195 |
| Maxicode Set Length 2 | 196 |
| PDF417 | 197 |
| PDF417 Enable / Disable | 197 |
| PDF417 Length Control | 197 |
| PDF417 Set Length 1 | 198 |

| | |
|--|------------|
| PDF417 Set Length 2 | 198 |
| MICRO PDF417 | 199 |
| Micro PDF417 Enable / Disable | 199 |
| Micro PDF417 Code 128 GS1-128 Emulation | 199 |
| Micro PDF417 Length Control | 200 |
| Micro PDF417 Set Length 1 | 200 |
| Micro PDF417 Set Length 2 | 201 |
| QR CODE | 202 |
| QR Code Enable / Disable | 202 |
| QR Code Length Control | 202 |
| QR Code Set Length 1 | 203 |
| QR Code Set Length 2 | 203 |
| MICRO QR CODE | 204 |
| Micro QR Code Enable / Disable | 204 |
| Micro QR Code Length Control | 204 |
| Micro QR Code Set Length 1 | 205 |
| Micro QR Code Set Length 2 | 205 |
| UCC COMPOSITE | 206 |
| UCC Optional Composite Timer | 206 |
| Postal Code Selection | 207 |
| Postnet BB Control | 208 |
| OCR DECODING | 210 |
| OCR Decoding Predefined Templates | 211 |
| POWER MANAGEMENT | 212 |
| POWER SAVE | 213 |
| Powerdown Timeout | 213 |
| BATTERY PROFILES | 214 |
| Battery Profiles | 214 |
| Battery Information | 215 |
| WIRELESS FEATURES | 216 |
| WIRELESS BEEPER FEATURES | 217 |
| Good Transmission Beep | 217 |
| Beeper Frequency | 217 |
| Beep Duration | 218 |
| Beep Volume | 219 |
| Disconnect Beep | 219 |
| Leash Alarm | 220 |
| CONFIGURATION UPDATES | 222 |
| Automatic Configuration Update | 222 |
| Copy Configuration to Reader | 222 |
| Copy Configuration to Gateway | 222 |
| BATCH FEATURES | 223 |
| Batch Mode | 223 |
| Send Batch | 224 |
| Erase Batch Memory | 224 |
| RF Batch Mode Transmit Delay | 225 |
| DIRECT RADIO AUTOLINK | 226 |
| Direct Radio Autolink | 226 |
| RF ADDRESS STAMPING | 227 |
| Source Radio Address Transmission | 227 |
| Source Radio Address Delimiter Character | 227 |
| BLUETOOTH-ONLY FEATURES | 227 |
| Bluetooth Security Level | 228 |
| Bluetooth Radio Output Power | 230 |
| Wi-Fi Channels Exclusion | 231 |
| Bluetooth Discoverable Mode Timeout | 236 |
| Bluetooth Friendly Name | 237 |
| BLUETOOTH HID FEATURES | 238 |
| Bluetooth HID Alt Mode | 238 |
| Bluetooth HID Intercharacter Delay | 239 |

| | |
|--|------------|
| CHAPTER 4. REFERENCES | 240 |
| USB COM Parameters | 241 |
| Intercharacter Delay | 241 |
| ACK NAK Options | 242 |
| ACK Character | 242 |
| NAK Character | 243 |
| ACK NAK Timeout Value | 244 |
| ACK NAK Retry Count | 245 |
| Disable Character | 246 |
| Enable Character | 247 |
| Keyboard Interface | 248 |
| Intercharacter Delay | 248 |
| Intercode Delay | 249 |
| Data Format | 250 |
| Data Editing | 250 |
| Please Keep In Mind... | 250 |
| Global Prefix/Suffix | 251 |
| Example: Setting a Prefix | 251 |
| Global AIM ID | 252 |
| Label ID | 253 |
| Label ID: Pre-loaded Sets | 253 |
| Label ID: Set Individually Per Symbology | 255 |
| Character Conversion | 257 |
| Scanning Features | 258 |
| Scan Mode | 258 |
| Scanning Active Time | 258 |
| Flash On Time | 260 |
| Flash Off Time | 261 |
| LED and Beeper Indicators | 262 |
| Good Read LED Duration | 262 |
| RF Features | 263 |
| Automatic Configuration Update | 263 |
| RF Address Stamping | 263 |
| Source Radio Address Delimiter Character | 263 |
| Symbologies | 264 |
| Set Length | 264 |
| Set Length 1 | 264 |
| Set Length 2 | 265 |
| | |
| CHAPTER 5. MESSAGE FORMATTING..... | 266 |
| Message Formatting | 266 |
| LED and Beeper Control | 267 |
| | |
| APPENDIX A. TECHNICAL SPECIFICATIONS..... | 268 |
| CODiScan™ HS7600 Technical Specifications | 268 |
| Common Reading Characteristics | 270 |
| Decoding Capabilities | 271 |
| RECOMMENDED SERVICES | 272 |
| LED and Beeper Indications | 273 |
| User Indications for HS7600 | 273 |
| Programming Mode | 275 |
| Troubleshooting | 275 |
| Cleaning Procedure | 276 |
| Common Cleaning Solutions | 276 |
| Cleaning enclosure and window surfaces | 277 |
| Cleaning electrical contact surfaces | 277 |
| Scanner Contacts | 277 |
| Scanner deep cleaning | 278 |
| | |
| APPENDIX B. STANDARD DEFAULTS | 279 |
| Default exceptions | 291 |

| | |
|--|------------|
| APPENDIX C. SAMPLE BARCODES | 292 |
| Sample Barcodes | 292 |
| 1D Barcodes | 292 |
| GS1 Databar™ (RSS) | 294 |
| GS1 Databar™ (-14) | 294 |
| 2D Barcodes | 295 |
| | |
| APPENDIX D. KEYPAD..... | 297 |
| | |
| APPENDIX E. SCANCODE TABLES | 299 |
| Control Character Emulation | 299 |
| Single Press and Release Keys | 299 |
| Interface Type USB-Keyboard or USB-Keyboard for APPLE | 300 |
| Interface Type USB-Keyboard or USB-Keyboard for APPLE (continued) | 301 |
| Interface Type USB-Keyboard Alt Mode | 302 |
| Interface Type USB-Keyboard Alt Mode (continued) | 303 |
| Digital Interface | 304 |
| IBM31xx 102-key | 305 |
| IBM XT | 307 |
| Microsoft Windows Codepage 1252 | 309 |
| | |
| APPENDIX F. ASCII CHART..... | 310 |

PREFACE

ABOUT THIS MANUAL

This Product Reference Guide (PRG) is provided for users seeking advanced technical information, including connection, programming, maintenance and specifications. The Regulatory Addendum (RA) and other publications associated with this product are downloadable free of charge from the website listed on the back cover of this manual.

Typically, units are factory-programmed for the most common terminal and communications settings. If you need to modify any programmable settings, custom configuration can be accomplished by scanning the programming bar codes within this guide.

Programming can alternatively be performed using the Datalogic Aladdin™ Configuration application, which is available from the Datalogic website listed on the back cover of this manual. This multi-platform utility program allows device configuration using a PC. It communicates to the device using a USB cable and can also create configuration bar codes to print.

OVERVIEW

Chapter 1, Introduction provides a product overview, battery safety information, and general information about programming the reader.

Chapter 2, Setup presents information about unpacking and setting up the reader, and interface configuration bar codes and details.

Chapter 3, Configuration Using Bar Codes provides instructions and bar code labels for customizing your reader. There are different sections for interface types, general features, data formatting, and symbology-specific features.

Chapter 4, References provides details concerning programmable features.

Appendix A, Technical Specifications lists physical and performance characteristics, as well as environmental specifications. It also provides standard cable pin-outs and descriptions of the functions and behaviors of the reader's LED and Beeper indicators.

Appendix B, Standard Defaults references common factory default settings for reader features and options.

Appendix C, Sample Bar Codes offers sample bar codes of several common symbologies.

Appendix D, Keypad includes numeric bar codes to be scanned for certain parameter settings.

Appendix E, Scancode Tables lists control character emulation information for USB Keyboard interface.

Appendix F, ASCII Chart lists hexadecimal reference values for ASCII characters.

Manual Conventions

The following conventions are used in this document:

The symbols listed below are used in this manual to notify the reader of key issues or procedures that must be observed when using the reader:



NOTE: This symbol draws attention to details or procedures that may be useful in improving, maintaining, or enhancing the performance of the hardware or software being discussed.



CAUTION: This symbol advises you of actions that could damage equipment or property.



WARNING: This symbol advises you of actions that could result in harm or injury to the person performing the task.



HIGH VOLTAGE: This symbol alerts the user they are about to perform an action involving, either a dangerous level of voltage, or to warn against an action that could result in damage to devices or electrical shock.



LASER: This symbol alerts the user they are about to perform an action involving possible exposure to laser light radiation.



GROUNDING: This symbol advises you to pay particular attention to the grounding instructions for correct device functioning.




ESD: This symbol identifies a procedure that requires you take measures to prevent Electrostatic Discharge (ESD) e.g., use an ESD wrist strap. Circuit boards are most at risk. Please follow ESD procedures.

TECHNICAL SUPPORT

Support Through the Website

Datalogic provides several services as well as technical support through its website. Log on to (www.datalogic.com).

For quick access, from the home page click on the search icon , and type in the name of the product you're looking for. This allows you access to download Data Sheets, Manuals, Software & Utilities, and Drawings.

Hover over the Support & Service menu for access to Services and Technical Support.

Reseller Technical Support

An excellent source for technical assistance and information is an authorized Datalogic reseller. A reseller is acquainted with specific types of businesses, application software, and computer systems and can provide individualized assistance.

WARRANTY

Datalogic warrants that the Products shall be free from defects in materials and workmanship under normal and proper use during the Warranty Period. Products are sold on the basis of specifications applicable at the time of manufacture and Datalogic has no obligation to modify or update Products once sold. The Warranty Period shall be **one year** from the date of shipment by Datalogic, unless otherwise agreed in an applicable writing by Datalogic.

Datalogic will not be liable under the warranty if the Product has been exposed or subjected to any: (1) maintenance, repair, installation, handling, packaging, transportation, storage, operation or use that is improper or otherwise not in compliance with Datalogic's instruction; (2) Product alteration, modification or repair by anyone other than Datalogic or those specifically authorized by Datalogic; (3) accident, contamination, foreign object damage, abuse, neglect or negligence after shipment to Buyer; (4) damage caused by failure of a Datalogic-supplied product not under warranty or by any hardware or software not supplied by Datalogic; (5) any device on which the warranty void seal has been altered, tampered with, or is missing; (6) any defect or damage caused by natural or man-made disaster such as but not limited to fire, water damage, floods, other natural disasters, vandalism or abusive events that would cause internal and external component damage or destruction of the whole unit, consumable items; (7) use of counterfeit or replacement parts that are neither manufactured nor approved by Datalogic for use in Datalogic-manufactured Products; (8) any damage or malfunctioning caused by non-restoring action as for example firmware or software upgrades, software or hardware reconfigurations etc.; (9) loss of data; (10) any consumable or equivalent (e.g. cables, power supply, etc.), except for the batteries, that are covered by the same warranty of the Product, unless in case of misuse made by the Buyer (including but not limited to exceeding the estimated number of charging cycles for the first year of battery life); or (11) any device on which the serial number is missing or not recognizable.

THE DATALOGIC WARRANTIES ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, WHETHER WRITTEN, EXPRESS, IMPLIED, STATUTORY OR OTHERWISE, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE. DATALOGIC SHALL NOT BE LIABLE FOR ANY DAMAGES SUSTAINED BY BUYER ARISING FROM DELAYS IN THE REPLACEMENT OR REPAIR OF PRODUCTS UNDER THE ABOVE. THE REMEDY SET FORTH IN THE WARRANTY STATEMENT IS THE BUYER'S SOLE AND EXCLUSIVE REMEDY FOR WARRANTY CLAIMS. NO EXTENSION OF THIS WARRANTY WILL BE BINDING UPON DATALOGIC UNLESS SET FORTH IN WRITING AND SIGNED BY DATALOGIC'S AUTHORIZED REPRESENTATIVE. DATALOGIC'S LIABILITY FOR DAMAGES ON ACCOUNT OF A CLAIMED DEFECT IN ANY PRODUCT DELIVERED BY DATALOGIC SHALL IN NO EVENT EXCEED THE PURCHASE PRICE OF THE PRODUCT ON WHICH THE CLAIM IS BASED. DATALOGIC SHALL NOT BE LIABLE FOR DAMAGES RELATING TO ANY INSTRUMENT, EQUIPMENT, OR APPARATUS WITH WHICH THE PRODUCT SOLD UNDER THIS AGREEMENT IS USED. Further details on warranty coverage, rights and conditions are addressed under and regulated by the Terms and Conditions of Sales of Datalogic available at https://www.datalogic.com/terms_conditions_sales.

NOTES

CHAPTER 1

INTRODUCTION

ABOUT THE READER

CODiScan™ is the new Bluetooth wearable scanner series developed by Datalogic to address Logistics and Manufacturing applications as well as Retail and Healthcare warehousing operations, all while providing the following benefits:

- Improve businesses daily operations accuracy and productivity with a small, light-weight super-reliable device
- Increase the throughput and overall efficiency with best-in-class scanning performances reducing TCO with 1D/2D decoding, Datalogic reading library, Green Spot
- 2 working shifts and up to 12,000 scans with a single charge
- Extreme flexibility and modularity providing a scalable optimized asset management solution with multiple mounting options for optimal comfort
- Easy configuration and pairing thanks to the Aladdin Desk, Web, and Mobile app
- Forefront 5.2 reliable radio Bluetooth communication with bidirectional communication
- Multiple mounting options and the ability to monitor battery status and scanner connectivity with a multi-functional key on the device Product Description www.datalogic.com

CODiScan is available in three optics to fulfill different needs: Standard Range - ideal for scanning activities at intuitive distances; Mid-Range - adds the capability to decode with an increased depth of field up to 1.5 m / 4.9 ft; RT ideal for scanning high resolution, small barcodes in a close range.

GENERAL FEATURES

The CODiScan™ HS7600 normally functions by capturing and decoding codes. HS7600 is a powerful omni-directional reader, so the orientation of the symbol is not important. Datalogic's unique 'Green Spot' for good-read feedback helps to improve productivity in noisy environments or in situations where silence is required.

The CODiScan™ HS7600 readers reliably decode all standard 1D (linear) and 2D bar codes, including GS1 DataBar™ linear codes, Postal Codes (China Post), Stacked Codes (such as GS1 DataBar Expanded Stacked, GS1 DataBar Stacked, GS1 DataBar, Stacked Omnidirectional). The data stream - acquired from decoding a symbol - is rapidly sent to the host. The reader is immediately available to read another symbol.

BATTERY SAFETY

To reinstall, replace and/or perform any other action on the battery, contact authorized repair centers.



NOTE: Datalogic recommends the Ease Of Care Service Programs, which provide superior life-cycle support to ensure that products are always operating at peak performance when you need them the most.



WARNING: Do not discharge the battery using any device except for the reader. When the battery is used in devices other than the designated product, it may damage the battery or reduce its life expectancy. If the device causes an abnormal current to flow, it may cause the battery to become hot, explode or ignite and cause serious injury.

Lithium-ion battery packs may get hot, explode or ignite and cause serious injury if exposed to abusive conditions. Be sure to follow the safety warnings listed below:

- Do not place the battery pack in fire or heat.
- Do not connect the positive terminal and negative terminal of the battery pack to each other with any metal object (such as wire).
- Do not carry or store the battery pack together with metal objects.
- Do not pierce the battery pack with nails, strike it with a hammer, step on it or otherwise subject it to strong impacts or shocks.
- Do not solder directly onto the battery pack.
- Do not expose the battery pack to liquids, or allow the battery to get wet.
- Do not apply voltages to the battery pack contacts.

In the event the battery pack leaks and the fluid gets into your eye, do not rub the eye. Rinse well with water and immediately seek medical care. If left untreated, the battery fluid could cause damage to the eye.



CAUTION: Always charge the battery at 32° – 104°F (0° - 40°C) temperature range.

Use only the authorized power supplies, battery pack, chargers, and docks supplied by your Datalogic reseller. The use of any other power supplies can damage the device and void your warranty.

Do not disassemble or modify the battery. The battery contains safety and protection devices, which, if damaged, may cause the battery to generate heat, explode or ignite.

Do not place the battery in or near fire, on stoves or other high temperature locations.

Do not place the battery in direct sunlight, or use or store the battery inside cars in hot weather. Doing so may cause the battery to generate heat, explode or ignite. Using the battery in this manner may also result in a loss of performance and a shortened life expectancy.

Do not place the battery in microwave ovens, high-pressure containers or on induction cookware.

Immediately discontinue use of the battery if, while using, charging or storing the battery, the battery emits an unusual smell, feels hot, changes color or shape, or appears abnormal in any other way.

Do not replace the battery pack when the device is turned on.

Do not remove or damage the battery pack's label.

Do not use the battery pack if it is damaged in any part.

Battery pack usage by children should be supervised.



CAUTION: Storage of batteries for long time at fully charged status or at fully discharged status should be avoided.



CAUTION: Only in case of long storage, to avoid deep discharge of the battery it is recommended to partially recharge the battery every three months to keep the charge status at a medium level.

As a reference, run a fast recharge for 20 minutes every three months on unused products to avoid any performance deterioration of the cell.

As with other types of batteries, Lithium-Ion (LI) batteries will lose capacity over time. Capacity deterioration is noticeable after one year of service whether the battery is in use or not.

The typical manufacturer advertised useful life of LI batteries is one to three years, depending on usage and number of charges, etc., after which they should be removed from service, especially in mission critical applications. Do not continue to use a battery that is showing excessive loss of capacity, it should be properly recycled / disposed of and replaced. Collect and recycle waste batteries separately from the device in compliance with European Directive 2006/66/EC, 2011/65/EU, 2002/96/EC and 2012/19/EU and subsequent modifications, US and China regulatory and others laws and regulations about the environment.

PROGRAMMING THE READER

Configuration Methods

Programming Bar Codes

The reader is factory-configured with a standard set of default features. After scanning the interface bar code, you can select other options and customize your reader through use of the instructions and programming bar code labels available in the corresponding features section for your interface. Customizable settings for many features are found in [Configuration Parameters, starting on page 25](#).

Some programming labels, like “Restore Custom Defaults”, require only the scan of the single label to enact the change. Most, however, require the reader to be placed in Programming Mode prior to scanning them. Scan an ENTER/EXIT bar code once to enter Programming Mode. Once the reader is in Programming Mode, scan a number of parameter settings before scanning the ENTER/EXIT bar code a second time, which will then accept your changes, exit Programming Mode and return the reader to normal operation.



NOTE: There are some exceptions to the typical programming sequence described above. Please read the description and setting instructions carefully when configuring each programmable feature.

Datalogic Aladdin™

Datalogic Aladdin™ is a multi-platform utility program providing a quick and user-friendly configuration method via the USB-COM interface. Aladdin allows you to program the reader by selecting configuration commands through a user-friendly graphical interface running on a PC. These commands are sent to the reader over the selected communication interface, or they can be printed as bar codes to be scanned. Aladdin also facilitates image capturing.

In addition, Aladdin makes it easy to upgrade the handheld's firmware, to attain the benefits of new reader features. Reference the Datalogic Aladdin™ Online Help for more details.

Aladdin is available for download free of charge on the Datalogic website.

Aladdin™ App

Aladdin™APP is an Android platform utility program providing a quick and user-friendly configuration method via Bluetooth. Aladdin APP allows you to program the reader by selecting configuration commands through a user-friendly graphical interface running on Android host. Aladdin APP also facilitates image capturing, keyboard emulation.

In addition, Aladdin APP makes it easy to upgrade the handheld's firmware, to attain the benefits of new reader features.

Aladdin APP is available for download free of charge on the Datalogic website.

<https://datalogic.github.io/aladdin/overview>

CHAPTER 2

SETUP

UNPACKING

Check carefully to ensure the reader and any cables or accessories ordered are present and undamaged. If any damage occurred during shipment, contact "[Technical Support](#)" on page xiv.

SETTING UP THE CODISCAN™ HS7600 READER

Follow the steps below to connect and get your reader up and communicating with its host.


1. Charge the device on a charging station (optional).
2. Mount the device onto the preferred mounting support (optional). See "[Mounting the Reader](#)" on page 8.
3. Connect to host with pairing barcode. See [Linking the Reader on page 14](#). If it has not been previously linked to a host, the device will be in discoverable HOGP mode when it is powered on. The rear blue LED will flash for 3 minutes.
4. Configure (optional).

USING THE CODISCAN™ HS7600

The CODiScan™ HS7600 normally functions by capturing and decoding codes.

Turn the scanner by pressing the multi-functional button or the trigger. When the scanner starts up, it vibrates.

The reader is equipped with an aiming system. A partial press on the hand trigger will activate the aiming system without the illuminator. The intelligent aiming system indicates the field of view which should be positioned over the bar code.

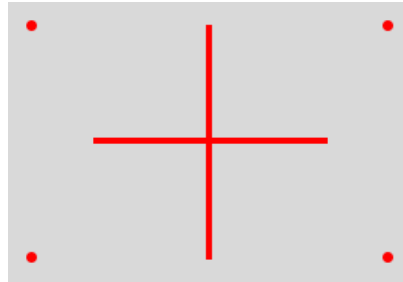

CODiScan HS7600 Aiming System

The field of view indicated by the aiming system will be smaller when the reader is closer to the bar code and larger when it is farther from the code. Symbologies with smaller bars or elements (mil size) should be read closer to the unit. Symbologies with larger bars or elements (mil size) should be read farther from the unit.

Successful reading is signaled by an audible tone plus a good-read green spot LED indicator and vibration.

If enabled, when you use the device with the hand trigger, a partial trigger press produces the image shown above, which should be aimed over the code center to get the best reading performance. By completely pressing the trigger the illumination area appears and the code scanning starts.



NOTE: The Aiming System is activated by partially pressing the hand trigger. It is not activated by pressing the multifunction button on the device.

Refer to "Aiming Pointer" on page 92 to enable or disable the Aiming pointer.

CHARGING THE BATTERIES

Charge the CODiScan HS7600 by simply inserting it into one of the available chargers:

- SC-HS7600: USB Cap Charger 1 slot
- MC-HS7600: Charging station 2-slot module
- MC-12HS7600: Charging station 12-slot module

When the scanner is fully seated in the charging station, it will emit a "chirping" sound to indicate that it has detected the connection with the charging station.

The LEDs on the device will indicate the status of the battery. For information about the LEDs see Table 1 on page 18.

For more information on the chargers and their use, please refer to the Charger Instruction Manual.



NOTE: Before using the battery, read "Battery Safety" on page 2.



CAUTION: Insert the Hand Scanner only in a dry Charging Station and touch it only with dry hands to avoid malfunction.

MOUNTING THE READER

CODiScan HS7600 can be used in standalone mode or in conjunction with the following accessories to extend user comfort:

- HT1-HS7600KR: Adjustable Right Hand Trigger
- HT1-HS7600KL: Adjustable Left Hand Trigger
- LH-HS7600: Extensible Lanyard for Neck and Belt

Figure 1 - Right Hand Trigger



NOTE: The adjustable hand trigger has a different part number for right-and left-handed users. Choose the part number that best suits your needs.

Figure 2 - Extensible Lanyard



The following spare parts are available for purchase:

- HT5-HS7600KR: Adjustable Right Hand Trigger - 5 Pcs
- HT5-HS7600KL: Adjustable Left Hand Trigger - 5 Pcs
- SG5-HS7600KR: Spare Right Fabric - 5 Pcs
- SG5-HS7600KL: Spare Left Fabric - 5 Pcs
- ST1-HS7600K: Spare Trigger System (No Fabric) - 1 Pc
- ST5-HS7600K: Spare Trigger System (No Fabric) - 5 Pcs
- SS5-HS7600K: Spare Fabric - Adjustable Strap Only - 5 pcs

Wearing the Hand Trigger

Before wearing the hand trigger, make sure to choose the right part number whether you are right- or left-handed.

To wear the hand trigger:

1. Put on the hand trigger on top of your hand and, while holding the trigger in place with the thumb, fasten it using the closing strap.
2. Adjust the size to comfortably fit your hand using the adjustable straps.
3. Adjust the position of the trigger to reach it easily with your thumb.



NOTE: After the first time, use only the closing strap to wear the hand trigger.

1



2



3





Maintenance and Disposal


The electronic parts are detachable from the fabric to allow:

- washing/changing the fabric
- changing the trigger
- disposing of the different parts



WARNING: Remove the trigger and the electronic parts before washing the fabric.

To remove the holder and the trigger from the fabric, lift the piece of fabric covering the cable as shown below and detach the parts.

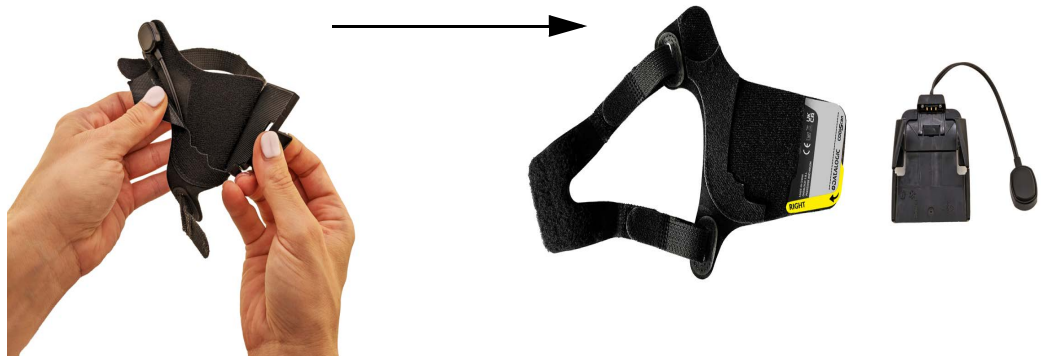

To re-assemble the hand trigger, first place the trigger, then the cable under the piece of fabric and lastly the holder.



NOTE: Wash the fabric at 30 °C. Air dry.

Lanyard

The LH-HS7600 extensible lanyard can be used in two ways:

- Worn on the neck.
- Attached to a pocket or a belt by detaching the lanyard from the retractable reel.

The lanyard can be extended for ease of use as shown below.



Lanyard on neck



Lanyard on belt

The LH-HS7600 extensible lanyard also has a safety clip on the back side.



The portable holder can be associated with a type-C USB cable 94A050044 (not included) for charging, firmware updates and device configuration and/or the power supply 94ACC0196.





Removing the Device from the Portable Holder

To remove the device from the portable holder, push the device with your thumb, using your other hand to prevent the device from falling.



**NOTE: Push with your thumb perpendicular to the device.
Do not push diagonally.**



LINKING THE READER

Before configuring the interface it is necessary to link the handheld with a host or a gateway. If the reader was previously linked to another host, you must first scan the Unlink bar code before re-linking.



Unlink

Link Reader as Serial Device to a Bluetooth Host

Use this procedure to let the CODiScan HS7600 communicate with a Bluetooth host using the Bluetooth Serial Port Profile (SPP).

1. If using a Bluetooth adapter on the host device, install any driver provided with the adapter.
2. Scan the Link to Host in SPP Mode label below to make the reader visible to the host device. The rear blue LED will flash for 3 minutes in discoverable mode.
3. Use the Bluetooth manager of the host device to "Discover new devices" and select "HS7600...". If you receive an error message, it may be necessary to change the security settings on either the host device or the reader.
4. Use a Serial Port COM terminal program to see incoming data on the port designated by the Bluetooth manager of the host device.



Link to Host in SPP Mode

Link Reader as HID device to a Bluetooth host

Use this procedure to let the CODiScan HS7600 send data to a Bluetooth host using the Bluetooth HID profile.

1. If using a Bluetooth adapter on the host device, install any driver provided with the adapter.
2. Scan the Link to Host in HID Mode label below to make the reader visible to the host device. The rear blue LED will flash for 3 minutes in discoverable mode.
3. Use the Bluetooth manager of the host device to "Discover new devices" and select "HS7600...". If you receive an error message, it may be necessary to change the security settings on either the host device or the reader.
4. On the host device, open the program that is meant to receive the incoming data.

The data transmitted by the reader will appear in the program as if it was typed using the keyboard of the host device.



Link to Host in HID Mode



NOTE: The CODiScan HS7600 can be set up to authenticate the remote system when connecting, by entering a Bluetooth passkey or a PIN code. If you want to set the security level and authentication options suitable for your application, or when adding new equipment to a system that requires authentication or uses a custom security PIN, please see "Bluetooth Security Level" on page 228

Link Reader as HOGP device to a Bluetooth (LE) host

Use this procedure to let the CODiScan HS7600 send data to a Bluetooth host using the Bluetooth HOGP profile.

1. If using a Bluetooth adapter on the host device, install any driver provided with the adapter.
2. Scan the Link to Host in HOGP Mode label below to make the reader visible to the host device. The rear blue LED will flash for 3 minutes in discoverable mode.
3. Use the Bluetooth manager of the host device to "Discover new devices" and select "HS7600...". If you receive an error message, it may be necessary to change the security settings on either the host device or the reader.
4. On the host device, open the program that is meant to receive the incoming data.

The data transmitted by the reader will appear in the program as if it was typed using the keyboard of the host device.



Link to Host in HOGP Mode



NOTE: The CODiScan HS7600 can be set up to authenticate the remote system when connecting, by entering a Bluetooth passkey or a PIN code. If you want to set the security level and authentication options suitable for your application, or when adding new equipment to a system that requires authentication or uses a custom security PIN, please see "Bluetooth Security Level" on page 228

Bluetooth Passkey or Pin Code Entry Request

During the pairing process, based on Host and Reader security settings, you may need to enter a Bluetooth passkey or PIN code. When requested by the Host, simply enter the displayed code by scanning the corresponding bar codes for alphanumeric entry listed in [Appendix D](#). Complete by scanning the End label. To restart the entering of the passkey, read the Restart label.



Passkey ENDS



Passkey Restart


Power Off

Scan the bar code below to shut off power to the handheld until the next trigger pull.



Power Off

PARTS OF THE READER

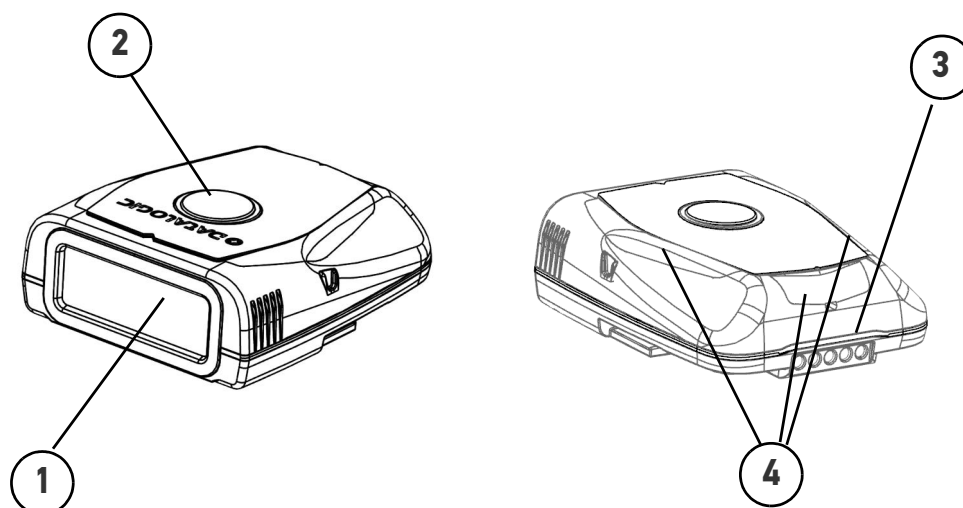

- | | |
|---|--|
| <ol style="list-style-type: none"> 1. Scan Window 2. Multifunctional key button | <ol style="list-style-type: none"> 3. Recharge, trigger and USB contact area 4. LEDs |
|---|--|

MULTIFUNCTIONAL BUTTON

The multifunctional button on the HS7600 Scanner can be used to read bar codes, as well as to retrieve information, such as battery status, and perform different actions. The table below explains the different actions that can be performed by pressing the multifunction button.

To configure and disable each function, see Aladdin.

| MULTIFUNCTIONAL BUTTON | OUTCOME |
|---|---|
| Press once and hold <5 second | Device reads the label |
| Double Press (only on iOS) | Enable and disable virtual keyboard on the screen of the connected host. |
| Triple Press | If the device is connected to a host via Bluetooth, the rear LED turns blue for 2 seconds |
| Press and hold 5-9 seconds | Check battery status: Green Side LED (charge > 50%) Orange Side LED (charge < 50%) |
| Hold >10 seconds | Unlink from any connected host |
| Press >5 seconds the hand trigger with the device inserted + multifunctional button | HW reset |

SCANNER LEDS

The LEDs on the HS7600 provide information about the charging status when the device is inserted in a charging station. See the following table for a description of the different LED colors:

Table 1 - Battery and Recharge LED Description

| COLOR | BATTERY STATUS |
|---|---|
| Off | Scanner is not charging or Out of charging temperature limits |
| Blinking Color Orange (charge = <50%) Green (charge = >50%) | Charge in Progress |
| Solid Green | Charge Complete |

CONNECTING THE DEVICE

The Device can be connected via Bluetooth (both Classic or Low Energy). Use a Gateway to extend the connectivity to USB/Wi-Fi. See Gateway Instruction Manual for further information.

INTERFACE SELECTION

Upon completing the physical connection between the reader and its host, proceed directly to "Configuring THE GATEWAY Interface" on page 19 for information and programming for the interface type the scanner is connected to (for example: USB) and scan the appropriate bar code in that section to select your system's correct interface type.

The reader, depending upon the model, will support one or more of the following sets of host interfaces:

- USB (Keyboard, COM, OEM)
- USB Composite (Keyboard + COM)
- USB HID POS
- USB Toshiba TEC
- Datalogic Magellan Scanners' specific interface


CONFIGURING THE GATEWAY INTERFACE

Scan the programming bar code from the following section which selects the appropriate interface type to match the system the reader will be connected to. Next, proceed to the corresponding chapter in this manual (also listed in the table) to configure any desired settings and features associated with that interface.



NOTE: Unlike some other programming features and options, interface selections require that you scan only one programming bar code label. DO NOT scan an ENTER/EXIT bar code prior to scanning an interface selection bar code. Some interfaces require the reader to start in the disabled state when powered up. If additional reader configuration is desired while in this state, pull the trigger and hold for 5 seconds. The reader will change to a state that allows programming with bar codes.


Table 2 - Available Interfaces

| USB-OEM | |
|---|--|
|  Select USB-OEM | USB-OEM (can be used for OPOS/UPOS/JavaPOS) |









NOTE: If you erroneously read the USB-OEM interface selection code, it is required to press and hold the trigger to unlock the reader. Then read the correct interface bar code. This will work only at power-up. Please reconnect the reader if the unlock is not successful.

Table 3 - Available Interfaces (continued)

| SERIAL INTERFACES | |
|--|--|
|  Select USB-COM-STD ^a | USB-COM (simulates RS-232 standard interface) |

a. Download the correct USB Com driver from www.datalogic.com.

| USB FOR TERMINALS | |
|---|---|
| USB HID POS |  Select USB HID POS |
|  Select USB Toshiba TEC | USB Toshiba TEC |
| USB FOR MAGELLAN SCANNERS | |
| USB for Magellans |  Select USB for Magellan Scanners |

| KEYBOARD | |
|--|---|
| USB Keyboard with standard key encoding |  Select USB Standard Keyboard |
|  Select USB Alternative Keyboard | USB Keyboard with alternative key encoding |
| USB-Composite (combines USB-KBD emulation and USB-COM) |  Select USB-Composite |

CUSTOMIZING CONFIGURATION SETTINGS

Using the Programming Bar Codes

This manual contains feature descriptions and bar codes which allow you to reconfigure your reader. Some programming bar code labels, like [Resetting the Product Configuration to Defaults, starting on page 24](#), require only the scan of that single label to enact the change.

Most of the programming labels in this manual, however, require the reader to be placed in Programming Mode prior to scanning them. Scan an ENTER/EXIT bar code once to enter Programming Mode. Once the reader is in Programming Mode, you can scan a number of parameter settings before scanning the ENTER/EXIT bar code a second time, which will then accept your changes, exit Programming Mode and return the reader to normal operation.



NOTE: There are some exceptions to the typical programming sequence described above. Please read the description and setting instructions carefully when configuring each given programmable feature.

Datalogic Aladdin™ Utility

Programming can alternatively be performed using the Datalogic Aladdin™ Configuration application which is available for free download from the Datalogic website listed on the back cover of this manual. This multi-platform utility program allows device configuration using a PC. It communicates to the device using a serial or USB cable and can also create configuration bar codes to print.

Datalogic Aladdin™ is a multi-platform utility program providing a quick and user-friendly configuration method via the USB-COM interface. The Aladdin utility is available on the Datalogic website. Aladdin allows you to program the reader by selecting configuration commands through a user-friendly graphical interface running on a PC. These commands are sent to the reader over the selected communication interface, or they can be printed as bar codes to be scanned.

Aladdin also provides the ability to perform a software upgrade for the connected device (see the Datalogic Aladdin™ Help On-Line for more details).

Aladdin™APP

Aladdin™APP is an Android platform utility program providing a quick and user-friendly configuration method via Bluetooth. Aladdin APP allows you to program the reader by selecting configuration commands through a user-friendly graphical interface running on Android host. Aladdin APP also facilitates image capturing, keyboard emulation.

In addition, Aladdin APP makes it easy to upgrade the handheld's firmware, to attain the benefits of new reader features.

Aladdin APP is available for download free of charge on the Datalogic website

Interface Settings

The reader is typically factory-configured with a set of default features standard to the interface type you ordered. See [Appendix B, Standard Defaults](#).

Global Interface Features, starting on [page 25](#) provides settings configurable by all interface types. If your installation requires you to further customize your reader, you can select other options through use of the instructions and programming bar codes available in the appropriate section for your interface.

- "USB-COM Interfaces" on [page 28](#)
- USB Composite (COM + Keyboard) on [page 21](#)
- KEYBOARD INTERFACE on [page 37](#)
- USB-OEM INTERFACE on [page 64](#)

Configuring Other Features

If your installation requires different programming than the standard factory default settings, the following sections of this manual allow configuration of non-interface-specific settings you might require:

Configuration Using Bar Codes: General Features includes programming for scanning, beeper and LED indicators and other such universal settings.

Reading Parameters: Reading Parameters include programming for scanning, beeper and LED indicators and other universal settings.

1D Symbologies: Includes options concerning the bar code label types (symbologies). These settings allow you to enable/disable symbologies, set label lengths, require check digit, etc.

2D Symbologies: Includes options concerning the bar code label types (symbologies). These settings allow you to enable/disable symbologies, set label lengths, require check digit, etc.

Software Version Transmission

The software version of the device can be transmitted over the Bluetooth interfaces by scanning the following label.



Transmit Software Version

Resetting the Product Configuration to Defaults

Restore Custom Default Configuration

If you aren't sure what programming options are in your reader, or you've changed some options and want to restore the Custom Default Configuration that may have been saved in the reader, scan the Restore Custom Default Configuration bar code below. This will restore the custom configuration for the currently active interface.



NOTE: Custom defaults are based on the interface type. Configure the reader for the correct interface before scanning this label.



Restore Custom Default Configuration

Restore Factory Configuration

If you want to restore the Factory Configuration for your reader, scan either the Restore USA Factory Configuration bar code or the Restore EU Factory Configuration bar code below. Both labels restore the reader configuration to the factory settings, including the interface type. The USA label restores Label IDs to those historically used in the USA. The EU label restores Label IDs to those historically used in Europe. The Label ID sets for USA and EU are shown in the "Label ID" Section on [page 71](#) of this manual.



Restore USA Factory Configuration



Restore EU Factory Configuration

The programming items listed in the following sections show the factory default settings for each of the menu commands.

CHAPTER 3

CONFIGURATION WITH BAR CODES

This and following sections provide programming bar codes to configure your reader by changing the default settings. For details about additional methods of programming, see "Customizing Configuration Settings" on page 22.



NOTE: You must first enable your CODiScan to read bar codes in order to use this section. If you have not done this, go to Setup, starting on page 5 and complete the appropriate procedure.

CONFIGURATION PARAMETERS

Once the reader is set up, you can change the default parameters to meet your application needs. Refer to [Standard Defaults, starting on page 279](#) for initial configuration in order to set the default values and select the interface for your application.



NOTE: In the following sections, text shown with a green star indicates a factory default value.

★ This is an example of a default value.

The following configuration parameters are divided into logical groups, making it easy to find the desired function based on its reference group.

Gateway Interface Configuration:

- [USB-COM Settings, starting on page 29](#)
- [Keyboard Interface, starting on page 37](#)
- [USB-OEM Interface, starting on page 64](#)

Parameters common to all interface applications:

- [Global Prefix/Suffix, starting on page 67](#)
- [Data Format, starting on page 66](#) gives options to control the messages sent to the Host system by selecting parameters to control the message strings sent to the handheld.
- [Reading Parameters, starting on page 77](#) controls various operating modes and indicators status functioning.

Symbology-specific parameters:

1D Symbologies, starting on page 97 and 2D Symbologies, starting on page 182 define options for all symbologies and provides the programming bar codes necessary for configuring these features.



NOTE: You must first enable your reader to read bar codes in order to use this section. If you have not done this, go to Setup, starting on page 5 and complete the appropriate procedure.

To program features:

1. Scan the ENTER/EXIT PROGRAMMING bar code, available at the top of each programming page, when applicable.
2. Scan the bar code to set the desired programming feature. You may need to cover unused bar codes on the page, and possibly the facing page, to ensure that the reader reads only the bar code you intend to scan.
3. If additional input parameters are needed, go to [Appendix D](#), and scan the appropriate characters from the keypad.



NOTE: Additional information about many features can be found in the References, starting on page 240.

If you make a mistake before the last character, scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.

4. Complete the programming sequence by scanning the ENTER/EXIT PROGRAMMING bar code to exit Programming Mode.

For more detailed descriptions, programming information and examples for setting selected configuration items, see [References, starting on page 240](#).



GLOBAL INTERFACE FEATURES

The following interface features are configurable by all interface types.

To set features specific to your interface, turn to that section of this manual.

Host Commands — Obey/Ignore

This option specifies whether the reader will obey or ignore host commands. When set to ignore, the reader will ignore all host commands except those necessary for:

- service mode
- flash programming mode
- keeping the interface active
- transmission of labels.



★ Host Commands = Obey
(Do Not Ignore Host Commands)



Host Commands = Ignore

CONFIGURATION | USB-COM INTERFACES

SECTION CONTENTS

- Intercharacter Delay
- Beep On ASCII BEL
- Beep On Not on File
- ACK NAK Options
- ACK Character
- NAK Character
- ACK NAK Timeout Value
- ACK NAK Retry Count
- ACK NAK Error Handling
- Indicate Transmission Failure
- Disable Character
- Enable Character

Standard Factory Settings

Reference [Appendix B](#), for a listing of standard factory settings.



USB-COM SETTINGS

Intercharacter Delay

This parameter specifies the intercharacter delay between the end of one character and the beginning of the next. The delay can be set within a range of zero (0) to 990 milliseconds in 10ms increments. A setting of zero specifies no delay. See "[Intercharacter Delay](#)" on page 241 for more detailed programming instructions.



Intercharacter Delay = No Delay



Select Intercharacter Delay Setting

To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in [Appendix D](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★00 = No Intercharacter Delay



Beep On ASCII BEL

When this parameter is enabled, the reader issues a beep when a <BEL> character is detected on the RS-232 serial line. <BEL> is issued to gain a user's attention to an illegal entry or other important event.



★ Beep On ASCII BEL = Disable



Beep On ASCII BEL = Enable

Beep On Not on File

This option enables/disables the action of the reader to sound a three beep sequence upon receiving a Not-On-File (NOF) host command.



Beep On Not On File = Disable



★ Beep On Not On File = Enable



ACK NAK Options

This enables/disables the ability of the reader to support the RS-232 ACK/NAK protocol. When configured, the reader and/or host sends an “ACK” when it receives data properly, and sends “NAK” when the data is in error.

Options are:

- Disable
- Enable for label transmission — The reader expects an ACK/NAK response from the host when a label is sent.
- Enable for host-command acknowledge — The reader will respond with ACK/NAK when the host sends a command.
- Enable for label transmission and host-command acknowledge



★ ACK/NAK Protocol = Disable ACK/NAK



ACK/NAK Protocol = Enable for label transmission



ACK/NAK Protocol = Enable for host-command
acknowledge



ACK/NAK Protocol = Enable for label transmission and
host command acknowledge



ACK Character

This setting specifies an ASCII character or hex value to be used as the ACK character. ASCII characters or any hex value from 0 to 0xFF can be selected. See "ACK Character" on page 242 for more detailed programming instructions.



NOTE: Setting to previously defined characters such as XON, XOFF, or host commands conflicts with normal operation of these characters. 8-bit data is not recognized when the option "Data Bits" on page 24 has been set as 7 Data Bits.



Select ACK Character Setting

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ 0x06 'ACK' Character

NAK Character

This setting specifies an ASCII character or hex value to be used as the NAK character. ASCII characters or any hex value from 0 to 0xFF can be selected. See "NAK Character" on page 243 for more detailed programming instructions



NOTE: Setting to previously defined characters such as XON, XOFF, or host commands conflicts with normal operation of these characters. 8-bit data is not recognized when the option "Data Bits" on page 24 has been set as 7 Data Bits.



Select NAK Character Setting

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ 0x15 'NAK' Character



ACK NAK Timeout Value

This option specifies the amount of time the reader waits for an ACK character from the host following label transmission. The selectable timeout range is 200 milliseconds to 15,000ms (15 seconds) in 200ms increments. A selection of 0 disables the timeout. See "[ACK NAK Timeout Value](#)" on page 244 for more detailed programming instructions.



Select ACK NAK Timeout Value Setting

To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in [Appendix D](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★01 ACK NAK Timeout value is 200ms

ACK NAK Retry Count

This feature specifies the number of times the reader retries a label transmission due to a retry condition. The selectable range is from 1 to 254 retries. A selection of 0 disables the count, and a selection of 255 specifies unlimited retries. See "[ACK NAK Retry Count](#)" on page 245 for more detailed programming instructions.



Select ACK NAK Retry Count Setting

To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in [Appendix D](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★003 = 3 Retries



ACK NAK Error Handling

This feature specifies the method the reader uses to handle receive errors detected while waiting for an ACK character from the host.

Options are:

- Ignore errors detected
- Process error as valid ACK character
- Process error as valid NAK character



★ ACK NAK Error Handling = Ignore Errors Detected



ACK NAK Error Handling = Process Error as Valid ACK Character



ACK NAK Error Handling = Process Error as Valid NAK Character

Indicate Transmission Failure

This option enables/disables the reader's ability to sound an error beep to indicate a transmission failure while in ACK/NAK mode.



Indicate Transmission Failure = Disable Indication



★ Indicate Transmission Failure = Enable Indication



Disable Character

Specifies the value of the USB COM host command used to disable the reader.

ASCII characters or any hex value from 0 to 0xFF can be selected. See "Disable Character" on page 246 for more detailed programming instructions.



Setting to previously defined characters such as XON, XOFF, or host commands conflicts with normal operation of these characters.



Select Disable Character Setting

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ 0x44 = Disable Character is 'D'

Enable Character

Specifies the value of the USB COM host command used to enable the reader.

ASCII characters or any hex value from 0 to 0xFF can be selected. See "Enable Character" on page 247 for more detailed programming instructions



Setting to previously defined characters such as XON, XOFF, or host commands conflicts with normal operation of these characters.



Select Enable Character Setting

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ 0x45 = Enable Character is 'E'

NOTES

CONFIGURATION | KEYBOARD INTERFACE

SECTION CONTENTS

COUNTRY MODE starting on page 38

- Setting Country Mode

OTHER KEYBOARD PARAMETERS starting on page 53

- Encoding Type
- ALT Output Type
- Keyboard Numeric Keypad
- Keyboard Send Control Characters
- Intercharacter Delay
- Intercharacter Delay
- Intercode Delay
- USB Keyboard Speed

Use the programming bar codes in this chapter to select options for USB Keyboard and for keyboard emulations via BT (HID/HOGP). Reference [Appendix B](#), for a listing of standard factory settings. Information about control character emulation which applies to keyboard interfaces is listed in [Appendix E](#), Scancode Tables.


COUNTRY MODE

This feature specifies the country/language supported by the keyboard.


The Country Mode setting is ignored if the interface uses alternate key encoding.

SETUP ON PC TO USE ALT UNIVERSAL

1. Open Registry Edit

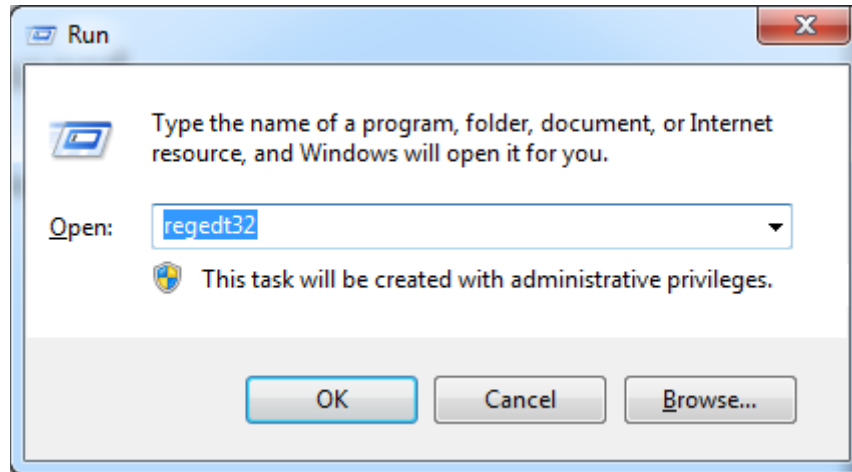

2. Set EnableHexNumpad to 1 as follows:

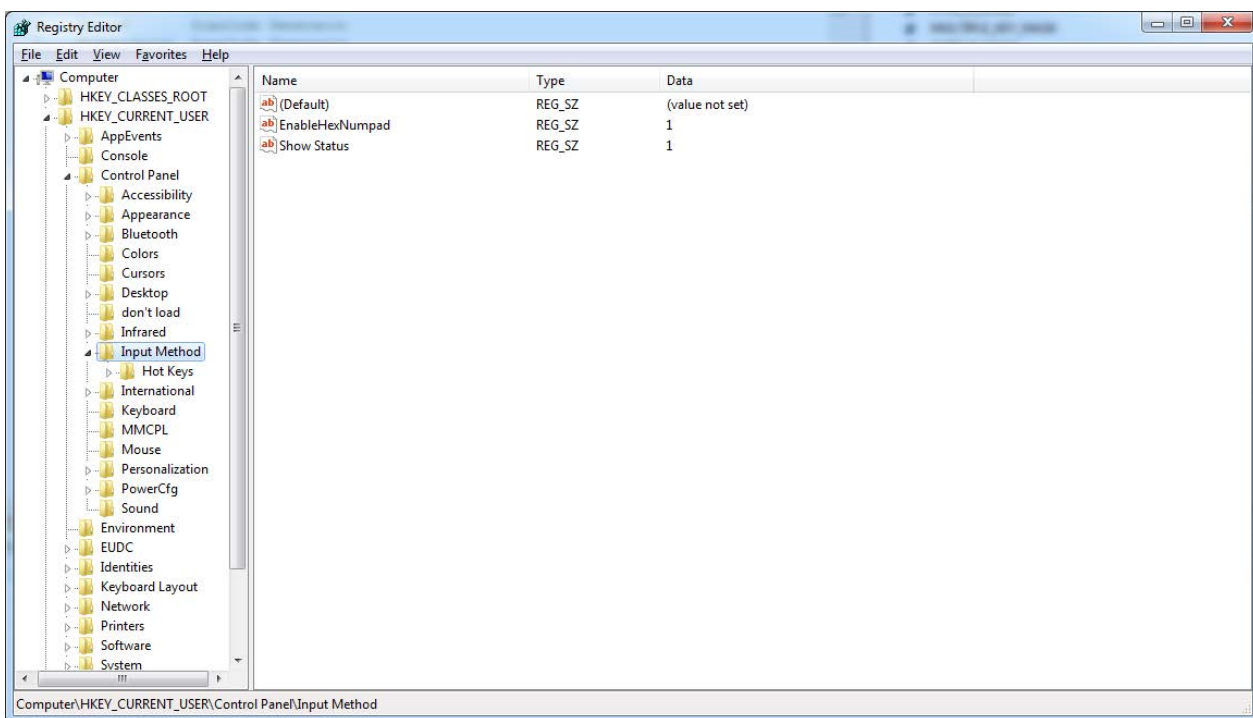

3. Reset the PC.



Setting Country Mode



★ United States



French International (Belgian French)



United Kingdom



Danish



French (France)



German



Italian



Setting Country Mode (continued)



Norwegian



Portuguese (Portugal)



Spanish



Swedish



Swiss French



Japanese ASCII



Hungarian



Setting Country Mode (continued)



Czech



Slovak



Romanian



Croatian



Polish_214



French Canadian Win7



Lithuanian



Setting Country Mode (continued)



Vietnamese



Russian



Arabic 101



Chinese ASCII



Thai-Kedmanee



Albanian



Arabic 102



Setting Country Mode (continued)



Arabic 102 AZERTY



Azeri Cyrillic



Azeri Latin



Belarusian



Bosnian Cyrillic



Bosnian Latin



Bulgarian Cyrillic



Setting Country Mode (continued)



Bulgarian Latin



Canadian French (Legacy)



Canadian Multilingual



Chinese (Simplified)



Chinese (Traditional)



Czech Programmers



Czech QWERTY



Setting Country Mode (continued)



Dutch Netherland



Estonian



Faeroese



Finnish



French (Canada) 2000/XP



French (Canada) 95/98



Galician



Setting Country Mode (continued)



Greek



Greek Latin



Greek Polytonic



Greek220



Greek220 Latin



Greek319



Greek319 Latin



Setting Country Mode (continued)



Hebrew Israel



Hungarian_101KEY



Icelandic



Irish



Italian_142



Japanese (Shift-JIS)



Kazakh



Setting Country Mode (continued)



Korean (Hangul)



Korean ASCII



Kyrgyz Cyrillic



Latin America



Latvian



Latvian QWERTY



Lithuanian_IBM



Setting Country Mode (continued)



Macedonian -FYROM



Maltese_47KEY



Mongolian-Cyrillic



Polish Programmer



Portuguese Brazil



Portuguese Brazilian ABNT



Portuguese Brazilian ABNT2



Setting Country Mode (continued)



Romanian Legacy



Romanian Programmer



Romanian Standard



Russian Typewriter



Serbian Cyrillic



Serbian Latin



Slovak QWERTY



Setting Country Mode (continued)



Slovenian



Spanish Variation



Swiss German



Tatar



Turkish F



Turkish Q



Ukrainian



Setting Country Mode (continued)



US Dvorak



US Dvorak Left Hand



US Dvorak Right Hand



US English (Mac)



US English (North American)



US International



Uzbek Cyrillic



OTHER KEYBOARD PARAMETERS

Encoding Type



★ Encoding Type = Don't Use Encoding



Encoding Type = UTF_8



Encoding Type = Windows 874



Encoding Type = Windows 932



Encoding Type = Windows 936



Encoding Type = Windows 949



Encoding Type = Windows 950



Encoding Type (continued)



Encoding Type = Windows 1250



Encoding Type = Windows 1251



Encoding Type = Windows 1252



Encoding Type = Windows 1253



Encoding Type = Windows 1254



Encoding Type = Windows 1255



Encoding Type = Windows 1256



Encoding Type (continued)



Encoding Type = Windows 1257



Encoding Type = Windows 1258



Encoding Type = Windows 20866



Encoding Type = Windows 54936



Encoding Type = ISO 8859-1



Encoding Type = ISO 8859-2



Encoding Type = ISO 8859-3



Encoding Type (continued)



Encoding Type = ISO 8859-4



Encoding Type = ISO 8859-5



Encoding Type = ISO 8859-6



Encoding Type = ISO 8859-7



Encoding Type = ISO 8859-8



Encoding Type = ISO 8859-9



Encoding Type = ISO 8859-10



Encoding Type (continued)



Encoding Type = ISO 8859-11



Encoding Type = ISO 8859-13



Encoding Type = ISO 8859-14



Encoding Type = ISO 8859-15



Encoding Type = ISO 8859-16



Encoding Type = MS-DOS 437



Encoding Type = MS-DOS 737



Encoding Type (continued)



Encoding Type = MS-DOS 775



Encoding Type = MS-DOS 850



Encoding Type = MS-DOS 852



Encoding Type = MS-DOS 855



Encoding Type = MS-DOS 857



Encoding Type = MS-DOS 860



Encoding Type = MS-DOS 861



Encoding Type (continued)



Encoding Type = MS-DOS 862



Encoding Type = MS-DOS 863



Encoding Type = MS-DOS 865



Encoding Type = MS-DOS 866



Encoding Type = MS-DOS 869



Encoding Type = Mac CP10000



ALT Output Type

This option specifies the encode type of ALT Mode when the reader sends Output Keyboard Data in Alt Mode. (Be aware that the reader may switch automatically between ALT mode & Normal Keyboard Scancode, to correctly display some characters that are not present in the current Keyboard Country).



ALT Output Type = ALT Codepage
(use on non Unicode application: Notepad)



★ ALT Output Type = ALT Unicode
(use on Unicode application: Word)



ALT Output Type = ALT Universal
(Use for all)



ALT Output Type = ALT Unicode for Linux



Keyboard Numeric Keypad

This feature specifies if numeric characters will be sent using the standard keys or the numeric keypad.



★ Keyboard Numeric Keypad = Standard Keys



Keyboard Numeric Keypad = Numeric Keypad

Keyboard Send Control Characters

This feature is used by the USB Keyboard interfaces. It specifies how the reader transmits ASCII control characters to the host. Reference [Appendix E Scancode Tables](#) for more information about control characters.

Options are as follows:

Send Ctrl+Key : ASCII characters from 00H to 0x1FH inclusive are transmitted in the format Ctrl+Key. Special keys are available in the range from 81H to A1.

Send Ctrl+Shift+Key : The behavior is the same as above, but control keys are sent in the format Ctrl+Shift+Keys.

Send Special Function Key : Send characters between 00H and 1FH according to the special function key mapping table (see "[Interface Type USB-Keyboard Alt Mode](#)" on page 302). This is used to send keys that are not in the normal ASCII set. A unique set is provided for each available scancode set.



★ Keyboard Send Control Characters = Send Ctrl+Key



Keyboard Send Control Characters = Send Ctrl+Shift+Key



Keyboard Send Control Characters = Send Special Function
Key



Intercharacter Delay

This parameter specifies the intercharacter delay between the end of one character and the beginning of the next. The delay can be set within a range of zero (0) to 990 milliseconds in 10ms increments. A setting of zero specifies no delay. See "Intercharacter Delay" on page 248 for more detailed programming instructions.



Intercharacter Delay = No Delay



Select Intercharacter Delay Setting

To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★00 = No Intercharacter Delay

Intercode Delay

Specifies the delay between labels transmitted to the host for this interface. The selectable range for this feature is from 0 to 99 seconds. See "Intercode Delay" on page 249 for more detailed programming instructions



Set Intercode Delay

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★00 = No Intercode Delay



USB Keyboard Speed

This option specifies the USB poll rate for a USB Keyboard.



NOTE: This feature applies ONLY to the USB Keyboard interface.



★ USB Keyboard Speed = 1ms



USB Keyboard Speed = 2ms



USB Keyboard Speed = 3ms



USB Keyboard Speed = 5ms



USB Keyboard Speed = 7ms



USB Keyboard Speed = 10ms

CONFIGURATION | USB-OEM INTERFACE

SECTION CONTENTS

- USB-OEM Device Usage



USB-OEM Device Usage

The USB-OEM protocol allows for the reader to be identified as one of two different types of bar code reader. Depending on what other reader you may already have connected to a USB-OEM POS, you may need to change this setting to enable all devices to communicate.

Options are:

- Tabletop Scanner
- Handheld Scanner



NOTE: This feature is not compatible with Multiple Labels Reading in a Volume.



USB-OEM Device Usage = Tabletop Scanner



★ USB-OEM Device Usage = Handheld Scanner

CONFIGURATION | DATA FORMAT

SECTION CONTENTS

GLOBAL SETTINGS starting on page 67

- Global Prefix/Suffix
- Case Conversion
- Character Conversion
- Global AIM ID
- GS1-128 AIM ID

LABEL ID starting on page 70

- Label ID: Set Individually Per Symbology
- Label ID Control
- Label ID Symbology Selection



GLOBAL SETTINGS

Global Prefix/Suffix

Up to 20 ASCII characters may be added as a prefix (in a position before the bar code data) and/or as a suffix (in a position following the bar code data). See [page 251](#) in “References” for more detailed programming instructions.

To configure, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code.



Set Global Prefix



Set Global Suffix

To configure, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ No Global Prefix

★ Global Suffix = Global Suffix = 0x0D(CR)



Case Conversion

This feature allows conversion of the case of all alphabetic characters to upper or lower case.



NOTE: Case conversion affects ONLY scanned bar code data, and does not affect Label ID, Prefix, Suffix, or other appended data.



★ Case Conversion = Disable (no case conversion)



Case Conversion = Convert to upper case



Case Conversion = Convert to lower case

Character Conversion

Character conversion is an eight byte configuration item. The eight bytes are 4 character pairs represented in hexadecimal ASCII values. The first character in the pair is the character that will be converted. The second character in the pair is the character to convert to. If the character to convert in a pair is FF, then no conversion is done. See [page 257](#) in “References” for more detailed programming instructions.



Configure Character Conversion

To configure, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ 0xFFFFFFFFFFFFFFF
(no character conversion)



Global AIM ID



NOTE: This feature enables/disables addition of AIM IDs for all symbology types.

AIM label identifiers (as opposed to custom characters you select yourself as with label identifiers) can be included with scanned bar code data. See for more detailed programming instructions.



★ Global AIM ID = Disable



Global AIM ID = Enable

GS1-128 AIM ID

If Global AIM ID is disabled, the AIM ID for GS1-128 can be enabled/disabled independently. The AIM ID for GS1-128 is a]C1,]C2.

AIM IDs for other symbologies can be enabled/disabled independently as well. Contact Customer Support for assistance.



GS1-128 AIM ID = Disable



★ GS1-128 AIM ID = Enable



LABEL ID

A Label ID is a customizable code of up to three ASCII characters (each can be one of hex 0x01-0xFF), used to identify a bar code (symbology) type. It can be appended previous to or following the transmitted bar code data depending upon how this option is enabled. This feature provides options for configuring custom Label IDs as a pre-loaded set (see [Label ID: Pre-loaded Sets](#) below) or individually per symbology (see "[Label ID: Set Individually Per Symbology](#)" on page 71). If you wish to program the reader to always include an industry standard label identifier for ALL symbology types, see the previous feature "[Global AIM ID](#)" on page 69.

Label ID: Pre-loaded Sets

The reader supports two pre-loaded sets of Label IDs, the USA set and the EU set. See "[Label ID: Pre-loaded Sets](#)" on page 253 for more information concerning the pre-loaded sets that are provided.



CAUTION: When changing from one Label ID set to another, all other reader configuration settings, including the host interface type, will be erased and set to the factory defaults. Any custom configuration or custom defaults will be lost.



★ Label ID Pre-loaded Set = USA Set



Label ID Pre-loaded Set = EU Set



Label ID: Set Individually Per Symbology

This feature configures a Label ID individually for a single symbology.



NOTE: This setting requires the scanning of bar codes from multiple sections. See "Label ID: Set Individually Per Symbology" on page 255 for more detailed programming instructions.

Label ID Control

This option controls whether a Label ID is disabled, or sent as a prefix or suffix for a given symbology type.



★ Label ID Transmission = Disable



Label ID Transmission = Enable as Prefix



Label ID Transmission = Enable as Suffix



Label ID Symbology Selection

This option selects the symbology for which a Label ID is to be configured. See "[Label ID: Set Individually Per Symbology](#)" on page 255 for full instructions.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL



Set UPC-A Label ID Character(s)



Set UPC-A/P2 Label ID Character(s)



Set UPC-A/P5 Label ID Character(s)



Set UPC-E Label ID Character(s)



Set UPC-E/P2 Label ID Character(s)



Set UPC-E/P5 Label ID Character(s)



Set EAN-13 Label ID Character(s)



Label ID Symbology Selection (continued)



Set EAN-13/P2 Label ID Character(s)



Set EAN-13/P5 Label ID Character(s)



Set ISBN Label ID Character(s)



Set ISSN Label ID Character(s)



Set EAN-8 Label ID Character(s)



Set EAN-8 P2 Label ID Character(s)



Set EAN-8 P5 Label ID Character(s)



Set GS1 DataBar Omnidirectional Label ID Character(s)



Label ID Symbology Selection (continued)



Set GS1 DataBar Expanded Label ID Character(s)



Set GS1 DataBar Limited Label ID Character(s)



Set Code 39 Label ID Character(s)



Set Code 32 Label ID Character(s)



Set Code 39 CIP HR Label ID Character(s)



Set Code 128 Label ID Character(s)



Set Code GS1-128 Label ID Character(s)



Set Interleaved 2 of 5 Label ID Character(s)



Label ID Symbology Selection (continued)



Set Interleaved 2 of 5 CIP HR Label ID Character(s)



Datalogic 2 of 5 Label ID Character(s)



Standard 2 of 5 Label ID Character(s)



Industrial 2 of 5 Label ID Character(s)



IATA Label ID Character(s)



Codabar Label ID Character(s)



ABC Codabar Label ID Character(s)



ISBT 128 Label ID Character(s)
(single and concatenated)



Label ID Symbology Selection (continued)



Code 11 Label ID Character(s)



MSI Label ID Character(s)



Plessey Label ID Character(s)



Anker Plessey Label ID Character(s)



Set Matrix 2 of 5 Label ID Character(s)

CONFIGURATION | READING PARAMETERS

SECTION CONTENTS

SCANNING FEATURES starting on page 78

- Scan Mode
- Scanning Active Time
- Flash On Time
- Flash Off Time
- Double Read Timeout
- Object Detection Sensitivity
- Object Detection Illumination Off Time
-
-

LED AND BEEPER INDICATORS starting on page 84

- Power On Alert
- Good Read Beep Type
- Good Read Beep Frequency
- Good Read Beep Length
- Silent Mode
- Good Read LED Duration
- Good Read: When to Indicate
- Good Read Beeper Volume
- Good Read Vibration Duration
- Green Spot Duration

CAMERA CONTROL starting on page 92

- Aiming Pointer
- Pick Mode
- Mobile Phone Mode
- Mobile Phone Saturation Rate
- Decode Negative Image
- Image Capture

MULTIPLE LABEL READING starting on page 95

- Multiple Labels per Frame
- Multiple Labels Ordering by Code Symbology
- Multiple Labels Ordering by Code Length



SCANNING FEATURES

Scan Mode

Selects the reader's scan operating mode. See [page 258](#) in "References" for descriptions.



★ Scan Mode = Trigger Single



Scan Mode = Trigger Hold Multiple



Scan Mode = Trigger Pulse Multiple



Scan Mode = Flashing



Scan Mode = Object Detection



Scanning Active Time

This setting specifies the amount of time that the reader stays in scan ON state once the state is entered. The range for this setting is from 1 to 255 seconds in 1-second increments. See [page 258](#) in “References” for further description of this feature.



Scanning Active Time = 3 seconds



★ Scanning Active Time = 5 seconds



Scanning Active Time = 8 seconds

Flash On Time

This feature specifies the ON time for the indicator LED while in Flash Mode. The selectable range is 100 to 9,900 milliseconds (0.1 to 9.9 seconds), in 100 millisecond increments. See [page 260](#) in “References” for detailed information on setting this feature.



Select Flash ON Time Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ 10 = Flash is ON for 1 Second



Flash Off Time

This feature specifies the OFF time for the indicator LED while in Flash Mode. The selectable range is 100 to 9,900 milliseconds (0.1 to 9.9 seconds), in 100 millisecond increments. See [page 261](#) in “References” for detailed information on setting this feature.



Select Flash OFF Time Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★06 = Flash is OFF for 600ms

Double Read Timeout

Double Read Timeout prevents a double read of the same label by setting the minimum time allowed between reads of labels of the same symbology and data. If the unit reads a label and sees the same label again within the specified timeout, the second read is ignored. Double Read Timeout does not apply to scan modes that require a trigger pull for each label read.



Double Read Timeout = 0.1 Second



Double Read Timeout = 0.2 Second



Double Read Timeout = 0.3 Second



Double Read Timeout = 0.4 Second



Double Read Timeout (continued)



Double Read Timeout = 0.5 Second



★ Double Read Timeout = 0.6 Second



Double Read Timeout = 0.7 Second



Double Read Timeout = 0.8 Second



Double Read Timeout = 0.9 Second



Double Read Timeout = 1 Second



Object Detection Sensitivity

Sets the sensitivity level for object detection wakeup. Choices are low, medium and high.



Object Detection Sensitivity = Low



★ Object Detection Sensitivity = Medium



Object Detection Sensitivity = High



Object Detection Illumination Off Time

Specifies the amount of time reader illumination stays off after pulling the trigger when in Object Detection. The configurable range is 01 to 32 by 01 in increments of 500ms (500ms to 16 seconds).



Set Illumination OFF Time

To configure, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★04 = Illumination OFF Time 1 second



LED AND BEEPER INDICATORS

Power On Alert

Disables or enables the indication (from the Beeper) that the reader is receiving power.



Power On Alert = Disable (No Audible Indication)



★ Power On Alert = Power-up Beep

Good Read Beep Type

Specifies whether the good read beep has a mono or bitonal beep sound.



★ Good Read Beep Type = Mono



Good Read Beep Type = Bitonal



Good Read Beep Frequency

Adjusts the good read beep to sound at a selectable low, medium or high frequency, selectable from the list below. (Controls the beeper's pitch/tone.)



Good Read Beep Frequency = Low



Good Read Beep Frequency = Medium



★ Good Read Beep Frequency = High



Good Read Beep Length



Good Read Beep Length = 60 msec



★ Good Read Beep Length = 80 msec



Good Read Beep Length = 100 msec



Good Read Beep Length = 120 msec



Good Read Beep Length = 140 msec



Good Read Beep Length = 160 msec



Good Read Beep Length = 180 msec



Good Read Beep Length = 200 msec



Good Read Beeper Volume

Selects the beeper volume (loudness) upon a good read beep. There are three selectable volume levels.



Good Read Beeper Volume = Beeper Off



Good Read Beeper Volume = Low



Good Read Beeper Volume = Medium



★ Good Read Beeper Volume = High



Silent Mode

If needed, audible indications can be disabled by scanning the labels below.

Please note that some important audible notifications are not muted in silent mode and other notifications are replaced by visual indications.

All changes in audible notifications are summarized here:

- Connection / Disconnection / out of radio range beeps are replaced with blue LED
- Error beep, wireless Error/timeout beeps, chirp beeps are replaced with red top LED
- Battery beeps, Programming labels, and wireless paging beeps are not muted



Silent Mode = Enable



★ Silent Mode = Disable



Good Read LED Duration

This feature specifies the amount of time that the Good Read LED remains on following a good read. The good read LED on time can be set within a range of 100 milliseconds to 25,500 milliseconds (0.1 to 25.5 seconds) in 100ms increments. A setting of 00 keeps the LED on until the next trigger pull.

See [page 262](#) in “References” for detailed instructions and examples for setting this feature.



Select Good Read LED Duration Setting

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



Good Read LED Duration Setting =
Keep LED on until next trigger pull

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.



CANCEL

★ 003 = Good Read LED stays on for 300 msec.



Good Read: When to Indicate

This feature specifies when the reader will provide indication (beep and/or flash its green LED) upon successfully reading a bar code.



★ Indicate Good Read = After Decode



Indicate Good Read = After Transmit



Indicate Good Read =
After CTS goes inactive then active



Green Spot Duration

Specifies the duration of the good read pointer beam after a good read.



Green Spot Duration = Disable (Green Spot is Off)



★ Green Spot Duration = Short (300 msec)



Green Spot Duration = Medium (500 msec)



Green Spot Duration = Long (800 msec)

Good Read Vibration Duration

Specifies the duration of the good read vibration beam after a good read.



Good Read Vibration Duration = OFF



★ Good Read Vibration Duration = Vibration ON (200 msec)



Good Read Vibration Duration = ON (600 msec)



CAMERA CONTROL

Aiming Pointer

Enables/disables the aiming pointer for all symbologies.



Aiming Pointer = Disable



★ Aiming Pointer = Enable



Aiming Pointer = Green Spot

Pick Mode

Specifies the ability of the reader to decode labels only when they are close to the center of the aiming pattern. This allows the reader to accurately target labels when they are placed close together, such as on a pick sheet.

The Pick Mode can be enabled only in Trigger Single Scan Mode.



NOTE: This feature is not compatible with Multiple Labels Reading in a Volume.



★ Pick Mode = Disable



Pick Mode = Enable



Mobile Phone Mode

This mode is useful for scanning bar codes displayed on a mobile phone. Other options for this feature can be configured using the Datalogic Aladdin application.



Mobile Phone Mode = Disable



★ Mobile Phone Mode = Enable



Mobile Phone Mode = Enhanced

Mobile Phone Saturation Rate

This specifies the minimum number of saturated pixels (every 1000 pixels) in the image in order to activate the Mobile Phone mode.



★ Mobile Phone Saturation Rate = 00



Mobile Phone Saturation Rate = 01



Mobile Phone Saturation Rate = 02

Decode Negative Image

Enable/Disable the ability to decode a negative image for all symbologies. When this feature is enabled, you will be unable to read normally-printed labels or programming labels in this manual. Scan the "Disable" bar code below to return the reader to its default for this feature. To set decoding for only 2D codes, go to "2D Normal/Inverse Symbol Control" on [page 184](#). For additional options, see the Aladdin configuration application.



NOTE: Unlike some programming features and options, Decode Negative Image selections require that you scan only one programming bar code label. DO NOT scan an ENTER/EXIT bar code prior to scanning a Decode Negative Image bar code.



CAUTION: When this feature is enabled, you will be unable to read other programming labels in this manual.



★ Decode Negative Image = Disable



Decode Negative Image = Enable

Image Capture

For information and a list of options for Image Capture, use the Datalogic Aladdin configuration application, available for free download from the Datalogic Scanning website.



MULTIPLE LABEL READING

In standard (default) mode, when the reader's aiming system is activated (by a trigger pull, motion or other method depending on the mode), it acquires and processes each image in the area in front of it (the Volume). In this case, the reader stops processing the image once it decodes a label. If several labels are present in the volume, only the first label encountered is decoded and sent.

When Multiple Reading Mode is enabled, the reader keeps on processing the image until all the labels present are decoded. The reader then sorts the data from all the bar codes (if configured to do so) before transmitting it.

Multiple Labels per Frame

Specifies the ability of the reader to decode and transmit a set of code labels in a specific volume and in a single frame of time. When in Multiple Labels per Frame the reader beeps and turns on the good read LED indication for each code read in a frame.

When Multiple Labels Mode is enabled, ISBT pairing, ABC Codabar pairing, and composites are not allowed.



★ Multiple Labels per Frame = Disable



Multiple Labels per Frame = Enable

Multiple Labels Ordering by Code Symbology

This feature allows you to specify the order multiple labels are transmitted by symbology type, when Multiple Labels per Frame is enabled.



Select Symbolologies for Multiple Labels Ordering

To configure, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ 000000000000 = Random order



Multiple Labels Ordering by Code Length

Specifies the transmission ordering by code length, when Multiple Labels per Frame is enabled.



★ Multiple Labels Ordering = Disable



Multiple Labels Ordering = Transmit Increasing Length Order



Multiple Labels Ordering = Transmit Decreasing Length Order

CONFIGURATION | 1D SYMBOLOGIES

SECTION CONTENTS

DISABLE ALL SYMBOLOGIES starting on page 98

- **COUPON CONTROL** starting on page 98
- **UPC-A** starting on page 99
- **UPC-E** starting on page 101
- **EAN-13** starting on page 104
- **EAN-8** starting on page 107
- **UPC/EAN GLOBAL SETTINGS** starting on page 109
- **GS1 DATABAR™ OMNIDIRECTIONAL** starting on page 113
- **GS1 DATABAR™ EXPANDED** starting on page 114
- **GS1 DATABAR™ LIMITED** starting on page 117
- **CODE 39** starting on page 118
- **TRIOPTIC CODE** starting on page 123
- **CODE 39 DANISH PPT** starting on page 123
- **CODE 39 PZN** starting on page 124
- **CODE 39 LA POSTE** starting on page 124
- **CODE 32 (ITALIAN PHARMACEUTICAL)** starting on page 125
- **CODE 39 CIP HR (FRENCH PHARMACEUTICAL)** starting on page 126
- **CODE 128** starting on page 127
- **GS1-128** starting on page 131
- **INTERLEAVED 2 OF 5 (I 2 OF 5)** starting on page 132
- **INTERLEAVED 2 OF 5, FEBRABAN** starting on page 137
- **INTERLEAVED 2 OF 5 CIP HR** starting on page 137
- **MATRIX 2 OF 5** starting on page 137
- **STANDARD 2 OF 5** starting on page 141
- **COMPRESSED 2 OF 5** starting on page 144
- **DATALOGIC 2 OF 5** starting on page 147
- **INDUSTRIAL 2 OF 5** starting on page 150
- **IATA** starting on page 153
- **FOLLETT 2 OF 5** starting on page 154
- **CODABAR** starting on page 155
- **ABC CODABAR** starting on page 161
- **ISBT 128** starting on page 163
- **CODE 11** starting on page 166
- **CODE 93** starting on page 169
- **MSI** starting on page 173
- **PLESSEY** starting on page 176
- **BC412** starting on page 179



DISABLE ALL SYMBOLOGIES

Scan this label to disable all symbologies.



Disable All Symbologies

COUPON CONTROL

Coupon Control

This feature is used to control the method of processing coupon labels.

Options are:

- Allow all — allow all coupon bar codes to be decoded
- Enable only UPC/EAN — enables only UPC/EAN coupon decoding
- Enable only GS1 DataBar — enables only GS1 DataBar coupon decoding

To set this feature:

1. Scan the Enter/Exit bar code.
2. Scan either the enable or disable bar code below. You'll need to cover any unused bar codes on this and the facing page to ensure that the reader sees only the bar code you intend to scan.
3. Complete the programming sequence by scanning the Enter/Exit bar code.



Coupon Control = Allow all



★ Coupon Control = Enable only UPC-A



Coupon Control = Enable only GS1 DataBar



UPC-A

The following options apply to the UPC-A symbology.

UPC-A Enable/Disable

When disabled, the reader will not read UPC-A bar codes.



UPC-A = Disable



★ UPC-A = Enable

UPC-A Check Character Transmission

Enable this option to transmit the check character along with UPC-A bar code data.



UPC-A Check Character Transmission = Don't Send



★ UPC-A Check Character Transmission = Send



Expand UPC-A to EAN-13

Expands UPC-A data to the EAN-13 data format. Selecting this feature also changes the symbology ID to match those required for EAN-13.



★ UPC-A to EAN-13 = Don't Expand



UPC-A to EAN-13 = Expand

UPC-A Number System Character Transmission

This feature enables/disables transmission of the UPC-A number system character.



UPC-A Number System Character = Do not transmit



★ UPC-A Number System Character = Transmit



UPC-E

The following options apply to the UPC-E symbology.

UPC-E Enable/Disable

When disabled, the reader will not read UPC-E bar codes.



UPC-E = Disable



★ UPC-E = Enable

UPC-E Check Character Transmission

Enable this option to transmit the check character along with UPC-E bar code data.



UPC-E Check Character Transmission = Don't Send



★ UPC-E Check Character Transmission = Send



Expand UPC-E to EAN-13

Expands UPC-E data to the EAN-13 data format. Selecting this feature also changes the symbology ID to match those required for EAN-13.



★UPC-E to EAN-13 = Don't Expand



UPC-E to EAN-13 = Expand

Expand UPC-E to UPC-A

Expands UPC-E data to the UPC-A data format. Selecting this feature also changes the symbology ID to match those required for UPC-A.



★UPC-E to UPC-A = Don't Expand



UPC-E to UPC-A = Expand

UPC-E Number System Character Transmission

This feature enables/disables transmission of the UPC-E number system character.



UPC-E Number System Character = Do not transmit



★UPC-E Number System Character = Transmit



GTIN Formatting

This feature enables/disables the ability to convert UPC-E, UPC-A, EAN-8, and EAN-13 labels into the GTIN 14-character format.



★ GTIN Formatting = Disable



GTIN Formatting = Enable



EAN-13

The following options apply to the EAN-13 symbology.

EAN-13 Enable/Disable

When disabled, the reader will not read EAN-13 bar codes.



EAN-13 = Disable



★ EAN-13 = Enable

EAN-13 Check Character Transmission

Enable this option to transmit the check character along with EAN-13 bar code data.



EAN-13 Check Character Transmission = Don't Send



★ EAN-13 Check Character Transmission = Send



EAN-13 Flag 1 Character

Enables/disables transmission of an EAN/JAN-13 Flag1 character. The Flag 1 character is the first character of the label



EAN-13 Flag 1 Char = Don't transmit



★ EAN-13 Flag 1 Char = Transmit

EAN-13 to ISBN Conversion

This option enables/disables conversion of EAN-13/JAN-13 Bookland labels starting with 978 to ISBN labels.



★ EAN-13 ISBN Conversion = Disable



EAN-13 ISBN Conversion = Enable



EAN-13 to ISSN Conversion

Enables/disables conversion of EAN/JAN-13 Bookland labels starting with 977 to ISSN labels.



★ ISSN = Disable



ISSN = Enable



EAN-8

The following options apply to the EAN-8 symbology.

EAN-8 Enable/Disable

When disabled, the reader will not read EAN-8 bar codes.



EAN-8 = Disable



★ EAN-8 = Enable

EAN-8 Check Character Transmission

Enable this option to transmit the check character along with EAN-8 bar code data.



EAN-8 Check Character Transmission = Don't Send



★ EAN-8 Check Character Transmission = Send



Expand EAN-8 to EAN-13

Enable this option to expand EAN-8/JAN-8 labels to EAN-13/JAN-13.



★ EAN-8 to EAN-13 = Don't Expand



EAN-8 to EAN-13 = Expand



UPC/EAN GLOBAL SETTINGS

This section provides configuration settings for UPC-A, UPC-E, EAN 13 and EAN 8 symbologies, and affects all of these unless otherwise marked for each feature description.

UPC/EAN Price Weight Check

This feature enables/disables calculation and verification of price/weight check digits.

Options are

- Disabled
- Enable 4-digit price-weight check-digit calculation
- Enable 5-digit price-weight check-digit calculation
- Enable European 4-digit price-weight check-digit calculation
- Enable European 5-digit price-weight check-digit calculation



★ Price Weight Check = Disable



Price Weight Check = 4-digit price-weight check



Price Weight Check = 5-digit price-weight check



Price Weight Check = European 4-digit price-weight check



Price Weight Check = European 5-digit price-weight check



UPC/EAN Quiet Zones

This feature specifies the number of quiet zones for UPC/EAN labels. Quiet zones are blank areas at the ends of a bar code, typically 10 times the width of the narrowest bar or space in the label. The property applies to all EAN-UPC symbologies globally and to the ADD-ONS.



★ UPC/EAN Quiet Zones = Two Modules



UPC/EAN Quiet Zones = Three Modules



UPC/EAN Quiet Zones = Four Modules



UPC/EAN Quiet Zones = Five Modules



UPC/EAN Quiet Zones = Six Modules



UPC/EAN Quiet Zones = Seven Modules



UPC/EAN Quiet Zones = Eight Modules



Add-Ons

The following features apply to optional add-ons.



NOTE: Contact Customer Support for advanced programming of optional and conditional add-ons.

Optional Add-ons

The reader can be enabled to optionally read the following add-ons (supplementals):

- P2
- P5



NOTE: If a UPC/EAN base label and a an add-on are both decoded, the reader will transmit the base label and add-on. If a UPC/EAN base label is decoded without an add-on, the base label will be transmitted without an add-on.

Conditional add-on settings (if enabled) are considered by the reader before optional add-on settings.



★ Optional Add-Ons = Disable P2



Optional Add-Ons = Enable P2



★ Optional Add-Ons = Disable P5



Optional Add-Ons = Enable P5



Optional Add-On Timer

This option sets the time the reader will look for an add-on when an add-on fragment has been seen and optional add-ons are enabled.



Optional Add-on Timer = 10ms



Optional Add-on Timer = 20ms



Optional Add-on Timer = 30ms



Optional Add-on Timer = 50ms



★ Optional Add-on Timer = 70ms



Optional Add-on Timer = 100ms



Optional Add-on Timer = 160ms



GS1 DATABAR™ OMNIDIRECTIONAL

The following options apply to the GS1 DataBar Omnidirectional (formerly RSS-14) symbology.

GS1 DataBar Omnidirectional Enable/Disable

When disabled, the reader will not read GS1 DataBar Omnidirectional bar codes.



★ GS1 DataBar Omnidirectional = Disable



GS1 DataBar Omnidirectional = Enable

GS1 DataBar Omnidirectional to GS1-128 Emulation

When enabled, GS1 DataBar Omnidirectional bar codes will be translated to the GS1-128 label data format.



★ GS1 DataBar Omnidirectional to GS1-128 Emulation = Disable



GS1 DataBar Omnidirectional to GS1-128 Emulation = Enable



GS1 DATABAR™ EXPANDED

The following options apply to the GS1 DataBar Expanded (formerly RSS Expanded) symbology.

GS1 DataBar Expanded Enable/Disable

When disabled, the reader will not read GS1 DataBar Expanded bar codes.



★ GS1 DataBar Expanded = Disable



GS1 DataBar Expanded = Enable

GS1 DataBar Expanded to GS1-128 Emulation

When enabled, GS1 DataBar Expanded bar codes will be translated to the GS1-128 label data format.



★ GS1 DataBar Expanded to GS1-128 Emulation
= Disable



GS1 DataBar Expanded to GS1-128 Emulation
= Enable



GS1 DataBar Expanded Length Control

This feature specifies either variable length decoding or fixed length decoding for the GS1 DataBar Expanded symbology.

Variable Length: For variable-length decoding, a minimum length may be set.

Fixed Length: For fixed-length decoding, two different lengths may be set.



★ GS1 DataBar Expanded Length Control
= Variable Length



GS1 DataBar Expanded Length Control = Fixed Length

GS1 DataBar Expanded Set Length 1

This feature specifies one of the bar code lengths for "GS1 DataBar Expanded Length Control" on page 115. Length 1 is the minimum label length if in Variable Length Mode, or the first fixed length if in Fixed Length Mode. Length includes the bar code's data characters only.

The length can be set from 1 to 74 characters. See "Set Length 1" on page 264 for more detailed programming instructions.



Select GS1 DataBar Expanded Set Length 1 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ Length 1 = 01 (one character)



GS1 DataBar Expanded Set Length 2

This feature specifies one of the bar code lengths for "GS1 DataBar Expanded Length Control" on page 115. Length 2 is the maximum label length if in Variable Length Mode, or the second fixed length if in Fixed Length Mode. Length includes the bar code's data characters only.

The length can be set from 1 to 74 characters. A setting of 00 specifies to ignore this length (only one fixed length). See "Set Length 2" on page 265 for more detailed programming instructions.



Select GS1 DataBar Expanded Set Length 2 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ Length 2 = 74 (74 characters)



GS1 DATABAR™ LIMITED

The following options apply to the GS1 DataBar Limited (formerly RSS Limited) symbol-ogy.

GS1 DataBar Limited Enable/Disable

When disabled, the reader will not read GS1 DataBar Limited bar codes.



★ GS1 DataBar Limited = Disable



GS1 DataBar Limited = Enable

GS1 DataBar Limited to GS1-128 Emulation

When enabled, GS1 DataBar Limited bar codes will be translated to the GS1-128 label data format.



★ GS1 DataBar Limited to GS1-128 Emulation = Disable



GS1 DataBar Limited to GS1-128 Emulation = Enable



CODE 39

The following options apply to the Code 39 symbology.

Code 39 Enable/Disable

When disabled, the reader will not read Code 39 bar codes.



Code 39 = Disable



★ Code 39 = Enable

Code 39 Check Character Calculation

Enable this option to enable/disable calculation and verification of an optional Code 39 check character. When disabled, any check character in the label is treated as a data character.



★ Code 39 Check Character Calculation = Don't Calculate



Code 39 Check Character Calculation = Calculate Std Check



Code 39 Check Character Calculation = Calculate Mod 7 Check



Code 39 Check Character Calculation = Enable Italian Post Check



Code 39 Check Character Calculation = Enable Daimler
Chrysler Check



Code 39 Check Character Transmission

Enable this option to transmit the check character along with Code 39 bar code data.



Code 39 Check Character Transmission = Don't Send



★ Code 39 Check Character Transmission = Send

Code 39 Start/Stop Character Transmission

Enable this option to enable/disable transmission of Code 39 start and stop characters.



★ Code 39 Start/Stop Character Transmission
= Don't Transmit



Code 39 Start/Stop Character Transmission
= Transmit



Code 39 Full ASCII

In Code 39 decoding, this enables/disables the translation of Code 39 characters to Code 39 full-ASCII characters.



★ Code 39 Full ASCII = Disable



Code 39 Full ASCII = Enable

Code 39 Quiet Zones

This feature specifies the number of quiet zones for Code 39 labels. Quiet zones are blank areas at the ends of a bar code and are typically 10 times the width of the narrowest bar or space in the label.



Codabar Quiet Zones = Quiet Zone on one side



★ Codabar Quiet Zones = Quiet Zones on two sides



Codabar Quiet Zones = Auto



Codabar Quiet Zones = Virtual Quiet Zones on two sides



Codabar Quiet Zones = Small Quiet Zones on two sides



Code 39 Length Control

This feature specifies either variable length decoding or fixed length decoding for the Code 39 symbology.

Variable Length: For variable-length decoding, a minimum length may be set.

Fixed Length: For fixed-length decoding, two different lengths may be set.



★ Code 39 Length Control
= Variable Length



Code 39 Length Control = Fixed Length

Code 39 Set Length 1

This feature specifies one of the bar code lengths for "[Code 39 Length Control](#)" on [page 121](#). Length 1 is the minimum label length if in Variable Length Mode, or the first fixed length if in Fixed Length Mode. Length includes the bar code's check, data, and full-ASCII shift characters. The length does not include start/stop characters.

The length can be set from 0 to 50 characters. See "[Set Length 1](#)" on [page 264](#) for more detailed programming instructions.



Select Code 39 Set Length 1 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ Length 1 = 02 (2 characters)



Code 39 Set Length 2

This feature specifies one of the bar code lengths for "[Code 39 Length Control](#)" on [page 121](#). Length 2 is the maximum label length if in Variable Length Mode, or the second fixed length if in Fixed Length Mode. Length includes the bar code's check, data, and full-ASCII shift characters. The length does not include start/stop characters.

The length can be set from 1 to 50 characters. A setting of 00 specifies to ignore this length (only one fixed length). See "[Set Length 2](#)" on [page 265](#) for more detailed programming instructions.



Select Code 39 Set Length 2 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ Length 2 = 50 (50 characters)



TRIOPTIC CODE

The following options apply to the trioptic symbology.

Trioptic Code Enable/Disable

When disabled, the reader will not read Trioptic Code bar codes.



★ Trioptic Code = Disable



Trioptic Code = Enable

CODE 39 DANISH PPT

The following options apply to the Code 39 Danish PPT symbology.

Code 39 Danish PPT Enable/Disable

When disabled, the reader will not read Code 39 Danish PPT bar codes.



★ Code 39 Danish PPT = Disable



Code 39 Danish PPT = Enable



CODE 39 PZN

The following options apply to the Code 39 PZN symbology.

Code 39 PZN Enable/Disable

When disabled, the reader will not read Code 39 PZN bar codes.



★ Code 39 PZN = Disable



Code 39 PZN = Enable

CODE 39 LA POSTE

The following options apply to the Code 39 La Poste symbology.

Code 39 La Poste Enable/Disable

When disabled, the reader will not read Code 39 La Poste bar codes.



★ Code 39 La Poste = Disable



Code 39 La Poste = Enable



CODE 32 (ITALIAN PHARMACEUTICAL)

The following options apply to the Code 32 symbology.

Code 32 Enable/Disable

When disabled, the reader will not read Code 32 bar codes.



★ Code 32 = Disable



Code 32 = Enable

Code 32 Feature Setting Exceptions



NOTE: The following features are set for Code 32 by using these Code 39 settings:

"Code 39 Quiet Zones" on page 120

"Code 39 Length Control" on page 121

Code 32 Check Character Transmission

Enable this option to transmit the check character along with Code 32 bar code data.



★ Code 32 Check Character Transmission = Don't Send



Code 32 Check Character Transmission = Send



Code 32 Start/Stop Character Transmission

Enable this option to enable/disable transmission of Code 32 start and stop characters.



★ Code 32 Start/Stop Character Transmission
= Don't Transmit



Code 32 Start/Stop Character Transmission
= Transmit

CODE 39 CIP HR (FRENCH PHARMACEUTICAL)

The following options apply to the Code 39 CIP HR symbology.

Code 39 CIP HR Enable/Disable

Enables/Disables ability of the reader to decode Code 39 CIP HR labels.



★ Code 39 CIP HR = Disable



Code 39 CIP HR = Enable



CODE 128

The following options apply to the Code 128 symbology.

Code 128 Enable/Disable

Enables/Disables ability of the reader to decode Code 128 labels.



Code 128 = Disable



★ Code 128 = Enable

Expand Code 128 to Code 39

This feature enables/disables expansion of Code 128 labels to Code 39 labels. When enabled, the label identifier for a Code 128 label shall be set to Code 39 and all Code 39 formatting control shall be applied to the label.



★ Code 128 to Code 39 = Don't Expand



Code 128 to Code 39 = Expand



Code 128 Check Character Transmission

Enable this option to transmit the check character along with Code 128 bar code data.



★ Code 128 Check Character Transmission =
Don't Send



Code 128 Check Character Transmission = Send

Code 128 Function Character Transmission

Enables/disables transmission of Code128 function characters 1, 2, 3, and 4.



★ Code 128 Function Character Transmission =
Don't Send



Code 128 Function Character Transmission = Send



Code 128 Quiet Zones

This feature specifies the number of quiet zones for Code 128 labels. Quiet zones are blank areas at the ends of a bar code and are typically 10 times the width of the narrowest bar or space in the label.



Code 128 Quiet Zones = No Quiet Zones



Code 128 Quiet Zones = Quiet Zone on one side



Code 128 Quiet Zones = Quiet Zones on two sides



★ Code 128 Quiet Zones = Auto



Code 128 Quiet Zones = Virtual Quiet Zones on two sides

Code 128 Length Control

This feature specifies either variable length decoding or fixed length decoding for the Code 128 symbology.

Variable Length: For variable-length decoding, a minimum length may be set.

Fixed Length: For fixed-length decoding, two different lengths may be set.



★ Code 128 Length Control = Variable Length



Code 128 Length Control = Fixed Length



Code 128 Set Length 1

This feature specifies one of the bar code lengths for "[Code 128 Length Control](#)" on page 129. Length 1 is the minimum label length if in Variable Length Mode, or the first fixed length if in Fixed Length Mode. Length includes the bar code's data characters only.

The length can be set from 1 to 80 characters. See "[Set Length 1](#)" on page 264 for more detailed programming instructions.



Select Code 128 Set Length 1 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ Length 1 = 01 (one character)

Code 128 Set Length 2

This feature specifies one of the bar code lengths for "[Code 128 Length Control](#)" on page 129. Length 2 is the maximum label length if in Variable Length Mode, or the second fixed length if in Fixed Length Mode. Length includes the bar code's data characters only.

The length can be set from 1 to 80 characters. A setting of 00 specifies to ignore this length (only one fixed length). See "[Set Length 2](#)" on page 265 for more detailed programming instructions.



Select Code 128 Set Length 2 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ Length 2 = 80 (80 characters)



GS1-128

The following options apply to the GS1-128 symbology. (Also known as USS-128, GTIN-128, UCC-128.)

GS1-128 Enable

This option enables/disables the ability of the reader to translate GS1-128 labels to the GS1-128 data format. Options are:

- Transmit GS1-128 labels in Code 128 data format.
- Transmit GS1-128 labels in GS1-128 data format.
- Do not transmit GS1-128 labels.



GS1-128 = Transmit in Code 128 data format



★ GS1-128 = Transmit in GS1-128 data format



GS1-128 = Do not transmit GS1-128 labels



INTERLEAVED 2 OF 5 (I 2 OF 5)

The following options apply to the I 2 of 5 symbology.



CAUTION: When reading this symbology, the settings for I 2 of 5 Length Control AND I 2 of 5 Check Character Calculation MUST be enabled to increase decoding safety.

I 2 of 5 Enable/Disable

When disabled, the reader will not read I 2 of 5 bar codes.



★ I 2 of 5 = Disable



I 2 of 5 = Enable



I 2 of 5 Check Character Calculation

This option enables/disables calculation and verification of an optional I 2 of 5 check character.



★ I 2 of 5 Check Character Calculation = Disable



I 2 of 5 Check Character Calculation
= Calculate Std Check (Modulo 10 no AR)



I 2 of 5 Check Character Calculation
= Calculate German Parcel Check



I 2 of 5 Check Character Calculation
= Calculate DHL Check



I 2 of 5 Check Character Calculation
= Calculate Daimler Chrysler Check



I 2 of 5 Check Character Calculation (continued)



I 2 of 5 Check Character Calculation
= Calculate Bosch Check



I 2 of 5 Check Character Calculation
= Calculate Italian Post Check

I 2 of 5 Check Character Transmission

Enable this option to transmit the check character along with I 2 of 5 bar code data.



NOTE: This feature is valid only when I 2 of 5 Check Character Calculation is enabled.



I 2 of 5 Check Character Transmission = Don't Send



★ I 2 of 5 Check Character Transmission = Send



I 2 of 5 Length Control

This feature specifies either variable length decoding or fixed length decoding for the I 2 of 5 symbology.

Variable Length: For variable-length decoding, a minimum length may be set.

Fixed Length: For fixed-length decoding, two different lengths may be set.



★ I 2 of 5 Length Control = Variable Length



I 2 of 5 Length Control = Fixed Length

I 2 of 5 Set Length 1

This feature specifies one of the bar code lengths for "I 2 of 5 Length Control" on page 135. Length 1 is the minimum label length if in Variable Length Mode, or the first fixed length if in Fixed Length Mode. The length includes the bar code's check and data characters. The length can be set from 2 to 50 characters in increments of two. See "Set Length 1" on page 264 for more detailed programming instructions.



Select I 2 of 5 Set Length 1 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ Length 1 = 06 (6 characters)



I 2 of 5 Set Length 2

This feature specifies one of the bar code lengths for "I 2 of 5 Length Control" on page 135. Length 2 is the maximum label length if in Variable Length Mode, or the second fixed length if in Fixed Length Mode. The length includes the bar code's check and data characters. The length can be set from 2 to 50 characters in increments of two. A setting of 00 specifies to ignore this length (only one fixed length). See "Set Length 2" on page 265 for more detailed programming instructions.



Select I 2 of 5 Set Length 2 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ Length 2 = 50 (50 characters)



INTERLEAVED 2 OF 5, FEBRABAN

Interleaved 2 of 5, Febraban format Enable / Disable



NOTE: Interleaved 2 of 5 shall be enabled before enabling Febraban variant.

Enables/Disables ability of reader to decode Interleaved 2 of 5, Febraban format.



★ 2 of 5, Febraban format = Disable



2 of 5, Febraban format = Enable

INTERLEAVED 2 OF 5 CIP HR

The following options apply to the Interleaved 2 of 5 CIP HR symbology.

Interleaved 2 of 5 CIP HR Enable/Disable

Enables/Disables ability of the reader to decode Interleaved 2 of 5 CIP HR labels.



★ Interleaved 2 of 5 CIP HR = Disable



Interleaved 2 of 5 CIP HR = Enable

MATRIX 2 OF 5



The following options apply to the Matrix 2 of 5 symbology.

Matrix 2 of 5 Enable/Disable

When disabled, the reader will not read Matrix 2 of 5 bar codes.



★ Matrix 2 of 5 = Disable



Matrix 2 of 5 = Enable

Matrix 2 of 5 Check Character Calculation

This option enables/disables calculation and verification of an optional Matrix 2 of 5 check character.



★ Matrix 2 of 5 Check Character Calculation
= Disable



Matrix 2 of 5 Check Character Calculation = Enable



Matrix 2 of 5 Check Character Transmission

This feature enables/disables transmission of an optional Matrix 2 of 5 check character.



Matrix 2 of 5 Check Character Transmission
= Don't Send



★ Matrix 2 of 5 Check Character Transmission
= Send

Matrix 2 of 5 Length Control

This feature specifies either variable length decoding or fixed length decoding for the Matrix 2 of 5 symbology.

Variable Length: For variable-length decoding, a minimum length may be set.

Fixed Length: For fixed-length decoding, two different lengths may be set.



★ Matrix 2 of 5 Length Control = Variable Length



Matrix 2 of 5 Length Control = Fixed Length



Matrix 2 of 5 Set Length 1

This feature specifies one of the bar code lengths for "[Standard 2 of 5 Length Control](#)" on [page 142](#). Length 1 is the minimum label length if in Variable Length Mode, or the first fixed length if in Fixed Length Mode. The length includes the bar code's check and data characters.

The length can be set from 1 to 50 characters. See "[Set Length 1](#)" on [page 264](#) for more detailed programming instructions.



Select Matrix 2 of 5 Length 1 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ Length 1 = 08 (8 characters)

Matrix 2 of 5 Set Length 2

This feature specifies one of the bar code lengths for "[Standard 2 of 5 Length Control](#)" on [page 142](#). Length 2 is the maximum label length if in Variable Length Mode, or the second fixed length if in Fixed Length Mode. The length includes the bar code's check and data characters.

The length can be set from 1 to 50 characters. A setting of 00 specifies to ignore this length (only one fixed length). See "[Set Length 2](#)" on [page 265](#) for more detailed programming instructions.



Select Matrix 2 of 5 Set Length 2 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ Length 2 = 50 (50 characters)



STANDARD 2 OF 5

The following options apply to the Standard 2 of 5 symbology.

Standard 2 of 5 Enable/Disable

When disabled, the reader will not read Standard 2 of 5 bar codes.



★ Standard 2 of 5 = Disable



Standard 2 of 5 = Enable

Standard 2 of 5 Check Character Calculation

This option enables/disables calculation and verification of an optional Standard 2 of 5 check character.



★ Standard 2 of 5 Check Character Calculation
= Disable



Standard 2 of 5 Check Character Calculation = Enable



Standard 2 of 5 Check Character Transmission

This feature enables/disables transmission of an optional Standard 2 of 5 check character.



Standard 2 of 5 Check Character Transmission
= Don't Send



★ Standard 2 of 5 Check Character Transmission
= Send

Standard 2 of 5 Length Control

This feature specifies either variable length decoding or fixed length decoding for the Standard 2 of 5 symbology.

Variable Length: For variable-length decoding, a minimum length may be set.

Fixed Length: For fixed-length decoding, two different lengths may be set.



★ Standard 2 of 5 Length Control = Variable Length



Standard 2 of 5 Length Control = Fixed Length



Standard 2 of 5 Set Length 1

This feature specifies one of the bar code lengths for "[Standard 2 of 5 Length Control](#)" on [page 142](#). Length 1 is the minimum label length if in Variable Length Mode, or the first fixed length if in Fixed Length Mode. The length includes the bar code's check and data characters.

The length can be set from 1 to 50 characters. See "[Set Length 1](#)" on [page 264](#) for more detailed programming instructions.



Select Standard 2 of 5 Length 1 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ Length 1 = 08 (8 characters)

Standard 2 of 5 Set Length 2

This feature specifies one of the bar code lengths for "[Standard 2 of 5 Length Control](#)" on [page 142](#). Length 2 is the maximum label length if in Variable Length Mode, or the second fixed length if in Fixed Length Mode. The length includes the bar code's check and data characters.

The length can be set from 1 to 50 characters. A setting of 00 specifies to ignore this length (only one fixed length). See "[Set Length 2](#)" on [page 265](#) for more detailed programming instructions.



Select Standard 2 of 5 Set Length 2 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ Length 2 = 50 (50 characters)



COMPRESSED 2 OF 5

The following options apply to the Compressed 2 of 5 symbology.

Compressed 2 of 5 Enable/Disable

When disabled, the reader will not read Compressed 2 of 5 bar codes.



★ Compressed 2 of 5 = Disable



Compressed 2 of 5 = Enable

Compressed 2 of 5 Check Character Calculation

This option enables/disables calculation and verification of an optional Compressed 2 of 5 check character.



★ Compressed 2 of 5 Check Character Calculation = Disable



Compressed 2 of 5 Check Character Calculation = Enable



Compressed 2 of 5 Check Character Transmission

This feature enables/disables transmission of an optional Compressed 2 of 5 check character.



Compressed 2 of 5 Check Character Transmission
= Don't Send



★ Compressed 2 of 5 Check Character Transmission
= Send

Compressed 2 of 5 Length Control

This feature specifies either variable length decoding or fixed length decoding for the Compressed 2 of 5 symbology.

Variable Length: For variable-length decoding, a minimum length may be set.

Fixed Length: For fixed-length decoding, two different lengths may be set.



★ Compressed 2 of 5 Length Control = Variable
Length



Compressed 2 of 5 Length Control = Fixed Length



Compressed 2 of 5 Set Length 1

This feature specifies one of the bar code lengths for "[Compressed 2 of 5 Length Control](#)" on page 145. Length 1 is the minimum label length if in Variable Length Mode, or the first fixed length if in Fixed Length Mode. The length includes the bar code's check and data characters.

The length can be set from 1 to 50 characters. See "[Set Length 1](#)" on page 264 for more detailed programming instructions.



Select Compressed 2 of 5 Length 1 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ Length 1 = 01 (one character)

Compressed 2 of 5 Set Length 2

This feature specifies one of the bar code lengths for "[Compressed 2 of 5 Length Control](#)" on page 145. Length 2 is the maximum label length if in Variable Length Mode, or the second fixed length if in Fixed Length Mode. The length includes the bar code's check and data characters.

The length can be set from 1 to 50 characters. A setting of 00 specifies to ignore this length (only one fixed length). See "[Set Length 2](#)" on page 265 for more detailed programming instructions.



Select Compressed 2 of 5 Set Length 2 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ Length 2 = 50 (50 characters)



DATALOGIC 2 OF 5

The following options apply to the Datalogic 2 of 5 symbology.

Datalogic 2 of 5 Enable/Disable

When disabled, the reader will not read Datalogic 2 of 5 bar codes.



★ Datalogic 2 of 5 = Disable



Datalogic 2 of 5 = Enable

Datalogic 2 of 5 Check Character Calculation

This option enables/disables calculation and verification of an optional Datalogic 2 of 5 check character.



★ Datalogic 2 of 5 Check Character Calculation = Disable



Datalogic 2 of 5 Check Character Calculation = Enable



Datalogic 2 of 5 Check Character Transmission

Enable this option to transmit the check character along with Datalogic 2 of 5 bar code data.



Datalogic 2 of 5 Check Character Transmission
= Don't Send



★ Datalogic 2 of 5 Check Character Transmission
= Send

Datalogic 2 of 5 Length Control

This feature specifies either variable length decoding or fixed length decoding for the Datalogic 2 of 5 symbology.

Variable Length: For variable-length decoding, a minimum length may be set.

Fixed Length: For fixed-length decoding, two different lengths may be set.



★ Datalogic 2 of 5 Length Control = Variable Length



Datalogic 2 of 5 Length Control = Fixed Length



Datalogic 2 of 5 Set Length 1

This feature specifies one of the bar code lengths for "Datalogic 2 of 5 Length Control" on page 148. Length 1 is the minimum label length if in Variable Length Mode, or the first fixed length if in Fixed Length Mode. The length includes the bar code's check and data characters. The length can be set from 2 to 50 characters in increments of two. See "Set Length 1" on page 264 for more detailed programming instructions.



Select Datalogic 2 of 5 Length 1 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in Appendix D, Keypad representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ Length 1 = 06 (6 characters)

Datalogic 2 of 5 Set Length 2

This feature specifies one of the bar code lengths for "Datalogic 2 of 5 Length Control" on page 148. Length 2 is the maximum label length if in Variable Length Mode, or the second fixed length if in Fixed Length Mode. The length includes the bar code's check and data characters. The length can be set from 2 to 50 characters. A setting of 00 specifies to ignore this length (only one fixed length). See "Set Length 2" on page 265 for more detailed programming instructions.



Select Datalogic 2 of 5 Set Length 2 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in Appendix D, Keypad representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ Length 2 = 50 (50 characters)



INDUSTRIAL 2 OF 5

The following options apply to the Industrial 2 of 5 symbology.

Industrial 2 of 5 Enable/Disable

When disabled, the reader will not read Industrial 2 of 5 bar codes.



★ Industrial 2 of 5 = Disable



Industrial 2 of 5 = Enable

Industrial 2 of 5 Check Character Calculation

Enables/Disables calculation and verification of an optional Industrial 2 of 5 check character.



★ Industrial 2 of 5 Check Character Calculation
= Disable



Industrial 2 of 5 Check Character Calculation = Enable



Industrial 2 of 5 Check Character Transmission

Enables/disables transmission of an Industrial 2 of 5 check character.



Industrial 2 of 5 Check Character Transmission
= Don't Send



★ Industrial 2 of 5 Check Character Transmission
= Send

Industrial 2 of 5 Length Control

This feature specifies either variable length decoding or fixed length decoding for the Industrial 2 of 5 symbology.

Variable Length: For variable-length decoding, a minimum length may be set.

Fixed Length: For fixed-length decoding, two different lengths may be set.



★ Industrial 2 of 5 Length Control = Variable Length



Industrial 2 of 5 Length Control = Fixed Length



Industrial 2 of 5 Set Length 1

This feature specifies one of the bar code lengths for "Industrial 2 of 5 Length Control" on [page 151](#). Length 1 is the minimum label length if in Variable Length Mode, or the first fixed length if in Fixed Length Mode. The length includes the bar code's check and data characters.

The length can be set from 1 to 50 characters. See "Set Length 1" on [page 264](#) for more detailed programming instructions.



Select Industrial 2 of 5 Length 1 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ Length 1 = 06 (6 characters)

Industrial 2 of 5 Set Length 2

This feature specifies one of the bar code lengths for "Industrial 2 of 5 Length Control" on [page 151](#). Length 2 is the maximum label length if in Variable Length Mode, or the second fixed length if in Fixed Length Mode. The length includes the bar code's check and data characters.

The length can be set from 1 to 50 characters. A setting of 00 specifies to ignore this length (only one fixed length). See "Set Length 2" on [page 265](#) for more detailed programming instructions.



Select Industrial 2 of 5 Set Length 2 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ Length 2 = 50 (50 characters)



IATA

The following options apply to the IATA symbology.

IATA Enable/Disable

Enables/Disables the ability of the reader to decode IATA labels.



★ IATA = Disable



IATA = Enable

IATA Check Character Transmission

Enables/Disables calculation and verification of an optional IATA check character.



IATA Check Character Transmission
= Don't Send



★ IATA Check Character Transmission
= Send



FOLLETT 2 OF 5

The following options apply to the Follett 2 of 5 symbology.

Follett 2 of 5 Enable/Disable

Enables/Disables ability of reader to decode Follett 2 of 5 labels.



★ Follett 2 of 5 = Disable



Follett 2 of 5 = Enable



CODABAR

The following options apply to the Codabar symbology.

Codabar Enable/Disable

When disabled, the reader will not read Codabar bar codes.



★ Codabar = Disable



Codabar = Enable

Codabar Check Character Calculation

This option enables/disables calculation and verification of an optional Codabar check character. When disabled, any check characters in the label are treated as data characters.



★ Codabar Check Character Calculation = Disable



Codabar Check Character Calculation
= Calculate AIM Std Check



Codabar Check Character Calculation
= Calculate Modulo 10 Check



Codabar Check Character Calculation
= Calculate NW-7 Check



Codabar Check Character Transmission

Enable this option to transmit the check character along with Codabar bar code data.



NOTE: This feature is valid only when Codabar Check Character Calculation is enabled.



Codabar Check Character Transmission
= Don't Send



★ Codabar Check Character Transmission
= Send

Codabar Start/Stop Character Transmission

This option enables/disables transmission of Codabar start and stop characters.



Codabar Start/Stop Character Transmission
= Don't Transmit



★ Codabar Start/Stop Character Transmission
= Transmit



Codabar Start/Stop Character Set

This option specifies the format of transmitted Codabar start/stop characters.



Codabar Check Character Set = ABCD/TN*E



Codabar Check Character Set = ABCD/ABCD



Codabar Check Character Set = abcd/tn*e



★ Codabar Check Character Set = abcd/abcd

Codabar Start/Stop Character Match

When enabled, this option requires that start and stop characters match



★ Codabar Start/Stop Character Match
= Don't Require Match



Codabar Start/Stop Character Match = Require Match



Codabar Quiet Zones

This feature specifies the number of quiet zones for Codabar labels. Quiet zones are blank areas at the ends of a bar code and are typically 10 times the width of the narrowest bar or space in the label.



Codabar Quiet Zones = Quiet Zone on one side



★ Codabar Quiet Zones = Quiet Zones on two sides



Codabar Quiet Zones = Auto



Codabar Quiet Zones = Virtual Quiet Zones on two sides



Codabar Quiet Zones = Small Quiet Zones on two sides



Codabar Length Control

This feature specifies either variable length decoding or fixed length decoding for the Codabar symbology.

Variable Length: For variable-length decoding, a minimum length may be set.

Fixed Length: For fixed-length decoding, two different lengths may be set.



★ Codabar Length Control = Variable Length



Codabar Length Control = Fixed Length

Codabar Set Length 1

This feature specifies one of the bar code lengths for "Codabar Length Control" on page 159. Length 1 is the minimum label length if in Variable Length Mode, or the first fixed length if in Fixed Length Mode. Length includes the bar code's start, stop, check and data characters. The length must include at least one data character.

The length can be set from 3 to 50 characters. See "Set Length 1" on page 264 for more detailed programming instructions.



Select Codabar Length 1 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in Appendix D, Keypad representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ Length 1 = 03 (3 characters)



Codabar Set Length 2

This feature specifies one of the bar code lengths for "Codabar Length Control" on page 159. Length 2 is the maximum label length if in Variable Length Mode, or the second fixed length if in Fixed Length Mode. The length includes the bar code's start, stop, check and data characters. The length must include at least one data character.

The length can be set from 3 to 50 characters. A setting of 00 specifies to ignore this length (only one fixed length). See "Set Length 2" on page 265 for more detailed programming instructions.



Select Codabar Length 2 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ Length 2 = 50 (50 characters)



ABC CODABAR

The following options apply to the ABC Codabar symbology.

ABC Codabar Enable/Disable

Enables/Disables ability of reader to decode ABC Codabar labels.



★ ABC Codabar = Disable



ABC Codabar = Enable

ABC Codabar Concatenation Mode

Specifies the concatenation mode between Static and Dynamic.



★ ABC Codabar Concatenation Mode = Static



ABC Codabar Concatenation Mode = Dynamic



ABC Codabar Dynamic Concatenation Timeout

This parameter specifies the timeout in 10-millisecond ticks used by the ABC Codabar Dynamic Concatenation Mode. The timeout can be set within a range of 05 to 255 in 10ms increments. A setting of zero specifies no delay.



Select ABC Codabar Dynamic Concatenation
Timeout Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ Timeout = 20 (200 msec)

ABC Codabar Force Concatenation

When ABC Codabar Concatenation is enabled and Force Concatenation is disabled, both Codabar stand alone labels and ABC Codabar concatenated labels are transmitted. When ABC Codabar Concatenation is enabled and Force Concatenation is enabled only ABC Codabar concatenated labels are transmitted while Codabar stand alone labels are not transmitted.

Force Concatenation has no effect if the ABC Codabar Concatenation is disabled. The Force Concatenation mode has effect both in Static and Dynamic Concatenation Modes.



★ ABC Codabar Force Concatenation = Disable



ABC Codabar Force Concatenation = Enable



ISBT 128

The following options apply to the ISBT 128 symbology.

ISBT 128 Concatenation

Enables/disables ISBT 128 concatenation of 2 labels.



★ ISBT 128 Concatenation = Disable



ISBT 128 Concatenation = Enable

ISBT 128 Concatenation Mode

Specifies the concatenation mode between Static and Dynamic.



★ ISBT 128 Concatenation Mode = Static



ISBT 128 Concatenation Mode = Dynamic



ISBT 128 Dynamic Concatenation Timeout

Specifies the timeout used by the ISBT 128 Dynamic Concatenation Mode.



ISBT 128 Dynamic Concatenation Timeout = 50 msec



ISBT 128 Dynamic Concatenation Timeout = 100 msec



★ ISBT 128 Dynamic Concatenation Timeout = 200 msec



ISBT 128 Dynamic Concatenation Timeout = 500 msec



ISBT 128 Dynamic Concatenation Timeout = 750 msec



ISBT 128 Dynamic Concatenation Timeout = 1 second



ISBT 128 Force Concatenation

When enabled, this feature forces all ISBT 128 labels to be concatenated.



NOTE: This option is only valid when "ISBT 128 Concatenation" on page 163 is enabled.



★ ISBT 128 Force Concatenation = Disable



ISBT 128 Force Concatenation = Enable

ISBT 128 Advanced Concatenation Options



NOTE: Use the Datalogic Aladdin configuration application or Contact Customer Support to set up pairs of label types for concatenation.



CODE 11

The following options apply to the Code 11 symbology.

Code 11 Enable/Disable

When disabled, the reader will not read Code 11 bar codes.



★ Code 11 = Disable



Code 11 = Enable

Code 11 Check Character Calculation

This option enables/disables calculation and verification of optional Code 11 check character.



Code 11 Check Character Calculation = Disable



Code 11 Check Character Calculation = Calculate Check C



Code 11 Check Character Calculation
= Calculate Check K



★ Code 11 Check Character Calculation
= Calculate Check C and K



Code 11 Check Character Transmission

This feature enables/disables transmission of an optional Code 11 check character.



Code 11 Check Character Transmission = Don't Send



★ Code 11 Check Character Transmission = Send

Code 11 Length Control

This feature specifies either variable length decoding or fixed length decoding for the Code 11 symbology.

Variable Length: For variable-length decoding, a minimum length may be set.

Fixed Length: For fixed-length decoding, two different lengths may be set.



★ Code 11 Length Control = Variable Length



Code 11 Length Control = Fixed Length



Code 11 Set Length 1

This feature specifies one of the bar code lengths for "Code 11 Length Control" on page 167. Length 1 is the minimum label length if in Variable Length Mode, or the first fixed length if in Fixed Length Mode. Length includes the bar code's check and data characters.

The length can be set from 2 to 50 characters. See "Set Length 1" on page 264 for more detailed programming instructions.



Select Code 11 Length 1 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ Length 1 = 04 (4 characters)

Code 11 Set Length 2

This feature specifies one of the bar code lengths for "Code 11 Length Control" on page 167. Length 2 is the maximum label length if in Variable Length Mode, or the second fixed length if in Fixed Length Mode. Length includes the bar code's check and data characters.

The length can be set from 2 to 50 characters. A setting of 00 specifies to ignore this length (only one fixed length). See "Set Length 2" on page 265 for more detailed programming instructions.



Select Code 11 Length 2 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ Length 2 = 50 (50 characters)



CODE 93

The following options apply to the Code 93 symbology.

Code 93 Enable/Disable

Enables/Disables ability of reader to decode Code 93 labels.



★ Code 93 = Disable



Code 93 = Enable

Code 93 Check Character Calculation

This option enables/disables calculation and verification of optional Code 93 check character.



Code 93 Check Character Calculation = Disable



Code 93 Check Character Calculation = Calculate Check C



Code 93 Check Character Calculation
= Calculate Check K



★ Code 93 Check Character Calculation
= Calculate Check C and K



Code 93 Check Character Transmission

This feature enables/disables transmission of an optional Code 93 check character.



★ Code 93 Check Character Transmission = Don't
Send



Code 93 Check Character Transmission = Send

Code 93 Length Control

This feature specifies either variable length decoding or fixed length decoding for the Code 93 symbology.

Variable Length: For variable-length decoding, a minimum length may be set.

Fixed Length: For fixed-length decoding, two different lengths may be set.



★ Code 93 Length Control = Variable Length



Code 93 Length Control = Fixed Length



Code 93 Set Length 1

This feature specifies one of the bar code lengths for "Code 93 Length Control" on page 170. Length 1 is the minimum label length if in Variable Length Mode, or the first fixed length if in Fixed Length Mode. Length includes the bar code's check and data characters.

The length can be set from 1 to 50 characters. See "Set Length 1" on page 264 for more detailed programming instructions.



Select Code 93 Length 1 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ Length 1 = 01 (one character)

Code 93 Set Length 2

This feature specifies one of the bar code lengths for "Code 93 Length Control" on page 170. Length 2 is the maximum label length if in Variable Length Mode, or the second fixed length if in Fixed Length Mode. The length includes the bar code's check and data characters.

The length can be set from 1 to 50 characters. A setting of 00 specifies to ignore this length (only one fixed length). See "Set Length 2" on page 265 for more detailed programming instructions.



Select Code 93 Length 2 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ Length 2 = 50 (50 characters)



Code 93 Quiet Zones

This feature specifies the number of quiet zones for Code 93 labels. Quiet zones are blank areas at the ends of a bar code and are typically 10 times the width of the narrowest bar or space in the label.



Code 93 Quiet Zones = No Quiet Zones



Code 93 Quiet Zones = Quiet Zone on one side



Code 93 Quiet Zones = Quiet Zones on two sides



★ Code 93 Quiet Zones = Auto



Code 93 Quiet Zones = Virtual Quiet Zones on two sides



MSI

The following options apply to the MSI symbology.

MSI Enable/Disable

Enables/Disables ability of reader to decode MSI labels.



★ MSI = Disable



MSI = Enable

MSI Check Character Calculation

Enables/Disables calculation and verification of an optional MSI check character.



MSI Check Character Calculation = Disable



★ MSI Check Character Calculation = Calculate Mod 10



MSI Check Character Calculation
= Calculate Mod 11/10



MSI Check Character Calculation
= Calculate Mod 10/10



MSI Check Character Transmission

Enables/disables transmission of an MSI check character.



MSI Check Character Transmission = Don't Send



★ MSI Check Character Transmission = Send

MSI Length Control

This feature specifies either variable length decoding or fixed length decoding for the MSI symbology.

Variable Length: For variable-length decoding, a minimum length may be set.

Fixed Length: For fixed-length decoding, two different lengths may be set.



★ MSI Length Control = Variable Length



MSI Length Control = Fixed Length



MSI Set Length 1

This feature specifies one of the bar code lengths for "MSI Length Control" on page 174. Length 1 is the minimum label length if in Variable Length Mode, or the first fixed length if in Fixed Length Mode. Length includes the bar code's data characters only.

The length can be set from 1 to 50 characters. See "Set Length 1" on page 264 for more detailed programming instructions.



Select MSI Length 1 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ Length 1 = 01 (one character)

MSI Set Length 2

This feature specifies one of the bar code lengths for "MSI Length Control" on page 174. Length 2 is the maximum label length if in Variable Length Mode, or the second fixed length if in Fixed Length Mode. The length includes the bar code's data characters only.

The length can be set from 1 to 50 characters. A setting of 00 specifies to ignore this length (only one fixed length). See "Set Length 2" on page 265 for more detailed programming instructions.



Select MSI Length 2 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ Length 2 = 50 (50 characters)



PLESSEY

The following options apply to the Plessey symbology.

Plessey Enable/Disable

Enables/Disables ability of reader to decode Plessey labels.



★ Plessey = Disable



Plessey = Enable

Plessey Check Character Calculation

Enables/Disables calculation and verification of a Plessey check character.



Plessey Check Character Calculation = Disable



★ Plessey Check Character Calculation
= Plessey std check char. verification



Plessey Check Character Calculation
= Anker check char. verification



Plessey Check Character Calculation
= Plessey std and Anker check char. verification



Plessey Check Character Transmission

Enables/disables transmission of a Plessey check character.



Plessey Check Character Transmission = Don't Send



★ Plessey Check Character Transmission = Send

Plessey Length Control

This feature specifies either variable length decoding or fixed length decoding for the Plessey symbology.

Variable Length: For variable-length decoding, a minimum length may be set.

Fixed Length: For fixed-length decoding, two different lengths may be set.



★ Plessey Length Control = Variable Length



Plessey Length Control = Fixed Length



Plessey Set Length 1

This feature specifies one of the bar code lengths for "Plessey Length Control" on page 177. Length 1 is the minimum label length if in Variable Length Mode, or the first fixed length if in Fixed Length Mode. The length includes the bar code's check and data characters.

The length can be set from 1 to 50 characters. See "Set Length 1" on page 264 for more detailed programming instructions.



Select Plessey Length 1 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ Length 1 = 01 (one character)

Plessey Set Length 2

This feature specifies one of the bar code lengths for "Plessey Length Control" on page 177. Length 2 is the maximum label length if in Variable Length Mode, or the second fixed length if in Fixed Length Mode. The length includes the bar code's check and data characters.

Length can be set from 1 to 50 characters. A setting of 00 specifies to ignore this length (only one fixed length). See "Set Length 2" on page 265 for more detailed programming instructions.



Select Plessey Length 2 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ Length 2 = 50 (50 characters)



BC412

The following options apply to the BC412 symbology.

BC412 Enable/Disable

Enables/Disables ability of reader to decode BC412 labels.



★ BC412 = Disable



BC412 = Enable

BC412 Check Character Calculation

Enable this option to enable/disable calculation and verification of an optional BC412 check character. When disabled, any check character in the label is treated as a data character.



BC412 Check Character Calculation = Disable



★ BC412 Check Character Calculation = Calculate



BC412 Length Control

This feature specifies either variable length decoding or fixed length decoding for the BC412 symbology.

Variable Length: For variable-length decoding, a minimum length may be set.

Fixed Length: For fixed-length decoding, two different lengths may be set.



★ BC412 Length Control = Variable Length



BC412 Length Control = Fixed Length



BC412 Set Length 1

This feature specifies one of the bar code lengths for "BC412 Length Control" on page 180. Length 1 is the minimum label length if in Variable Length Mode, or the first fixed length if in Fixed Length Mode. Length includes the bar code's data characters only.

The length can be set from 01 to 50 characters. See "Set Length 1" on page 264 for more detailed programming instructions.



Select BC412 Length 1 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ Length 1 = 01 (one character)

BC412 Set Length 2

This feature specifies one of the bar code lengths for "BC412 Length Control" on page 180. Length 2 is the maximum label length if in Variable Length Mode, or the second fixed length if in Fixed Length Mode. Length includes the bar code's data characters only.

The length can be set from 01 to 50 characters. A setting of 00 specifies to ignore this length (only one fixed length). See "Set Length 2" on page 265 for more detailed programming instructions.



Select BC412 Length 2 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ Length 2 = 50 (50 characters)

CONFIGURATION | 2D SYMBOLOGIES

SECTION CONTENTS

- **2D GLOBAL FEATURES** starting on page 183
- **AZTEC CODE** starting on page 185
- **CHINA SENSIBLE CODE** starting on page 187
- **DATA MATRIX** starting on page 189
- **GS1 DotCODE** starting on page 192
- **MAXICODE** starting on page 194
- **PDF417** starting on page 197
- **MICRO PDF417** starting on page 199
- **QR CODE** starting on page 202
- **MICRO QR CODE** starting on page 204
- **UCC COMPOSITE** starting on page 206

The reader supports the following 2D symbologies (bar code types). Symbology-dependent options for each symbology are included in this chapter. See "**1D SYMBOLOGIES** starting on page 97 for configuration of 1D bar codes.

2D GLOBAL FEATURES

The following features are common to all, or in some cases, most of the available 2D symbologies. Default settings are indicated at each feature/option with a green arrow. Also reference Appendix B, Standard Defaults for a listing of the most widely used set of standard factory settings. That section also provides space to record any custom settings needed or implemented for your system.

To set most features:

1. Scan the ENTER/EXIT PROGRAMMING bar code at the top of applicable programming pages.
2. Scan the correct bar code to set the desired programming feature or parameter. You may need to cover unused bar codes on the page, and possibly the facing page, to ensure that the reader reads only the bar code you intend to scan.
3. If additional input parameters are needed, go to Appendix D, Keypad, and scan the appropriate characters from the keypad.



NOTE: Additional information about many features can be found in the “References” chapter.

If you make a mistake before the last character, scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.

Complete the programming sequence by scanning the ENTER/EXIT PROGRAMMING bar code to exit Programming Mode.



2D Structured Append

Enables/disables ability of reader to append multiple 2D Codes labels in a structured format. The structured append property is globally applied to the following symbologies, if these are enabled:

- Data Matrix
- Aztec
- QR Code
- PDF 417



★ Structured Append = Disable



Structured Append = Enable

2D Normal/Inverse Symbol Control

Specifies the options available for decoding normal/negative printed 2D symbols. This configuration item applies globally to all the 2D symbologies that support that feature according to Standard AIM Specification: Data Matrix, QR, MicroQR, Aztec and Chinese Sensible Code.



★ Normal/Inverse Symbol Control = Normal



Normal/Inverse Symbol Control = Inverse



Normal/Inverse Symbol Control = Both Normal and Inverse



AZTEC CODE

Aztec Code Enable / Disable

Enables/disables the ability of the reader to decode Aztec Code labels.



Aztec Code = Disable



★ Aztec Code = Enable

Aztec Code Length Control

This feature specifies either variable length decoding or fixed length decoding for this symbology.

Variable Length: For variable length decoding, a minimum and maximum length may be set.

Fixed Length: For fixed length decoding, two different lengths may be set.



★ Aztec Code Length Control = Variable Length



Aztec Code Length Control = Fixed Length



Aztec Code Set Length 1

Specifies one of the bar code lengths for "Aztec Code Length Control" on page 185.

Length 1 is the minimum label length if in Variable Length Mode, or the first fixed length if in Fixed Length Mode. Characters can be set from 0001 to 3,832 characters in increments of 0001 (pad with zeroes).

See "Set Length 1" on page 264 for detailed instructions on setting this feature.



Select Aztec Code Length 1 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ 0001 = Length 1 is 1 Character

Aztec Code Set Length 2

Specifies one of the bar code lengths for "Aztec Code Length Control" on page 185.

Length 2 is the minimum label length if in Variable Length Mode, or the first fixed length if in Fixed Length Mode. Characters can be set from 0001 to 3,832 characters in increments of 0001 (pad with zeroes).

See "Set Length 2" on page 265 for detailed instructions on setting this feature.



Select Aztec Code Length 2 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ Length 2 is 3,832 Characters



CHINA SENSIBLE CODE

China Sensible Code Enable / Disable

Enables/disables the ability of the reader to decode China Sensible Code labels.



★ China Sensible Code = Disable



China Sensible Code = Enable

China Sensible Code Length Control

This feature specifies either variable length decoding or fixed length decoding for this symbology.

Variable Length: For variable length decoding, a minimum and maximum length may be set.

Fixed Length: For fixed length decoding, two different lengths may be set.



★ China Sensible Code Length Control = Variable Length



China Sensible Code Length Control = Fixed Length



China Sensible Code Set Length 1

Specifies one of the bar code lengths for "China Sensible Code Length Control" on page 187. Length 1 is the minimum label length if in Variable Length Mode, or the first fixed length if in Fixed Length Mode. Characters can be set from 0001 to 7,827 characters in increments of 0001 (pad with zeroes).

See "Set Length 1" on page 264 for detailed instructions on setting this feature.



Select China Sensible Code Length 1 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in Appendix D, Keypad representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ 0001 = Length 1 is 1 Character

China Sensible Code Set Length 2

This feature specifies one of the bar code lengths for "China Sensible Code Length Control" on page 187. Length 2 is the maximum label length if in Variable Length Mode, or the second fixed length if in Fixed Length Mode. Characters can be set from 0001 to 7,827 characters in increments of 0001 (pad with zeroes).

See "Set Length 2" on page 265 for detailed instructions on setting this feature.



Select China Sensible Code Length 2 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in Appendix D, Keypad representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ Length 2 is 7,827 Characters



DATA MATRIX

Data Matrix Enable / Disable

Enables/disables ability of reader to decode Data Matrix labels.



Data Matrix = Disable



★ Data Matrix = Enable

Data Matrix Square/Rectangular Style

Specifies the options available when reading Data Matrix with different form factors.

Choices are:

- Square Style
- Rectangular Style
- Both Square and Rectangular Style

The configuration item can also be configured as a bit mask to filter one or more Data Matrix labels with different symbol size AND shape styles.



Data Matrix Dimensions Mask = Square Style



Data Matrix Dimensions Mask = Rectangular Style



★ Data Matrix Dimensions Mask = Both Square and Rectangular Style



Data Matrix Length Control

This feature specifies either variable length decoding or fixed length decoding for this symbology.

Variable Length: For variable length decoding, a minimum and maximum length may be set.

Fixed Length: For fixed length decoding, two different lengths may be set.



★ Data Matrix Length Control = Variable Length



Data Matrix Length Control = Fixed Length

Data Matrix Set Length 1

This feature specifies one of the bar code lengths for "Data Matrix Length Control" on page 190. Length 1 is the minimum label length if in Variable Length Mode, or the first fixed length if in Fixed Length Mode. Characters can be set from 0001 to 3,116 characters in increments of 0001 (pad with zeroes).

See "Set Length 1" on page 264 for detailed instructions on setting this feature.



Select Data Matrix Length 1 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in Appendix D, Keypad representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ 0001 = Length 1 is 1 Character



Data Matrix Set Length 2

This feature specifies one of the bar code lengths for "Data Matrix Length Control" on page 190. Length 2 is the maximum label length if in Variable Length Mode, or the second fixed length if in Fixed Length Mode. Characters can be set from 0001 to 3,116 characters in increments of 0001 (pad with zeroes).

See "Set Length 2" on page 265 for detailed instructions on setting this feature.



Select Data Matrix Length 2 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in Appendix D, Keypad representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ Length 2 is 3,116 Characters



GS1 DOTCODE

The following options apply for the DotCode barcode decoding

DotCode Enable

This options enables/disables the ability of the reader to decode DotCode barcodes.



DotCode = Enable



★ DotCode = Disable

DotCode High Resolution Enable

This options improves the decoding performance for very small module size barcodes, e.g. tobacco products.



★ DotCode High Resolution = Enable



DotCode High Resolution = Disable



DotCode Position-based Decoding

This option can improve the decoding performance when the next barcode to be decoded is approximately shown in the same position as the previous one.



DotCode Position-based Decoding = Enable



★ DotCode Position-based Decoding = Disable

Additional Options

To improve performances the following additional settings are available using Aladdin configuration utility, downloadable from www.datalogic.com.

- Dot Size
- Fixed Length or Variable Length
- Min and Max barcode size



MAXICODE

Maxicode Enable / Disable

Enables/disables ability of reader to decode Maxicode labels.



★ Maxicode = Disable



Maxicode = Enable

Maxicode Primary Message Transmission

Enables/disables the transmission of only the Primary Message when the Secondary Message is not readable.



★ Maxicode Primary Message Transmission = Disable



Maxicode Primary Message Transmission = Enable



Maxicode Length Control

This feature specifies either variable length decoding or fixed length decoding for this symbology.

Variable Length: For variable length decoding, a minimum and maximum length may be set.

Fixed Length: For fixed length decoding, two different lengths may be set.



★ Maxicode Length Control = Variable Length



Maxicode Length Control = Fixed Length

Maxicode Set Length 1

Specifies one of the bar code lengths for "Maxicode Length Control" on page 195. Length 1 is the minimum label length if in Variable Length Mode, or the first fixed length if in Fixed Length Mode. Characters can be set from 0001 to 0145 characters in increments of 0001 (pad with zeroes).

See "Set Length 1" on page 264 for detailed instructions on setting this feature.



Select Maxicode Length 1 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ 0001 = Length 1 is 1 Character



Maxicode Set Length 2

This feature specifies one of the bar code lengths for "[Maxicode Length Control](#)" on [page 195](#). Length 2 is the maximum label length if in Variable Length Mode, or the second fixed length if in Fixed Length Mode. Characters can be set from 0001 to 0145 characters in increments of 0001 (pad with zeroes).

See "[Set Length 2](#)" on [page 265](#) for detailed instructions on setting this feature.



Select Maxicode Length 2 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ Length 2 is 0145 Characters



PDF417

PDF417 Enable / Disable

Enables/disables the ability of the reader to decode PDF417 labels.



PDF417 = Disable



★ PDF417 = Enable

PDF417 Length Control

This feature specifies either variable length decoding or fixed length decoding for this symbology.

Variable Length: For variable length decoding, a minimum and maximum length may be set.

Fixed Length: For fixed length decoding, two different lengths may be set.



★ PDF417 Length Control = Variable Length



PDF417 Length Control = Fixed Length



PDF417 Set Length 1

Specifies one of the bar code lengths for "PDF417 Length Control" on page 197. Length 1 is the minimum label length if in Variable Length Mode, or the first fixed length if in Fixed Length Mode. Length includes the bar code's data characters only. Characters can be set from 0001 to 2,710 characters (pad with zeroes) in increments of 01. Any value greater than 2,710 will be considered to be 2,710.

See "Set Length 1" on page 264 for detailed instructions on setting this feature.



Select PDF417 Length 1 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in Appendix D, Keypad representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ 0001 = Length 1 is 1 Character

PDF417 Set Length 2

This feature specifies one of the bar code lengths for "PDF417 Length Control" on page 197. Length 2 is the maximum label length if in Variable Length Mode, or the second fixed length if in Fixed Length Mode. Length includes the bar code's check, data, and full-ASCII shift characters. The length does not include start/stop characters. Characters can be set from 01 to 2,710 characters (pad with zeroes) in increments of 01. Any value greater than 2,710 will be considered to be 2,710.

See "Set Length 2" on page 265 for detailed instructions on setting this feature.



Select PDF417 Length 2 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in Appendix D, Keypad representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ Length 2 is 2,710 Characters



MICRO PDF417

Micro PDF417 Enable / Disable

Enables/disables the ability of the reader to decode Micro PDF417 labels.



Micro PDF417 = Disable



★ Micro PDF417 = Enable

Micro PDF417 Code 128 GS1-128 Emulation

Specifies which AIM ID to use for Micro PDF labels when doing Code 128 or GS1-128 emulation.

Emulation choices are:

- Micro PDF AIM ID and label type
- Code 128 / EAN128 AIM Id and label type.



★ Micro PDF417 Code 128 GS1-128 Emulation =
Micro PDF AIM ID and label type



Micro PDF417 Code 128 GS1-128 Emulation =
Code 128 / EAN128 AIM ID and label type



Micro PDF417 Length Control

This feature specifies either variable length decoding or fixed length decoding for this symbology.

Variable Length: For variable length decoding, a minimum and maximum length may be set.

Fixed Length: For fixed length decoding, two different lengths may be set.



★ Micro PDF417 Length Control = Variable Length



Micro PDF417 Length Control = Fixed Length

Micro PDF417 Set Length 1

Specifies one of the bar code lengths for "Micro PDF417 Length Control" on page 200. Length 1 is the minimum label length if in Variable Length Mode, or the first fixed length if in Fixed Length Mode. Length includes the bar code's data characters only. Characters can be set from 0001 to 0366 characters (pad with zeroes) in increments of 01. Any value greater than 0366 will be considered to be 0366.

See "Set Length 1" on page 264 for detailed instructions on setting this feature.



Select Micro PDF417 Length 1 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ 0001 = Length 1 is 1 Character



Micro PDF417 Set Length 2

This feature specifies one of the bar code lengths for "Micro PDF417 Length Control" on [page 200](#). Length 2 is the maximum label length if in Variable Length Mode, or the second fixed length if in Fixed Length includes the bar code's data characters only. Characters can be set from 0001 to 0366 characters (pad with zeroes) in increments of 01. Any value greater than 0366 will be considered to be 0366.

See "[Set Length 2](#)" on [page 265](#) for detailed instructions on setting this feature.



Select Micro PDF417 Length 2 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ Length 2 is 0366 Characters



QR CODE

QR Code Enable / Disable

Enables/disables the ability of the reader to decode QR Code labels.



QR Code = Disable



★ QR Code = Enable

QR Code Length Control

This feature specifies either variable length decoding or fixed length decoding for this symbology.

Variable Length: For variable length decoding, a minimum and maximum length may be set.

Fixed Length: For fixed length decoding, two different lengths may be set.



★ QR Code Length Control = Variable Length



QR Code Length Control = Fixed Length



QR Code Set Length 1

This feature specifies one of the bar code lengths for "QR Code Length Control" on page 202. Length 1 is the minimum label length if in Variable Length Mode, or the first fixed length if in Fixed Length Mode. Characters can be set from 0001 to 7,089 characters in increments of 0001 (pad with zeroes).

See "Set Length 1" on page 264 for detailed instructions on setting this feature.



Select QR Code Length 1 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in Appendix D, Keypad representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★0001 = Length 1 is 1 Character

QR Code Set Length 2

This feature specifies one of the bar code lengths for "QR Code Length Control" on page 202. Length 2 is the maximum label length if in Variable Length Mode, or the second fixed length if in Fixed Length Mode. Characters can be set from 0001 to 7,089 characters in increments of 0001 (pad with zeroes).

See "Set Length 2" on page 265 for detailed instructions on setting this feature.



Select QR Code Length 2 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in Appendix D, Keypad representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★Length 2 is 7,089 Characters



MICRO QR CODE

Micro QR Code Enable / Disable

Enables/disables the ability of the reader to decode Micro QR Code labels.



★ Micro QR Code = Disable



Micro QR Code = Enable

Micro QR Code Length Control

This feature specifies either variable length decoding or fixed length decoding for this symbology.

Variable Length: For variable length decoding, a minimum and maximum length may be set.

Fixed Length: For fixed length decoding, two different lengths may be set.



★ Micro QR Code Length Control = Variable Length



Micro QR Code Length Control = Fixed Length



Micro QR Code Set Length 1

This feature specifies one of the bar code lengths for "Micro QR Code Length Control" on [page 204](#). Length 1 is the minimum label length if in Variable Length Mode, or the first fixed length if in Fixed Length Mode. Characters can be set from 0001 to 0035 characters in increments of 0001 (pad with zeroes).

See "Set Length 1" on [page 264](#) for detailed instructions on setting this feature.



Select Micro QR Code Length 1 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★0001 = Length 1 is 1 Character

Micro QR Code Set Length 2

This feature specifies one of the bar code lengths for "Micro QR Code Length Control" on [page 204](#). Length 2 is the maximum label length if in Variable Length Mode, or the second fixed length if in Fixed Length Mode. Characters can be set from 0001 to 0035 characters in increments of 0001 (pad with zeroes).

See "Set Length 2" on [page 265](#) for detailed instructions on setting this feature.



Select Micro QR Code Length 2 Setting

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★Length 2 is 0035 Characters



UCC COMPOSITE

UCC Optional Composite Timer

Specifies the amount of time the system will wait for the stacked part of a UCC Composite label before transmitting the linear label without an add-on. The UCC Optional Composite Timer can be set within a range of 10 to 300 msec. A setting of 0 disables the timer.



UCC Optional Composite Timer = Timer Disabled



★ UCC Optional Composite Timer = 70 msec



UCC Optional Composite Timer = 100 msec



UCC Optional Composite Timer = 200 msec



UCC Optional Composite Timer = 300 msec



Postal Code Selection

Enables/disables the ability of the reader to decode labels of a specific postal symbol-ogy.

- Disable All Postal Codes
- Postnet
- Planet
- Royal Mail
- Kix
- Australia Post
- Japan Post
- IMB
- Sweden Post
- Portugal Post



★ Postal Code Selection = Disable All Postal Codes



Postal Code Selection = Enable Postnet



Postal Code Selection = Enable Planet



Postal Code Selection = Enable Royal Mail



Postal Code Selection = Enable Kix



Postal Code Selection = Enable Australia Post



Postal Code Selection = Enable Japan Post



Postal Code Selection (continued)



Postal Code Selection = Enable IMB



Postal Code Selection = Enable Sweden Post



Postal Code Selection = Enable Portugal Post

Postnet BB Control

Controls the ability of the reader to decode B and B' fields of Postnet labels.



★ Postnet BB Control = Disable



Postnet BB Control = Enable

NOTES

CONFIGURATION | OCR DECODING

The CODiScan HS7600 is equipped with an Optical Character Recognition feature.

This section describes how to configure the Datalogic bar code reader to enable OCR decoding.

The CODiScan HS7600 support the following OCR font types:

- OCR-A
- OCR-B
- MICR E13B
- US Currency Serial Number.

In most OCR applications a suitable usage of check digits and the addition of constraints on sub-strings types (e.g. digits-only or letter-only) reduces misdecoding probabilities.

The user can choose between a set of predefined templates (already optimized for decoding) and customizable free templates.

For free templates, as OCR decoding is less reliable than traditional barcode decoding, the reader provides tools to minimize misdecoded labels. As a result, particular care shall be dedicated to the setup of free custom templates to reduce incorrect output.

For more information on how to customize the user templates for your needs, please contact Datalogic Technical Support.

Use one of the following labels to enable one of the predefined templates for OCR decoding.



OCR Decoding Predefined Templates

The following selections are exclusive, enabling one template automatically disables the others.



★ OCR Predefined Template = Disable OCR Function



OCR Predefined Template = EU Identity Card OCR



OCR Predefined Template = IATA Passport OCR



OCR Predefined Template = Italian Post OCR Payment



OCR Predefined Template = Italian Bank
Freccia Bank Payment form



OCR Predefined Template = Swiss Driving License OCR

CONFIGURATION | POWER MANAGEMENT

SECTION CONTENTS

POWER SAVE starting on page 213

- Powerdown Timeout

BATTERY PROFILES starting on page 214

- Battery Profiles
- Battery Information

These parameters refer to Mobile units only.



POWER SAVE

Powerdown Timeout

The Powerdown Timeout feature sets the time for automatically switching the unit off when the imager has been idle.



Powerdown Timeout = Disable



Powerdown Timeout = 10 minutes



Powerdown Timeout = 20 minutes



★ Powerdown Timeout = 30 minutes



Powerdown Timeout = 60 minutes (1 hour)



Powerdown Timeout = 120 minutes (2 hours)



BATTERY PROFILES

Battery Profiles

CODiScan HS7600 provides the user the ability to select different usage profiles to better configure the reader with respect to specific needs. By default, the Maximum Performance profile is selected and provides high snappiness and max reading capability. The user can then decide to exploit specific features when others are considered less important, for instance: fast battery recharge instead of battery health, maximum reading performance instead of battery autonomy, etc.

The following Battery Profiles are described with associated benefits and limitations:



★ Battery Profile = Maximum Performance



Battery Profile = Maximum Battery Health



Battery Profile = Maximum Autonomy



Maximum Performance (default)

- Reader autonomy for heavy workload
- Max radio communication performances



Maximum Battery Health

- Battery capacity is preserved
- Reduced battery capacity by ~20%



Maximum Autonomy

- Max reader autonomy
- Vibro motor disabled
- Increased Sniff-time period (Bluetooth®)

Battery Information

By using Datalogic Aladdin utility, additional battery data can be retrieved, i.e.:

- HH Serial Number
- Charge %
- Health %
- Full Charge Capacity
- Designed Capacity
- Nominal Capacity
- Remaining Capacity
- Charging Status
- Battery Voltage
- Battery Current

CONFIGURATION | WIRELESS FEATURES

SECTION CONTENTS

WIRELESS BEEPER FEATURES starting on page 217

- Good Transmission Beep
- Beeper Frequency
- Beep Duration
- Beep Volume
- Disconnect Beep
- Leash Alarm

CONFIGURATION UPDATES starting on page 222

- Automatic Configuration Update
- Copy Configuration to Reader
- Copy Configuration to Gateway

BATCH FEATURES starting on page 223

- Batch Mode
- Send Batch
- Erase Batch Memory
- RF Batch Mode Transmit Delay

DIRECT RADIO AUTOLINK starting on page 226

- Direct Radio Autolink

RF ADDRESS STAMPING starting on page 227

- Source Radio Address Transmission
- Source Radio Address Delimiter Character

BLUETOOTH-ONLY FEATURES starting on page 228

- Bluetooth Security Level
- Bluetooth Radio Output Power
- Wi-Fi Channels Exclusion
- Bluetooth Discoverable Mode Timeout
- Bluetooth Friendly Name

BLUETOOTH HID FEATURES starting on page 238

- Bluetooth HID Alt Mode
- Bluetooth HID Intercharacter Delay



WIRELESS BEEPER FEATURES

Several options are available to configure beeper behavior for wireless operation.

Good Transmission Beep

Enables/disables the Good Transmission Beep indication. When enabled, a beep occurs when a Label is correctly transmitted to the host.



Good Transmission Beep = Disable



★ Good Transmission Beep = Enable

Beeper Frequency

Adjusts radio-specific beep indications to sound at a low, medium or high frequency, selectable from the list below (controls the beeper's pitch/tone).



★ Beeper Frequency = Low



Beeper Frequency = Medium



Beeper Frequency = High



Beep Duration

This feature controls the duration of radio-specific beep indications.



Beep Duration = 60 msec



★ Beep Duration = 80 msec



Beep Duration = 100 msec



Beep Duration = 120 msec



Beep Duration = 140 msec



Beep Duration = 160 msec



Beep Duration = 180 msec



Beep Duration = 200 msec



Beep Volume

Selects the beeper volume (loudness) of radio-specific beep indications. There are three selectable volume levels.



Beep Volume = Low



Beep Volume = Medium



★ Beep Volume = High

Disconnect Beep

Enables/disables the beep indication that a handheld has become disconnected from a host.



Disconnect Beep = Disable



★ Disconnect Beep = Enable



Leash Alarm

This setting specifies the number of seconds to sound the Leash Mode beeps (three per second) when the handheld goes out of range. This is especially useful in instances where the reader might inadvertently have been placed in a bag or cart.

For this mode to be effective, the reader must be linked to the host. If the reader is asleep or disconnected from the host, there is no way for it to know where it is relative to the host because communication is not active between the devices.



★ Leash Alarm = Disable



Leash Alarm = 1 Second



Leash Alarm = 2 Seconds



Leash Alarm = 3 Seconds



Leash Alarm (continued)



Leash Alarm = 4 Seconds



Leash Alarm = 5 Seconds



Leash Alarm = 10 Seconds



Leash Alarm = 25 Seconds



Leash Alarm = 30 Seconds



CONFIGURATION UPDATES

Automatic Configuration Update

When this feature is enabled, a reader and its linked Gateway can automatically ensure they stay in sync with regard to application hardware and/or configuration. See [page 263](#) for more information on this feature.



Automatic Configuration Update = Disable



★ Automatic Configuration Update = Enable

Copy Configuration to Reader

Scan the following label to copy the current host configuration to the reader. Use this method when the Auto Configuration Update feature is disabled and you want a one-time configuration update to be performed on the reader.



NOTE: Do not scan an ENTER/EXIT PROGRAMMING MODE label in conjunction with this bar code.



Copy Configuration to Reader

Copy Configuration to Gateway

Scan the following label to copy the current reader configuration to the host. Use this method when the Auto Configuration Update feature is disabled and you want a one-time configuration update to be performed on the host.



NOTE: Do not scan an ENTER/EXIT PROGRAMMING MODE label in conjunction with this bar code.



Copy Configuration to Gateway



BATCH FEATURES

Batch Mode

This option specifies whether to store labels in the handheld while disconnected from the host. Options are as follows:

- Disabled — The handheld will not store/batch labels.
- Automatic — The handheld will store labels to RAM when the handheld goes out of range and is disconnected from the remote device.
- Manual — The handheld will always store labels to Flash memory. The user must manually send the stored labels to the remote device using a special "batch send" label.



★ Batch Mode = Disable



Batch Mode = Automatic



Batch Mode = Manual



Send Batch

When the reader is configured in Manual Batch Mode, use the following bar code to initiate sending of labels stored in batch memory.



NOTE: Do not scan an ENTER/EXIT PROGRAMMING MODE label in conjunction with this bar code.



Send Batch

Erase Batch Memory

When the reader is configured in Manual Batch Mode, use the following bar code to erase any labels stored in batch memory.



NOTE: Do not scan an ENTER/EXIT PROGRAMMING MODE label in conjunction with this bar code.



Erase Batch Memory



RF Batch Mode Transmit Delay

Specifies the delay in 10 msec increments between transmitting labels stored in batch memory.



★ RF Batch Mode Transmit Delay = No Delay



RF Batch Mode Transmit Delay = 50 msec



RF Batch Mode Transmit Delay = 100 msec



RF Batch Mode Transmit Delay = 0.5 seconds



RF Batch Mode Transmit Delay = 1 second



RF Batch Mode Transmit Delay = 2.5 seconds



DIRECT RADIO AUTOLINK

Direct Radio Autolink

This feature enables/disables the ability to link a wireless handheld to a host without scanning the Unlink label first.



★ Direct Radio Link = Unlink Label Required



Direct Radio Link = Automatic Unlinking

RF ADDRESS STAMPING

These features allow configuration of source radio data inclusion.

Source Radio Address Transmission

Enables/disables the ability of source radio address information to be transmitted to the host and, if so, at what position with respect to the label data. See [page 263](#) in “References” for detailed information and examples for setting this feature.



NOTE: When included as a prefix, the source-radio ID is displayed after all label formatting has been applied. The 6 byte hex address is sent as 12 ASCII characters, i.e., an address of 00 06 66 00 1A ED will be sent as (shown in hex): 30 30 30 36 36 36 30 30 31 41 45 44



★ Source Radio Address Transmission =
Do Not Include



Source Radio Address Transmission = Prefix

Source Radio Address Delimiter Character

This option specifies the delimiter character to be placed between the label data and radio address when address stamping is enabled.



NOTE: This feature only applies if "Source Radio Address Transmission" on [page 227](#) is enabled.



Set Source Radio Address Delimiter Character

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by the digits from the Alphanumeric characters in [Appendix D, Keypad](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ Delimiter Character = 00 (no delimiter character)



BLUETOOTH-ONLY FEATURES



NOTE: Changing the configuration parameters described in this section may cause a temporary loss of the Bluetooth connection between the Reader and the remote device.

Bluetooth Security Level



NOTE: This parameter applies when pairing the Reader with a third party Bluetooth device. It has no effect when linking the Reader to a Gateway.

Set this parameter according to both the security requirements of the application scenario where the reader will be employed, and the Bluetooth version supported by the Host system.

- Select **Level 0 - no security (pre-v2.1 only)** only when encryption and authentication are not required, and the Host system is compliant with Bluetooth Core Specifications v2.0 + EDR or earlier.
- Select **Level 1 - low** when it is desired to avoid any user interaction (e.g. Passkey or PIN entry) during the pairing process. When using this setting, the resulting Bluetooth connection will be encrypted but not authenticated.
- Select **Level 2** when encryption is required, authentication is not required, and minimal user interaction is desired. In this case the Host may ask the user to enter a 6-digit Bluetooth Passkey or a Bluetooth PIN during the pairing process
- Select **Level 3 - highest** when a secure connection to the Host is desired, with both encryption and authentication. In this case the Host will ask the user to enter a 6-digit Bluetooth Passkey or a Bluetooth PIN during the pairing process.

When the Host system is compliant with Bluetooth Core Specifications v2.0 + EDR or earlier, and the BT Security Level is not set to **Level 0 - no security (pre-v2.1 only)**, the Host may ask the user to enter the Bluetooth PIN of the Reader. In this case, please enter 1234 as the Bluetooth PIN of the Reader.



NOTE: When device authentication takes place during the pairing process, by means of the Passkey or PIN entry, the resulting Bluetooth link is protected from Man-In-The-Middle (MITM) malicious attacks.



NOTE: The actual behavior of the Reader and of the Host system during the pairing process depends on the security settings of both devices involved, and on the input and output means available on each device to interface with the user.

This means that:

- the user may be required to enter a BT Passkey during the pairing process even if the reader's BT Security Level is set to *Level 2*. This depends on the configuration of the Host system.
- when the reader's BT Security Level is set to *Level 3 - highest*, it may not be possible to connect to a Host system if the latter cannot support the Passkey Entry authentication procedure. In this case, try to set the reader's BT Security Level to a lower level to establish the connection.



NOTE: Changing the BT Security Level setting will unlink the Reader from the remote device.



BT Security Level = No Security (pre-v2.1 only)



★ BT Security Level = Level 1 - low



BT Security Level = Level 2



BT Security Level = Level 3 - highest



Bluetooth Radio Output Power

Set this parameter according to the desired radio range of the Reader:

- Class 1: max 100 meters
- Class 2: max 20 meters
- Class 3: max 5 meters

Reducing the maximum radio range can help extend the battery life of the Reader. It can also reduce the interferences caused to nearby wireless devices that operate in the same 2.4 GHz frequency band.



★ Bluetooth Output Power = Class 1 - highest



Bluetooth Output Power = Class 2



Bluetooth Output Power = Class 3 - lowest



Wi-Fi Channels Exclusion

In case the Reader operates in the same environment as 2.4 GHz Wi-Fi equipment, set this parameter to configure the strategy that the Reader should employ to minimize the interferences between Bluetooth and Wi-Fi wireless technologies.

- If the specific 802.11 standard or the frequency channels used by the Wi-Fi equipment are unknown, select Automatic to let the Reader use the Adaptive Frequency Hopping (AFH) feature of Bluetooth technology. With this setting, the Reader and the remote Bluetooth device may automatically detect the frequency channels affected by a significant level of interference, and avoid using these channels during Bluetooth data exchange.
- If the specific 802.11 standard and the frequency channels used by the Wi-Fi equipment are known, select the corresponding combination from the list of programming labels below or use the Datalogic Aladdin tool. With this setting, the Reader and the remote Bluetooth device avoid using the Bluetooth frequency channels that overlap with the already occupied Wi-Fi channels.

For example, if the co-located 2.4 GHz Wi-Fi equipment operates according to the 802.11g standard on channels n. 6 and n. 11, read the 802.11b/g ch.6 and 11 programming label.



NOTE: The programming labels in the list below cover the most popular combinations of 802.11 standards and 2.4 GHz Wi-Fi channels. If the configuration command corresponding to your specific scenario is not listed, please contact Datalogic Technical Support for further configuration options.



★ WiFi Ch. Exclusion = Automatic



WiFi Ch. Exclusion = 802.11b_g ch.1



WiFi Ch. Exclusion = 802.11b_g ch.2



WiFi Ch. Exclusion = 802.11b_g ch.3



Wi-Fi Channels Exclusion (continued)



WiFi Ch. Exclusion = 802.11b_g ch.4



WiFi Ch. Exclusion = 802.11b_g ch.5



WiFi Ch. Exclusion = 802.11b_g ch.6



WiFi Ch. Exclusion = 802.11b_g ch.7



WiFi Ch. Exclusion = 802.11b_g ch.8



WiFi Ch. Exclusion = 802.11b_g ch.9



WiFi Ch. Exclusion = 802.11b_g ch.10



WiFi Ch. Exclusion = 802.11b_g ch.11



Wi-Fi Channels Exclusion (continued)



WiFi Ch. Exclusion = 802.11b_g ch.12



WiFi Ch. Exclusion = 802.11b_g ch.13



WiFi Ch. Exclusion = 802.11b_g ch.14



WiFi Ch. Exclusion = 802.11b_g ch.1 and 6



WiFi Ch. Exclusion = 802.11b_g ch.1 and 11



WiFi Ch. Exclusion = 802.11b_g ch.6 and 11



WiFi Ch. Exclusion = 802.11b_g ch.1 and 6 and 11



WiFi Ch. Exclusion = 802.11b_g ch.2 and 7



Wi-Fi Channels Exclusion (continued)



WiFi Ch. Exclusion = 802.11b_g ch.2 and 12



WiFi Ch. Exclusion = 802.11b_g ch.7 and 12



WiFi Ch. Exclusion = 802.11b_g ch.2 and 7 and 12



WiFi Ch. Exclusion = 802.11b_g ch.3 and 8



WiFi Ch. Exclusion = 802.11b_g ch.3 and 13



WiFi Ch. Exclusion = 802.11b_g ch.8 and 13



WiFi Ch. Exclusion = 802.11b_g ch.3 and 8 and 13



WiFi Ch. Exclusion = 802.11b_g ch.4 and 9



Wi-Fi Channels Exclusion (continued)



WiFi Ch. Exclusion = 802.11b_g ch.4 and 14



WiFi Ch. Exclusion = 802.11b_g ch.9 and 14



WiFi Ch. Exclusion = 802.11b_g ch.4 and 9 and 14



WiFi Ch. Exclusion = 802.11b_g ch.5 and 10



WiFi Ch. Exclusion = 802.11n ch.3



WiFi Ch. Exclusion = 802.11n ch.11



Bluetooth Discoverable Mode Timeout

It defines how long the scanner is discoverable after reading the "Link HID" or "Link SPP" label.



Discoverable Mode Timeout = 1 minute



Discoverable Mode Timeout = 2 minutes



★ Discoverable Mode Timeout = 3 minutes



Discoverable Mode Timeout = 4 minutes



Discoverable Mode Timeout = 5 minutes



Bluetooth Friendly Name

You can set a meaningful name for HS7600 that will appear in the application during device discovery.

To set a new Bluetooth Friendly Name, scan the barcode below and follow the instructions.



Set Bluetooth Friendly Name

To configure this feature, scan the ENTER/EXIT PROGRAMMING MODE bar code above, then the bar code at left followed by a maximum 64 digits from the Alphanumeric characters in [Appendix D, Keypad](#). The digits must be the hexadecimal ASCII representation of the desired characters. If less than the expected string of 32 characters are selected, scan the ENTER/EXIT bar code to terminate the string.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★ CODISCAN HS7600 [SERIAL_NUMBER_SCANNER]

BLUETOOTH HID FEATURES

Before connecting the Reader to a Bluetooth HID host device, the keyboard emulation used for label transmission can be configured using the parameters described in this section, plus the following parameters:

- "Setting Country Mode" on page 39
- "Encoding Type" on page 53
- "ALT Output Type" on page 60
- "Keyboard Numeric Keypad" on page 61
- "Keyboard Send Control Characters" on page 61

Bluetooth HID Alt Mode

Enable/Disable the ability to correctly transmit a label to the host regardless of the Bluetooth HID Country Mode selected, when Bluetooth HID Profile is configured.

Read the configuration command label below for the HID Alt Mode feature.



★ HID Alt Mode = OFF



HID Alt Mode = ON

Bluetooth HID Intercharacter Delay

This parameter specifies the intercharacter delay between the end of one character and the beginning of the next. The delay can be set within a range of zero (0) to 990 milliseconds in 10ms increments. A setting of zero specifies no delay. See "[Intercharacter Delay](#)" on page 241 for more detailed programming instructions.



Bluetooth HID Intercharacter Delay = No Delay



Select Bluetooth HID Intercharacter Delay Setting

To configure this feature, scan the ENTER/EXIT bar code above, then the bar code at left followed by digits from the Alphanumeric characters in [Appendix D](#) representing your desired character(s). End by scanning the ENTER/EXIT bar code again.

Make a mistake? Scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.



CANCEL

★00 = No Intercharacter Delay

CHAPTER 4

REFERENCES

This section contains explanations and examples of selected bar code features. See "Configuration with Bar Codes" on page 25 for the actual bar code labels.

SECTION CONTENTS

USB COM PARAMETERS on page 241

- Intercharacter Delay
- ACK NAK Options
- ACK Character
- NAK Character
- ACK NAK Timeout Value
- ACK NAK Retry Count
- Disable Character
- Enable Character

KEYBOARD INTERFACE on page 248

- Intercharacter Delay
- Intercode Delay

DATA FORMAT on page 250

- Data Editing
- Global Prefix/Suffix
- Global AIM ID
- Label ID
- Character Conversion

SCANNING FEATURES on page 258

- Scan Mode
- Scanning Active Time
- Flash On Time
- Flash Off Time

LED AND BEEPER INDICATORS on page 262

- Good Read LED Duration

RF FEATURES on page 263

- RF Address Stamping

SYMBOLOGIES on page 264

- Set Length

USB COM PARAMETERS

Intercharacter Delay

This parameter specifies the intercharacter delay between the end of one character and the beginning of the next. The delay can be set within a range of zero (0) to 990 milliseconds in 10ms increments. A setting of zero specifies no delay.

To set the delay:

1. Determine the desired setting in milliseconds.
2. Divide the desired setting by 10 (setting is in 10ms increments). Pad the result with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
3. Scan the ENTER/EXIT PROGRAMMING MODE bar code to enter Programming Mode.
4. Go to [page 29](#) and scan the bar code: SELECT INTERCHARACTER DELAY SETTING.
5. Scan the appropriate two digits from the keypad in [Appendix D](#), that represent the duration which was determined in the steps above. You will hear a two-beep indication after the last character.



NOTE: If you make a mistake before the last character, scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.

6. Scan the ENTER/EXIT PROGRAMMING MODE bar code to exit.

This completes the procedure. See the following table for examples of how to set this feature.

Table 4 - Intercharacter Delay Setting Examples

| STEP | ACTION | EXAMPLES | | | |
|------|---|-------------|-------------|-------------|-------------|
| 1 | Desired Setting | 50ms | 150ms | 600ms | 850ms |
| 2 | Divide by 10 (pad with leading zeroes to yield two-digits) | 05 | 15 | 60 | 85 |
| 3 | Scan ENTER/EXIT PROGRAMMING MODE | | | | |
| 4 | Scan SELECT INTERCHARACTER DELAY SETTING | | | | |
| 5 | Scan two characters from Appendix D | '0' and '5' | '1' and '5' | '6' and '0' | '8' and '5' |
| 6 | Scan ENTER/EXIT PROGRAMMING MODE | | | | |

ACK NAK Options

This enables/disables the ability of the reader to support the USB COM ACK/NAK protocol. When configured, the reader and/or host sends an “ACK” when it receives data properly, and sends “NAK” when the data is in error.

Options are:

- Disable
- Enable for label transmission — The reader expects an ACK/NAK response from the host when a label is sent
- Enable for host-command acknowledge — The reader will respond with ACK/NAK when the host sends a command
- Enable for label transmission and host-command acknowledge

ACK Character

This setting specifies an ASCII character or hex value to be used as the ACK character. ASCII characters or any hex value from 0 to 0xFF can be selected.



NOTE: Setting to previously defined characters such as XON, XOFF, or host commands conflicts with normal operation of these characters. 8-bit data is not recognized when the option Data Bits page 32 has been set as 7 Data Bits.

1. Determine the desired character or value.
2. Use the ASCII Chart on [page 310](#) to find the hex equivalent for the desired character/value.
3. Scan ENTER/EXIT PROGRAMMING MODE to enter Programming Mode.
4. Scan the bar code: SELECT ACK CHARACTER SETTING.
5. Scan the appropriate two alphanumeric characters from the keypad in [Appendix D](#), that represent the desired character/value determined above. The second character will cause a two-beep indication.
6. Scan the ENTER/EXIT PROGRAMMING MODE bar code to exit.

See the table below for examples of how to set this feature.

Table 5 - ACK Character Setting Examples

| STEP | ACTION | EXAMPLES | | | |
|------|---|-------------|-------------|-------------|-------------|
| 1 | Desired Character/Value | ACK | \$ | @ | > |
| 2 | Hex equivalent from ASCII Chart on page 310 | 0x06 | 0x24 | 0x40 | 0x3E |
| 3 | Scan ENTER/EXIT PROGRAMMING MODE | | | | |
| 4 | Scan SELECT ACK CHARACTER SETTING | | | | |
| 5 | Scan two characters from Appendix D | '0' and '6' | '2' and '4' | '4' and '0' | '3' and 'E' |
| 6 | Scan ENTER/EXIT PROGRAMMING MODE | | | | |

NAK Character

This setting specifies an ASCII character or hex value to be used as the NAK character. ASCII characters or any hex value from 0 to 0xFF can be selected.



NOTE: Setting to previously defined characters such as XON, XOFF, or host commands conflicts with normal operation of these characters. 8-bit data is not recognized when the option Data Bits on page 32 has been set as 7 Data Bits.

To set this feature:

1. Determine the desired character or value.
 2. Use the ASCII Chart on [page 310](#) to find the hex equivalent for the desired character/value.
 3. Scan the ENTER/EXIT PROGRAMMING MODE bar code to enter Programming Mode.
 4. Scan the bar code: SELECT NAK CHARACTER SETTING.
 5. Scan the appropriate two alpha-numeric characters from the keypad in [Appendix D](#), that represent the desired character/value determined above. The second character will cause a two-beep indication.
 6. Scan the ENTER/EXIT PROGRAMMING MODE bar code to exit Programming Mode.
- This completes the procedure. See the table below for examples of how to set this feature.

Table 6 - NAK Character Setting Examples

| STEP | ACTION | EXAMPLES | | | |
|------|-------------------------------------|-------------|-------------|-------------|-------------|
| 1 | Desired Character/Value | NAK | \$ | @ | > |
| 2 | Hex equivalent | 0x15 | 0x24 | 0x40 | 0x3E |
| 3 | Scan ENTER/EXIT PROGRAMMING MODE | | | | |
| 4 | Scan SELECT NAK CHARACTER SETTING | | | | |
| 5 | Scan two characters from Appendix D | '1' and '5' | '2' and '4' | '4' and '0' | '3' and 'E' |
| 6 | Scan ENTER/EXIT PROGRAMMING MODE | | | | |

ACK NAK Timeout Value

This option specifies the amount of time the reader waits for an ACK character from the host following label transmission. The selectable timeout range is 200 milliseconds to 15,000ms (15 seconds) in 200ms increments. A selection of 0 disables the timeout.

To set this value:

1. Determine the desired setting in milliseconds.
2. Divide the desired setting by 200 (setting is in 200ms increments). Pad the result with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
3. Scan the ENTER/EXIT PROGRAMMING MODE bar code to enter Programming Mode.
4. Scan the bar code: SELECT ACK NAK TIMEOUT VALUE SETTING.
5. Scan the appropriate two digits from the keypad in [Appendix D](#), that represent the duration which was determined in the steps above. You will hear a two-beep indication after the last character.



NOTE: If you make a mistake before the last character, scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.

6. Scan the ENTER/EXIT PROGRAMMING MODE bar code to exit Programming Mode.

This completes the procedure. See the table below for examples of how to set this feature.

Table 7 - ACK NAK Timeout Value Setting Examples

| STEP | ACTION | EXAMPLES | | | |
|------|--|-------------|------------------|-------------------|--------------------|
| 1 | Desired Setting | 200ms | 1,000ms (1 sec.) | 5200ms (5.2 sec.) | 15,000ms (15 sec.) |
| 2 | Divide by 200 | 01 | 05 | 26 | 75 |
| 3 | Scan ENTER/EXIT PROGRAMMING MODE | | | | |
| 4 | Scan SELECT ACK NAK TIMEOUT VALUE SETTING | | | | |
| 5 | Scan two characters from Appendix D | '0' and '1' | '0' and '5' | '2' and '6' | '7' and '5' |
| 6 | Scan ENTER/EXIT PROGRAMMING MODE | | | | |

ACK NAK Retry Count

This feature specifies the number of times the reader retries a label transmission due to a retry condition. The selectable range is from 1 to 254 retries. A selection of 0 disables the count, and a selection of 255 specifies unlimited retries.

To set this feature:

1. Determine the desired setting.
2. Pad the number with leading zeroes to yield three digits. For example: 0 = 000, 5 = 005, 20 = 020, etc.
3. Scan the ENTER/EXIT PROGRAMMING MODE bar code to enter Programming Mode.
4. Scan the bar code: SELECT ACK NAK RETRY COUNT SETTING.
5. Scan the appropriate three digits from the keypad in [Appendix D](#), that represent the number which was determined in the steps above. You will hear a two-beep indication after the last character.



NOTE: If you make a mistake before the last character, scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.

6. Scan the ENTER/EXIT PROGRAMMING MODE bar code to exit Programming Mode. This completes the procedure. See the table below for examples of how to set this feature.

Table 8 - ACK NAK Retry Count Setting Examples

| STEP | ACTION | EXAMPLES | | | |
|------|--|---------------------|------------------|------------------|-------------------|
| 1 | Desired Setting | Disable Retry Count | 3 Retries | 54 Retries | Unlimited Retries |
| 2 | Pad with leading zero(es) | 000 | 003 | 054 | 255 |
| 3 | Scan ENTER/EXIT PROGRAMMING MODE | | | | |
| 4 | Scan SELECT ACK NAK RETRY COUNT SETTING | | | | |
| 5 | Scan three characters from Appendix D | '0', '0' and '0' | '0', '0' and '3' | '0', '5' and '4' | '2', '5' and '5' |
| 6 | Scan ENTER/EXIT PROGRAMMING MODE | | | | |

Disable Character

Specifies the value of the USB COM host command used to disable the reader.
ASCII characters or any hex value from 0 to 0xFF can be selected.



NOTE: Setting to previously defined characters such as XON, XOFF, or host commands conflicts with normal operation of these characters. 8-bit data is not recognized when the option "Data Bits" on page 24 has been set as 7 Data Bits.

To set the value:

1. Determine the desired character or value. A setting of 0xFF indicates the Disable Character is not used (not available).
2. Use the ASCII Chart on [page 310](#) to find the hex equivalent for the desired character/value.
3. Scan the ENTER/EXIT PROGRAMMING MODE bar code to enter Programming Mode.
4. Scan the bar code: SELECT DISABLE CHARACTER SETTING on [page 35](#).
5. Scan the appropriate two alphanumeric characters from the keypad in [Appendix D](#), that represent the desired character/value determined above. The second character will cause a two-beep indication.
6. Scan the ENTER/EXIT PROGRAMMING MODE bar code to exit Programming Mode.

This completes the procedure. See the table below for examples of how to set this feature.

Table 9 -Disable Character Setting Examples

| STEP | ACTION | EXAMPLES | | | |
|------|---|-------------|-------------|-------------|--------------------------|
| 1 | Desired character/value | 'd' | '}' | 'D' | Disable Command Not Used |
| 2 | Hex equivalent from ASCII Chart on page 310 | 0x64 | 0x7D | 0x44 | 0xFF |
| 3 | Scan ENTER/EXIT PROGRAMMING MODE | | | | |
| 4 | Scan SELECT DISABLE CHARACTER VALUE SETTING | | | | |
| 5 | Scan three characters from Appendix D | '6' and '4' | '7' and 'D' | '4' and '4' | 'F' and 'F' |
| 6 | Scan ENTER/EXIT PROGRAMMING MODE | | | | |

Enable Character

Specifies the value of the USB COM host command used to enable the reader.

ASCII characters or any hex value from 0 to 0xFF can be selected.



NOTE: Setting to previously defined characters such as XON, XOFF, or host commands conflicts with normal operation of these characters. 8-bit data is not recognized when the option "Data Bits" on page 24 has been set as 7 Data Bits.

To set the value:

1. Determine the desired character or value. A setting of 0xFF indicates the Enable Character is not used (not available).
2. Use the ASCII Chart in [Appendix F](#) to find the hex equivalent for the desired character/value.
3. Scan the ENTER/EXIT PROGRAMMING MODE bar code to enter Programming Mode.
4. Scan the bar code: SELECT ENABLE CHARACTER SETTING on [page 35](#).
5. Scan the appropriate two alphanumeric characters from the keypad in [Appendix D](#), that represent the desired character/value determined above. The second character will cause a two-beep indication.
6. Scan the ENTER/EXIT PROGRAMMING MODE bar code to exit Programming Mode.

This completes the procedure. See the table below for examples of how to set this feature.

Table 10 - Enable Character Setting Examples

| STEP | ACTION | EXAMPLES | | | |
|------|---|-------------|-------------|-------------|-------------------------|
| 1 | Desired character/value | 'e' | '} | 'E' | Enable Command Not Used |
| 2 | Hex equivalent from ASCII Chart on page 310 | 0x65 | 0x7D | 0x45 | 0xFF |
| 3 | Scan ENTER/EXIT PROGRAMMING MODE | | | | |
| 4 | Scan SELECT ENABLE CHARACTER VALUE SETTING | | | | |
| 5 | Scan two characters from Appendix D | '6' and '5' | '7' and 'D' | '4' and '5' | 'F' and 'F' |
| 6 | Scan ENTER/EXIT PROGRAMMING MODE | | | | |

KEYBOARD INTERFACE

Intercharacter Delay

This parameter specifies the intercharacter delay between the end of one character and the beginning of the next. The delay can be set within a range of zero (0) to 990 milliseconds in 10ms increments. A setting of zero specifies no delay.

To set the delay:

1. Determine the desired setting in milliseconds.
2. Divide the desired setting by 10 (setting is in 10ms increments). Pad the result with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
3. Go to [page 62](#) and scan the ENTER/EXIT PROGRAMMING MODE bar code to enter Programming Mode.
4. Scan the bar code: SELECT INTERCHARACTER DELAY SETTING on [page 62](#).
5. Scan the appropriate two digits from the keypad in [Appendix D](#), that represent the duration which was determined in the steps above. You will hear a two-beep indication after the last character.



NOTE: If you make a mistake before the last character, scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.

6. Scan the ENTER/EXIT PROGRAMMING MODE bar code to exit Programming Mode.

This completes the procedure. See the table below for examples of how to set this feature.

Table 11 - Intercharacter Delay Setting Examples

| STEP | ACTION | EXAMPLES | | | |
|------|---|-------------|-------------|-------------|-------------|
| 1 | Desired Setting | 50ms | 150ms | 600ms | 850ms |
| 2 | Divide by 10 (and pad with leading zeroes to yield two-digits) | 05 | 15 | 60 | 85 |
| 3 | Scan ENTER/EXIT PROGRAMMING MODE | | | | |
| 4 | Scan SELECT INTERCHARACTER DELAY SETTING | | | | |
| 5 | Scan two characters from Appendix D | '0' and '5' | '1' and '5' | '6' and '0' | '8' and '5' |
| 6 | Scan ENTER/EXIT PROGRAMMING MODE | | | | |

Intercode Delay

Specifies the delay between labels transmitted to the host for this interface. The selectable range for this feature is from 0 to 99 seconds.

Follow these instructions to set this feature:

1. Determine the desired setting.
2. Pad the number with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc
3. Go to [page 62](#) and scan the ENTER/EXIT PROGRAMMING MODE bar code to enter Programming Mode.
4. Scan the bar code: SELECT INTERCODE DELAY SETTING on [page 62](#).
5. Scan the appropriate two digits from the keypad in [Appendix D](#), that represent the duration which was determined in the steps above. You will hear a two-beep indication after the last character.



NOTE: If you make a mistake before the last character, scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.

6. Scan the ENTER/EXIT PROGRAMMING MODE bar code to exit Programming Mode. This completes the procedure. See the table below for examples of how to set this feature.

Table 12 - Intercode Delay Setting Examples

| STEP | ACTION | EXAMPLES | | | |
|------|--|-------------|-------------|-------------|-------------|
| 1 | Desired Setting | No Delay | 5 seconds | 60 seconds | 99 seconds |
| 2 | Pad with leading zero(es) | 00 | 05 | 60 | 99 |
| 3 | Scan ENTER/EXIT PROGRAMMING MODE | | | | |
| 4 | Scan SELECT INTERCODE DELAY SETTING | | | | |
| 5 | Scan two characters from Appendix D | '0' and '0' | '0' and '5' | '6' and '0' | '9' and '9' |
| 6 | Scan ENTER/EXIT PROGRAMMING MODE | | | | |


DATA FORMAT

Data Editing

When a bar code is scanned, additional information can be sent to the host computer along with the bar code data. This combination of bar code data and supplementary user-defined data is called a “message string.” The Data Editing features can be used to build specific user-defined data into a message string.

There are several types of selectable data characters that can be sent before and after scanned data. You can specify if they should be sent with all symbologies, or only with specific symbologies. The following shows the available elements you can add to a message string:

Figure 3 - Breakdown of a Message String

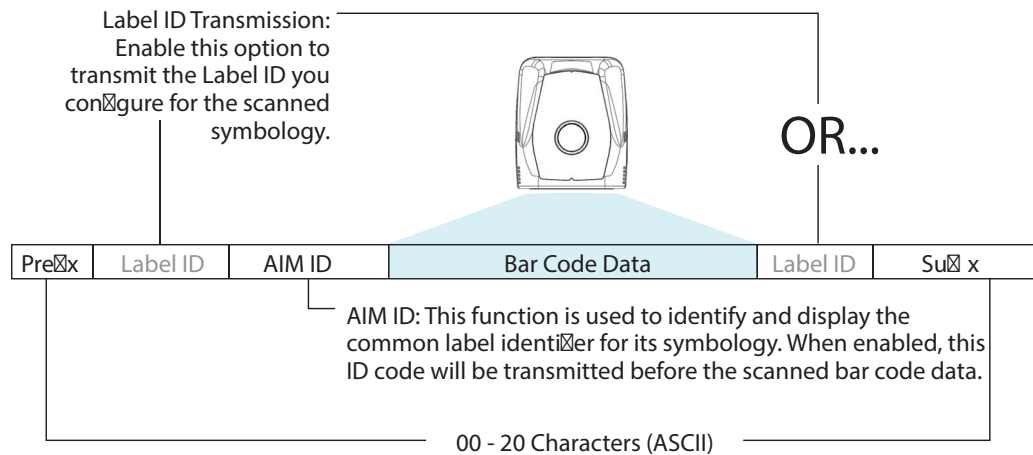

NOTE: Additional advanced editing is available. See the Advanced formatting features in the Datalogic Aladdin configuration software, or contact "Technical Support" on page xiv for more information.


Please Keep In Mind...

- Modifying a message string is not a mandatory requirement. Data editing is a sophisticated feature allowing highly customizable output for advanced users. Factory default settings for data editing is typically set to NONE.
- A prefix or suffix may be applied only to a specified symbology (reference [1D Symbologies, starting on page 97](#)) or across all symbologies (set via the Global features in [Configuration with Bar Codes, starting on page 25](#)).
- You can add any character from the ASCII Chart on [page 310](#) (from 00-FF) on the inside back cover of this manual as a prefix, suffix or Label ID.
- Enter prefixes and suffixes in the order in which you want them to appear on the output.

Global Prefix/Suffix

Up to 20 ASCII characters may be added as a prefix (in a position before the bar code data) and/or as a suffix (in a position following the bar code data) as indicated.

Figure 4 Prefix and Suffix Positions

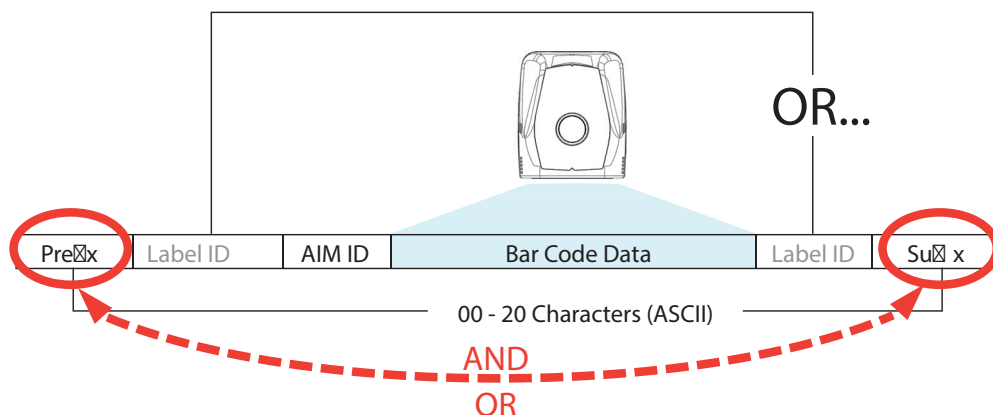

Example: Setting a Prefix

In this example, we'll set a prefix for all symbologies.

1. Determine which ASCII character(s) are to be added to scanned bar code data. In this example, we'll add a dollar sign ('\$') as a prefix.
2. Scan the ENTER/EXIT PROGRAMMING MODE bar code, then scan the SET GLOBAL PREFIX bar code.
3. Reference the ASCII Chart on [page 310](#) in [Appendix F](#) to find the hex value assigned to the desired character. The corresponding hex number for the '\$' character is 24. To enter this selection code, scan the '2' and '4' bar codes from [Appendix D](#).



NOTE: If you make a mistake before the last character, scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.

4. If less than the expected string of 20 characters are selected, scan the ENTER/EXIT bar code to terminate the string.
5. Scan the ENTER/EXIT bar code once again to exit Programming Mode.

The resulting message string would appear as follows:

Scanned bar code data: **12345**

Resulting message string output: **\$12345**

Global AIM ID



NOTE: This feature enables/disables addition of AIM IDs for all symbology types.


AIM label identifiers (as opposed to custom characters you select yourself as with label identifiers) can be included with scanned bar code data. AIM label identifiers consist of three characters as follows:

- A close brace character (ASCII ‘}’), followed by...
- A code character (see the table below), followed by...
- A modifier character (the modifier character is symbol dependent).

| SYMBOLGY | CHAR | SYMBOLGY | CHAR |
|---------------------|----------------|---|----------------|
| UPC/EAN | E ^a | Code 128/GS1-128 | C |
| Code 39 and Code 32 | A | DataBar Omnidirectional, DataBar Expanded | e |
| Codabar | F | Standard 2 of 5 | S |
| Interleaved 2 of 5 | I | ISBN | X ^b |
| Code 93 | G | Code 11 | H |

- a. UPC-A and UPC-E labels are converted to EAN 13 when adding AIM IDs.
 b. ISBN (X with a 0 modifier character)

Figure 5 AIM ID

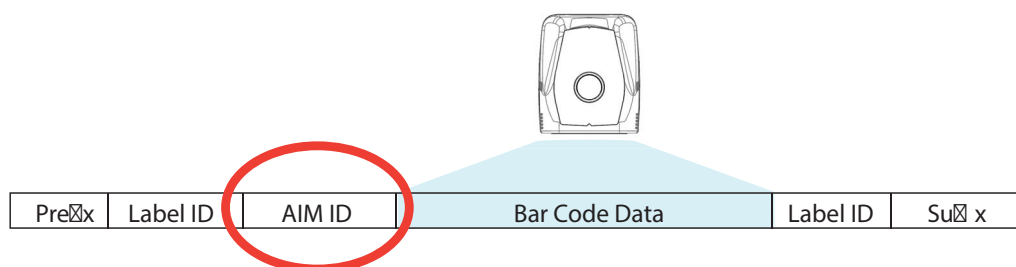

Label ID

A Label ID is a customizable code of up to three ASCII characters (each can be one of hex 0x01-0xFF), used to identify a bar code (symbology) type. It can be appended previous to or following the transmitted bar code data depending upon how this option is enabled. This feature provides options for configuring custom Label IDs as a pre-loaded set or individually per symbology (see "[Label ID: Set Individually Per Symbology](#)" on page 71). If you wish to program the reader to always include an industry standard label identifier for ALL symbology types, see "[Global AIM ID](#)" on page 69.

Label ID: Pre-loaded Sets

The following table lists the pre-loaded label ID sets for the USA and Europe.

Table 13 - Label ID Pre-loaded Sets

| SYMBOLGY | USA LABEL ID SET | | EU LABEL ID SET | |
|-----------------------------|------------------|-----------|-----------------|-------------------|
| | ASCII character | Hex value | ASCII character | Hexadecimal value |
| ABC Codabar | S | 530000 | S | 530000 |
| CODABAR | % | 250000 | R | 520000 |
| Code 39 CIP HR | Y | 590000 | Y | 590000 |
| Code 93 | & | 260000 | U | 550000 |
| Code 11 | CE | 434500 | b | 620000 |
| Code 128 | # | 230000 | T | 540000 |
| Code 32 | A | 410000 | X | 580000 |
| Code 39 | * | 2A0000 | V | 560000 |
| Datalogic 2of5 | s | 730000 | s | 730000 |
| EAN13 | F | 460000 | B | 420000 |
| EAN13 P2 | F | 460000 | L | 4C0000 |
| EAN13 P5 | F | 460000 | M | 4D0000 |
| EAN8 | FF | 464600 | A | 410000 |
| EAN8 P2 | FF | 464600 | J | 4A0000 |
| EAN8 P5 | FF | 464600 | K | 4B0000 |
| FOLLETT 2OF5 | O | 4F0000 | O | 4F0000 |
| GS1 DATABAR EXPANDED | RX | 525800 | t | 740000 |
| GS1 DATABAR LIMITED | RL | 524C00 | v | 760000 |
| GS1 DATABAR OMNIDIRECTIONAL | R4 | 523400 | u | 750000 |
| GS1-128 | | 000000 | k | 6B0000 |
| I2OF5 | i | 690000 | N | 4E0000 |
| IATA | IA | 494100 | & | 260000 |
| Industrial 2 of 5 | W | 570000 | W | 570000 |
| Interleaved 2 of 5 | e | 650000 | e | 650000 |
| ISBN | l | 490000 | @ | 400000 |
| ISBT128 | f | 660000 | f | 660000 |

| SYMBOLGY | USA LABEL ID SET | | EU LABEL ID SET | |
|----------|------------------|--------|-----------------|--------|
| ISSN | n | 6E0000 | n | 6E0000 |
| MSI | @ | 400000 | Z | 5A0000 |
| S25 | s | 730000 | P | 500000 |
| UPCA | A | 410000 | C | 430000 |
| UPCA P2 | A | 410000 | F | 460000 |
| UPCA P5 | A | 410000 | G | 470000 |
| UPCE | E | 450000 | D | 440000 |
| UPCE P2 | E | 450000 | H | 480000 |
| UPCE P5 | E | 450000 | I | 490000 |
| OCR-A | o | 6F0000 | \$o | 246F00 |
| OCR-B | o | 6F0000 | \$p | 247000 |
| MICR | o | 6F0000 | \$m | 246D00 |

Label ID: Set Individually Per Symbology

To configure a Label ID individually for a single symbology:


1. Scan the ENTER/EXIT bar code.
2. Select Label ID position as either BEFORE (Enable as Prefix) or AFTER (Enable as suffix) by scanning the appropriate bar code in the section "Label ID Control" on page 71. Reference Figure 6 for Label ID positioning options if multiple identification features are enabled.
3. Scan a bar code to select the symbology for which you wish to configure a custom Label ID from the section "Label ID Symbology Selection" on page 72.
4. Determine the desired character(s) (you may choose up to three) which will represent the Label ID for the selected symbology.
5. Turn to the ASCII Chart on page 310 on the inside back cover of this manual and find the equivalent hex digits associated with your choice of Label ID. For example, if you wish to select an equal sign (=) as a Label ID, the chart indicates its associated hex characters as 3D. Turn to Keypad, in Appendix D, and scan the bar codes representing the hex characters determined. For the example given, the characters '3' and 'D' would be scanned. More examples of Label ID settings are provided in Table 14 on page 256.



NOTE: If you make a mistake before the last character, scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.

6. Scan the ENTER/EXIT bar code to exit Label ID entry.
 7. Scan the ENTER/EXIT bar code once again to exit Programming Mode.
- This completes the steps to configure a Label ID for a given symbology.

Figure 6 Label ID Position Options

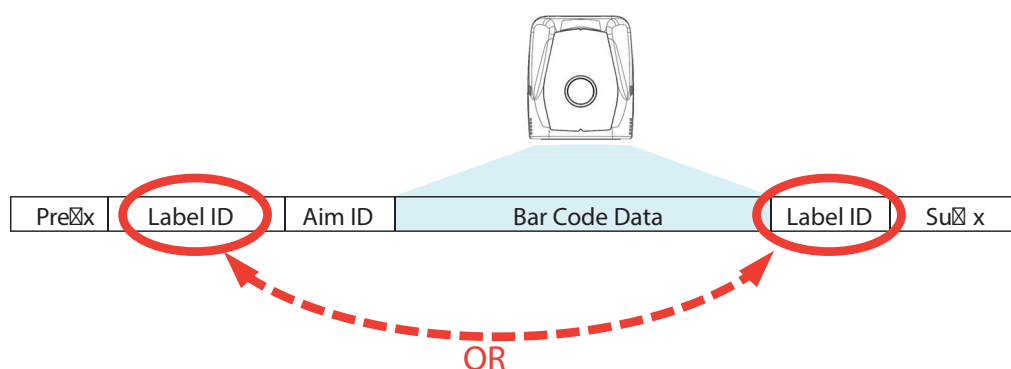

Label ID: Set Individually Per Symbology — continued

Table 14 Label ID Examples

| STEP | ACTION | EXAMPLES | | | |
|----------------|--|----------------------------------|--------------------|--------------------|-------------------|
| 1 | Scan the ENTER/EXIT bar code | (Reader enters Programming Mode) | | | |
| 2 | Determine placement of the Label ID characters BEFORE or AFTER with regard to scanned data using Label ID Control, starting on page 71 | Enable as Prefix | Enable as Suffix | Enable as Prefix | Enable as Suffix |
| 3 | Scan the bar code selecting the symbology type you wish to designate label ID characters for using Label ID Symbology Selection, starting on page 72 | GS1 DataBar Omnidirectional | Code 39 | Interleaved 2 of 5 | Code 32 |
| 4 | Custom Label ID example (desired characters): | D B * | = C 3 | + | PH |
| 5 | Find hex equivalents from the ASCII table (inside back cover), then scan in these digits/characters using the bar codes in the section: Keypad, starting on page 297. If you make a mistake before the last character, scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning. | 44 42 2A | 3D 43 33 | 2B | 50 48 |
| 6 | Scan the ENTER/EXIT bar code | (Reader exits Label ID entry) | | | |
| 7 | Scan the ENTER/EXIT bar code once again | (Reader exits Programming Mode) | | | |
| Result: | | | | | |
| | | DB*[bar code data] | [bar code data]=C3 | + [bar code data] | [bar code data]PH |

Character Conversion

Character conversion is an eight byte configuration item. The eight bytes are 4 character pairs represented in hexadecimal ASCII values. The first character in the pair is the character that will be converted. The second character in the pair is the character to convert to. If the character to convert in a pair is FF, then no conversion is done.

For example, if you have the character conversion configuration item set to the following: 41423132FFFFFFFF

The first pair is 4142 or AB (41 hex is an ASCII capital A, 42 hex is an ASCII capital B) and the second pair is 3132 or 12 (31 hex is an ASCII 1, 32 is an ASCII 2). The other two pairs are FFFF and FFFF.

With the label, AB12BA21, it would look as follows after the character conversion: BB22BB22.

The A characters were converted to B characters and the 1 characters were converted to 2 characters. Nothing is done with the last two character pairs, since they are all FF.

To set Character Conversion:

1. Scan the ENTER/EXIT bar code.
2. Scan the bar code for "Character Conversion" on page 68
3. Determine the desired string. Sixteen positions must be determined as in the above example. Next, turn to the ASCII Chart on page 310 on the inside back cover of this manual and find the equivalent hex digits needed to fulfill the string.
4. Turn to Appendix D, Keypad and scan the bar codes representing the hex characters determined in the previous step.
5. Scan the ENTER/EXIT bar code to exit Programming Mode.



NOTE: If less than the expected string of 16 characters are selected, scan the ENTER/EXIT bar code twice to accept the selections and exit Programming Mode.

SCANNING FEATURES

Scan Mode

Selects the scan operating mode for the reader. Selections are:

Trigger Single: When the trigger is pulled, scanning is activated until one of the following occurs:

- Object Detection has elapsed
- a label has been read
- the trigger is released

This mode is associated with typical handheld reader operation: when the trigger is pulled, scanning starts and the product scans until the trigger is released, or a label is read, or the maximum Object Detection has elapsed.

Trigger Hold Multiple: When the trigger is pulled, scanning starts and the product scans until the trigger is released or Object Detection has elapsed. Reading a label does not disable scanning. [Double Read Timeout](#) prevents undesired multiple reads of the same label while in this mode.

Trigger Pulse Multiple: When the trigger is pulled, continuous scanning is activated until Stand Mode/Object Detection has elapsed or the trigger has been released and pulled again. [Double Read Timeout](#) prevents undesired multiple reads of the same label while in this mode.

Flashing: The reader flashes¹ on and off regardless of the trigger status. Flash rate is controlled by [Flash On Time](#) and [Flash Off Time](#). When Flash is ON the reader reads continuously. When Flash is OFF scanning is deactivated.

Object Detection: No trigger pull is required to read a bar code. Scanning turns on automatically when an item is placed in reader's field of view. While in a watch state, the reader illumination LED goes from dim to maximum bright.

Scanning Active Time

This setting specifies the amount of time that the reader stays in scan ON state once the state is entered. The range for this setting is from 1 to 255 seconds in 1-second increments.

Follow these instructions to set this feature:

1. Determine the desired setting.
2. Pad the result with leading zeroes to yield three digits. For example: 0 = 000, 5 = 005, 20 = 020, etc.
3. Scan the ENTER/EXIT PROGRAMMING MODE bar code to enter Programming Mode.
4. Scan the bar code: SELECT SCANNING ACTIVE TIME SETTING on [page 79](#).
5. Scan the appropriate three digits from the keypad in [Appendix D](#), that represent the duration which was determined in the steps above. You will hear a two-beep indication after the last character.

1. Controlled by [Flash On Time](#).



NOTE: If you make a mistake before the last character, scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.

6. Scan the ENTER/EXIT PROGRAMMING MODE bar code to exit Programming Mode. This completes the procedure. See the table below for examples of how to set this feature.

Table 15 Scanning Active Time Setting Examples

| STEP | ACTION | EXAMPLES | | | |
|------|--|------------------|-----------------------|----------------------|----------------------------|
| 1 | Desired Setting | 1 Second | 90 Sec. (1.5 min.) | 180 Sec. (3 min.) | 255 Seconds (4.25 min.) |
| 2 | Pad leading zero(es) | 001 | 090 | 180 | 255 |
| 3 | Scan ENTER/EXIT PROGRAMMING MODE | | | | |
| 4 | Scan SELECT SCANNING ACTIVE TIME SETTING | | | | |
| 5 | Scan three characters from Appendix D | '0', '0' and '1' | '0', '9' and '0' | '1', '8' and '0' | '2', '5' and '5' |
| 6 | Scan ENTER/EXIT PROGRAMMING MODE | | | | |

Flash On Time

This feature specifies the ON time for the indicator LED while in Flash Mode. The selectable range is 100 to 9,900 milliseconds (0.1 to 9.9 seconds), in 100 millisecond increments.

Follow these instructions to set this feature.

1. Determine the desired setting in milliseconds.
2. Divide the desired setting by 100 (setting is in 100ms increments). Pad the result with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
3. Scan the ENTER/EXIT PROGRAMMING MODE bar code to enter Programming Mode.
4. Scan the bar code: SELECT FLASH ON TIME SETTING on [page 79](#).
5. Scan the appropriate two digits from the keypad in [Appendix D](#), that represent the duration which was determined in the steps above. You will hear a two-beep indication after the last character.



NOTE: If you make a mistake before the last character, scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.

6. Scan the ENTER/EXIT PROGRAMMING MODE bar code to exit Programming Mode.

This completes the procedure. See the following table for examples of how to set this feature.

Table 16 Flash On Time Setting Examples

| STEP | ACTION | EXAMPLES | | | |
|------|--|-------------|---------------------|----------------------|-----------------------|
| 1 | Desired Setting | 500ms | 1,000ms (1 sec.) | 5200ms (5.2 sec.) | 9,900ms (9.9 sec.) |
| 2 | Divide by 100 (and pad with leading zeroes to yield two digits) | 05 | 10 | 52 | 99 |
| 3 | Scan ENTER/EXIT PROGRAMMING MODE | | | | |
| 4 | Scan SELECT FLASH ON TIME SETTING | | | | |
| 5 | Scan two characters from Appendix D | '0' and '5' | '1' and '0' | '5' and '2' | '9' and '9' |
| 6 | Scan ENTER/EXIT PROGRAMMING MODE | | | | |

Flash Off Time

This feature specifies the OFF time for the indicator LED while in Flash Mode. The selectable range is 100 to 9,900 milliseconds (0.1 to 9.9 seconds), in 100 millisecond increments.

Follow these instructions to set this feature.

1. Determine the desired setting in milliseconds.
2. Divide the desired setting by 100 (setting is in 100ms increments). Pad the result with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
3. Scan the ENTER/EXIT PROGRAMMING MODE bar code to enter Programming Mode.
4. Scan the bar code: SELECT FLASH OFF TIME SETTING on [page 80](#).
5. Scan the appropriate two digits from the keypad in [Appendix D](#), that represent the duration which was determined in the steps above. You will hear a two-beep indication after the last character.



NOTE: If you make a mistake before the last character, scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.

6. Scan the ENTER/EXIT PROGRAMMING MODE bar code to exit Programming Mode. This completes the procedure. See the following table for examples of how to set this feature.

Table 17 Flash Off Time Setting Examples

| STEP | ACTION | EXAMPLES | | | |
|------|--|-------------|---------------------|----------------------|-----------------------|
| 1 | Desired Setting | 500ms | 1,000ms (1 sec.) | 5200ms (5.2 sec.) | 9,900ms (9.9 sec.) |
| 2 | Divide by 100 (and pad with leading zeroes to yield two digits) | 05 | 10 | 52 | 99 |
| 3 | Scan ENTER/EXIT PROGRAMMING MODE | | | | |
| 4 | Scan SELECT FLASH OFF TIME SETTING | | | | |
| 5 | Scan two characters from Appendix D | '0' and '5' | '1' and '0' | '5' and '2' | '9' and '9' |
| 6 | Scan ENTER/EXIT PROGRAMMING MODE | | | | |

LED AND BEEPER INDICATORS

Good Read LED Duration

This feature specifies the amount of time that the Good Read LED remains on following a good read. The good read LED on time can be set within a range of 10 milliseconds to 2,550 milliseconds (0.001 to 2.55 seconds) in 100ms increments.

Follow these instructions to set this feature:

1. Determine the desired setting in milliseconds. A setting of 0 means that the good read LED stays on until the next time the trigger is pulled.
2. Divide the desired setting by 10 (setting is in 100ms increments). Pad the result with leading zeroes to yield three digits. For example: 0 = 000, 5 = 000, 20 = 020, etc.
3. Go to [page 89](#) and scan the ENTER/EXIT PROGRAMMING MODE bar code to enter Programming Mode.
4. Scan the bar code: SELECT GOOD READ LED DURATION SETTING.
5. Scan the appropriate two digits from the keypad in [Appendix D](#), that represent the duration which was determined in the steps above. You will hear a two-beep indication after the last character.



NOTE: If you make a mistake before the last character, scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.

6. Scan the ENTER/EXIT PROGRAMMING MODE bar code to exit Programming Mode. This completes the procedure. See the following table for some examples of how to set this feature.

Table 18 Good Read LED Duration Setting Example

| STEP | ACTION | EXAMPLES | | | |
|------|---|---|------------------|------------------|--------------------|
| 1 | Desired Setting | Good Read LED stays on until next trigger pull (00) | 20ms | 150ms | 2550ms (2.55 sec.) |
| 2 | Divide by 10 (and pad with leading zeroes) | 000 | 002 | 015 | 255 |
| 3 | Scan ENTER/EXIT PROGRAMMING MODE | | | | |
| 4 | Scan SELECT GOOD READ LED DURATION SETTING | | | | |
| 5 | Scan three characters from Appendix D | '0', '0' and '0' | '0', '0' and '2' | '0', '1' and '5' | '2', '5' and '5' |
| 6 | Scan ENTER/EXIT PROGRAMMING MODE | | | | |

RF FEATURES

Automatic Configuration Update

When this feature is enabled, the gateway and reader will keep their configurations synchronized. If a reader's configuration is altered by reading programming labels, this change is automatically transferred and updated in a linked host. Likewise, if the gateway's configuration is changed using Aladdin or by host commands, then the reader's configuration will automatically be updated if this feature is enabled.

RF Address Stamping

Source Radio Address Delimiter Character

This option specifies the delimiter character to be placed between the label data and radio address when address stamping is enabled.



NOTE: This feature only applies if "Source Radio Address Transmission" on page 227 is enabled

Follow these instructions to select the delimiter character:

1. Determine the desired character, then find its hexadecimal equivalent on the ASCII Chart on [page 310](#). A setting of 00 specifies no delimiter character.
2. Scan the ENTER/EXIT PROGRAMMING MODE bar code to enter Programming Mode.
3. Scan the bar code: SET SOURCE RADIO ADDRESS DELIMITER CHARACTER.
4. Scan the appropriate two digits from the keypad in [Appendix D](#), that represent the hexadecimal characters which were determined in the steps above. You will hear a two-beep indication after the last character.



NOTE: If you make a mistake before the last character, scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.

5. Scan the ENTER/EXIT PROGRAMMING MODE bar code to exit.

Table 19 Source Radio Address Delimiter Character Setting Examples

| STEP | ACTION | EXAMPLES | | | |
|------|---|------------------------|-------------|-------------|-------------|
| 1 | Desired Setting | No delimiter character | , (comma) | - (dash) | / (slash) |
| 2 | Scan ENTER/EXIT PROGRAMMING MODE | | | | |
| 3 | Scan SET SOURCE RADIO ADDRESS DELIMITER CHARACTER | | | | |
| 4 | Scan Two Characters From Appendix D | '0' and '0' | '2' and 'C' | '2' and 'D' | '2' and 'F' |
| 5 | Scan ENTER/EXIT PROGRAMMING MODE | | | | |

SYBLOGIES

Set Length

Length Control allows you to select either variable length decoding or fixed length decoding for the specified symbology.

Variable Length: For variable length decoding, a minimum and maximum length may be set.

Fixed Length: For fixed length decoding, two different lengths may be set.

Set Length 1

This feature specifies one of the bar code lengths for a given symbology. Length 1 is the minimum label length if in Variable Length Mode, or the first fixed length if in Fixed Length Mode.

Reference the [1D Symbologies, starting on page 97](#) to view the selectable range (number of characters) for the symbology being set.

Follow these instructions to set this feature:

1. Determine the desired character length. Pad the number with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
2. Scan the ENTER/EXIT PROGRAMMING MODE bar code to enter Programming Mode.
3. Scan the “Select Length 1 Setting” for the symbology being set.
4. Scan the appropriate two digits from the keypad in [Appendix D](#), that represent the length setting which was determined in the steps above. You will hear a two-beep indication after the last character.



NOTE: If you make a mistake before the last character, scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.

5. Scan the ENTER/EXIT PROGRAMMING MODE bar code to exit Programming Mode. This completes the procedure. See the following table for examples of how to set this feature.

Table 20 Length 1 Setting Examples

| STEP | ACTION | EXAMPLES | | | |
|------|--|--------------|--------------|--------------|--------------|
| 1 | Desired Setting | 01 Character | 07 Character | 52 Character | 74 Character |
| 2 | Scan ENTER/EXIT PROGRAMMING MODE | | | | |
| 3 | Scan SELECT LENGTH 1 SETTING for the desired symbology | | | | |
| 4 | Scan two characters from Appendix D | '0' and '1' | '0' and '7' | '5' and '2' | '7' and '4' |
| 5 | Scan ENTER/EXIT PROGRAMMING MODE | | | | |

Set Length 2

This feature specifies one of the bar code lengths for a given symbology. Length 2 is the maximum label length if in Variable Length Mode, or the second fixed length if in Fixed Length Mode.

Reference the [1D Symbologies, starting on page 97](#) to view the selectable range (number of characters) for the symbology being set. A setting of 00 specifies to ignore this length (only one fixed length).

Follow these instructions to set this feature:

1. Determine the desired character length. Pad the number with leading zeroes to yield two digits. For example: 0 = 00, 5 = 05, 20 = 20, etc.
2. Scan the ENTER/EXIT PROGRAMMING MODE bar code to enter Programming Mode.
3. Scan the “Select Length 2 Setting” for the symbology being set.
4. Scan the appropriate two digits from the keypad in [Appendix D](#), that represent the length setting which was determined in the steps above. You will hear a two-beep indication after the last character.



NOTE: If you make a mistake before the last character, scan the CANCEL bar code to abort and not save the entry string. You can then start again at the beginning.

5. Scan the ENTER/EXIT PROGRAMMING MODE bar code to exit Programming Mode.

This completes the procedure. See the following table for examples of how to set this feature.

Table 21 Length 2 Setting Examples

| STEP | ACTION | EXAMPLES | | | |
|------|--|---------------------------|--------------|--------------|--------------|
| 1 | Desired Setting | 00 (ignore second length) | 07 Character | 52 Character | 74 Character |
| 2 | Scan ENTER/EXIT PROGRAMMING MODE | | | | |
| 3 | Scan SELECT LENGTH 2 SETTING | | | | |
| 4 | Scan two characters from Appendix D | '0' and '0' | '0' and '7' | '5' and '2' | '7' and '4' |
| 5 | Scan ENTER/EXIT PROGRAMMING MODE | | | | |

CHAPTER 5

MESSAGE FORMATTING

MESSAGE FORMATTING

A message from the Host to the gateway must follow these rules:

- If Address stamping options or address delimiter are enabled on the gateway, the Host replay must have address field and delimiter too. Otherwise the message will be ignored. Address delimiter is present only when address stamping is enabled.
- Address stamping is necessary to correctly route the message to the CODiScan™, especially when more than one handheld is linked to the same gateway. Address stamping could be disabled if the system is in point to point configuration. If address stamping is not enabled, the messages are addressed to the first handheld linked to the gateway.
- The maximum character length for messages is 48.
- Messages end with “CR” 0x0D ASCII character. The CR character cannot be contained in the middle.
- Messages cannot start with '\$' or # because these are reserved for Service mode command
- The Gateway can receive host message only if Host Commands Obey/Ignore is set to Ignore.
- Message could be sent to the HH in response to a Label when “Transmit mode” require Ack from Host (see transmit mode parameter) or at any time. When messages are sent not in response to a label must start with DC2 0x12 ASCII character and could be sent in any transmit mode setting.
- Message could be sent to all HH linked to gateway by using a Multicast message: “00 00 00 00 2A AA”
- In order to receive a message, handhelds must not be in sleep state.
- If you want to control the reader's beeper from the host, you will also probably want to disable the good transmission beep that is emitted when the code is received from the BT connected host. (See "[Wireless Features](#)" on page 216).
- The message field can store plain text and escape sequences. Escape sequences are interpreted as commands.

The format of the ACK from Host message (used for transmission mode 02) is:

[Scanner_Addr] [Scanner_Addr_delimiter] MESSAGE <CR>

The format of a generic message From Host to HH is:

[Scanner_Addr] [Scanner_Addr_delimiter] DC2 MESSAGE <CR>

where DC2 is ASCII 0x12 (^R) character.

[Items in square brackets are optional.]

LED AND BEEPER CONTROL

The LED control escape sequences are intended to activate the LEDs for short periods of time and can be used in combination with the Beeper. The LED and Beeper will be controlled by the system after the entire command sequence is interpreted.

| ESC SEQUENCE | ACTION |
|------------------------|------------------------------------|
| Esc [0 q | Emit short High tone + short delay |
| Esc [1 q | Emit short Low tone + short delay |
| Esc [2 q | Emit long Low tone + short delay |
| Esc [3 q | Emit good read tone |
| Esc [4 q | Emit bad tx tone |
| Esc [5 q | Wait 100 msec |
| Esc [6 q | Turn on the green LED |
| Esc [7 q | Turn off the green LED |
| Esc [8 q ^a | Turn on the red LED |
| Esc [9 q ^b | Turn off the red LED |
| Esc [0 r | Beep for Find me function |
| Esc [1 r | Power-off |
| Esc [2 r | Turn on Green Spot LED |
| Esc [3 r | Turn off Green Spot LED |
| Esc [4 r ^a | Turn on the red LED |
| Esc [5 r ^b | Turn off the red LED |

a. Esc [8 q performs the same function as Esc [4 r

b. Esc [9 q performs the same function as Esc [5 r

Example:

| | |
|-------------------------------|--|
| Esc [6 q Esc [3 q Esc [7 q | Turns on the green LED, emits a good read tone, and turns off the green LED. |
| Esc [6 q Esc [5 q Esc [7 q | Turns on the green LED for 100 msec and then turns off the green LED. |

Escape sequences different from those listed will be ignored.

APPENDIX A

TECHNICAL SPECIFICATIONS

The table below contains Physical and Performance Characteristics, User Environment and Regulatory information.

CODISCAN™ HS7600 TECHNICAL SPECIFICATIONS

Table 22 HS7600 Technical Specifications

| PHYSICAL CHARACTERISTICS | |
|-------------------------------|--|
| Color | Black |
| Dimensions | 50 x 44 x 19 mm / 1.9 x 1.7 x 0.7 in |
| Weight | 44 g / 1.5 oz |
| ELECTRICAL CHARACTERISTICS | |
| Power Supply | Battery Powered |
| Power Supply Charging Station | See charger manual |
| Reading Indicators | Top illumination, Good Read Spot, Beep |
| Operating Time / Scans | 16 hours (1 scan every 5 secs) / 12,000 scans depending on settings and environmental conditions |
| Battery | 640 mAh, Lithium polymer (rechargeable) |
| Recharge Time (Typical) | 2.15 hours with Datalogic Charging Station |
| OPTICAL CHARACTERISTICS | |
| Optical Resolution | 1280 x 960 pixels |
| Illumination System | White LED |
| Aiming System | Laser Red Emission (wavelength - 630-680nm) |
| PCS (Datalogic Test Chart) | minimum 25% |

| | |
|------------------------------|---|
| Field of view | SR Horizontal: 42°, Vertical: 32° |
| | MR Horizontal: 30°, Vertical: 23° |
| | RT Horizontal: 42°, Vertical: 32° |
| Skew Tolerance ^a | +/- 60° |
| Pitch Tolerance ^a | +/- 60° |
| Roll Tolerance ^a | +/- 180° |
| Ambient Light Up to | 0 - 100,000 lux |
| Aimer | 650 nm, 1 mW |

a. Based on ISO 15423 specifications

| ENVIRONMENTAL CHARACTERISTICS | |
|-------------------------------|---|
| Operating Temperature | -20 to 50 °C / -4 to 122 °F |
| Charging Temperature | 0 to 40 °C / 32 to 104 °F |
| Storage Temperature | -20 to 60 °C / -4 to 140 °F |
| Humidity | 0 - 95% non condensing |
| Drop Resistance | Resists multiple drops from 1.8 m / 5.9 ft onto concrete - IEC 60068-2-31:2008 – 1 |
| ESD Protection | 16 KV |
| Tumbles | 2,000 at 0.5 m / 1.6 ft - IEC 60068-2-31:2008 – 2 |
| Impact Resistance | >IK06(1J) - IEC60068-2-75 |
| Particulate and Water Sealing | IP54 - EN 60529 |
| FEEDBACK | |
| Green Spot | Datalogic 'Green Spot' on the Code for Good Read |
| LEDs | 3 LEDs: 2 Lateral blades, rear LED spot with separate on/off – good read, battery status, Bluetooth pairing |
| Audio | 85 dbA – adjustable |
| Haptic | Vibration feedback option available |

| RADIO CHARACTERISTICS | |
|-------------------------------|--|
| Bluetooth Wireless Technology | BT BLE/CLASSIC 5.2 class 1,2,3 Supports Bluetooth Low Energy 4.0, 4.1, 4.2, 5.0, 5.1, 5.2 |

| | |
|-----------------------------------|--|
| Transmission Range | 100 m / 328 ft to host (depending on Host, OK Gateway) |
| Max number of devices per gateway | 7 |
| Wi-Fi (via Gateway) | <ul style="list-style-type: none"> • IEEE 802.11b/g/n, 1×1, 20 MHz channel bandwidth, 2.4 GHz • Wi-Fi security: WPA2/WPA3 Personal; WPA2 Enterprise PEAP, TLS, TTLS • MQTT client protocol v. 3.1, v. 3.1.1 • WebSocket client |

COMMON READING CHARACTERISTICS

Table 23 Reading Characteristics CODiScan™ HS7600

| DOF - DEPTH OF FIELD (TYPICAL) ^A | |
|---|---|
| Symbology | DOF range |
| Code 39 | SR 5 mil: 13 to 22 cm / 5.1 to 8.6 in 20 mil: 40 to 110 cm / 15.7 to 43.3 in |
| | MR 20 mil: up to 160 cm / up to 62.9 100 mil: up to 500 cm / up to 196.8 |
| | RT 3 mil: 6.5 to 20 cm / 2.5 to 7.8 in 5 mil: 3.5 cm to 29 cm / 1.3 to 11.4 in 20 mil: up to 60 cm / up to 23.6 in ^b |
| Code 128 | SR 5 mil: 10 to 30 cm / 3.9 to 11.8 in |
| | MR 5 mil: 21 to 52 cm / 8.2 to 20.4 in |
| PDF417 | SR 5 mils: 12 to 19 cm / 4.7 to 7.5 in |
| | MR 5 mil: 22 to 30 cm / 8.6 to 11.8 in |
| Datamatrix | SR 10 mils: 10 to 28 cm / 3.9 to 11 in |
| | MR 10 mil: 20 to 45 cm / 7.8 to 17.7 in |
| | RT 10 mil: 7.5 to 26 cm / 2.9 to 9 in |

| | |
|-----------------------|---|
| EAN/UPCA | <p>SR 13 mils: 4.5 to 74 cm / 1.7 to 29.1in</p> <p>MR 13 mil: 8 to 100 cm / 3.1 to 39.3 in</p> |
| EAN 13 | <p>RT 13 mil: 4.5 to 42 cm / 1.7 to 16.5 in</p> |
| QR Code | <p>SR 15 mils: 4 to 37 cm / 1.5 to 14.5 in</p> |
| Max Resolution | <p>SR & MR 1D Linear: 3 mils; PDF417: 6.6 mils; Data Matrix: 7.5 mils;</p> |
| Minimum Element Width | <p>1D Linear: RT: 2.5 mils SR: 3 mils</p> <p>PDF: RT: 3 mils SR: 6.6 mils</p> <p>Datamatrix: RT: 6 mils SR: 7.5 mils</p> |

- a. All labels grade A, typical environmental light, 20°C, label inclination 10°
- b. Limited by FOV

DECODING CAPABILITIES

| DECODE CAPABILITY |
|---|
| <p>1D Bar Codes UPC/EAN/JAN (A, E, 13, 8); UPC/EAN/JAN (including P2 /P5); UPC/EAN/JAN (including; ISBN / Bookland & ISSN); UPC/EAN Coupons; Code 39 (including full ASCII); Code 39 Trioptic; Code39 CIP HR (French Pharmaceutical); LOGMARS (Code 39 w/ standard check digit enabled); Danish PPT; Code 32 (Italian Pharmacode 39); Code 128; Code 128 ISBT; Interleaved 2 of 5; Standard 2 of 5; Interleaved 2 of 5 CIP (HR); Interleaved 2 of 5 Febraban (for desk models only); Industrial 2 of 5; Discrete 2 of 5; Datalogic 2 of 5 (China Post Code/Chinese 2 of 5); IATA 2 of 5 Air cargo code; Follet 2 of 5; Codabar; Codabar (NW7); ABC Codabar; Code 11; Code 93; MSI; PZN; Plessey; Anker Plessey; GS1 DataBar Limited; GS1 DataBar Expanded; GS1 DataBar Truncated; DATABAR Expanded Coupon.</p> |

2D Stacked Codes

The CODiScan™ HS7600 family is capable of decoding the following symbologies using multiple frames (i.e. Multi-Frame Decoding):

Datamatrix; Inverse Datamatrix; Datamatrix is configurable for the following parameters:; Normal or Inverted; Square or Rectangular Style; Data length (1 - 3600 characters); Maxicode; QR Codes (QR, Micro QR and Multiple QR Codes); Aztec; Postal Codes - (Australian Post; Japanese Post; KIX Post; Planet Code; Postnet; Royal Mail Code (RM45CC); Intelligent Mail Barcode (IMB); Sweden Post; Portugal Post); LaPoste A/R 39; PDF-417; MacroPDF; Micro PDF417; GS1 Composites (1 - 12); French CIP13^a; GS1 DataBar Stacked; GS1 DataBar Stacked Omnidirectional; GS1 DataBar Expanded Stacked; GS1 Databar Composites; GS1 DotCode; Chinese Sensible Code; Inverted 2D codes^b.

- a. It is acceptable to handle this with ULE.
- b. The SW can apply the Normal/Reverse Decoding Control to the following symbologies: Datamatrix, QR, Micro QR, Aztec and Chinese Sensible Code.

RECOMMENDED SERVICES

DATALOGIC'S EASEOFCARE

CODiScan comes with a wide and complete range of post-sales services to guarantee the most appropriate professional assistance based on the needed level of service.

LED AND BEEPER INDICATIONS

The reader's beeper sounds and its illumination flashes or changes color to indicate various functions or errors on the reader. A "Green Spot" also lights to indicate a good read. The tables below list these indications.

Table 24 LED and Beeper Indications

| INDICATION | LED | BEEPER |
|------------------------------------|--|--|
| Power-up | Upper LED flashes/blinks on power-up. With a USB interface, the LED blinks until enumeration with the host is completed. The rear blue LED will flash for 3 minutes in discoverable HOGP mode if not previously linked to a host. | Reader beeps four times at highest frequency and volume upon power-up. |
| Good Read | Upper green LED comes on for programmed time (default). LED behavior for this indication is configurable using Aladdin utility. | One beep at current frequency, volume, mono/bi-tonal setting upon a successful label scan. |
| ROM Failure | 200 msec on ↔ 200 msec off | Reader sounds one error beep at highest volume for 200 msec. |
| Limited Scanning Label Read | N/A | Reader 'chirps' six times at the highest frequency and current volume. |
| Imager Disabled | The LED blinks continuously 100 msec on ↔ 900 msec off | N/A |

USER INDICATIONS FOR HS7600

Table 25 User Indications for HS7600

| STATUS | GOOD READ LED | BATTERY LED | BUZZER |
|--|---|-------------|------------------------|
| Power-up | OFF | OFF | Rising Beeps' Sequence |
| USB Enumeration Phase | 250 msec ^a ON ↔ 250 msec OFF | OFF | OFF |
| While Reading | OFF | OFF | OFF |
| Decode Done | Solid ON Programmable Duration (1 s default) | OFF | Single Beep |
| Reader Disabled (POS) Communication with host not established | 100 msec ON ↔ 900 msec OFF | OFF | OFF |
| Firmware Upgrade | 250 msec ON ↔ 250 msec OFF | OFF | OFF |
| Host Download | 250 msec ON ↔ 250 msec OFF | OFF | OFF |
| Paging Answer | 5 cycles: 100 msec ON ↔ 900 msec OFF | OFF | 5 Beeps (when LED ON) |
| Enter Service Mode | No Effect | OFF | Beeps' Sequence |
| Label Programming | No Effect | OFF | Beep |

| STATUS | GOOD READ LED | BATTERY LED | BUZZER |
|--|----------------------------|---|---|
| ACK Received on Transmission | OFF | OFF | Single Programmable Beep (OFF by default) |
| ACK NOT Received on Transmission | OFF | OFF | Wrong Beep |
| Configuration Alignment | 250 msec ON ↔ 250 msec OFF | OFF | OFF |
| Charge in Progress through USB-C ^b | OFF | Blinking: 1 s ON . 1 s OFF Green (charge = 50% - 99%) Orange (charge = 1% - 49%) Reader is unusable until 1% is reached | OFF |
| Charge Complete through USB-C | OFF | Solid Green It goes OFF when unplugged | OFF |
| Charge Fault | OFF | OFF | OFF |
| Battery Status indications when not charging, by pressing for 5-9 seconds the multifunctional key button | OFF | Solid with programmable duration (3 s default) and then OFF Green (charge = 50% - 100%) Orange (charge = 2% - 50%) Red forced loop (charge less than 2%) | OFF |

- a. "msec" stands for milliseconds, equivalent to 1/1000th of a second
- b. In case of heavily depleted battery (e.g. if the reader has not been used for a long time), the reader being charged will not be operational for a certain amount of time, which can vary from just a few minutes to 30-40 minutes depending on battery discharge level.

PROGRAMMING MODE

The following indications ONLY occur when the reader is in Programming Mode.

| INDICATION | DESCRIPTION | LED | BEEPER |
|------------------------------------|---|-------------------------|---|
| Enter Programming Mode | A valid programming label has been scanned. | LED blinks continuously | Reader sounds four low frequency beeps. |
| Rejection of Label | Label has been rejected. | N/A | Reader sounds three times at lowest frequency & current volume. |
| Acceptance of Partial Label | In cases where multiple labels must be scanned to program one feature, this indication acknowledges each portion as it is successfully scanned. | N/A | Reader sounds one short beep at highest frequency & current volume. |
| Acceptance of Programming | Configuration option(s) have been successfully programmed via labels and the reader has exited Programming Mode. | N/A | Reader sounds one high frequency beep and four low frequency beeps followed by reset beeps. |
| Cancel Item Entry | Cancel label has been scanned. | N/A | Reader sounds twice at low frequency & current volume. |

TROUBLESHOOTING

| PROBLEM | POSSIBLE CAUSE | POSSIBLE SOLUTION |
|---|--|--|
| Nothing happens when the scan button is pulled. | No power to the reader | Check system power. Ensure power supply is connected. |
| | Interface or power cables are loose. | Ensure all cable connections are secure. |
| LED comes on but bar code does not decode. | Reader not programmed for correct bar code type. | Ensure reader is programmed to read the type of bar code scanned. |
| | Bar code label is unreadable. | Check the label to ensure it is not defaced. Try scanning another bar code type. |
| | Distance between reader and bar code is incorrect. | Move reader closer to or further from the bar code. |
| Bar code is decoded but not transmitted to the host. | Reader not programmed for the correct host type. | Scan the appropriate host type bar code. |

CLEANING PROCEDURE

Exterior surfaces and scan windows exposed to spills, smudges or debris accumulation require periodic cleaning to ensure best performance during scanning operations. Follow the procedures described in this instruction sheet to keep your CODiScan device in good operating condition



WARNING: Be sure to turn off power and unplug the device from electrical outlet before cleaning.



CAUTION: DO NOT use abrasive pads or cleaning agents.

Common Cleaning Solutions

The cleaners and disinfectants listed below are recommended for use on Datalogic's CODiScan enclosures:

| CLEANERS | DISINFECTANTS |
|--|-------------------------------|
| Formula 409® Glass and Surface Cleaner | Clorox® Bleach (diluted 10:1) |
| 70% Isopropyl Alcohol | Hydrogen Peroxide 3% |
| Windex® Multi-Surface | |
| 100% Gentle dish soap and water | |



NOTE: Disinfectants may be harsh on metal. They are recommended for use only on enclosures



CAUTION: DO NOT spray or pour cleaner directly onto the unit.

DO NOT use solutions in their concentrated form.


DO NOT use aerosols, solvents or abrasives.

DO NOT use paper towels or rough cloths to clean windows.

DO NOT use products containing chlorine.

Cleaning enclosure and window surfaces

1. Moisten a soft cloth with a recommended cleaning solution. Be sure to apply the solution to your cloth first. Wring excessive liquid from the cloth.
2. Use the cloth to wipe down the surface of the unit. Use cotton swabs, lightly moistened, to reach in corners and crevices.
3. Use another clean dry cloth to remove any residue of the cleaning agent and ensure the unit is dry.

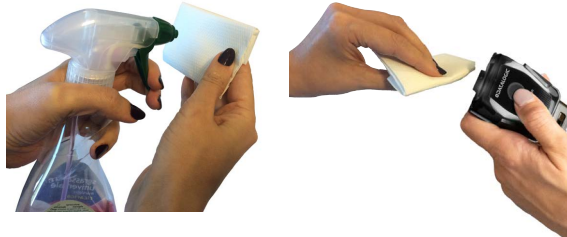

Cleaning electrical contact surfaces

Regular cleaning of electrical contacts is needed to guarantee a correct recharging of the battery. Both scanner and cradle contacts should be cleaned.

In case spills, smudges or debris accumulate on the cradle and/or the scanner, proper operation could be affected and a periodical cleaning is recommended as follows.

Avoid the use of brushes or any other hard tool to remove grime from electrical contacts, since these may damage or scratch the contact's plating.



CAUTION: DO NOT use products with clorox bleach or chlorine compounds to clean contacts.

Scanner Contacts

- Use a soft dry cloth to clean the contact area and the plastic surface around the contacts.
- Be sure to remove dust, dirt and any cloth residue.
- If the level of grime is significant, it is suggested the use of a soft white or pink pencil eraser to gently rub the contacts.
- Be sure to remove the rubber residuals by gently blowing them off with clean compressed air.



CAUTION: Be careful when using compressed air: protect yourself with goggles and point the nozzle far from eyes and not too close to the scanner surface. Read previously the warning label on the spray can.

Scanner deep cleaning

In case some hard grime, grease or liquid residual are present on electrical contacts, a deeper cleaning may be needed. If the above procedure is not enough to guarantee proper working of the system, the use of isopropyl alcohol is suggested (minimum 70%).

In this case it is suggested to use a cotton tipped applicator with isopropyl alcohol, gently wiping along the pins of the electrical connection. Be sure that cotton residue is not left on any pin of the electrical contacts.



NOTE: Remove power before initiating the deep cleaning routine.

After completion of the deep cleaning routine allow the system to dry completely before reconnecting to power. Depending on the environmental conditions wait at least 30 minutes or, if possible, leave the system unpowered overnight.

APPENDIX B

STANDARD DEFAULTS

The most common configuration settings are listed in the “Default” column of the table below. Page references are also provided for feature descriptions and programming bar codes for each parameter. A column has also been provided for recording of your preferred default settings for these same configurable features.

Table 26 Standard Defaults

| PARAMETERS | DEFAULT | YOUR SETTING | PAGE NUMBER |
|----------------------------------|------------------------|--------------|-------------|
| GLOBAL INTERFACE FEATURES | | | |
| Host Commands — Obey/Ignore | Obey | | 27 |
| USB-COM | | | |
| Intercharacter Delay | No Delay | | 29 |
| Beep On ASCII BEL | Disable | | 30 |
| Beep On Not on File | Enable | | 30 |
| ACK NAK Options | Disable | | 31 |
| ACK Character | 'ACK' | | 32 |
| NAK Character | 'NAK' | | 32 |
| ACK NAK Timeout Value | 200 msec | | 33 |
| ACK NAK Retry Count | 3 Retries | | 32 |
| ACK NAK Error Handling | Ignore Errors Detected | | 34 |
| Indicate Transmission Failure | Enable | | 34 |
| Disable Character | 'D' | | 35 |
| Enable Character | 'E' | | 35 |
| KEYBOARD INTERFACE | | | |
| Setting Country Mode | U.S. Keyboard | | 39 |
| Encoding Type | Don't Use Encoding | | 53 |
| ALT Output Type | ALT Unicode | | 60 |

STANDARD DEFAULTS

| PARAMETERS | DEFAULT | YOUR SETTING | PAGE NUMBER |
|--|---|--------------|-------------|
| Keyboard Numeric Keypad | Standard Keys | | 61 |
| Keyboard Send Control Characters | Send Ctrl+Key | | 61 |
| Intercharacter Delay | 00 = No Intercharacter Delay | | 62 |
| Intercode Delay | 00 = No Intercode Delay | | 62 |
| USB Keyboard Speed | 1ms | | 63 |
| USB OEM | | | |
| USB-OEM Device Usage | Handheld | | 65 |
| DATA FORMAT | | | |
| Global Prefix/Suffix | No Global Prefix Global Suffix = 0x0D (CR) | | 67 |
| Case Conversion | Disable (no case conversion) | | 68 |
| Character Conversion | 0xFFFFFFFFFFFFFFFF (no character conversion) | | 68 |
| Global AIM ID | Disable | | 69 |
| GS1-128 AIM ID | Disable | | 69 |
| Label ID: Pre-loaded Sets | USA Set | | 70 |
| Label ID Control | Disable | | 71 |
| Label ID Symbology Selection | | | 72 |
| READING PARAMETERS | | | |
| Scan Mode | Trigger Simple | | 78 |
| Scanning Active Time | 5 seconds | | 79 |
| Flash On Time | 10 = Flash is ON for 1 second | | 79 |
| Flash Off Time | 06 = Flash is OFF for 600ms | | 80 |
| Double Read Timeout | 0.6 second | | 80 |
| Object Detection Sensitivity | Medium | | 82 |
| Object Detection Illumination Off Time | 1 second | | 83 |
| Power On Alert | Power-up Beep | | 84 |
| Good Read Beep Type | Mono | | 84 |
| Good Read Beep Frequency | High | | 85 |
| Good Read Beep Length | 80 msec | | 86 |

| PARAMETERS | DEFAULT | YOUR SETTING | PAGE NUMBER |
|--|-------------------------|--------------|-------------|
| Good Read Beeper Volume | High | | 87 |
| Silent Mode | Disable | | 88 |
| Good Read LED Duration | Enable | | 89 |
| Good Read LED Duration | 300 msec | | 89 |
| Good Read: When to Indicate | After Decode | | 90 |
| Green Spot Duration | Short (300 msec) | | 91 |
| Good Read Vibration Duration | Vibration ON (200 msec) | | 91 |
| Aiming Pointer | Enable | | 92 |
| Pick Mode | Disable | | 92 |
| Mobile Phone Mode | Enable | | 93 |
| Mobile Phone Saturation Rate | 00 | | 93 |
| Decode Negative Image | Disable | | 94 |
| Multiple Labels per Frame | Disable | | 95 |
| Multiple Labels Ordering by Code Symbology | Random Order | | 95 |
| Multiple Labels Ordering by Code Length | Disable | | 96 |
| CODE SELECTION - 1D SYMBOLOGIES | | | |
| Code EAN/UPC | | | |
| Coupon Control | Enable only UPC/EAN | | 98 |
| UPC-A | | | |
| UPC-A Enable/Disable | Enable | | 99 |
| UPC-A Check Character Transmission | Send | | 99 |
| Expand UPC-A to EAN-13 | Don't expand | | 100 |
| UPC-A Number System Character Transmission | Transmit | | 100 |
| UPC-E | | | |
| UPC-E Enable/Disable | Enable | | 101 |
| UPC-E Check Character Transmission | Send | | 101 |
| Expand UPC-E to EAN-13 | Don't expand | | 102 |
| Expand UPC-E to UPC-A | Don't expand | | 102 |

| PARAMETERS | DEFAULT | YOUR SETTING | PAGE NUMBER |
|--|-------------------|--------------|-------------|
| UPC-E Number System Character Transmission | Transmit | | 102 |
| GTIN | | | |
| GTIN Formatting | Disable | | 103 |
| EAN 13 (Jan 13) | | | |
| EAN-13 Enable/Disable | Enable | | 104 |
| EAN-13 Check Character Transmission | Send | | 104 |
| EAN-13 Flag 1 Character | Transmit | | 105 |
| EAN-13 to ISBN Conversion | Disable | | 105 |
| ISSN | | | |
| EAN-13 to ISSN Conversion | Disable | | 106 |
| EAN 8 | | | |
| EAN-8 Enable/Disable | Enable | | 107 |
| EAN-8 Check Character Transmission | Send | | 107 |
| Expand EAN-8 to EAN-13 | Don't Expand | | 108 |
| UPC/EAN Global Settings | | | |
| UPC/EAN Price Weight Check | Disable | | 109 |
| UPC/EAN Quiet Zones | Two Modules | | 110 |
| ADD-ONS | | | |
| Optional Add-ons | Disable P2 and P5 | | 111 |
| Optional Add-On Timer | 70 msec | | 112 |
| GS1 DATABAR™ OMNIDIRECTIONAL | | | |
| GS1 DataBar Omnidirectional Enable/Disable | Disable | | 113 |
| GS1 DataBar Omnidirectional to GS1-128 Emulation | Disable | | 113 |
| GS1 DataBar Expanded Enable/Disable | Disable | | 114 |
| GS1 DataBar Expanded to GS1-128 Emulation | Disable | | 114 |
| GS1 DataBar Expanded Length Control | Variable | | 115 |

| PARAMETERS | DEFAULT | YOUR SETTING | PAGE NUMBER |
|--|--------------------------------|--------------|-------------|
| GS1 DataBar Expanded Set Length 1 | 1 | | 115 |
| GS1 DataBar Expanded Set Length 2 | 74 | | 116 |
| GS1 DATABAR™ LIMITED | | | |
| GS1 DataBar Limited Enable/Disable | Disable | | 117 |
| GS1 DataBar Limited to GS1-128 Emulation | Disable | | 117 |
| CODE 39 | | | |
| Code 39 Enable/Disable | Enable | | 118 |
| Code 39 Check Character Calculation | Don't calculate | | 118 |
| Code 39 Check Character Transmission | Send | | 119 |
| Code 39 Start/Stop Character Transmission | Don't transmit | | 119 |
| Code 39 Full ASCII | Disable | | 120 |
| Code 39 Quiet Zones | Small Quiet Zones on two sides | | 120 |
| Code 39 Length Control | Variable | | 121 |
| Code 39 Set Length 1 | 02 | | 121 |
| Code 39 Set Length 2 | 50 | | 122 |
| TRIOPTIC CODE | | | |
| Trioptic Code Enable/Disable | Disable | | 123 |
| CODE 39 DANISH PPT | | | |
| Code 39 Danish PPT Enable/Disable | Disable | | 123 |
| CODE 39 PZN | | | |
| Code 39 PZN Enable/Disable | Disable | | 124 |
| CODE 39 LA POSTE | | | |
| Code 39 La Poste Enable/Disable | Disable | | 124 |
| CODE 32 (Italian Pharmaceutical Code) | | | |
| Code 32 Enable/Disable | Disable | | 125 |
| Code 32 Check Character Transmission | Don't Send | | 125 |
| Code 32 Start/Stop Character Transmission | Don't Transmit | | 126 |
| Code 39 CIP HR (French Pharmaceutical Code) | | | |

| PARAMETERS | DEFAULT | YOUR SETTING | PAGE NUMBER |
|---|----------------------------------|--------------|-------------|
| Code 39 CIP HR Enable/Disable | Disable | | 126 |
| SPECIAL CODES | | | |
| Code 128 | | | |
| Code 128 Enable/Disable | Enable | | 127 |
| Expand Code 128 to Code 39 | Don't Expand | | 127 |
| Code 128 Check Character Transmission | Don't Send | | 128 |
| Code 128 Function Character Transmission | Don't Send | | 128 |
| Code 128 Quiet Zones | Auto | | 129 |
| Code 128 Length Control | Variable | | 129 |
| Code 128 Set Length 1 | 1 | | 130 |
| Code 128 Set Length 2 | 80 | | 130 |
| GS1-128 | | | |
| GS1-128 Enable | Transmit in Code 128 Data Format | | 131 |
| INTERLEAVED 2 of 5 | | | |
| I 2 of 5 Enable/Disable | Disable | | 132 |
| I 2 of 5 Check Character Calculation | Disable | | 133 |
| I 2 of 5 Check Character Transmission | Send | | 134 |
| I 2 of 5 Length Control | Variable | | 135 |
| I 2 of 5 Set Length 1 | 6 | | 135 |
| I 2 of 5 Set Length 2 | 50 | | 136 |
| INTERLEAVED 2 of 5, FEBRABAN FORMAT (Desk Models Only) | | | |
| Interleaved 2 of 5, Febraban format Enable / Disable | Disable | | 137 |
| INTERLEAVED 2 of 5 CIP HR | | | |
| Interleaved 2 of 5 CIP HR Enable/Disable | Disable | | 137 |
| MATRIX 2 of 5 | | | |
| Matrix 2 of 5 Enable/Disable | Disable | | 138 |
| Matrix 2 of 5 Check Character Calculation | Disable | | 138 |

| PARAMETERS | DEFAULT | YOUR SETTING | PAGE NUMBER |
|--|--------------------|--------------|-------------|
| Matrix 2 of 5 Check Character Transmission | Send | | 139 |
| Matrix 2 of 5 Length Control | Variable Length | | 139 |
| Matrix 2 of 5 Set Length 1 | 8 characters | | 140 |
| Matrix 2 of 5 Set Length 2 | 50 characters | | 140 |
| STANDARD 2 of 5 | | | |
| Standard 2 of 5 Enable/Disable | Disable | | 141 |
| Standard 2 of 5 Check Character Calculation | Disable | | 141 |
| Standard 2 of 5 Check Character Transmission | Send | | 142 |
| Standard 2 of 5 Length Control | Variable Length | | 142 |
| Standard 2 of 5 Set Length 1 | 08 (8 characters) | | 143 |
| Standard 2 of 5 Set Length 2 | 50 (50 characters) | | 143 |
| COMPRESSED 2 of 5 | | | |
| Compressed 2 of 5 Enable/Disable | Disable | | 144 |
| Compressed 2 of 5 Check Character Calculation | Disable | | 144 |
| Compressed 2 of 5 Check Character Transmission | Send | | 145 |
| Compressed 2 of 5 Length Control | Variable Length | | 145 |
| Compressed 2 of 5 Set Length 1 | 1 character | | 146 |
| Compressed 2 of 5 Set Length 2 | 50 characters | | 146 |
| DATALOGIC 2 OF 5 | | | |
| Datalogic 2 of 5 Enable/Disable | Disable | | 147 |
| Datalogic 2 of 5 Check Character Calculation | Disable | | 147 |
| Datalogic 2 of 5 Check Character Transmission | Send | | 148 |
| Datalogic 2 of 5 Length Control | Variable Length | | 148 |
| Datalogic 2 of 5 Set Length 1 | 6 characters | | 149 |
| Datalogic 2 of 5 Set Length 2 | 50 characters | | 149 |
| INDUSTRIAL 2 of 5 | | | |
| Industrial 2 of 5 Enable/Disable | Disable | | 150 |

| PARAMETERS | DEFAULT | YOUR SETTING | PAGE NUMBER |
|--|--------------------------|--------------|-------------|
| Industrial 2 of 5 Check Character Calculation | Disable | | 150 |
| Industrial 2 of 5 Check Character Transmission | Send | | 151 |
| Industrial 2 of 5 Length Control | Variable | | 151 |
| Industrial 2 of 5 Set Length 1 | 6 characters | | 152 |
| Industrial 2 of 5 Set Length 2 | 50 characters | | 152 |
| CODE IATA | | | |
| IATA Enable/Disable | Disable | | 153 |
| IATA Check Character Transmission | Send | | 153 |
| FOLLET 2 OF 5 | | | |
| Follett 2 of 5 Enable/Disable | Disable | | 154 |
| CODABAR | | | |
| Codabar Enable/Disable | Disable | | 155 |
| Codabar Check Character Calculation | Disable | | 155 |
| Codabar Check Character Transmission | Send | | 156 |
| Codabar Start/Stop Character Transmission | Transmit | | 156 |
| Codabar Start/Stop Character Set | abcd/abcd | | 157 |
| Codabar Start/Stop Character Match | Don't Require Match | | 157 |
| Codabar Quiet Zones | Quiet Zones on two sides | | 158 |
| Codabar Length Control | Variable | | 159 |
| Codabar Set Length 1 | 3 characters | | 159 |
| Codabar Set Length 2 | 50 characters | | 160 |
| ABC CODABAR | | | |
| ABC Codabar Enable/Disable | Disable | | 161 |
| ABC Codabar Concatenation Mode | Static | | 161 |
| ABC Codabar Dynamic Concatenation Timeout | 200 msec | | 162 |
| ABC Codabar Force Concatenation | Disable | | 162 |
| ISBT-128 | | | |

| PARAMETERS | DEFAULT | YOUR SETTING | PAGE NUMBER |
|---|-------------------------|--------------|-------------|
| ISBT 128 Concatenation | Disable | | 163 |
| ISBT 128 Concatenation Mode | Static | | 163 |
| ISBT 128 Dynamic Concatenation Timeout | 200 msec | | 164 |
| ISBT 128 Force Concatenation | Disable | | 165 |
| ISBT 128 Advanced Concatenation Options | Disable | | 165 |
| CODE 11 | | | |
| Code 11 Enable/Disable | Disable | | 166 |
| Code 11 Check Character Calculation | Check C and K | | 166 |
| Code 11 Check Character Transmission | Send | | 167 |
| Code 11 Length Control | Variable | | 167 |
| Code 11 Set Length 1 | 4 characters | | 168 |
| Code 11 Set Length 2 | 50 characters | | 168 |
| CODE 93 | | | |
| Code 93 Enable/Disable | Disable | | 169 |
| Code 93 Check Character Calculation | Calculate Check C and K | | 169 |
| Code 93 Check Character Transmission | Don't Send | | 170 |
| Code 93 Length Control | Variable | | 170 |
| Code 93 Set Length 1 | 1 character | | 171 |
| Code 93 Set Length 2 | 50 characters | | 171 |
| Code 93 Quiet Zones | Auto | | 172 |
| MSI | | | |
| MSI Enable/Disable | Disable | | 173 |
| MSI Check Character Calculation | Calculate Mod 10 | | 173 |
| MSI Check Character Transmission | Send | | 174 |
| MSI Length Control | Variable | | 174 |
| MSI Set Length 1 | 1 character | | 175 |
| MSI Set Length 2 | 50 characters | | 175 |
| PLESSEY | | | |
| Plessey Enable/Disable | Disable | | 176 |

| PARAMETERS | DEFAULT | YOUR SETTING | PAGE NUMBER |
|--|--------------------------------------|--------------|-------------|
| Plessey Check Character Calculation | Plessey std check char. verification | | 176 |
| Plessey Check Character Transmission | Send | | 177 |
| Plessey Length Control | Variable | | 177 |
| Plessey Set Length 1 | 1 character | | 178 |
| Plessey Set Length 2 | 50 characters | | 178 |
| BC412 | | | |
| BC412 Enable/Disable | Disable | | 179 |
| BC412 Check Character Calculation | Calculate | | 179 |
| BC412 Length Control | Variable | | 180 |
| BC412 Set Length 1 | 1 character | | 181 |
| BC412 Set Length 2 | 50 characters | | 181 |
| CODE SELECTION - 2D SYMBOLOGIES | | | |
| 2D Structured Append | Disable | | 184 |
| 2D Normal/Inverse Symbol Control | Normal | | 184 |
| AZTEC CODE | | | |
| Aztec Code Enable / Disable | Enable | | 185 |
| Aztec Code Length Control | Variable | | 185 |
| Aztec Code Set Length 1 | 1 character | | 184 |
| Aztec Code Set Length 2 | 3,832 characters | | 186 |
| CHINA SENSIBLE CODE | | | |
| China Sensible Code Enable / Disable | Disable | | 187 |
| China Sensible Code Length Control | Variable | | 187 |
| China Sensible Code Set Length 1 | 1 character | | 188 |
| China Sensible Code Set Length 2 | 7,827 characters | | 188 |
| DATA MATRIX | | | |
| Data Matrix Enable / Disable | Enable | | 189 |
| Data Matrix Square/Rectangular Style | Both Square and Rectangular Style | | 189 |
| Data Matrix Length Control | Variable | | 190 |
| Data Matrix Set Length 1 | 1 character | | 190 |

| PARAMETERS | DEFAULT | YOUR SETTING | PAGE NUMBER |
|---|---------------------------------|--------------|-------------|
| Data Matrix Set Length 2 | 3,116 characters | | 191 |
| GS1 DOTCODE | | | |
| DotCode Enable | Disable | | 192 |
| DotCode High Resolution Enable | Enable | | 192 |
| DotCode Position-based Decoding | Disable | | 193 |
| MAXICODE | | | |
| Maxicode Enable / Disable | Disable | | 194 |
| Maxicode Primary Message Transmission | Disable | | 194 |
| Maxicode Length Control | Variable | | 195 |
| Maxicode Set Length 1 | 1 character | | 195 |
| Maxicode Set Length 2 | 0145 characters | | 196 |
| PDF417 | | | |
| PDF417 Enable / Disable | Enable | | 197 |
| PDF417 Length Control | Variable | | 197 |
| PDF417 Set Length 1 | 1 character | | 198 |
| PDF417 Set Length 2 | 2,710 characters | | 198 |
| MICRO PDF417 | | | |
| Micro PDF417 Enable / Disable | Enable | | 199 |
| Micro PDF417 Code 128 GS1-128 Emulation | Micro PDF AIM ID and label type | | 199 |
| Micro PDF417 Length Control | Variable | | 200 |
| Micro PDF417 Set Length 1 | 1 character | | 200 |
| Micro PDF417 Set Length 2 | 0366 characters | | 201 |
| QR CODE | | | |
| QR Code Enable / Disable | Enable | | 202 |
| QR Code Length Control | Variable | | 202 |
| QR Code Set Length 1 | 1 character | | 203 |
| QR Code Set Length 2 | 7,089 characters | | 203 |
| MICRO QR CODE | | | |
| Micro QR Code Enable / Disable | Disable | | 204 |
| Micro QR Code Length Control | Variable | | 204 |

| PARAMETERS | DEFAULT | YOUR SETTING | PAGE NUMBER |
|--|-----------------------------|--------------|-------------|
| Micro QR Code Set Length 1 | 1 character | | 205 |
| Micro QR Code Set Length 2 | 0035 characters | | 205 |
| UCC COMPOSITE | | | |
| UCC Optional Composite Timer | 70 msec | | 206 |
| Postal Code Selection | Disable All Postal Codes | | 207 |
| Postnet BB Control | Disable | | 208 |
| OCR DECODING | | | |
| OCR Decoding Predefined Templates | Disable OCR Function | | 211 |
| POWER MANAGEMENT | | | |
| Powerdown Timeout | 30 minutes | | 213 |
| Battery Profiles | Maximum Performance | | 214 |
| WIRELESS FEATURES | | | |
| Good Transmission Beep | Enable | | 217 |
| Beeper Frequency | Low | | 217 |
| Beep Duration | 80 msec | | 218 |
| Beep Volume | High | | 219 |
| Disconnect Beep | Enable | | 219 |
| Leash Alarm | Disable | | 220 |
| Automatic Configuration Update | Enable | | 222 |
| Batch Mode | Disable | | 223 |
| RF Batch Mode Transmit Delay | No delay | | 225 |
| Direct Radio Autolink | Unlink Label Required | | 226 |
| Source Radio Address Transmission | Do not include | | 227 |
| Source Radio Address Delimiter Character | 00 (no delimiter character) | | 227 |
| Bluetooth Security Level | Level 1 - lowest | | 228 |
| Bluetooth Radio Output Power | Class 1 - highest | | 230 |
| Wi-Fi Channels Exclusion | Automatic | | 231 |
| Bluetooth Discoverable Mode Time-out | 3 minutes | | 236 |

| PARAMETERS | DEFAULT | YOUR SETTING | PAGE NUMBER |
|-------------------------|---|--------------|-------------|
| Bluetooth Friendly Name | CODISCAN HS7600 [SERIAL_NUMBER_SCANNER] | | 237 |
| Bluetooth HID Alt Mode | OFF | | 238 |

DEFAULT EXCEPTIONS

Table 27 - Default Exceptions by Interface Type

| PARAMETER | DEFAULT EXCEPTION |
|---|-------------------|
| Interfaces: USB-OEM | |
| Global Suffix | No Global Suffix |
| Double Read Timeout | 500 msec |
| Interfaces: All Keyboard, USB Keyboard | |
| No unique settings | |

APPENDIX C

SAMPLE BARCODES

The sample bar codes in this appendix are typical representations for their symbology types.

SAMPLE BARCODES

1D Barcodes

UPC-A



EAN-13



Code 39



Code 128



Interleaved 2 of 5



Code 32



Codabar



Code 93



Code 11



GS1 Databar™ (RSS)

GS1 DataBar™ variants must be enabled to read the barcodes below (see "GS1 DataBar™ Omnidirectional" on page 113).

GS1 DataBar™ Expanded Stacked



10293847560192837465019283746029478450366523

GS1 DataBar™ Expanded



1234890hjjio9900mnb

GS1 DataBar™ Limited



08672345650916

GS1 Databar™ (-14)

GS1 DataBar™ Omnidirectional Truncated



55432198673467

GS1 DataBar™ Omnidirectional Stacked



90876523412674

GS1 DataBar™ Omnidirectional Stacked



78123465709811

2D Barcodes

Aztec




Data Matrix



China Sensible



MaxiCode

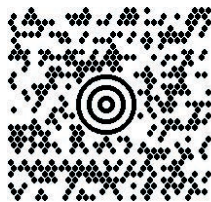

Test Message

PDF417



ABCabc

Micro PDF 417



BV17453

QR Code



35900G9

2D Barcodes (continued)

Micro QR Code



123456

UCC Composite



APPENDIX D

KEYPAD

Use the bar codes in this appendix to enter numbers as you would select digits/characters from a keypad.



1



2



3



4



5



6



7



1



2



3



4



5



6



7



8



9

APPENDIX E

SCANCODE TABLES

CONTROL CHARACTER EMULATION

Control character emulation selects from different scancode tables as listed in this appendix. Each of the control character sets below are detailed by interface type in the tables. These apply to USB Keyboard platforms.

Control Character 00 : Characters from 00 to 0x1F are sent as control character Ctrl+Keys, special keys are located from 0x80 to 0xA1.

Control Character 01 : Characters from 00 to 0x1F are sent as control character Ctrl+Capital Key, special keys are located from 0x80 to 0xA1.

Control Character 02 : Special keys are located from 00 to 0x1F and characters from 0x80 to 0xFE are intended as an extended ASCII table (Microsoft Windows Codepage 1252 — see [page 307](#)).

Single Press and Release Keys

In the following tables, Ar↓ means Alt right pressed and Ar↑ means Alt right released and so on. Definitions for other keys are Al (Alt left), Cr (Control Right) Cl (Control Left) Sh (shift). This method can be used for combining Alt, Control or Shift with other keys.

Example: Consider a Control character set to 00. If AltRight+A is required before sending a label to the host, it could be done by setting three Prefix keys in this way: 0x99 0x41 0x9A.

INTERFACE TYPE USB-KEYBOARD OR USB-KEYBOARD FOR APPLE

Table 28. Scancode Set When Control Character is 00 or 01

| | x0 | x1 | x2 | x3 | x4 | x5 | x6 | x7 | x8 | x9 | xA | xB | xC | xD | xE | xF |
|----|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------------|---------------------------|-------------------------------|----------------------------|---------------------------|--------------------------|---------------------------|------------------------------|
| 0x | NULL C+@ | SOH C(S)+A | STX C(S)+B | ETX C(S)+C | EOT C(S)+D | ENQ C(S)+E | ACK C(S)+F | BEL C(S)+G | BS CAN C(S)+X | HT TAB EM C(S)+Y | LF C(S)+J SUB C(S)+Z | VT C(S)+K ESC Esc | FF C(S)+L FS C+] | CR Enter GS C+] | SO C(S)+N RS C+^ | SI C(S)+O US C(S)+_ |
| 1x | DLE C(S)+P | DC1 C(S)+Q | DC2 C(S)+R | DC3 C(S)+S | DC4 C(S)+T | NAK C(S)+U | SYN C(S)+V | ETB C(S)+W | ' (8 |)) 9 | *) : | +) ; | ,) < | -) = | .) > | /) ? |
| 2x | SP | ! | " | # | \$ | % | & | ' | (|) | * | + | , | - | . | / |
| 3x | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | : | ; | < | = | > | ? |
| 4x | @ | A | B | C | D | E | F | G | H | I | J | K | L | M | N | O |
| 5x | P | Q | R | S | T | U | V | W | X | Y | Z | [| \ |] | ^ | _ |
| 6x | , | a | b | c | d | e | f | g | h | i | j | k | l | m | n | o |
| 7x | p | q | r | s | t | u | v | w | x | y | z | { | | } | ~ | Del |
| 8x | € | Sh↓ | Sh↑ | Ins | Ent (keyp) | F1 | F2 | F3 | F4 | F5 | F6 | F7 | F8 | F9 | F10 | F11 |
| 9x | F12 | Home | End | Pg Up | Pg Dwn | ↑ | ↓ | ← | → | Ar↓ | Ar↑ | Al↓ | Al↑ | Cl↓ | Cl↑ | Cr↓ |
| Ax | Cr↑ | | ' | f | " | ... | † | ‡ | ^ | % | Š | < | Š | < | Œ | |
| Bx | ° | ± | ² | ³ | ' | μ | ¶ | · | , | ı | ° | » | ¼ | ½ | ¾ | ı |
| Cx | À | Á | Â | Ã | Ä | Å | Æ | Ç | È | É | Ê | Ë | Ì | Í | Î | Ï |
| Dx | Ð | | Ò | Ó | Ô | Õ | Ö | × | Ø | Ù | Ú | Û | Ü | Ý | Þ | ß |
| Ex | à | á | â | ã | ä | å | æ | ç | è | é | ê | ë | ì | í | î | ï |
| Fx | ð | ñ | ò | ó | ô | õ | ö | ÷ | ø | ù | ú | û | ü | ý | þ | ÿ |

Extended characters (sky blue) are sent through dedicated keys (when available in the selected country mode) or by using an Alt Mode sequence.

INTERFACE TYPE USB-KEYBOARD OR USB-KEYBOARD FOR APPLE (CONTINUED)

Table 29. Scancode Set When Control Character is 02

| | x0 | x1 | x2 | x3 | x4 | x5 | x6 | x7 | x8 | x9 | xA | xB | xC | xD | xE | xF |
|----|--------|------|-----|-----|-----|-----|-----|-----|----|-----|----|--------|--------------|-------|-----|-------|
| 0x | Ar↓ | Ar↑ | Al↓ | Al↑ | Cl↓ | Cl↑ | Cr↓ | Cr↑ | BS | Tab | → | S+ Tab | Enter Keyprd | Enter | Ins | Pg Up |
| 1x | Pg Dwn | Home | ← | ↓ | ↑ | F6 | F1 | F2 | F3 | F4 | F5 | ESC | F7 | F8 | F9 | F10 |
| 2x | Space | ! | “ | # | \$ | % | & | ' | (|) | * | + | , | - | . | / |
| 3x | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | : | ; | < | = | > | ? |
| 4x | @ | A | B | C | D | E | F | G | H | I | J | K | L | M | N | O |
| 5x | P | Q | R | S | T | U | V | W | X | Y | Z | [| \ |] | ^ | _ |
| 6x | , | a | b | c | d | e | f | g | h | i | j | k | l | m | n | o |
| 7x | p | q | r | s | t | u | v | w | x | y | z | { | | } | ~ | Del |
| 8x | € | | , | f | ” | ... | † | ‡ | ^ | %oo | Š | < | Š | < | Œ | |
| 9x | | , | , | “ | ” | • | — | — | ~ | ™ | š | > | œ | | ž | ÿ |
| Ax | NBSP | i | ç | £ | ¤ | ¥ | ¦ | § | ¨ | © | ª | « | ¬ | - | ® | — |
| Bx | ° | ± | ² | ³ | ´ | µ | ¶ | · | , | ı | ° | » | ¼ | ½ | ¾ | ¿ |
| Cx | À | Á | Â | Ã | Ä | Å | Æ | Ç | È | É | Ê | Ë | Ì | Í | Î | Ï |
| Dx | Ð | Ò | Ó | Ô | Õ | Ö | Ø | × | Ù | Ú | Û | Ü | Ý | Þ | ß | |
| Ex | à | á | â | ã | ä | å | æ | ç | è | é | ê | ë | ì | í | î | ï |
| Fx | ð | ñ | ò | ó | ô | õ | ö | ÷ | ø | ù | ú | û | ü | ý | þ | ÿ |

INTERFACE TYPE USB-KEYBOARD ALT MODE

Table 30. Scancode Set When Control Character is 00 or 01

| | x0 | x1 | x2 | x3 | x4 | x5 | x6 | x7 | x8 | x9 | xA | xB | xC | xD | xE | Xf |
|----|---------|---------|---------|---------|---------------|---------|---------|---------|---------|-----------|---------|------------|---------|-------------|---------|---------|
| 0x | Alt+000 | Alt+001 | Alt+002 | Alt+003 | Alt+004 | Alt+005 | Alt+006 | Alt+007 | BS | HT TAB | Alt+010 | Alt+011 | Alt+012 | CR Enter | Alt+014 | Alt+015 |
| 1x | Alt+016 | Alt+017 | Alt+018 | Alt+019 | Alt+020 | Alt+021 | Alt+022 | Alt+023 | Alt+024 | Alt+025 | Alt+026 | ESC Esc | Alt+028 | Alt+029 | Alt+030 | Alt+031 |
| 2x | A+032 | A+033 | A+034 | A+035 | A+036 | A+037 | A+038 | A+039 | A+040 | A+041 | A+042 | A+043 | A+044 | A+045 | A+046 | A+047 |
| 3x | A+048 | A+049 | A+050 | A+051 | A+052 | A+053 | A+054 | A+055 | A+056 | A+057 | A+058 | A+059 | A+060 | A+061 | A+062 | A+063 |
| 4x | A+064 | A+065 | A+066 | A+067 | A+068 | A+069 | A+070 | A+071 | A+072 | A+073 | A+074 | A+075 | A+076 | A+077 | A+078 | A+079 |
| 5x | A+080 | A+081 | A+082 | A+083 | A+084 | A+085 | A+086 | A+087 | A+088 | A+089 | A+090 | A+091 | A+092 | A+093 | A+094 | A+095 |
| 6x | A+096 | A+097 | A+098 | A+099 | A+100 | A+101 | A+102 | A+103 | A+104 | A+105 | A+106 | A+107 | A+108 | A+109 | A+110 | A+111 |
| 7x | A+112 | A+113 | A+114 | A+115 | A+116 | A+117 | A+118 | A+119 | A+120 | A+121 | A+122 | A+123 | A+124 | A+125 | A+126 | A+127 |
| 8x | € | Sh↓ | Sh↑ | Ins | Ent (keyp) | F1 | F2 | F3 | F4 | F5 | F6 | F7 | F8 | F9 | F10 | F11 |
| 9x | F12 | Home | End | Pg Up | Pg Dwn | ↑ | ↓ | ← | → | Ar↓ | Ar↑ | Al↓ | Al↑ | Cl↓ | Cl↑ | Cr↓ |
| Ax | Cr↑ | A+0161 | A+0162 | A+0163 | A+0164 | A+0165 | A+0166 | A+0167 | A+0168 | A+0169 | A+0170 | A+0171 | A+0172 | A+0173 | A+0174 | A+0175 |
| Bx | A+0176 | A+0177 | A+0178 | A+0179 | A+0180 | A+0181 | A+0182 | A+0183 | A+0184 | A+0185 | A+0186 | A+0187 | A+0188 | A+0189 | A+0190 | A+0191 |
| Cx | A+0192 | A+0193 | A+0194 | A+0195 | A+0196 | A+0197 | A+0198 | A+0199 | A+0200 | A+0201 | A+0202 | A+0203 | A+0204 | A+0205 | A+0206 | A+0207 |
| Dx | A+0208 | A+0209 | A+0210 | A+0211 | A+0212 | A+0213 | A+0214 | A+0215 | A+0216 | A+0217 | A+0218 | A+0219 | A+0220 | A+0221 | A+0222 | A+0223 |
| Ex | A+0224 | A+0225 | A+0226 | A+0227 | A+0228 | A+0229 | A+0230 | A+0231 | A+0232 | A+0233 | A+0234 | A+0235 | A+0236 | A+0237 | A+0238 | A+0239 |
| Fx | A+0240 | A+0241 | A+0242 | A+0243 | A+0244 | A+0245 | A+0246 | A+0247 | A+0248 | A+0249 | A+0250 | A+0251 | A+0252 | A+0253 | A+0254 | A+0255 |

INTERFACE TYPE USB-KEYBOARD ALT MODE (CONTINUED)

Table 31. Scancode Set When Control Character is 02

| | x0 | x1 | x2 | x3 | x4 | x5 | x6 | x7 | x8 | x9 | xA | xB | xC | xD | xE | xF |
|----|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------------|--------|--------|--------|
| 0x | Ar↓ | Ar↑ | Al↓ | Al↑ | Cl↓ | Cl↑ | Cr↓ | Cr↑ | BS | Tab | → | S+ Tab | Enter Keyprd | Enter | Ins | Pg Up |
| 1x | Pg Dwn | Home | ← | ↓ | ↑ | F6 | F1 | F2 | F3 | F4 | F5 | ESC | F7 | F8 | F9 | F10 |
| 2x | A+032 | A+033 | A+034 | A+035 | A+036 | A+037 | A+038 | A+039 | A+040 | A+041 | A+042 | A+043 | A+044 | A+045 | A+046 | A+047 |
| 3x | A+048 | A+049 | A+050 | A+051 | A+052 | A+053 | A+054 | A+055 | A+056 | A+057 | A+058 | A+059 | A+060 | A+061 | A+062 | A+063 |
| 4x | A+064 | A+065 | A+066 | A+067 | A+068 | A+069 | A+070 | A+071 | A+072 | A+073 | A+074 | A+075 | A+076 | A+077 | A+078 | A+079 |
| 5x | A+080 | A+081 | A+082 | A+083 | A+084 | A+085 | A+086 | A+087 | A+088 | A+089 | A+090 | A+091 | A+092 | A+093 | A+094 | A+095 |
| 6x | A+096 | A+097 | A+098 | A+099 | A+100 | A+101 | A+102 | A+103 | A+104 | A+105 | A+106 | A+107 | A+108 | A+109 | A+110 | A+111 |
| 7x | A+112 | A+113 | A+114 | A+115 | A+116 | A+117 | A+118 | A+119 | A+120 | A+121 | A+122 | A+123 | A+124 | A+125 | A+126 | A+127 |
| 8x | A+0128 | A+0129 | A+0130 | A+0131 | A+0132 | A+0133 | A+0134 | A+0135 | A+0136 | A+0137 | A+0138 | A+0139 | A+0140 | A+0141 | A+0142 | A+0143 |
| 9x | A+0144 | A+0145 | A+0146 | A+0147 | A+0148 | A+0149 | A+0150 | A+0151 | A+0152 | A+0153 | A+0154 | A+0155 | A+0156 | A+0157 | A+0158 | A+0159 |
| Ax | A+0160 | A+0161 | A+0162 | A+0163 | A+0164 | A+0165 | A+0166 | A+0167 | A+0168 | A+0169 | A+0170 | A+0171 | A+0172 | A+0173 | A+0174 | A+0175 |
| Bx | A+0176 | A+0177 | A+0178 | A+0179 | A+0180 | A+0181 | A+0182 | A+0183 | A+0184 | A+0185 | A+0186 | A+0187 | A+0188 | A+0189 | A+0190 | A+0191 |
| Cx | A+0192 | A+0193 | A+0194 | A+0195 | A+0196 | A+0197 | A+0198 | A+0199 | A+0200 | A+0201 | A+0202 | A+0203 | A+0204 | A+0205 | A+0206 | A+0207 |
| Dx | A+0208 | A+0209 | A+0210 | A+0211 | A+0212 | A+0213 | A+0214 | A+0215 | A+0216 | A+0217 | A+0218 | A+0219 | A+0220 | A+0221 | A+0222 | A+0223 |
| Ex | A+0224 | A+0225 | A+0226 | A+0227 | A+0228 | A+0229 | A+0230 | A+0231 | A+0232 | A+0233 | A+0234 | A+0235 | A+0236 | A+0237 | A+0238 | A+0239 |
| Fx | A+0240 | A+0241 | A+0242 | A+0243 | A+0244 | A+0245 | A+0246 | A+0247 | A+0248 | A+0249 | A+0250 | A+0251 | A+0252 | A+0253 | A+0254 | A+0255 |

DIGITAL INTERFACE

Table 32. Scancode Set When Control Character is 00 or 01

| | X0 | X1 | X2 | X3 | X4 | X5 | X6 | X7 | X8 | X9 | xA | xB | xC | xD | xE | xF |
|----|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|--------------|---------------|--------------|--------------|-------------|--------------|--------------|
| 0x | NULL C+@ | SOH C(S)+A | STX C(S)+B | ETX C(S)+C | EOT C+D | ENQ C(S)+E | ACK C(S)+F | BEL C(S)+G | BS | HT TAB | LF C(S)+J | VT C(S)+K | FF C(S)+L | CR Enter | SO C(S)+N | SI C(S)+O |
| 1x | DLE C(S)+P | DC1 C(S)+Q | DC2 C(S)+R | DC3 C(S)+S | DC4 C(S)+T | NAK C(S)+U | SYN C(S)+V | ETB C(S)+W | CAN C(S)+X | EM C(S)+Y | SUB C(S)+Z | ESC Esc | FS C(S)+\ | GS C+] | RS C(S)+^ | US C(S)+_ |
| 2x | Space | ! | “ | # | \$ | % | & | ' | (|) | * | + | , | - | . | / |
| 3x | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | : | ; | < | = | > | ? |
| 4x | @ | A | B | C | D | E | F | G | H | I | J | K | L | M | N | O |
| 5x | P | Q | R | S | T | U | V | W | X | Y | Z | [| \ |] | ^ | _ |
| 6x | ` | a | b | c | d | e | f | g | h | i | j | k | l | m | n | o |
| 7x | p | q | r | s | t | u | v | w | x | y | z | { | | } | ~ | Del |
| 8x | | Sh↓ | Sh↑ | Ins | Ent (keyp) | F1 | F2 | F3 | F4 | F5 | F6 | F7 | F8 | F9 | F10 | F11 |
| 9x | F12 | F13 | F14 | F15 | F16 | ↑ | ↓ | ← | → | | | | | Cl↓ | Cl↑ | |

Table 33. Scancode Set When Control Character is 02

| | X0 | X1 | X2 | X3 | X4 | X5 | X6 | X7 | X8 | X9 | xA | xB | xC | xD | xE | xF |
|----|-------|----|----|----|-----|-----|----|----|----|-----|----|--------|----------------|-------|-----|-----|
| 0x | | | | | Cl↓ | Cl↑ | | | BS | Tab | à | S+ Tab | Enter Keypd | Enter | Ins | |
| 1x | | | ← | ↓ | ↑ | F6 | F1 | F2 | F3 | F4 | F5 | ESC | F7 | F8 | F9 | F10 |
| 2x | Space | ! | “ | # | \$ | % | & | ' | (|) | * | + | , | - | . | / |
| 3x | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | : | ; | < | = | > | ? |
| 4x | @ | A | B | C | D | E | F | G | H | I | J | K | L | M | N | O |
| 5x | P | Q | R | S | T | U | V | W | X | Y | Z | [| \ |] | ^ | _ |
| 6x | ` | a | b | c | d | e | f | g | h | i | j | k | l | m | n | o |
| 7x | p | q | r | s | t | u | v | w | x | y | z | { | | } | ~ | Del |

IBM31XX 102-KEY

Table 34. Scancode Set When Control Character is 00 or 01

| | x0 | x1 | x2 | x3 | x4 | x5 | x6 | x7 | x8 | x9 | xA | xB | xC | xD | xE | xF |
|----|---------------|---------------|---------------|---------------|---------------|---------------|---------------|-----------------|---------------|--------------|---------------|--------------|--------------|-------------|--------------|--------------|
| 0x | NULL C+@ | SOH C(S)+A | STX C(S)+B | ETX C(S)+C | EOT C+D | ENQ C(S)+E | ACK C(S)+F | BEL C(S)+G | BS | HT TAB | LF C(S)+J | VT C(S)+K | FF C(S)+L | CR Enter | SO C(S)+N | SI C(S)+O |
| 1x | DLE C(S)+P | DC1 C(S)+Q | DC2 C(S)+R | DC3 C(S)+S | DC4 C(S)+T | NAK C(S)+U | SYN C(S)+V | ETB C(S)+W | CAN C(S)+X | EM C(S)+Y | SUB C(S)+Z | ESC Esc | FS C(S)+\ | GS C+] | RS C(S)+^ | US C(S)+_ |
| 2x | Space | ! | “ | # | \$ | % | & | ' | (|) | * | + | , | - | . | / |
| 3x | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | : | ; | < | = | > | ? |
| 4x | @ | A | B | C | D | E | F | G | H | I | J | K | L | M | N | O |
| 5x | P | Q | R | S | T | U | V | W | X | Y | Z | [| \ |] | ^ | _ |
| 6x | , | a | B | c | d | e | f | g | h | i | j | k | l | m | n | o |
| 7x | p | q | R | s | t | u | v | w | x | y | z | { | | } | | Del |
| 8x | | Sh↓ | Sh↑ | Ins | Ent (keyp) | F1 | F2 | F3 | F4 | F5 | F6 | F7 | F8 | F9 | F10 | F11 |
| 9x | F12 | Enter | Reset | Insert | Delete | Field - | Field + | Enter paddle | Printl | Ar↓ | Ar↑ | Al↓ | Al↑ | Cl↓ | Cl↑ | Cr↓ |
| Ax | Cr↑ | | | | | | | | | | | | | | | |

Table 35. Scancode Set When Control Character is 02

| | X0 | X1 | X2 | X3 | X4 | X5 | X6 | X7 | X8 | X9 | xA | xB | xC | xD | xE | xF |
|----|--------|------|-----|-----|-----|-----|-----|-----|----|-----|----|--------|--------------|-------|-----|-------|
| 0x | Ar↓ | Ar↑ | Al↓ | Al↑ | Cl↓ | Cl↑ | Cr↓ | Cr↑ | BS | Tab | → | S+ Tab | Enter Keyupd | Enter | Ins | Pg Up |
| 1x | Pg Dwn | Home | ← | ↓ | ↑ | F1 | F2 | F3 | F4 | F5 | F5 | ESC | F7 | F8 | F9 | F10 |
| 2x | Space | ! | “ | # | \$ | & | , | (|) | * | + | + | , | - | . | / |
| 3x | 0 | 1 | 2 | 3 | 4 | 6 | 7 | 8 | 9 | : | ; | ; | < | = | > | ? |
| 4x | @ | A | B | C | D | F | G | H | I | J | K | K | L | M | N | O |
| 5x | P | Q | R | S | T | V | W | X | Y | Z | [| [| \ |] | ^ | _ |
| 6x | , | a | B | c | d | f | g | h | i | j | k | k | l | m | n | o |
| 7x | p | q | R | s | t | v | w | x | y | z | { | { | | } | | Del |

Table 36. Scancode Set When Control Character is 00 or 01

| | x0 | x1 | x2 | x3 | x4 | x5 | x6 | x7 | x8 | x9 | xA | xB | xC | xD | xE | xF |
|----|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|--------------|---------------|--------------|--------------|-------------|--------------|--------------|
| 0x | NULL C+@ | SOH C(S)+A | STX C(S)+B | ETX C(S)+C | EOT C+D | ENQ C(S)+E | ACK C(S)+F | BEL C(S)+G | BS C(S)+H | HT TAB | LF C(S)+J | VT C(S)+K | FF C(S)+L | CR Enter | SO C(S)+N | SI C(S)+O |
| 1x | DLE C(S)+P | DC1 C(S)+Q | DC2 C(S)+R | DC3 C(S)+S | DC4 C(S)+T | NAK C(S)+U | SYN C(S)+V | ETB C(S)+W | CAN C(S)+X | EM C(S)+Y | SUB C(S)+Z | ESC Esc | FS C(S)+\ | GS C+] | RS C(S)+^ | US C(S)+_ |
| 2x | Space | ! | “ | # | \$ | % | & | ' | (|) | * | + | , | - | . | / |
| 3x | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | : | ; | < | = | > | ? |
| 4x | @ | A | B | C | D | E | F | G | H | I | J | K | L | M | N | O |
| 5x | P | Q | R | S | T | U | V | W | X | Y | Z | [| \ |] | ^ | _ |
| 6x | , | a | B | c | d | e | f | g | h | i | j | k | l | m | n | o |
| 7x | p | q | R | s | t | u | v | w | x | y | z | { | | } | | Del |
| 8x | | Sh↓ | Sh↑ | Ins | Ent (keyp) | F1 | F2 | F3 | F4 | F5 | F6 | F7 | F8 | F9 | F10 | F11 |
| 9x | F12 | Home | End | Pg Up | Pg Dwn | ↑ | ↓ | ← | → | Ar↓ | Ar↑ | Al↓ | Al↑ | Cl↓ | Cl↑ | Cr↓ |
| Ax | Cr ↑ | | | | | | | | | | | | | | | |

Table 37. Scancode Set when Control Character 02

| | X0 | X1 | X2 | X3 | X4 | X5 | X6 | X7 | X8 | X9 | xA | xB | xC | xD | xE | xF |
|----|--------|------|-----|-----|-----|-----|-----|-----|----|-----|----|--------|-------------|-------|-----|-------|
| 0x | Ar↓ | Ar↑ | Al↓ | Al↑ | Cl↓ | Cl↑ | Cr↓ | Cr↑ | BS | Tab | → | S+ Tab | Enter Keypd | Enter | Ins | Pg Up |
| 1x | Pg Dwn | Home | ← | ↓ | ↑ | F6 | F1 | F2 | F3 | F4 | F5 | ESC | F7 | F8 | F9 | F10 |
| 2x | Space | ! | “ | # | \$ | % | & | ‘ | (|) | * | + | , | - | . | / |
| 3x | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | : | ; | < | = | > | ? |
| 4x | @ | A | B | C | D | E | F | G | H | I | J | K | L | M | N | O |
| 5x | P | Q | R | S | T | U | V | W | X | Y | Z | [| \ |] | ^ | _ |
| 6x | , | a | B | c | d | e | f | g | h | i | j | k | l | m | n | o |
| 7x | p | q | R | s | t | u | v | w | x | y | z | { | | } | | Del |

MICROSOFT WINDOWS CODEPAGE 1252

Windows-1252 is a character encoding of the Latin alphabet, used by default in the legacy components of Microsoft Windows in English and some other Western languages.

| | 00 | 01 | 02 | 03 | 04 | 05 | 06 | 07 | 08 | 09 | 0A | 0B | 0C | 0D | 0E | 0F |
|----|--------------|-------------|-------------|-------------|-------------|-------------|-------------|-------------|-------------|------------|-------------|-------------|------------|------------|------------|-------------|
| 00 | NUL 0000 | STX 0001 | SOT 0002 | ETX 0003 | EOT 0004 | ENO 0005 | ACK 0006 | BEL 0007 | BS 0008 | HT 0009 | LF 000A | VT 000B | FF 000C | CR 000D | SO 000E | SI 000F |
| 10 | DLE 0010 | DC1 0011 | DC2 0012 | DC3 0013 | DC4 0014 | NAK 0015 | SYN 0016 | ETB 0017 | CAN 0018 | EM 0019 | SUB 001A | ESC 001B | FS 001C | GS 001D | RS 001E | US 001F |
| 20 | SP 0020 | ! 0021 | " 0022 | # 0023 | \$ 0024 | % 0025 | & 0026 | * 0027 | (0028 |) 0029 | * 002A | + 002B | , 002C | - 002D | . 002E | / 002F |
| 30 | 0 0030 | 1 0031 | 2 0032 | 3 0033 | 4 0034 | 5 0035 | 6 0036 | 7 0037 | 8 0038 | 9 0039 | : 003A | ; 003B | < 003C | = 003D | > 003E | ? 003F |
| 40 | @ 0040 | A 0041 | B 0042 | C 0043 | D 0044 | E 0045 | F 0046 | G 0047 | H 0048 | I 0049 | J 004A | K 004B | L 004C | M 004D | N 004E | O 004F |
| 50 | P 0050 | Q 0051 | R 0052 | S 0053 | T 0054 | U 0055 | V 0056 | W 0057 | X 0058 | Y 0059 | Z 005A | [005B | \ 005C |] 005D | ^ 005E | _ 005F |
| 60 | ` 0060 | a 0061 | b 0062 | c 0063 | d 0064 | e 0065 | f 0066 | g 0067 | h 0068 | i 0069 | j 006A | k 006B | l 006C | m 006D | n 006E | o 006F |
| 70 | p 0070 | q 0071 | r 0072 | s 0073 | t 0074 | u 0075 | v 0076 | w 0077 | x 0078 | y 0079 | z 007A | { 007B | 007C | } 007D | ~ 007E | DEL 007F |
| 80 | € 20AC | • 20A2 | ƒ 201A | £ 0132 | „ 201E | … 2026 | † 2020 | ‡ 2021 | ˆ 02C5 | ‰ 2030 | Š 0160 | < 2038 | € 0162 | • 017D | ž 017D | • 017D |
| 90 | • 2018 | ˆ 2019 | ˜ 201C | ˘ 201D | • 2022 | – 2013 | — 2014 | ˆ 02DC | ™ 2122 | Š 0161 | › 203A | € 0163 | • 017E | ž 017E | Ÿ 0178 | • 0178 |
| A0 | NEBP 00A0 | ı 00A1 | ı 00A2 | £ 00A3 | ¤ 00A4 | ¥ 00A5 | ı 00A6 | ı 00A7 | ı 00A8 | ı 00A9 | ı 00AA | ı 00AB | ı 00AC | ı 00AD | ı 00AE | ı 00AF |
| B0 | ° 00B0 | ± 00B1 | ² 00B2 | ³ 00B3 | ´ 00B4 | µ 00B5 | ¶ 00B6 | · 00B7 | ¸ 00B8 | ¹ 00B9 | º 00BA | » 00BB | ¼ 00BC | ½ 00BD | ¾ 00BE | ¿ 00BF |
| C0 | À 00C0 | Á 00C1 | Â 00C2 | Ã 00C3 | Ä 00C4 | Å 00C5 | Æ 00C6 | Ç 00C7 | È 00C8 | É 00C9 | Ê 00CA | Ë 00CB | Ì 00CC | Í 00CD | Î 00CE | Ï 00CF |
| D0 | Ð 00D0 | Ñ 00D1 | Ò 00D2 | Ó 00D3 | Ô 00D4 | Õ 00D5 | Ö 00D6 | × 00D7 | Ø 00D8 | Ù 00D9 | Ú 00DA | Û 00DB | Ü 00DC | Ý 00DD | Þ 00DE | ß 00DF |
| E0 | à 00E0 | á 00E1 | â 00E2 | ã 00E3 | ä 00E4 | å 00E5 | æ 00E6 | ç 00E7 | è 00E8 | é 00E9 | ê 00EA | ë 00EB | ì 00EC | í 00ED | î 00EE | ï 00EF |
| F0 | ð 00F0 | ñ 00F1 | ò 00F2 | ó 00F3 | ô 00F4 | õ 00F5 | ö 00F6 | ÷ 00F7 | ø 00F8 | ù 00F9 | ú 00FA | û 00FB | ü 00FC | ý 00FD | þ 00FE | ÿ 00FF |

APPENDIX F

ASCII CHART

| ASCII Char. | Hex No. | ASCII Char. | Hex No. | ASCII Char. | Hex No. | ASCII Char. | Hex No. |
|-------------|---------|-------------|---------|-------------|---------|-------------|---------|
| NUL | 00 | SP | 20 | @ | 40 | ' | 60 |
| SOH | 01 | ! | 21 | A | 41 | a | 61 |
| STX | 02 | " | 22 | B | 42 | b | 62 |
| ETX | 03 | # | 23 | C | 43 | c | 63 |
| EOT | 04 | \$ | 24 | D | 44 | d | 64 |
| ENQ | 05 | % | 25 | E | 45 | e | 65 |
| ACK | 06 | & | 26 | F | 46 | f | 66 |
| BEL | 07 | ' | 27 | G | 47 | g | 67 |
| BS | 08 | (| 28 | H | 48 | h | 68 |
| HT | 09 |) | 29 | I | 49 | i | 69 |
| LF | 0A | * | 2A | J | 4A | j | 6A |
| VT | 0B | + | 2B | K | 4B | k | 6B |
| FF | 0C | , | 2C | L | 4C | l | 6C |
| CR | 0D | - | 2D | M | 4D | m | 6D |
| SO | 0E | . | 2E | N | 4E | n | 6E |
| SI | 0F | / | 2F | O | 4F | o | 6F |
| DLE | 10 | 0 | 30 | P | 50 | p | 70 |
| DC1 | 11 | 1 | 31 | Q | 51 | q | 71 |
| DC2 | 12 | 2 | 32 | R | 52 | r | 72 |
| DC3 | 13 | 3 | 33 | S | 53 | s | 73 |
| DC4 | 14 | 4 | 34 | T | 54 | t | 74 |
| NAK | 15 | 5 | 35 | U | 55 | u | 75 |
| SYN | 16 | 6 | 36 | V | 56 | v | 76 |
| ETB | 17 | 7 | 37 | W | 57 | w | 77 |
| CAN | 18 | 8 | 38 | X | 58 | x | 78 |
| EM | 19 | 9 | 39 | Y | 59 | y | 79 |
| SUB | 1A | : | 3A | Z | 5A | z | 7A |
| ESC | 1B | ; | 3B | [| 5B | { | 7B |
| FS | 1C | < | 3C | \ | 5C | | 7C |
| GS | 1D | = | 3D |] | 5D | } | 7D |
| RS | 1E | > | 3E | ^ | 5E | ~ | 7E |
| US | 1F | ? | 3F | _ | 5F | DEL | 7F |

© 2024 Datalogic S.p.A. and /or its affiliates • All rights reserved • Without limiting the rights under copyright, no part of this documentation may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means, or for any purpose, without the express written permission of Datalogic S.p.A. and/or its affiliates • Datalogic and the Datalogic logo are registered trademarks of Datalogic S.p.A. in many countries, including the U.S. and the E.U.



Datalogic S.r.l.

Via S. Vitalino, 13 | 40012 Calderara di Reno | Bologna - Italy
Tel. +39 051 3147011 | Fax +39 051 3147205