

Matrix 320™ 2MP

PRODUCT REFERENCE GUIDE

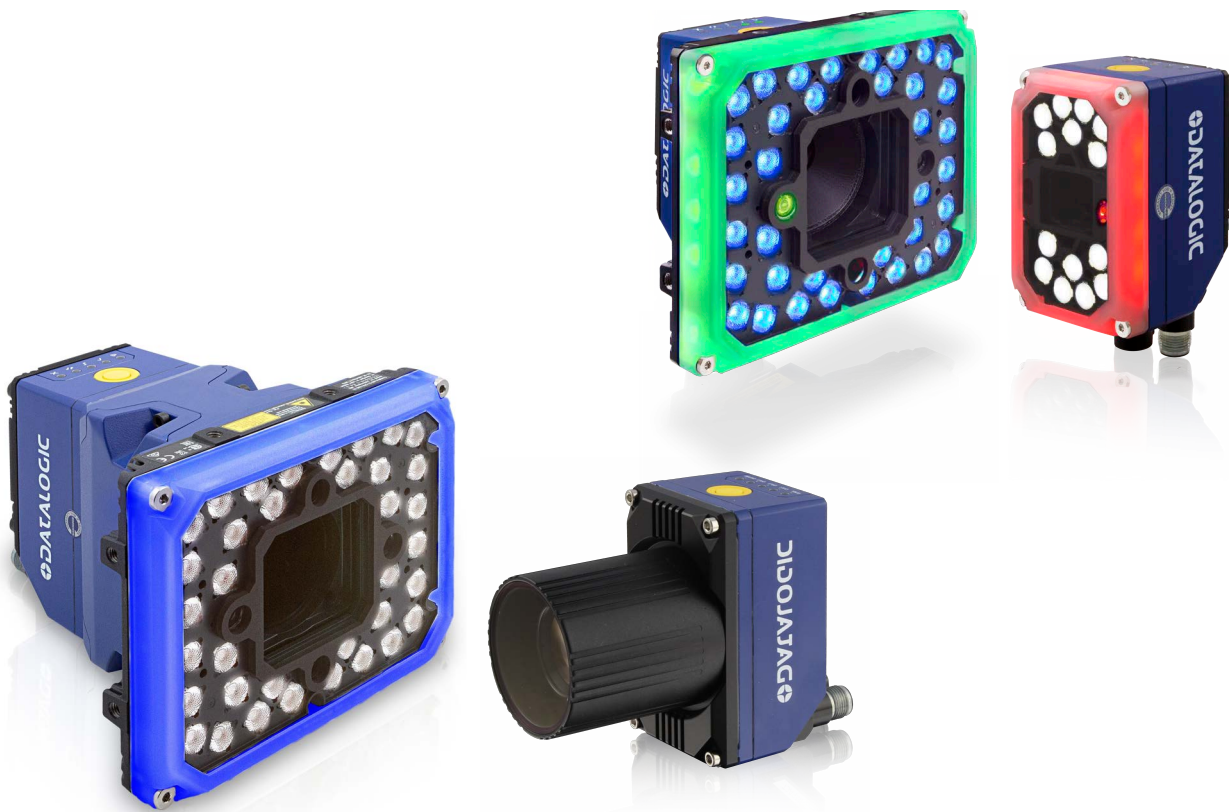


Image Based Industrial Reader

Datalogic S.r.l.

Via S. Vitalino, 13
40012 Calderara di Reno (BO)
Italy
Tel. +39 051 3147011
Fax +39 051 3147205

© 2020-2023 Datalogic S.p.A. and /or its affiliates

All rights reserved. Without limiting the rights under copyright, no part of this documentation may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means, or for any purpose, without the express written permission of Datalogic S.p.A. and/or its affiliates.

Owners of Datalogic products are hereby granted a non-exclusive, revocable license to reproduce and transmit this documentation for the purchaser's own internal business purposes. Purchaser shall not remove or alter any proprietary notices, including copyright notices, contained in this documentation and shall ensure that all notices appear on any reproductions of the documentation.

Electronic versions of this document may be downloaded from the Datalogic website (www.datalogic.com). If you visit our website and would like to make comments or suggestions about this or other Datalogic publications, please let us know via the "Contact" page.

Disclaimer

Datalogic has taken reasonable measures to provide information in this manual that is complete and accurate, however, Datalogic shall not be liable for technical or editorial errors or omissions contained herein, nor for incidental or consequential damages resulting from the use of this material. Datalogic reserves the right to change any specification at any time without prior notice.

Trademarks

Datalogic and the Datalogic logo are registered trademarks of Datalogic S.p.A. in many countries, including the U.S.A. and the E.U.

Matrix 320, ID-NET, DL.CODE, and X-PRESS are trademarks of Datalogic S.p.A. and/or its affiliates. All other trademarks and brands are property of their respective owners.

This is an OPC UA-based product.

Patents

See www.patents.datalogic.com for patent list.

This product is covered by one or more of the following patents:

Utility patents: EP1172756B1, EP2517148B1, EP2616988B1, EP2649555B1, EP3016028B1, EP3092597B1, IT1404187, JP5947819B2, US10229301, US6808114, US6877664, US6997385, US7387246, US7433590, US7433590, US8245926, US8888003, US8915443, US9122939, US9349047, US9361503, US9798948, US10133895, US10229301, US10540532, ZL200980163411.X, ZL201080071124.9, ZL201180044793.1, ZL201280010789.8

CONTENTS

PREFACE	VIII
About this Manual	viii
Manual Conventions	viii
Technical Support	viii
Support Through the Website	viii
Reseller Technical Support	ix
	ix
COMPLIANCE	X
General	x
Power Supply	x
EMC Compliance	x
CE Compliance	x
Laser Safety	xi
LED Safety	xii
HANDLING	XIII
GENERAL VIEW	XV
Matrix 320 (Liquid Lens) with 14 LEDs Illuminator	xv
Matrix 320 (Liquid Lens) with 36 LEDs Illuminator	xvi
Matrix 320 (C-Mount) without Illuminator	xvii
Matrix 320 (C-Mount) with 36 LEDs Illuminator	xviii
CHAPTER 1. RAPID CONFIGURATION	1
Matrix 320 with Software Adjustable Focus (Liquid Lens)	1
Step 1A - Connect the System	1
CBX100/CBX500 Pinout for Matrix 320	2
Step 2A - Mount and Position the Reader	3
Step 3A - Aim and Autofocus the reader	3
Matrix 320 with Manual Adjustable Focus (C-Mount)	5
Step 0B - Assemble the Reader	5
Step 1B - Connect the System	5
Step 2B - Mount and Position the Reader	5
Step 3B - Focus the reader	5
Next Steps for All Models	6
Step 4 - X-PRESS Configuration	6
Aim	6
Setup	6
Learn	7
Restore Reader to Default Environment (Optional)	8
Step 5 - Installing DL.CODE Configuration Program	9
Ethernet Device Discovery	10
Step 6 - Device Configuration	13
Automatic or Advanced Setup	13
Automatic Setup	14
Advanced Setup for Software Adjustable Focus Models (Liquid Lens)	16
Advanced Setup for Manual Adjustable Focus Models (C-Mount)	22
Reading Phase	25
Good Read Setup	26

Data Formatting	27
Output Setup	28
Step 7 - Test Mode	29
Advanced Reader Configuration	30
Host Mode Programming	30
Configuration using Web Discovery	31
CHAPTER 2. INTRODUCTION	33
Product Description	33
Standard Application Program	34
Programmability	34
Excellent Performance	34
Ease of Setup and Use	34
Flexible Solution	35
Connectivity	35
Industrial Strength	35
Indicators and Keypad Button	37
Green/Red Spot and 360° Visual Feedback	38
Distance Sensor	39
ID-NET	40
X-PRESS Human Machine Interface	42
X-PRESS Functions	43
Test Mode	43
Aim/Autofocus	44
Setup	44
Learn	44
Diagnostic Indication	45
Model Description	45
Available Liquid Lens Models	46
Accessories	47
Matrix 320 C-Mount Assembly	50
Illuminators and Lenses Combinations	52
Application Examples	53
Document Handling	53
Multiple Reading in a Single Image	53
Deformed or Overprinted Code Reading	53
Direct Part Marking	54
Ink-Jet Printing Technology	55
Laser Marking/Etching Technology	55
High Dynamic Range (HDR) feature	56
CHAPTER 3. INSTALLATION	59
Package Contents	59
Mechanical Dimensions	60
Mounting And Positioning Matrix 320	66
Mounting the BK-32-00 Standard Fix Bracket	67
Mounting the BK-32-010 Pivot Fix Bracket	68
Compact Mounting	69
Extended Mounting	69
Mounting with EMK Mirrors	72
EMK-380 Side Mount - Standard	73
EMK-380 Side Mount - Alternative	74
EMK-600 Side Mount - Standard	75
EMK-600 Side Mount - Alternative	76
Matrix 320 C-Mount Mounting Instructions	77
Mounting Instructions for Matrix 320 C-Mount without illuminator	77
Mounting instructions for Matrix 320 with 36 LED illuminator	79
Heat Sink mounting instructions	82
When to mount the heat sink	82
How to mount the heat sink	82
Accessory Covers and Filters	83

Covers	83
Standard and ESD Covers	83
Polarizing Covers	83
Cover Replacement	84
Filters	86
Filter Mounting Instructions	86
CHAPTER 4. CBX ELECTRICAL CONNECTIONS.....	88
CBX Connection Box Pinout	89
CAB-DS0x-S Pinout	90
CAB-GD0x-S Pinout	91
Power Supply	92
Main Serial Interface	93
RS232 Interface	93
RS422 Full Duplex Interface	94
ID-NET Interface	95
ID-NET Cables	95
ID-NET Response Time	96
ID-NET Network Termination	97
ID-NET Connection Diagrams	97
Auxiliary RS232 Interface	100
Inputs	101
External Trigger Input Connections Using Matrix 320 Power	102
External Trigger Input Connections Using External Power	104
Input 2 Connections Using Matrix 320 Power	105
Input 2 Connections Using External Power	106
Input 3 Connections (CBX500 Only)	106
Outputs	107
Output 1 and 2 Connections Using Matrix 320 Power	108
Output 1 and 2 Connections Using External Power	109
Output 3 Connections Using Matrix 320 Power (CBX500 Only)	110
Output 3 Connections Using External Power (CBX500 Only)	110
On-Board Ethernet Interface	111
User Interface - Serial Host	112
OPC UA protocol	113
OPC UA Companion Specifications	113
Available commands (methods)	113
Compatible OPC UA Clients	113
OPC UA on DL.CODE	114
CHAPTER 5. TYPICAL LAYOUTS.....	115
Ethernet Connection	116
Serial Connection	118
Fieldbus Connection	119
Pass-Through	120
ID-NET Multidata Network (Pass-Through)	121
ID-NET Synchronized Network	122
CHAPTER 6. READING FEATURES.....	123
FOV Calculation	123
Global FOV Diagrams	124
Global FOV for Matrix 320 LQL-6	125
Global FOV for Matrix 320 LQL-9	126
Global FOV for Matrix 320 LQL-16	127
Global FOV for Matrix 320 C-Mount LNS-4	128
Global FOV for Matrix 320 C-Mount LNS-6	129
Global FOV for Matrix 320 C-Mount LNS-8	130
Global FOV for Matrix 320 C-Mount LNS-12	131
Global FOV for Matrix 320 C-Mount LNS-16	132
Global FOV for Matrix 320 C-Mount LNS-25	133
Global FOV for Matrix 320 C-Mount LNS-35	134

Maximum Line Speed and Exposure Time Calculations	135
CHAPTER 7. SOFTWARE CONFIGURATION	137
DL.CODE System Requirements	137
Reader Configuration	138
Auto-Calibration	139
Manual Calibration	140
Under-exposure	140
Over-exposure	141
Moving code out of the Field of View	142
Multi Image Acquisition Settings	143
Automatic Image Settings Selection	144
External Image Settings Selection	145
Extending DOF with Automatic Image Settings Selection (Cycle All In Same Phase) for Liquid Lens Models	147
Extending DOF with Automatic Image Settings Selection Sequence (Input Select) for Liquid Lens Models	148
Image Cropping	150
Direct Part Marking Applications	152
Image Filter	153
Pass-Through Configurations	157
Internal Network Configurations	159
Master Configuration	160
Multidata ID-NET Network Configurations	162
Synchronized ID-NET Network Configurations	167
Verify Master/Slave Synchronized Configuration	171
Backup and Restore Through DL.CODE	174
Backup	175
Restore	176
Replacement	176
Restore Defaults	177
Restore Default Environment	177
Restore Default Startup Configuration	178
Restore Factory Defaults	178
Diagnostic Alarms	179
Statistics	180
BM150 Display Module Configuration and Messages	181
Configuration Through DL.CODE	181
Accessing the HMI Interface Through Keypad and Display Menu	182
Display Messages	184
BM150 Backup and Restore Procedure	187
CHAPTER 8. ILLUMINATORS	188
Standard Illuminators for Software Adjustable Focus Models (Liquid Lens)	188
14 LEDs Illuminator	188
36 LEDs Illuminator	189
Standard Illuminators for Manual Adjustable Focus Models (C-Mount)	190
36 LEDs Illuminator	190
Polarizer	191
Direct Part Marking Applications	194
Matrix 320 Recommended Illumination	195
Color Contrast Considerations	196
CHAPTER 9. MAINTENANCE	198
Cleaning	198
CHAPTER 10. TROUBLESHOOTING.....	199
General Guidelines	199

TECHNICAL FEATURES	202
ALTERNATIVE CONNECTIONS	206
Power, Com and I/O Connector for Standard Models	206
On-Board Ethernet Connector	207
ID-NET Network Termination	207
Inputs	208
Outputs	208
User Interface - Serial Host	210
EBC CONNECTION MODULE™	212
Package Content	212
General View	213
Mechanical Installation	213
System Wiring/Cabling	214
Indicator LEDs	214
Electrical Connections	215
Software Configuration	216
Minimum software requirements	216
Adding new devices to the network	216
Configuration	217
Accessories	217
Typical Layouts	218
Large Synchronized Network Layout	218
Ethernet TCP/IP to Host	218
COM to Host	219
Fieldbus to Host	219
EBC - Syncnet Mixed Layout	220
Redundant System Layout	221
Redundant System Layout with Host supporting Serial COM Communications	222
Technical Specifications	223
GLOSSARY	225

PREFACE

ABOUT THIS MANUAL

This Product Reference Guide (PRG) is provided for users seeking advanced technical information, including connection, programming, maintenance and specifications. The Quick Reference Guide (QRG) and other publications associated with this product can be downloaded free of charge from the website listed on the back cover of this manual.

Manual Conventions

The following conventions are used in this document:

The symbols listed below are used in this manual to notify the reader of key issues or procedures that must be observed when using the reader:



NOTE

Notes contain information necessary for properly diagnosing, repairing and operating the reader.



CAUTION

The CAUTION symbol advises you of actions that could damage equipment or property.



WARNING

The WARNING symbol advises you of actions that could result in harm or injury to the person performing the task.

TECHNICAL SUPPORT

Support Through the Website

Datalogic provides several services as well as technical support through its website. Log on to (www.datalogic.com).

For quick access, from the home page click on the search icon 🔍, and type in the name of the product you're looking for. This allows you access to download Data Sheets, Manuals, Software & Utilities, and Drawings.

Hover over the Support & Service menu for access to Services and Technical Support.

Reseller Technical Support

An excellent source for technical assistance and information is an authorized Datalogic reseller. A reseller is acquainted with specific types of businesses, application software, and computer systems and can provide individualized assistance.

COMPLIANCE

GENERAL

For installation, use and maintenance it is not necessary to open the reader.

Only connect Ethernet and dataport connections to a network which has routing only within the plant or building and no routing outside the plant or building.

POWER SUPPLY

ATTENTION: READ THIS INFORMATION BEFORE INSTALLING THE PRODUCT

The unit is intended to be powered by an external power supply ES1, PS2 according to IEC 62368-1:2014.

EMC COMPLIANCE

In order to meet the EMC requirements:

- connect reader chassis to the plant earth ground by means of a flat copper braid shorter than 100 mm;
- for CBX connections, connect pin “Earth” to a good Earth Ground;
- for direct connections, connect your cable shield to the locking ring nut of the connector.

CE COMPLIANCE

CE marking states the compliance of the product with essential requirements listed in the applicable European directive. Since the directives and applicable standards are subject to continuous updates, and since Datalogic promptly adopts these updates, therefore the EU declaration of conformity is a living document. The EU declaration of conformity is available for competent authorities and customers through Datalogic commercial reference contacts. Since April 20th, 2016 the main European directives applicable to Datalogic products require inclusion of an adequate analysis and assessment of the risk(s). This evaluation was carried out in relation to the applicable points of the standards listed in the Declaration of Conformity. Datalogic products are mainly designed for integration purposes into more complex systems. For this reason it is under the responsibility of the system integrator to do a new risk assessment regarding the final installation.

Warning: This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

LASER SAFETY

This product conforms to the applicable requirements of IEC 60825-1 and complies with 21 CFR 1040.10 except for deviations pursuant to Laser Notice N° 56, date May 8, 2019. This product is classified as a Class 2 laser product according to IEC 60825-1 regulations, except when using a LTM x2x-xxx DOE illuminator, in which case the product is classified as a Class 1 laser product.



Use of controls or adjustments or performance of procedures other than those specified herein may result in exposure to hazardous visible laser light.

Disconnect the power supply when opening the device during maintenance or installation to avoid exposure to hazardous laser light. The laser beam can be switched on or off through a software command.

The following warning label content is applied to each of the laser equipped products indicated in the General View illustration (Figure 1).



Example Laser Warning Labels for Matrix 320 Liquid Lens models



**Example Laser Warning Labels for Matrix 320
C-Mount models with 36 LED illuminator**



**Example Laser Warning Labels for Matrix 320
C-Mount models with LTM x2x-xxx DOE illuminator**

Produit(s) conforme selon 21CFR 1040.10 sauf des dérogations relatives à la Laser Notice N° 56, du 8 Mai, 2019.

Dans le paquet il y a l'étiquette(s) pour les pays où le texte d'avertissement en français est obligatoire. Le(s) mettre sur le produit à la place de la version anglaise.



Exemple d'étiquettes d'avertissement laser



Exemple d'étiquettes d'avertissement de laser pour Matrix 320 modèles à monture C avec illuminateur DOE LTM x2x-xxx

LED SAFETY

According to EN 62471:2010, for all Datalogic Matrix 320 compatible internal illuminators, LED emission is classified into Risk Group 1, except Matrix 320 with UV illuminator which is Risk Group 3.




WARNING: The UV illuminator shall only be used by skilled persons using a personal safeguard (PPE, safety goggles).




HANDLING

Matrix 320 is designed to be used in an industrial environment and is built to withstand vibration and shock when correctly installed, however it is also a precision product and therefore before and during installation it must be handled correctly to avoid damage.

- avoid that the readers are dropped (exceeding shock limits)

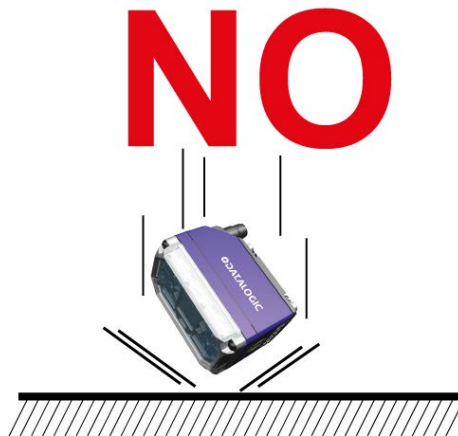


- do not fine tune the positioning by striking the reader or bracket.

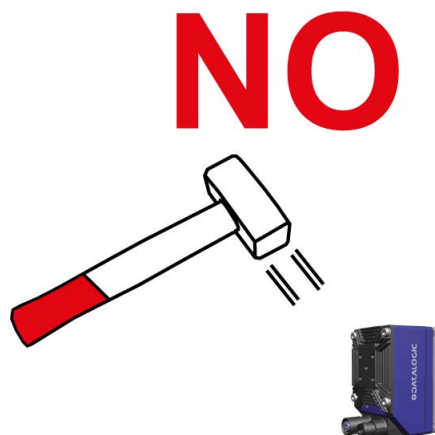

- do not weld the reader into position which can cause electrostatic, heat or reading window damage.

NO

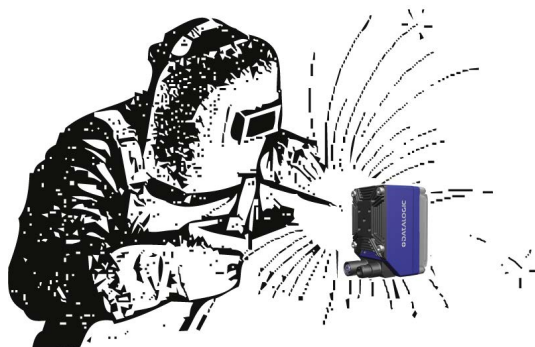

- do not spray paint near the reader which can cause reading window damage.

NO



Products using liquid lens technology are sensitive to UV light and will be damaged if exposed to UV illumination. Avoid exposing the product to UV light or direct sunlight. If it is not possible to remove UV light sources, the use of anti-UV receiving filter is mandatory to minimize the probability of damage.

GENERAL VIEW

MATRIX 320 (LIQUID LENS) WITH 14 LED_s ILLUMINATOR

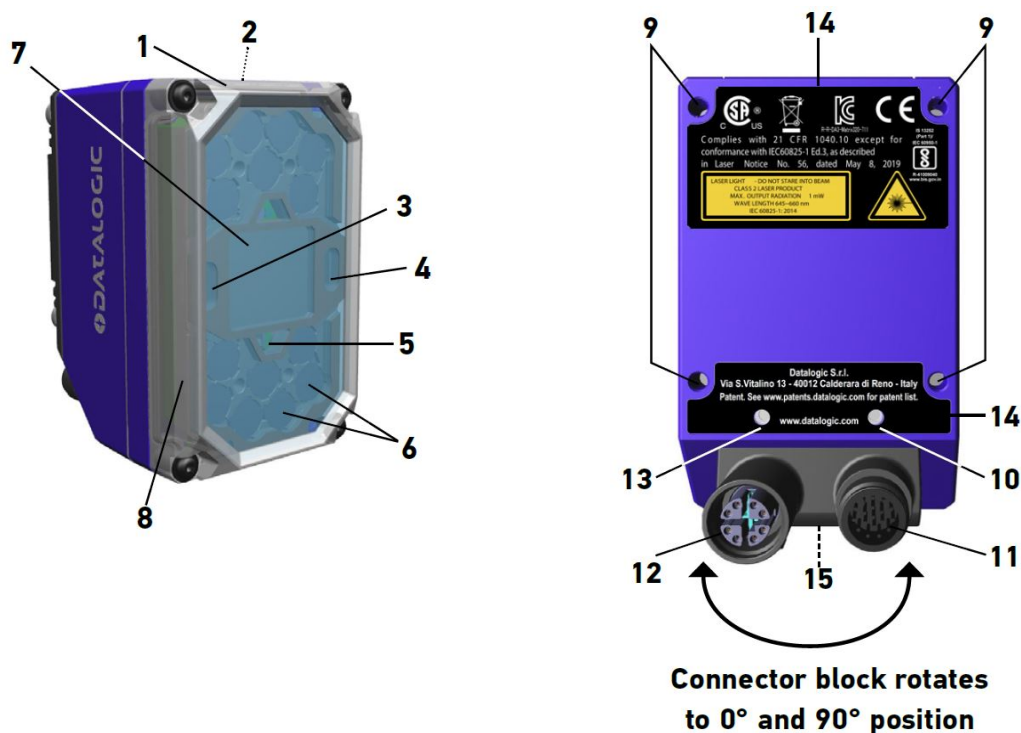


Figure 1 - Matrix 320 with 14 LEDs illuminator

1. Lens Cover	9. Bracket Mounting Holes (4)
2. HMI X-PRESS Interface	10. Ethernet Connection LED
3. Green Spot	11. Power - COM - I/O Connector
4. Red Spot	12. Ethernet Connector
5. Aiming System Laser Pointers	13. Power On LED
6. Internal Illuminator	14. Device Class and Warning Labels
7. Lens	15. Avoid Laser Exit Point Label
8. 360° Feedback	

MATRIX 320 (LIQUID LENS) WITH 36 LEDs ILLUMINATOR

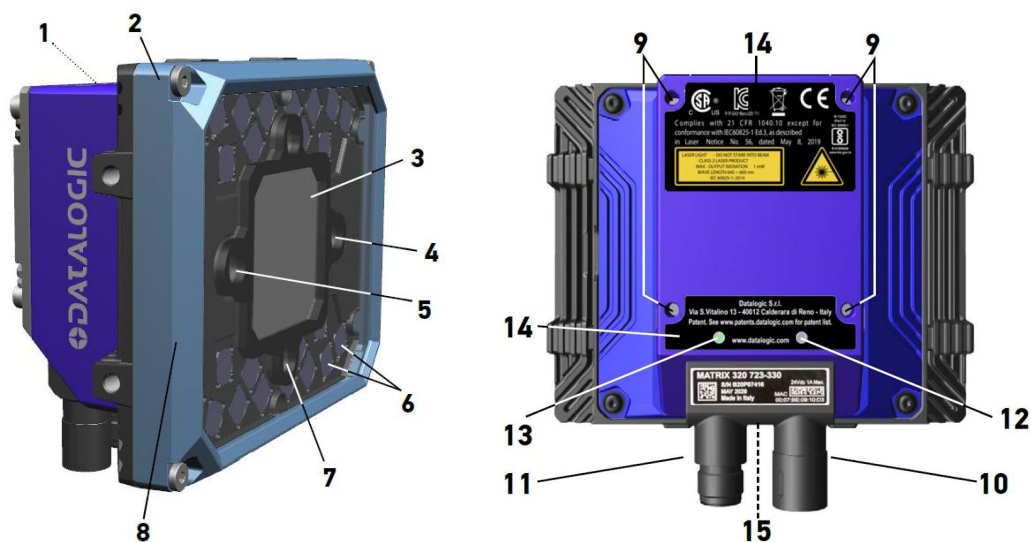


Figure 2 - Matrix 320 with 36 LEDs illuminator

1. HMI X-PRESS Interface	9. Bracket Mounting Holes (4)
2. Lens Cover	10. Ethernet Connector
3. Lens	11. Power - COM - I/O Connector
4. Red Spot	12. Ethernet Connection LED
5. Green Spot	13. Power On LED
6. Internal Illuminator	14. Device Class and Warning Labels
7. Aiming System Laser Pointer	15. Avoid Laser Exit Point Label
8. 360° Feedback	

MATRIX 320 (C-MOUNT) WITHOUT ILLUMINATOR

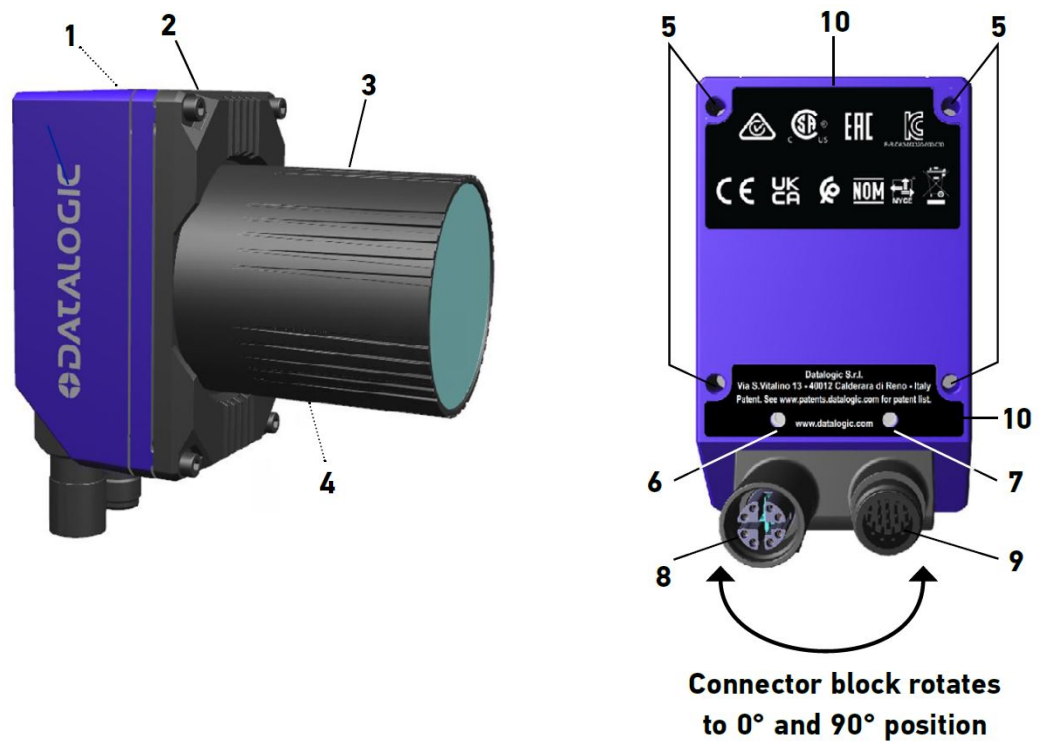


Figure 3 - Matrix 320 without illuminator

1. HMI X-PRESS Interface	6. Power On LED
2. Base Cover	7. Ethernet Connection LED
3. Lens Cover	8. Ethernet Connector
4. Lens	9. Power - COM - I/O Connector
5. Bracket Mounting Holes (4)	10. Compliance Label

MATRIX 320 (C-MOUNT) WITH 36 LEDs ILLUMINATOR

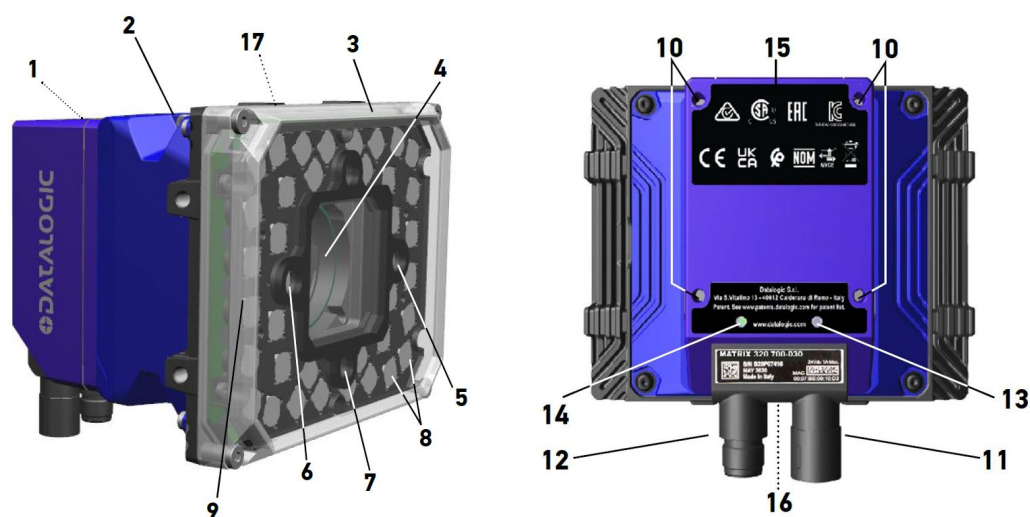


Figure 4 - Matrix 320 C-Mount with 36 LEDs illuminator

1. HMI X-PRESS Interface	10. Bracket Mounting Holes (4)
2. Adapter	11. Ethernet Connector
3. Lens Cover	12. Power - COM - I/O Connector
4. Lens	13. Ethernet Connection LED
5. Red Spot	14. Power On LED
6. Green Spot	15. Compliance Label
7. Aiming System Laser Pointer	16. Avoid Laser Exit Point Label
8. Internal Illuminator	17. Device Class and Warning Labels
9. 360° Feedback	

CHAPTER 1

RAPID CONFIGURATION

For the rapid configuration of Matrix 320 models with Liquid Lens, refer to [Matrix 320 with Software Adjustable Focus \(Liquid Lens\)](#), starting on page 1

For the rapid configuration of Matrix 320 C-Mount models, refer to [Matrix 320 with Manual Adjustable Focus \(C-Mount\)](#), starting on page 5.

MATRIX 320 WITH SOFTWARE ADJUSTABLE FOCUS (LIQUID LENS)

Step 1A - Connect the System

To connect the system in a Stand Alone configuration, you need the hardware indicated in Figure 5. In this layout the data is transmitted to the Host on the Ethernet interface. Data can also be transmitted on the RS232 auxiliary interface independently from the main interface selection.

When One Shot or Phase Mode Operating mode is used, the reader is activated by an External Trigger (photoelectric sensor) when the object enters its reading zone.

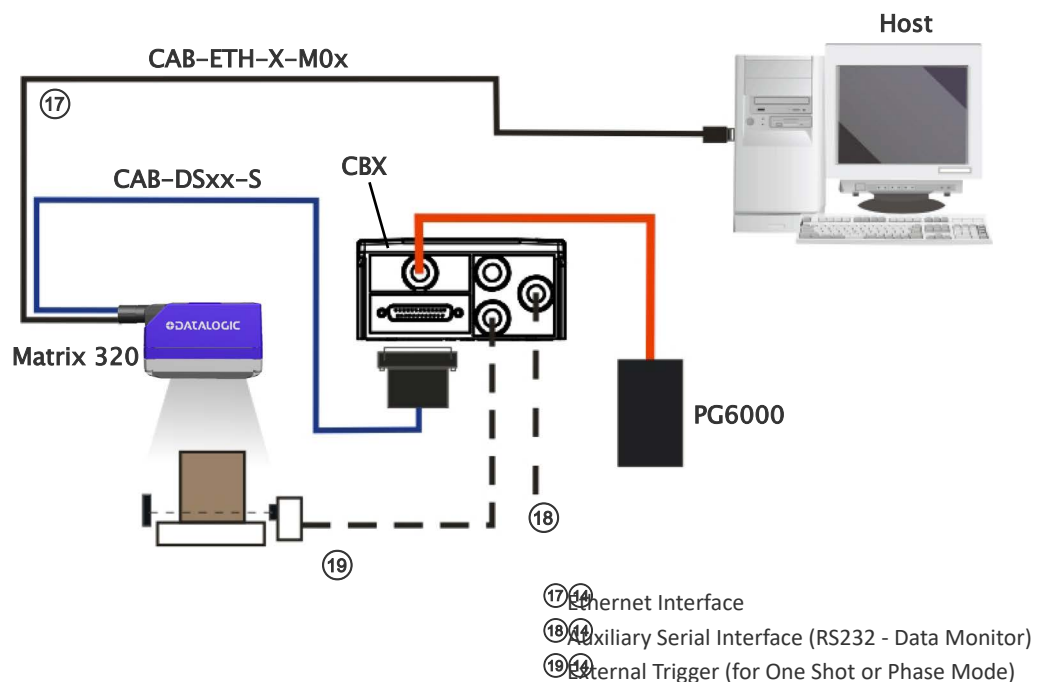


Figure 5 - Matrix 320 in Stand Alone Layout

CBX100/CBX500 Pinout for Matrix 320

The table below gives the pinout of the CBX100/CBX500 terminal block connectors. Use this pinout when the Matrix 320 reader is connected by means of the CBX100/CBX500:

GROUP	LABEL	DESCRIPTION
Input Power	Vdc	Power Supply Input Voltage +
	GND	Power Supply Input Voltage -
	Earth	Protection Earth Ground
Inputs	+V	Power Source - External Trigger
	I1A	External Trigger A (polarity insensitive)
	I1B	External Trigger B (polarity insensitive)
	-V	Power Reference - External Trigger
	+V	Power Source - Inputs
	I2A	Input 2 A (polarity insensitive)
	I2B	Input 2 B (polarity insensitive)
	-V	Power Reference - Inputs
Outputs	+V	Power Source - Outputs
	-V	Power Reference - Outputs
	O1+	Output 1 +
	O1-	Output 1 -
	O2+	Output 2 +
	O2-	Output 2 -
	O3A	Output 3 - (CBX500 only)
Auxiliary Interface	TX	Auxiliary Interface TX
	RX	Auxiliary Interface RX
	SGND	Auxiliary Interface Reference
ID-NET™	REF	Network Reference
	ID+	ID-NET network data +
	ID-	ID-NET network data -
Main Interface	RS232	RS422 Full Duplex
	TX	TX+
	-	TX-
	RX	*RX+
	-	*RX-
	SGND	SGND

* Do not leave floating, see "RS422 Full Duplex Interface" on page 94 for connection details.



CAUTION

Do not connect GND, SGND and REF to different (external) ground references. GND, SGND and REF are internally connected through filtering circuitry which can be permanently damaged if subjected to voltage drops over 0.8 Vdc.

Step 2A - Mount and Position the Reader

1. To mount the Matrix 320, use the mounting brackets to obtain the most suitable position for the reader. The mounting solutions are provided in "[Mounting And Positioning Matrix 320](#)" on page 66.
2. When mounting the Matrix 320 take into consideration these three ideal label position angles: **Pitch or Skew 10° to 20° and Tilt 0°**, although the reader can read a code at any tilt angle provided the code fits into the Field Of View (FOV).

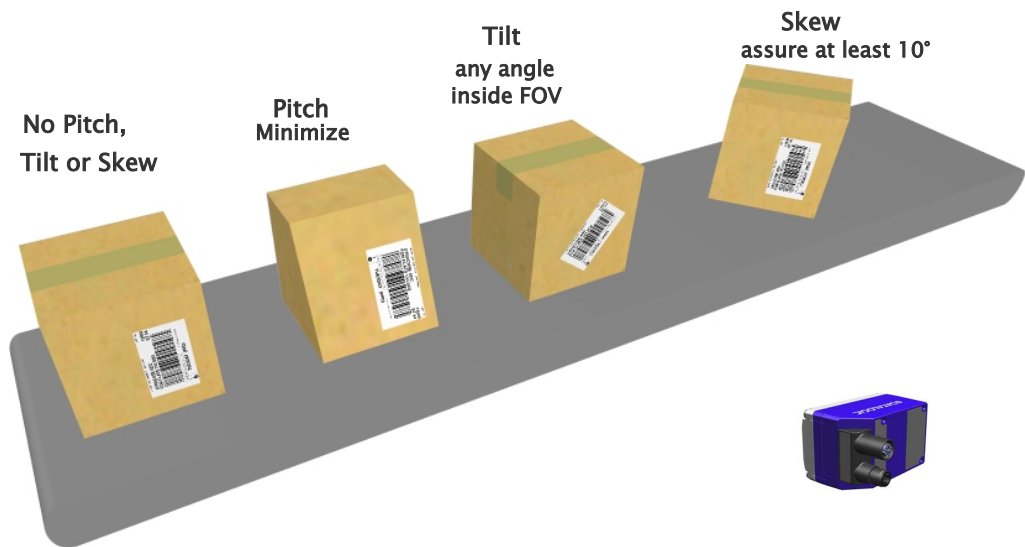


Figure 6 - Pitch, Skew and Tilt Angles

3. Refer to the reading diagrams in [Chapter 6, Reading Features](#) for FOV calculation and minimum distance requirements according to the base/lens combination used for your application.



NOTE

Rapid Configuration of the Matrix 320 reader can be made either through the X-PRESS interface (steps 4-6) which requires no PC connection, or by using the DL.CODE Configuration Program (steps 7-8). Select the procedure according to your needs.

Step 3A - Aim and Autofocus the reader

Matrix 320 provides a built-in laser pointer aiming system to aid reader positioning. For Liquid Lens models, the autofocus feature is also incorporated into this function. The aiming system is accessed through the X-PRESS Interface.

1. Power the reader on. During the reader startup (reset or restart phase), all the LEDs blink for one second. On the reverse side of the reader near the bracket, the "POWER ON" LED (blue) indicates the reader is correctly powered.
2. Enter the Aim/Autofocus function by pressing and holding the X-PRESS push button until the Aim LED is on.



3. Release the button to enter the Aim function. The laser pointer turns on, and the Autofocus procedure begins. The Aim LED will blink until the procedure is completed.
4. Place the **Grade A Barcode Test Chart** in front of the reader at the correct reading distance for your application (see the [Global FOV Diagrams, starting on page 124](#) for reference). **The center of the cross is 16 mm (14 LEDs model) or 30 mm (36 LEDs model) under the optical axis, as shown in Figure 8.**

Within 3 seconds (before the reader flashes), center one of the larger codes on the aiming system pointer (the code must not move during this procedure).

The Autofocus procedure ends when the Reading Distance and PPI values are successfully saved in the reader memory, the Aim LED will stop blinking and Matrix 320 emits 3 high pitched beeps.

If the Autofocus cannot be reached after a timeout of about 3 (three) minutes, Matrix 320 will exit without saving the parameters to memory, the Aim LED will stop blinking and in this case Matrix 320 emits a long low pitched beep.

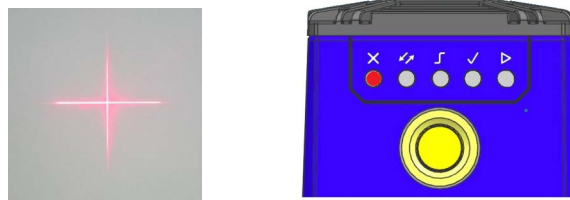


Figure 7 - X-PRESS Interface; Aim/Autofocus Function

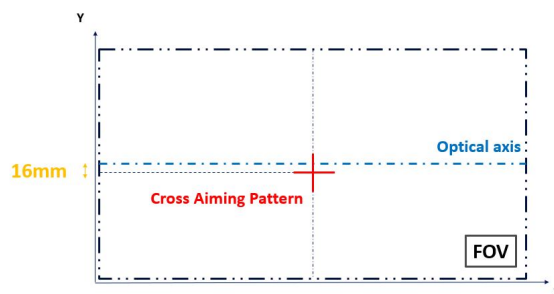


Figure 8 - Cross Laser Pattern



NOTE

You can exit the Aim/Autofocus function at any time by pressing the X-PRESS push button once. After a short delay the Autofocus procedure is canceled and the laser pointer turns off.

Now skip to Next Steps for All Models, starting on page 6.

MATRIX 320 WITH MANUAL ADJUSTABLE FOCUS (C-MOUNT)

Step 0B - Assemble the Reader

For Matrix 320 700-030 (C-Mount), the first step to perform is to assemble the accessories that make up the reader. Refer to [Matrix 320 C-Mount Assembly](#), starting on page 50 and [Matrix 320 C-Mount Mounting Instructions](#), starting on page 77.

Step 1B - Connect the System

Refer to "Step 1A - Connect the System" on page 1.

Step 2B - Mount and Position the Reader

Refer to "Step 2A - Mount and Position the Reader" on page 3.

Step 3B - Focus the reader

To focus the reader, refer to [Advanced Setup for Manual Adjustable Focus Models \(C-Mount\)](#), starting on page 22, then place the reader at the factory focused Reading Distance and go to "Step 4 - X-PRESS Configuration" on page 6.

NEXT STEPS FOR ALL MODELS

Step 4 - X-PRESS Configuration

Once Matrix 320 has calibrated image density, you can configure it for optimal code reading relative to your application. This configuration can be performed either through the X-PRESS Interface or the DL.CODE configuration program.

Aim

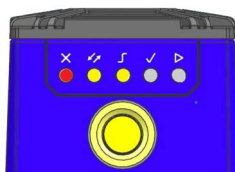


Figure 9 - X-PRESS Interface: Aim Function



1. Enter the Focus function by pressing and holding the X-PRESS push button until the Focus LED is on.
2. Release the button to enter the Focus function.
3. **Select a code from your application.** Position the code at the center of the FOV.
4. Exit the Focus function by pressing the X-PRESS push button once.

Setup

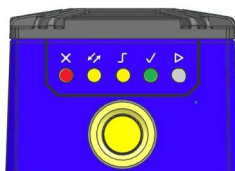


Figure 10 - X-PRESS Interface: Setup Function



5. Enter the Setup function by pressing and holding the X-PRESS push button until the Setup LED is on.
6. Release the button to enter the Setup function. The Setup LED will blink until the procedure is completed.
The Setup procedure ends when the Image Acquisition parameters are successfully saved in the reader memory, the Setup LED will stop blinking and Matrix 320 emits 3 high pitched beeps.
If the calibration cannot be reached after a timeout of about 5 (five) seconds Matrix 320 will exit without saving the parameters to memory, the Setup LED will stop blinking and in this case Matrix 320 emits a long low pitched beep.

Learn

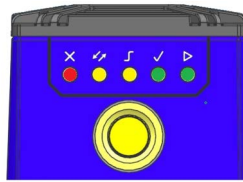


Figure 11 - X-PRESS Interface: Learn Function



7. Enter the Learn function by pressing and holding the X-PRESS push button until the Learn LED is on.
8. Release the button to enter the Learn function. The Learn LED will blink until the procedure is completed.
The Learn procedure ends when the Image Processing and Decoding parameters for **a single code** are successfully saved in the reader memory, the Green Spot is activated, the Learn LED will stop blinking and Matrix 320 emits 3 high pitched beeps¹. If the autolearning cannot be reached after a timeout of about 3 (three) minutes Matrix 320 will exit without saving the parameters to memory, the Learn LED will stop blinking and in this case Matrix 320 emits a long low pitched beep.



The Grade A Barcode Test Chart cannot be used to set the Code 128 symbology (even though the reader successfully reads the code). Use the application specific code if you need to set this symbology.



When using X-PRESS or the BM150 menu to perform Auto-Learn, only a single code can be configured (successive Learns will substitute the current code). To configure multiple codes, use the DL.CODE Auto-Learn procedure.



You can always exit from any X-PRESS function at any time by pressing the X-PRESS push button once. After a short delay the procedure is canceled.



If you have used this procedure to configure Matrix 320, go to step 9.

1. The Learn procedure will not recognize the following symbologies: Postal Codes, Pharmacode, MSI, Standard 2 of 5, Matrix 2 of 5.

Restore Reader to Default Environment (Optional)

If it ever becomes necessary to restore the reader's Environment parameters to their default values (including the default IP address), you can perform this procedure by holding the X-PRESS push button pressed while powering up the reader.

You must keep the X-PRESS push button pressed until all LEDs blink simultaneously, then release and re-press the button immediately. The Matrix 320 will emit a high pitched beep and after a few seconds enters run mode.

Any previously saved configurations on the device will remain in memory, but the Default configuration is set as the startup configuration.



NOTE

If you release the button while the LEDs are all on continuously (after the blinking phase), the reader will enter the Loader program sequence and the LEDs will begin to cycle through various patterns. Just cycle power to return to run mode.

STEP 5 - INSTALLING DL.CODE CONFIGURATION PROGRAM



DL.CODE does not currently support Windows Embedded (often used in industrial PCs and/or PLCs).

DL.CODE is a Datalogic reader configuration tool providing several important advantages:

- Intuitive Graphical User Interface for rapid configuration
- Defined configuration directly stored in the reader
- Discovery and IP address setting features to facilitate remote configuration
- Device Monitoring

To install DL.CODE

1. On the PC that will be used for configuration, (running Windows 7, 8.1, or 10), download the DL.CODE mini-DVD.zip file. Extract the files maintaining the folder structure and run the **start.hta** file to access the installation pop-up. Click on the **Install DL.CODE** link to run the installation program and follow the installation procedure.



To perform a “silent” installation (without user input), see the DL.CODE User’s Guide.

2. When the installation is complete the DL.CODE entry is created in the Start>Programs bar under “Datalogic” as well as a desktop icon. Double-click the desktop icon to run it.

This configuration procedure assumes a laptop computer, running DL.CODE, is connected to a factory default reader through the Ethernet port.

Ethernet Device Discovery



NOTE

To discover models through serial communication instead of Ethernet communication, refer to the DL.CODE User's Manual (par. "Serial Device Discovery").



NOTE

To discover models via web interface, refer to Configuration using Web Discovery, starting on page 31.

The User Interface opens and displays a list of all the devices belonging to the Local Area Network. DL.CODE has a discovery feature to accomplish this task.

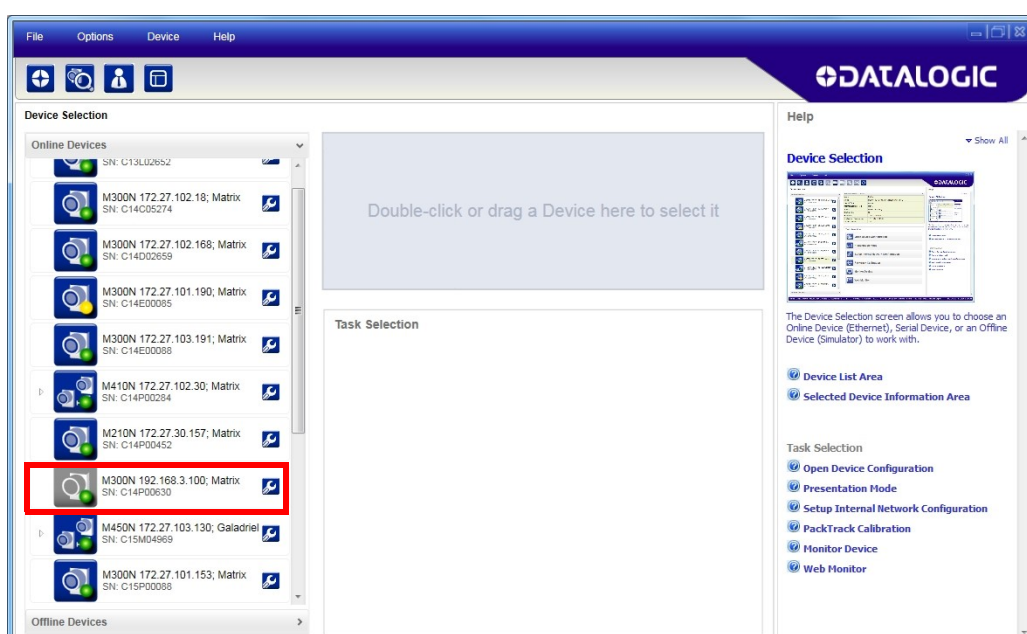


Figure 12 - Device Discovery

The discovery feature will also show devices not belonging to the LAN and display them in gray (see Figure 12).

3. First the device must be added to the LAN by aligning its IP Address to the network. The network administrator should provide valid LAN address(es).



4. Find your device in the list by matching its serial number (SN) then click on the device wrench icon to open the Device Environment Configuration window.
5. Change the Ethernet Settings (IP Address, Subnet Mask, Gateway Address etc.) according to the network requirements.


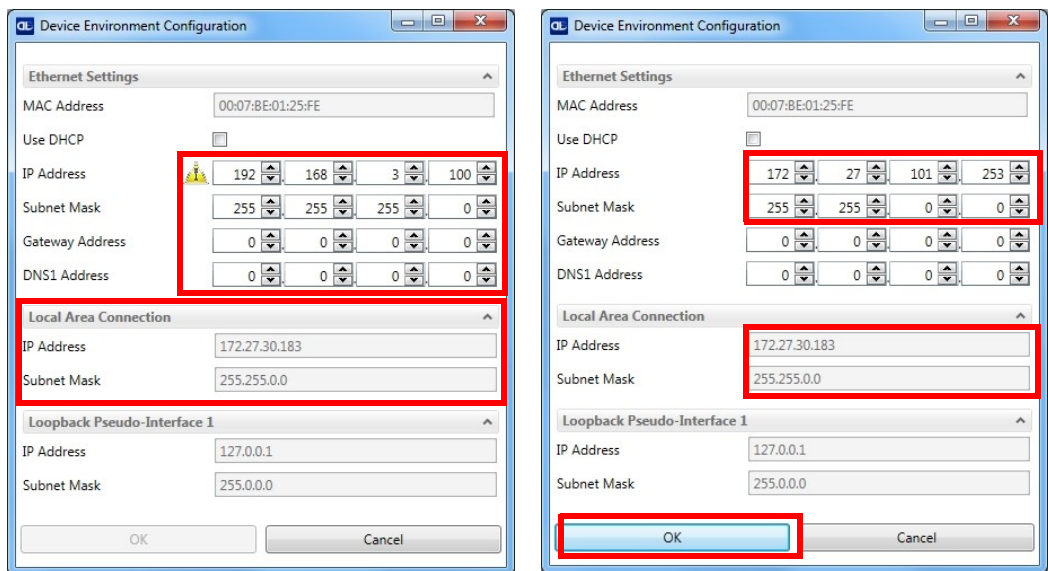


Figure 13 - Device Environment Configuration Window

6. Click OK; the device will reappear in the list of Online Devices (in color) meaning it is now part of the LAN and can be configured. The new IP address will also be displayed.

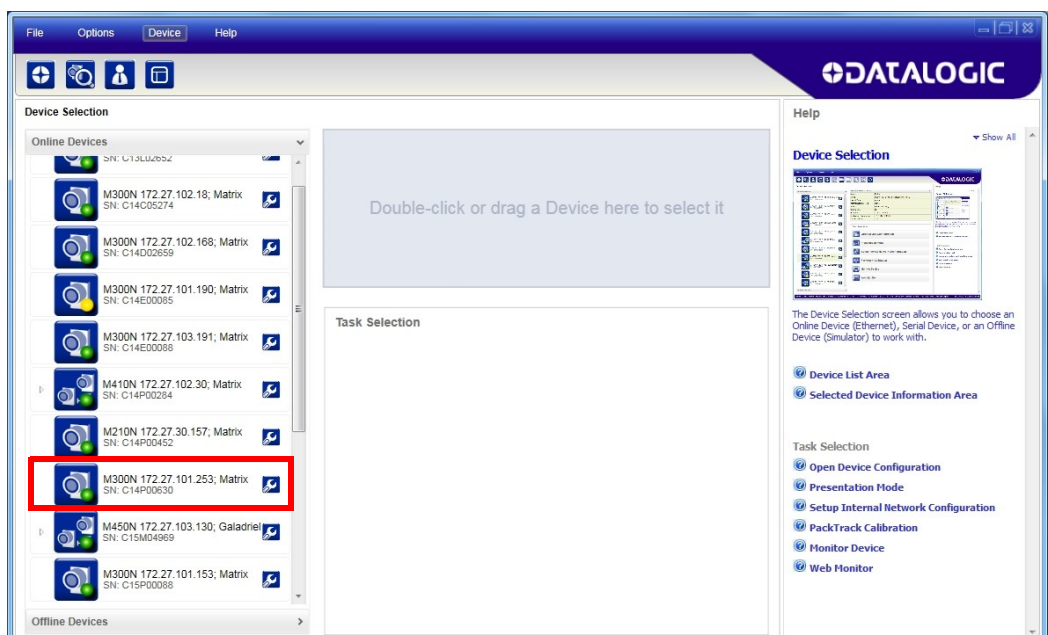

7. Double-click on or drag the device icon into the Selected Device Information Area. Details about the device will be displayed in this area.

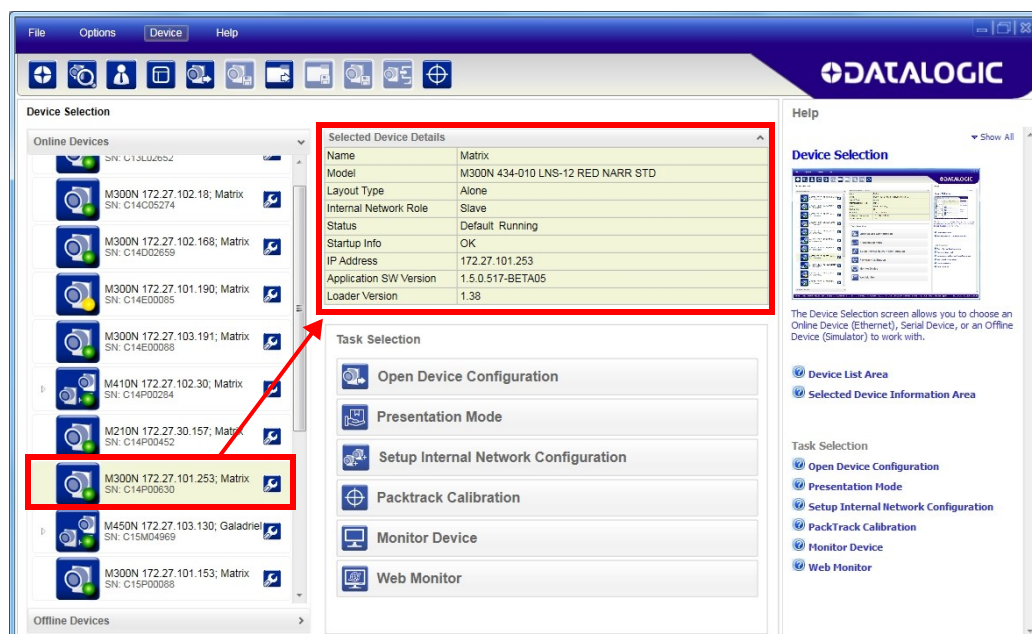


Figure 14 - DL.CODE Opening Window

STEP 6 - DEVICE CONFIGURATION

Automatic or Advanced Setup

Automatic Setup provides an automatic procedure for setting: optical/illumination, reading distance, and code definition parameters to obtain the most stable decoding conditions for a single code symbology based on the images presented to the reader. It can be set to include Image Filters if necessary. See the table below for codes and filters managed by Automatic Setup.

ENABLED 1D CODES	ENABLED 2D CODES	ENABLED FILTERS
CODE 128 EAN 128 CODE 39 CODE 93 CODABAR PDF417 MICRO PDF417 GS1 DATABAR GS1 DATABAR STACKED GS1 DATABAR LIMITED GS1 DATABAR EXPANDED GS1 DATABAR EXPANDED STACKED UPCEAN FAMILY EAN13 UPCEAN FAMILY EAN8 UPCEAN FAMILY UPCA UPCEAN FAMILY UPCE	DATAMATRIX ECC 200 QR MICRO QR AZTEC MAXICODE DOTCODE	ERODE 3x3, 5x5 and 7x7 DILATE 3x3, 5x5 and 7x7 SMOOTHING

Advanced Setup provides access to the complete array of optical/illumination, focusing adjustment, and code definition parameters that can be fine-tuned semi-automatically and manually to obtain the best results for applications of any complexity.




NOTE

If your application requires multiple code symbologies, multiple image settings, Code Grading or other parameter settings for decoding, then use the Advanced Setup, see page 16.

Automatic Setup

To begin configuration, the reader must be correctly mounted so that its Field of View covers the application reading area.


1. From the Task Area select Open Device Configuration.
2. The Open Device Configuration window opens showing the list of currently saved configurations (jobs) saved on the device. For new devices, the only saved job is the Default configuration. Click OK. The device enters run mode and begins acquiring images.

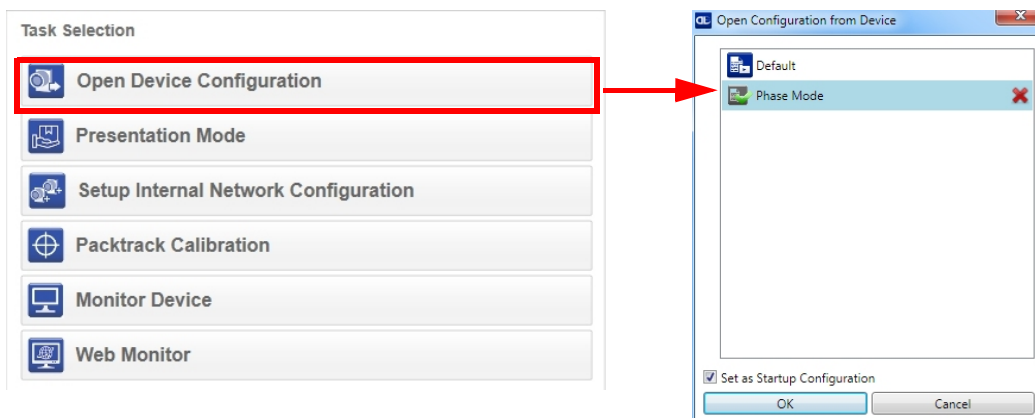

3. Place the application code in front of the reader at the correct application reading distance.




4. Click on the Pause button to stop image acquisition.

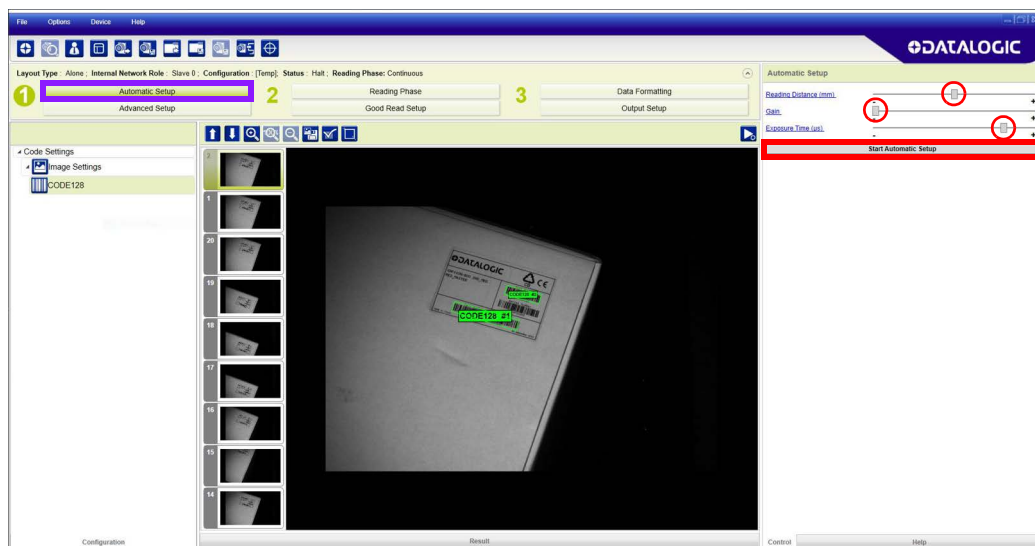


NOTE

If the image display area is too dark to see the images being captured, you can drag the Gain and Exposure Time sliders (circled in red in the figure above) to the right to increase visibility. This will not affect Automatic Setup.

- Click on the **Start Automatic Setup** button. The following window is displayed:

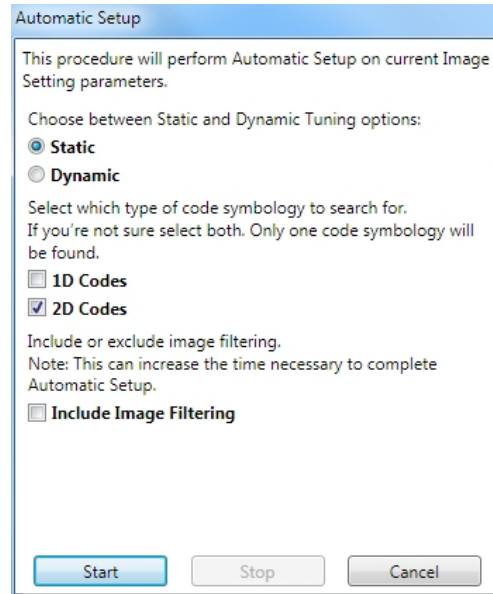


- Select the correct reading conditions: Static or Dynamic Tuning, 1D or 2D code, Include Image Filtering (to find the best decoding condition).
- Click Start to begin the procedure. The reader begins acquiring images. At the end of the procedure the **Status: Completed** message appears. You can Close the Automatic Setup window.

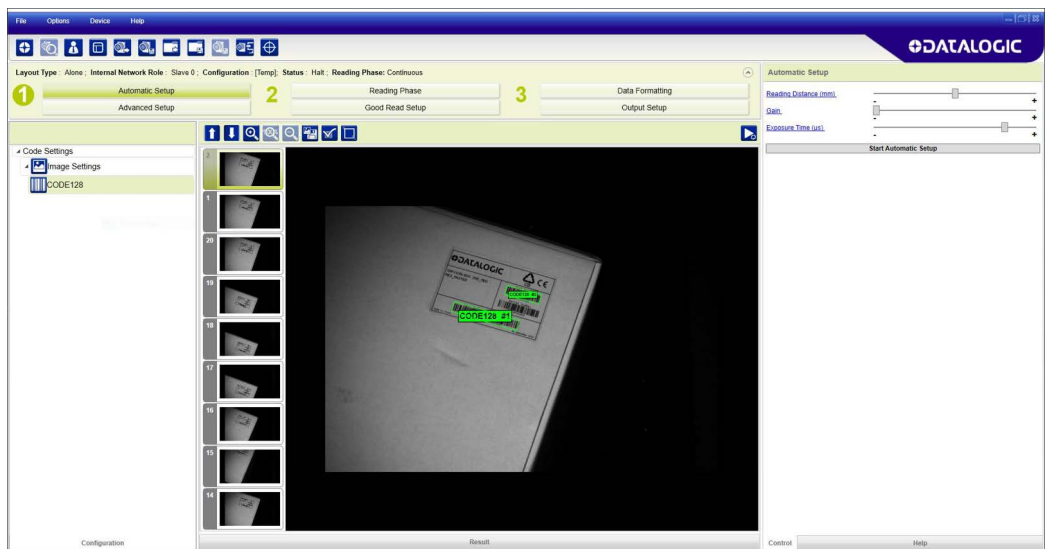

Your reader is now optimized for decoding. Continue with the Reading Phase configuration described on page 25.

Advanced Setup for **Software Adjustable Focus Models (Liquid Lens)**




NOTE

For Manual Adjustable Focus models, go to "Advanced Setup for Manual Adjustable Focus Models (C-Mount)" on page 22 then continue the configuration with the "Reading Phase" on page 25.

To begin configuration, the reader must be correctly mounted at the correct reading distance for your application so that its Field of View covers the application reading area.


1. From the Task Area select Open Device Configuration.
2. The Open Device Configuration window opens showing the list of currently saved configurations (jobs) saved on the device. For new devices, the only saved job is the Default configuration. Click OK. The device enters run mode and begins acquiring images.

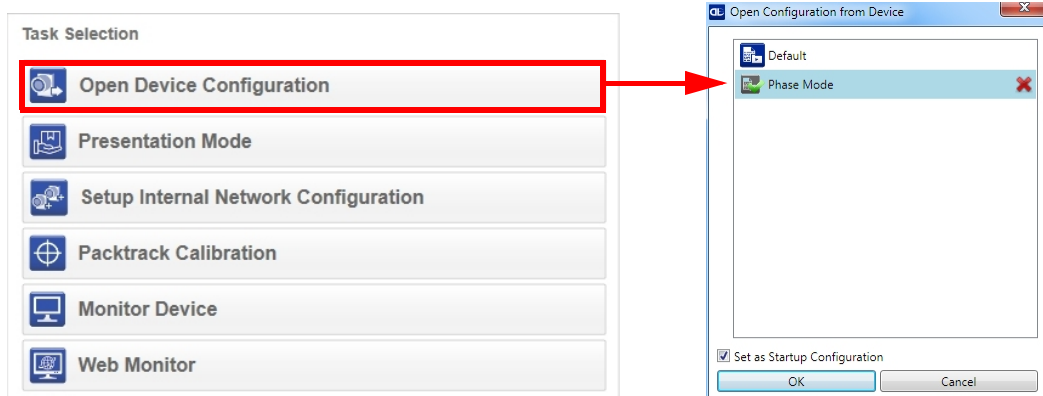


3. Click on the Advanced Setup button and press the Play icon.





4. Place the **Grade A Barcode Test Chart** in the reading area. Once positioned, stop image acquisition by clicking on the Pause button.

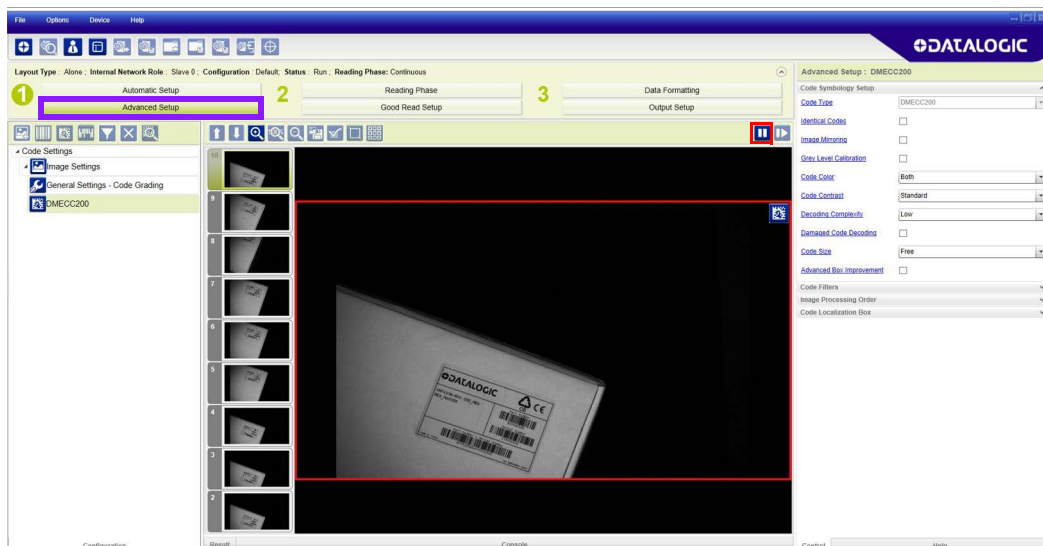

5. Click the Image Settings branch and then click the Image Auto-Setup button to automatically acquire the best exposure time and gain values. Select the Static or

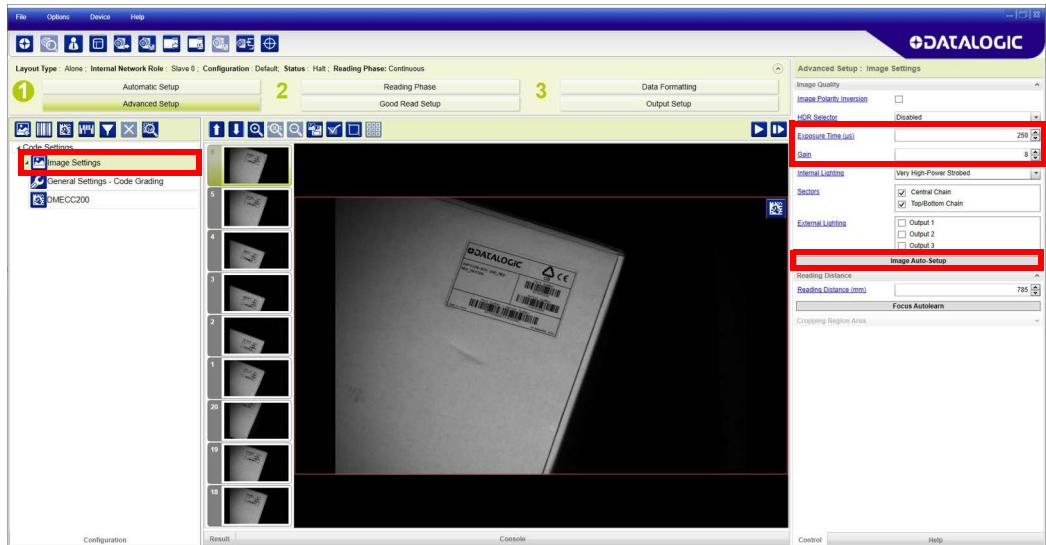

6. Dynamic Self-Tuning option; Start the Image Auto Setup and Apply to the Image Settings.

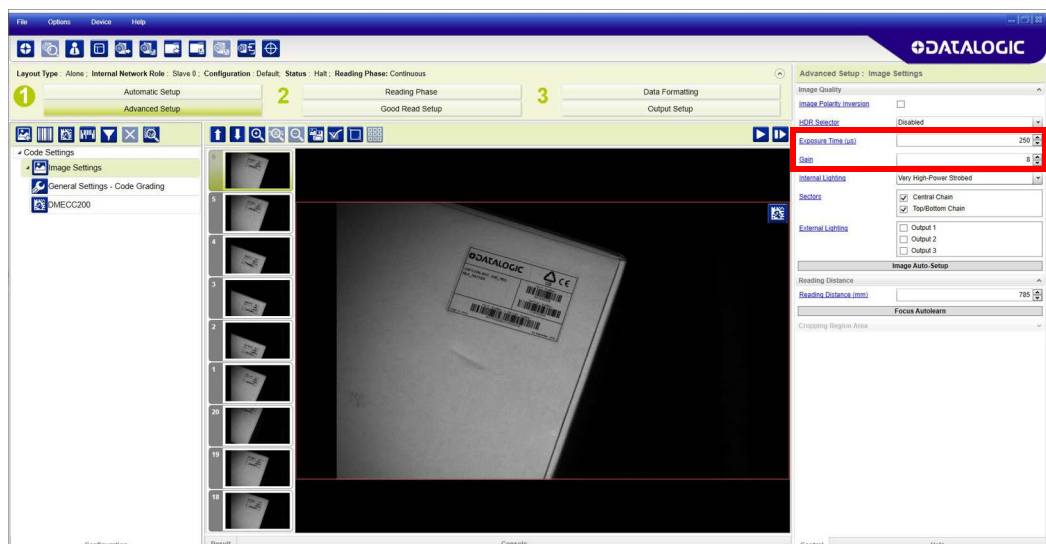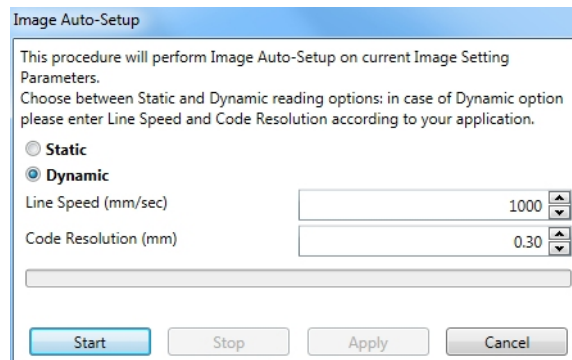


NOTE

For applications having multiple lighting or code reading conditions, up to 10 different Image Settings can be configured by adding them with the





icon.

- Now select the General Image Settings branch and click on the Focus Autolearn button.

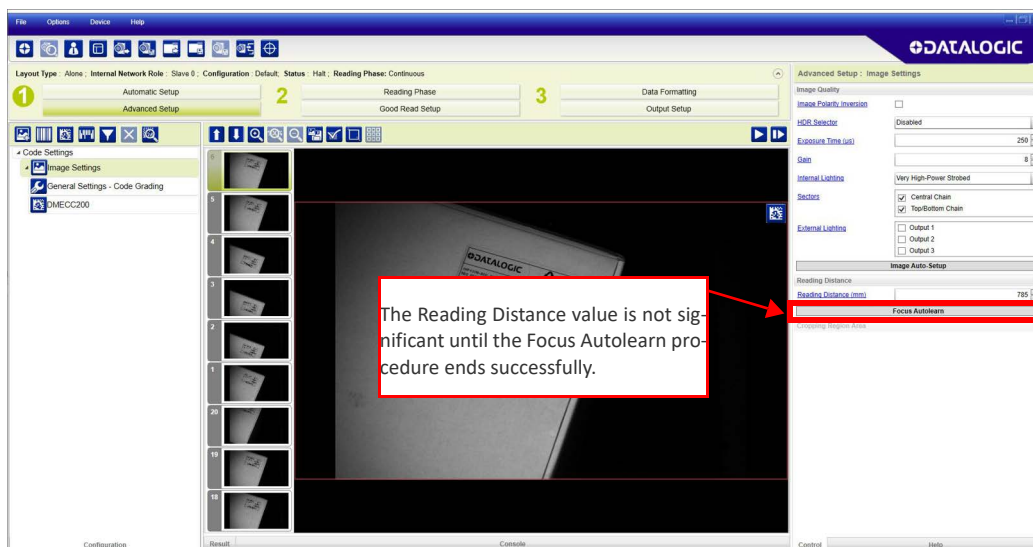


- The Calibrate dialog box opens allowing you to start the procedure. Click Start.

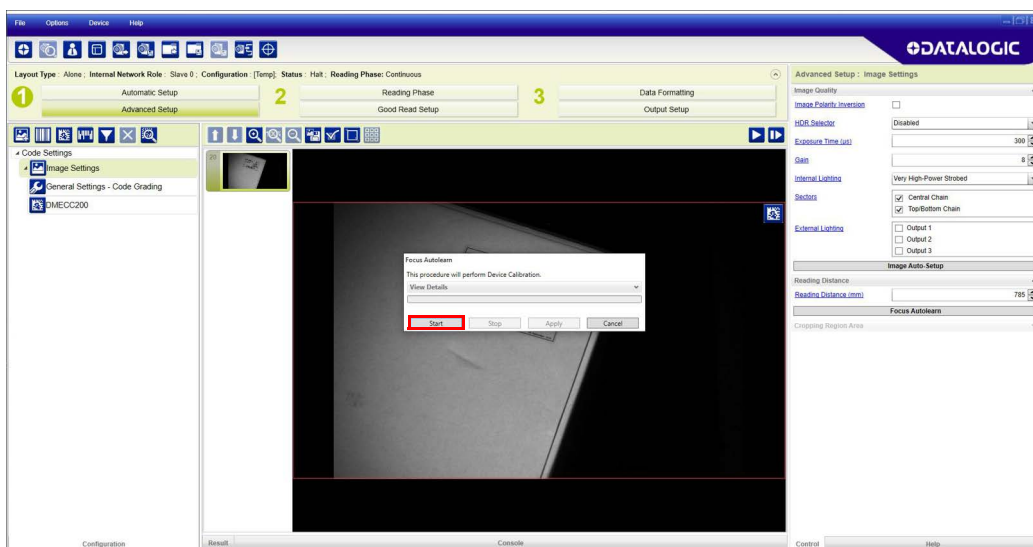


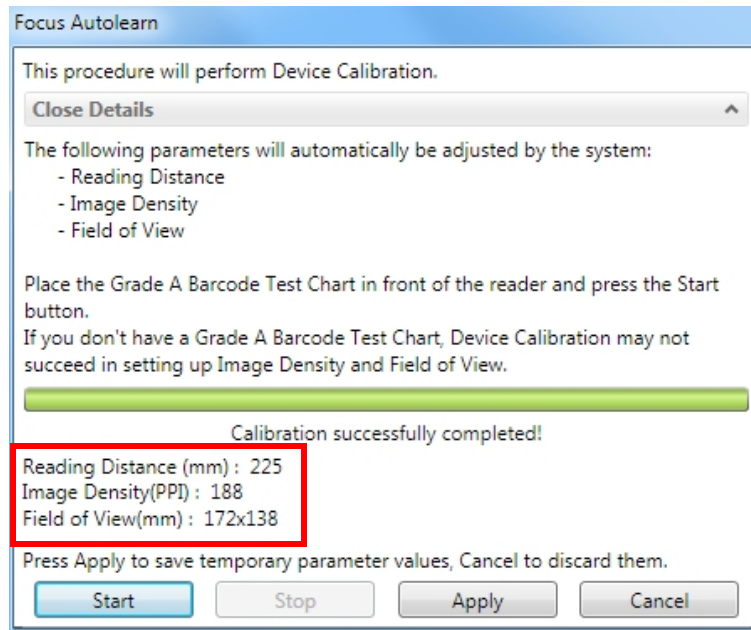

At the end of the calibration you can see the new Reading Distance. Click Apply.

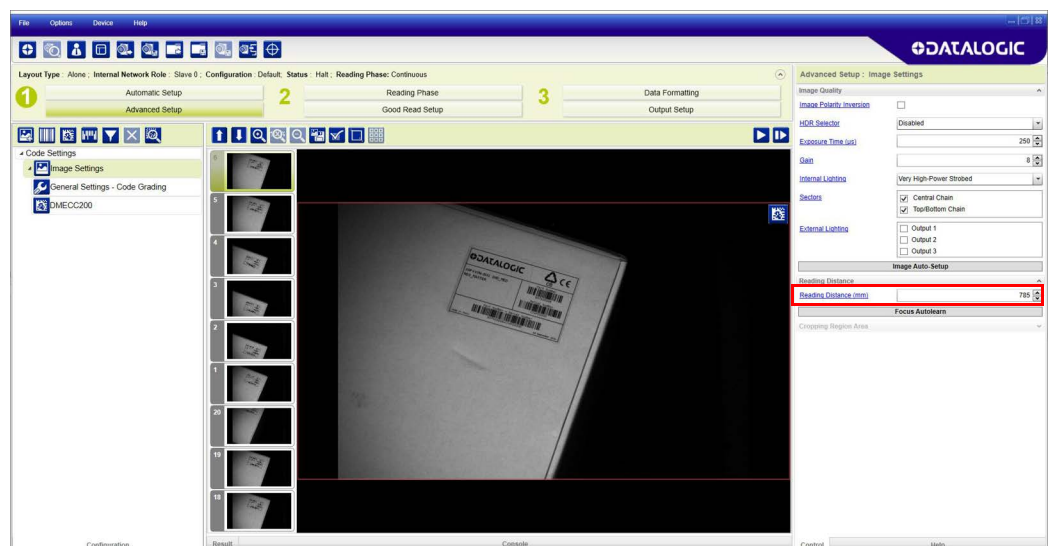


At this point it is probably a good idea to save the configuration from temporary memory to permanent memory giving it a specific name.

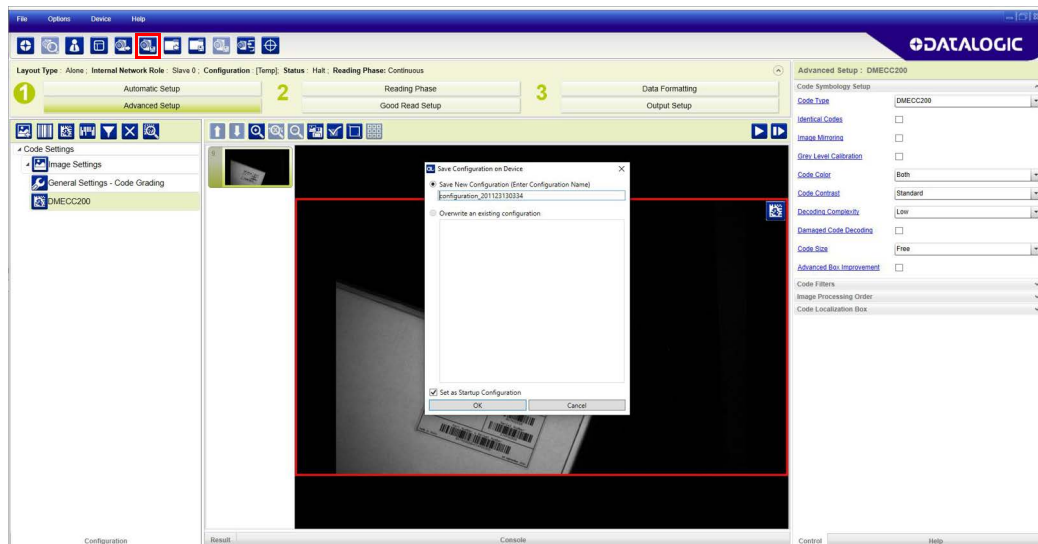

9. Now place an **application specific code** in front of the reader and repeat **only** the **Image Auto-Setup** to register any changes in lighting or code surface contrast. **Do not repeat Focus Calibration or PPI.**

10. Click on the Data Matrix ECC 200 symbology under the Image Settings branch (enabled by default). If this symbology is among those in your application it will be shown in the image display with its code symbology name and a small green box around it indicating it is decoded.

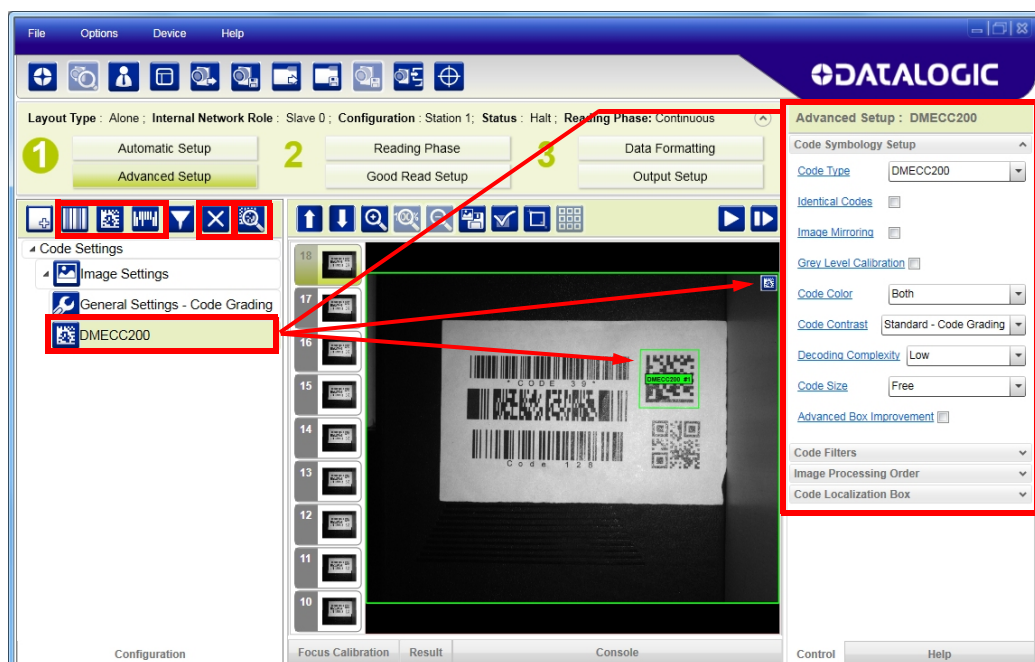

NOTE

The large green box for each symbol indicates the code localization area which by default is equal to the maximum FoV. It can be resized and moved by dragging its borders with the mouse. The code must be found within this area in order to be decoded.



11. Add your application specific codes to the Code Settings by selecting them from the icons over the Configuration Parameters tree area. If the Data Matrix symbology is not used, then delete it from the Code Settings with the Delete icon.



- If you don't know the code type, you can use the Code Autolearn feature by clicking on the Code Autolearn icon.¹ See the DL.CODE User's Manual for details.
12. For each code symbology set the relative parameters according to your application.

1. The Code Autolearn procedure will not recognize the following symbologies: Pharmacode, MSI, Standard 2 of 5, Matrix 2 of 5.

Advanced Setup for **Manual Adjustable Focus Models (C-Mount)**




NOTE

For Software Adjustable Focus models, go to "Advanced Setup for Software Adjustable Focus Models (Liquid Lens)" on page 16 then continue the configuration with the "Reading Phase" on page 25.

To begin configuration, the reader must be correctly mounted at the correct reading distance for your application so that its Field of View covers the application reading area.

1. Set the Diaphragm to suit your application and block the lens ring.
2. From the Task Area select Open Device Configuration.
3. The Open Device Configuration window opens showing the list of currently saved configurations (jobs) saved on the device. For new devices, the only saved job is the Default configuration. Click OK. The device enters run mode and begins acquiring images.

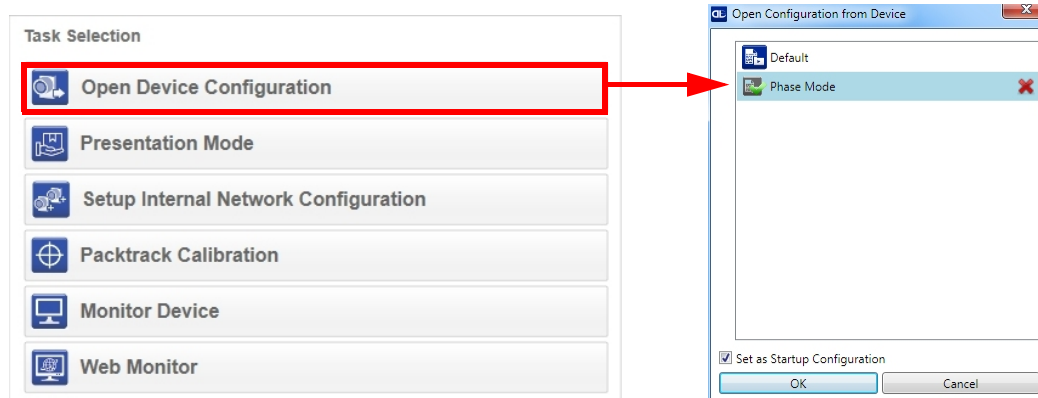

4. Click on the Advanced Setup button and select the **Focus Calibration** tab at the bottom of the window. Click on the Start button to start image acquisition. The oscilloscope view is shown in the bottom panel and can be used for manual focus adjustment.

How the oscilloscope works

The oscilloscope view shows the white level of the pixels correspondent to the red line on the image. Throughout the focus setup, the oscilloscope view will display a real-time focus index (computed on the red line of the image) and the peak value (correspondent to the maximum index value reached from the beginning of the procedure). The focus index must be maximized to get the best focus for the target distance.

Rotate the Focus lens ring monitoring the numbers reported in DL.CODE until the focus index is set at its maximum and equal to the peak value.

Color information is added to the numbers to facilitate setup: the focus index will be colored green when close to the peak value, orange or red when far from the maximum value.




NOTE

It is suggested to first sweep the focus ring through the whole range in order to identify the peak value.


**NOTE**

If the peak value needs to be reset, the reader will acquire some dark images with low illumination.


- Place the **Grade A Barcode Test Chart** in the reading area. Once positioned, stop image acquisition by clicking on the Pause button.

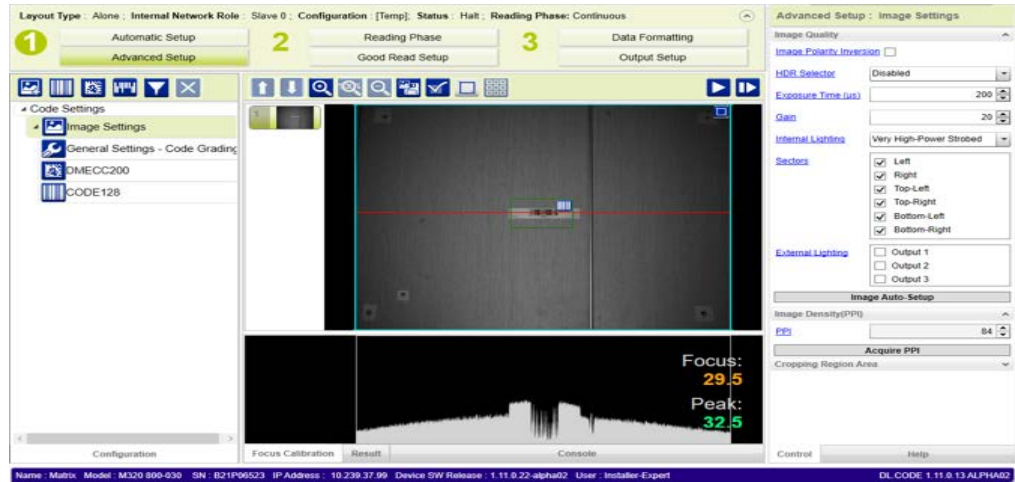**NOTE**

We suggest cropping the sensor reading area around the barcode to get a higher frame rate and ease the focus setup. When cropping the image, please use the minimum possible value of Gain, increasing the Exposure Time if necessary.

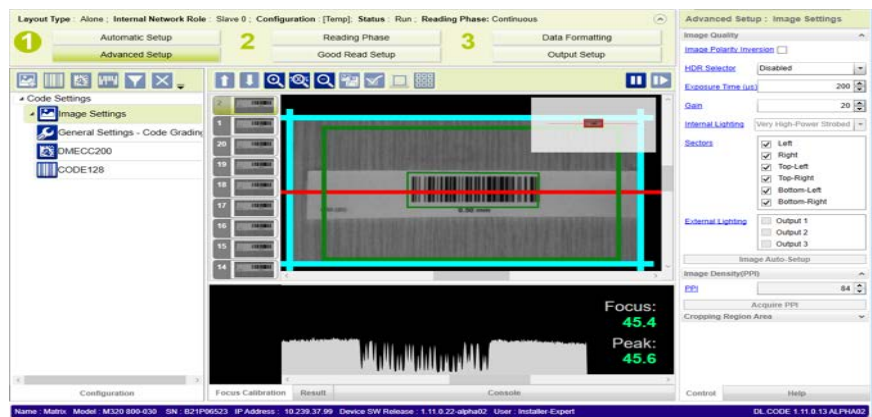


- Rotate the Focus lens ring and monitor the number reported in DL.CODE until it reaches its maximum.

**NOTE**

To uncrop the sensor reading area, right click on the box on the top right corner of the cropping region and select *Maximize all*.



- Click the **Acquire PPI** button to automatically set the Image Density so that Matrix 320 will function correctly and to the fullest extent of its capabilities. This procedure is necessary for first time installation, or if the focal distance changes.

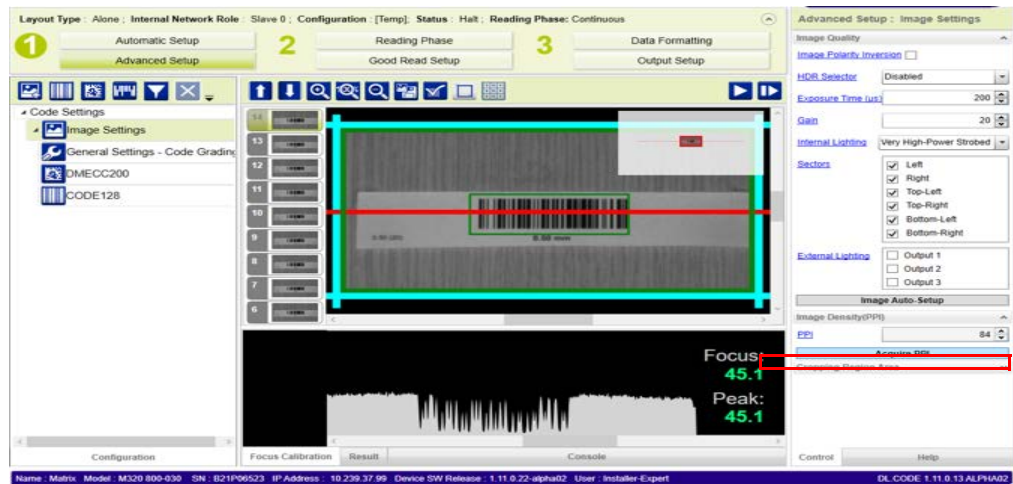**NOTE**


After the Focus Calibration procedure:

- make sure that both Focus and Diaphragm lens rings are blocked;
- if using an embedded 36 LED illuminator, mount the adapter side covers.

Refer to Matrix 320 C-Mount Mounting Instructions, starting on page 77 for more details.

Reading Phase


1. Select your application specific Operating Mode from the icons over the Configuration Parameters tree area: Continuous, One Shot, Phase Mode or PackTrack.

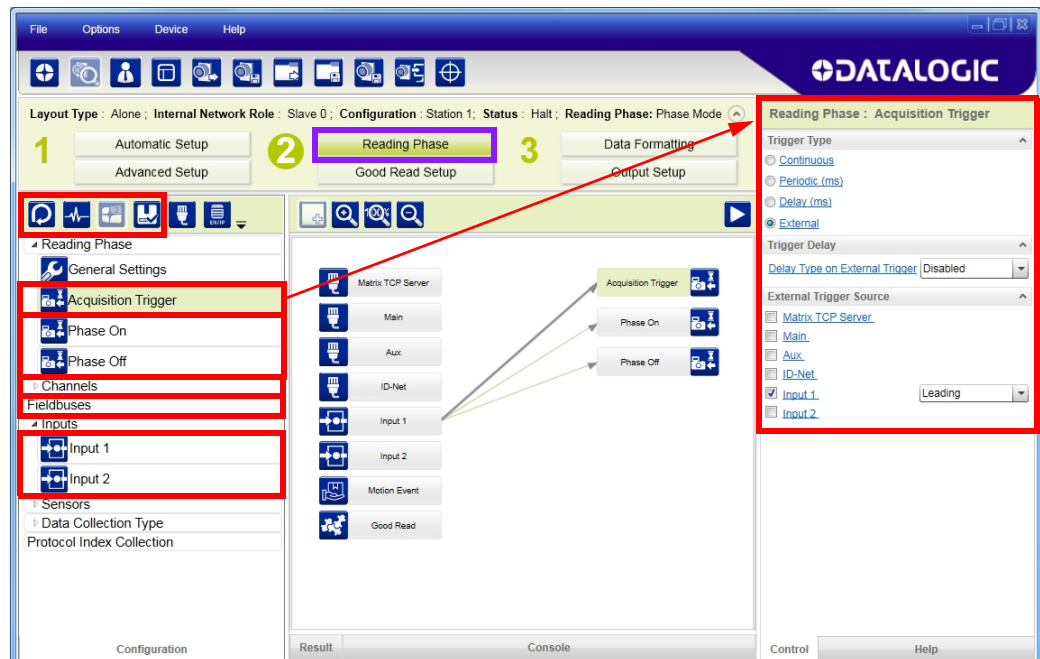


2. Configure the relative Operating Mode parameters from the Reading Phase parameters panel. Different groups will appear in the panel depending on the selected icons over the Configuration Parameters tree area.

Good Read Setup

1. Select your specific data collection type from the icons over the Configuration Parameters tree area: Code Collection, Code Combination, Presentation or Match Code. Not all data collection types are available for all Operating Modes; for example PackTrack Operating Mode only supports Code Combination. Incompatible data collection types will be shown in gray and cannot be selected. The following example shows Code Combination. By default, the Expected Codes (when more than one code type is selected), are in logical AND, which means that all codes are required to be decoded to produce a Good Read condition.

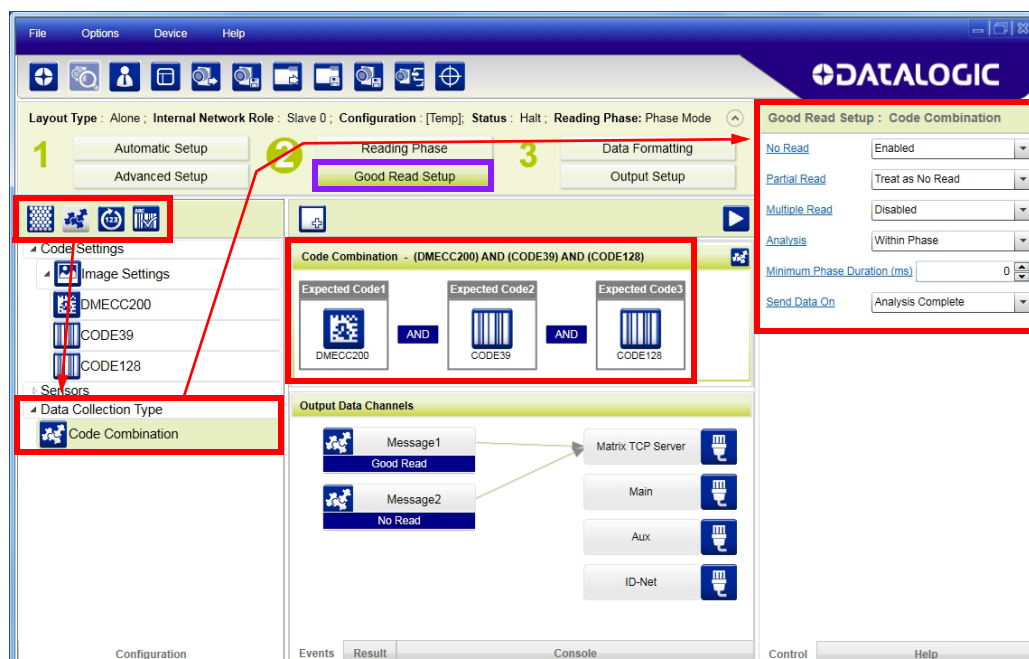


2. If a Good Read condition should be produced when any single code is decoded, independent from the others, then they need to be combined in logical XOR. To do this, drag the code icon(s) from their relative Expected Code box into the Expected Code box of the XOR combination you wish to create. Then delete the empty box by selecting it with the mouse (highlighted) and pressing the delete key on your keyboard.

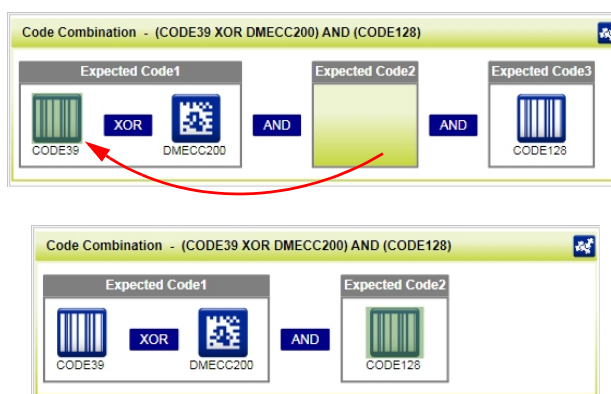




To create a logical AND condition from a logical XOR, create a new Expected Code box using the Add icon. Then drag the desired code icon from one box to the other.

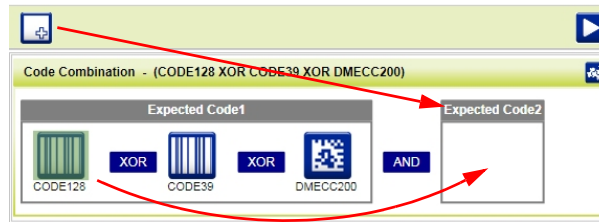

Data Formatting

1. Configure your application specific Data Formatting Message(s) from the Configuration Parameters tree area: Message 1, Message 2, etc.

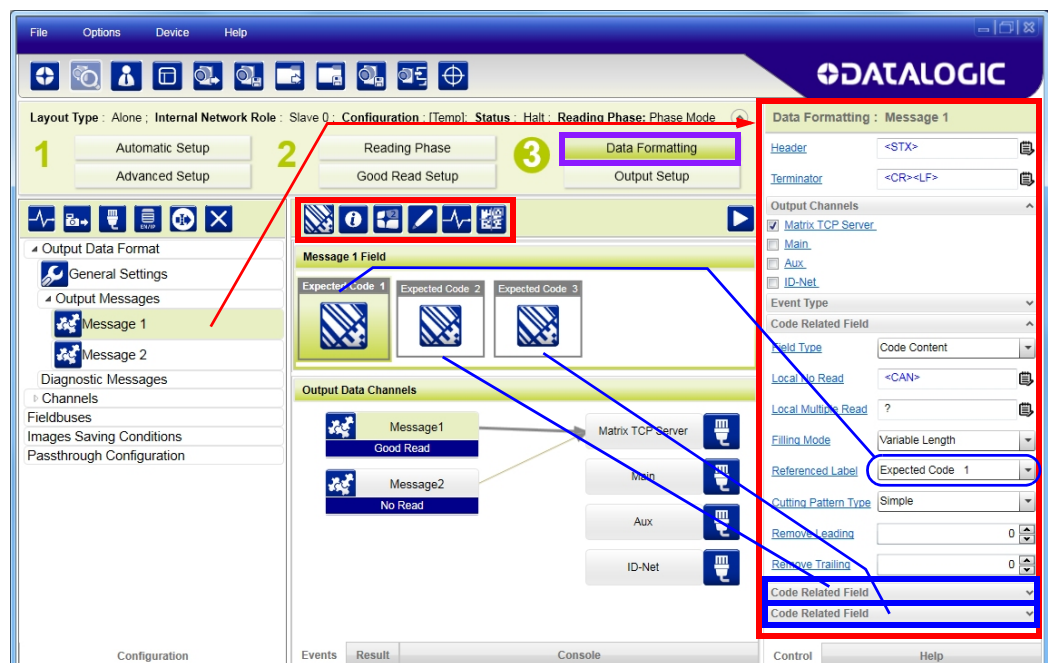


You can add fields to the output message by clicking on the icons above the Message Field area. They will be appended to the message. You can drag them to position them between other fields in the message so that the output message is ordered according to your application requirements.

Each field has its own relative configuration parameters in the parameters panel.

Output Setup

1. Configure your application specific Digital Output(s), Green/Red Spots and 360° Feedback (if used) from the Configuration Parameters tree area: Output 1, Output 2, etc.

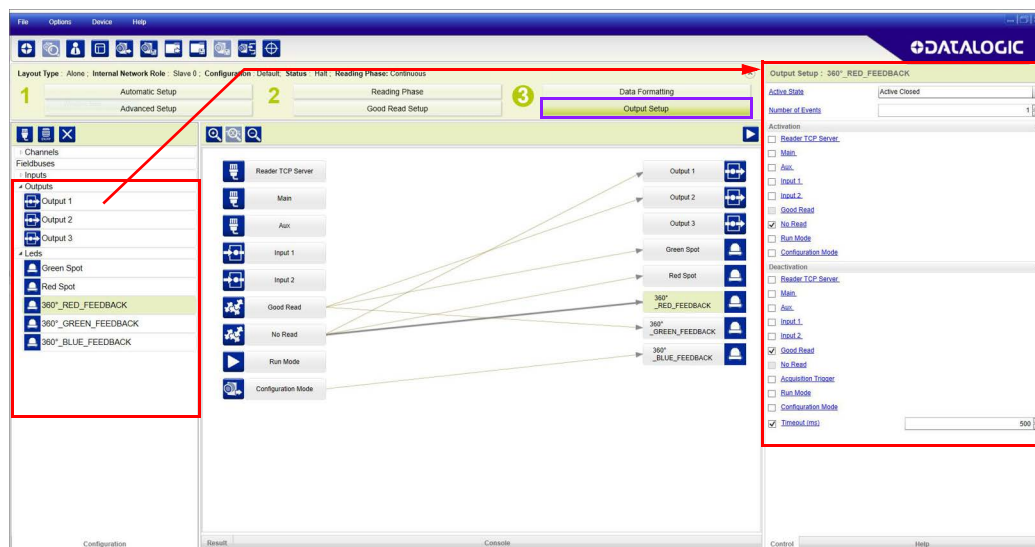

NOTE

Save the configuration from temporary memory to permanent memory, overwriting the previously saved configuration.

STEP 7 - TEST MODE

Use a code suitable to your application to test the reading performance of the system.

1. Enter the *Test* function by pressing and holding the X-PRESS push button until the Test LED is on.
2. Release the button to enter the *Test* function.
Once entered, the Bar Graph on the five LEDs is activated and if the reader starts reading codes the Bar-Graph shows the Good Read Rate.

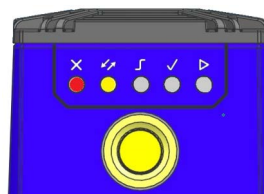


Figure 15 - X-PRESS Interface: Test Function


3. To exit the Test, press the X-PRESS push button once.



NOTE

By default, the Test exits automatically after three minutes.

The Bar Graph has the following meaning:

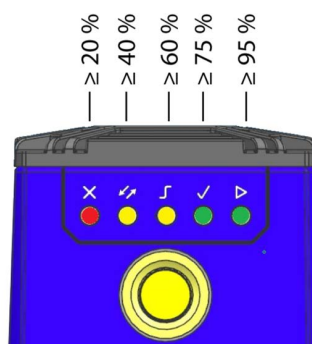

In case of No Read condition, only the STATUS LED (red) is on and blinks.

ADVANCED READER CONFIGURATION

For further details on advanced product configuration, refer to the DL.CODE User's Guide available in the DL.CODE Help menu.


Host Mode Programming

The reader can also be partially configured from a host computer using the Host Mode programming procedure.

CONFIGURATION USING WEB DISCOVERY

Devices can be discovered via web interface. To do this, from either the Host PC or configuration PC connected to the network, open your browser and go to <http://data-logic.local/>.

This page shows all devices available in the network:

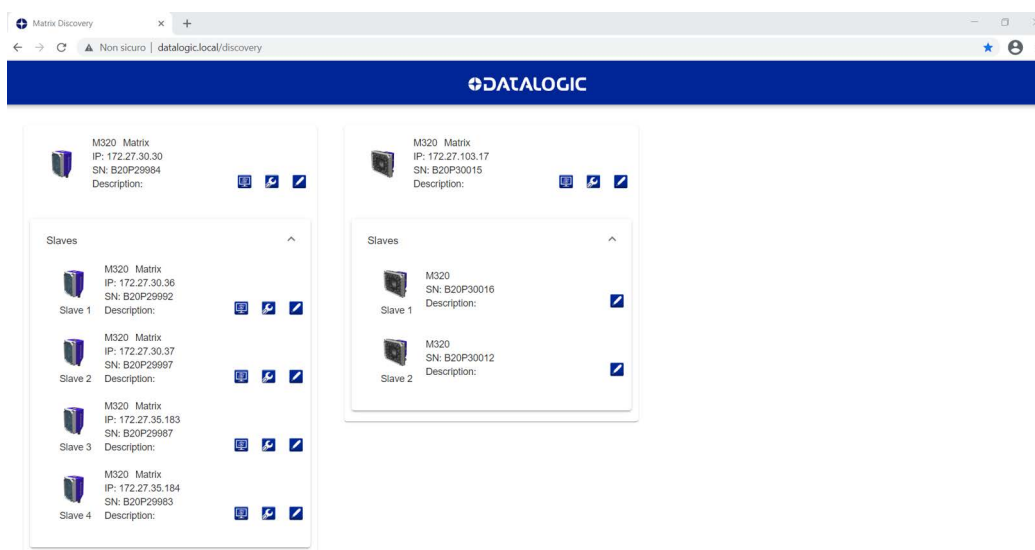




Click on the wrench icon and input the correct IP Address settings (from network administrator) and optional Device Description for each reader.



At least one device must be reachable from the user PC. For example, if there are several subnetworks, at least one device must be in the same subnetwork of the PC.

The following functions are available for each discovered device:

	<p>Open the Web Monitor page of the selected device. Refer to the DL.CODE User's Manual for more information on this remote monitoring tool.</p>
	<p>Display and configure the Ethernet settings, as shown in the figures below (left: device in DHCP mode^a; right: device in Static mode):</p> <div style="display: flex; justify-content: space-around; align-items: flex-start;"> <div data-bbox="699 1738 983 1957" style="border: 1px solid #ccc; padding: 10px; width: 45%;"> <p style="text-align: center; background-color: #0056b3; color: white; margin: -10px -10px 10px -10px;">Ethernet Settings</p> <p>MAC Address <input type="text" value="00:07:BE:09:07:CF"/></p> <p>Use DHCP <input checked="" type="checkbox"/></p> <p style="text-align: center; background-color: #0056b3; color: white; margin-top: 10px;">OK</p> <p style="text-align: center; background-color: #0056b3; color: white; margin-top: 5px;">Cancel</p> </div> <div data-bbox="1035 1603 1319 1951" style="border: 1px solid #ccc; padding: 10px; width: 45%;"> <p style="text-align: center; background-color: #0056b3; color: white; margin: -10px -10px 10px -10px;">Ethernet Settings</p> <p>MAC Address <input type="text" value="00:07:BE:07:AB:AB"/></p> <p>Use DHCP <input type="checkbox"/></p> <p>IP Address <input type="text" value="192.168.3.100"/></p> <p>Subnet Mask <input type="text" value="255.255.255.0"/></p> <p>Gateway Address <input type="text" value="0.0.0.0"/></p> <p>DNS1 Address <input type="text" value="0.0.0.0"/></p> <p style="text-align: center; background-color: #0056b3; color: white; margin-top: 10px;">OK</p> <p style="text-align: center; background-color: #0056b3; color: white; margin-top: 5px;">Cancel</p> </div> </div>

	<p>Set the device description. In case of Slave devices, this button is only available if the corresponding Master device is reachable.</p> <div data-bbox="820 224 1112 403"><p>Device Description</p><p>Device Description: <input type="text"/></p><p>OK</p><p>Cancel</p></div>
---	--

- a. Use DHCP addressing only if the network is connected to a DHCP Server.

CHAPTER 2

INTRODUCTION

PRODUCT DESCRIPTION

Matrix 320 is a Datalogic industrial compact 2D imager designed and produced to be a high performance affordable solution for both linear and two-dimensional code reading applications.

Matrix 320 uses imaging technology and provides complete reading system functions by integrating image capturing, decoding and communicating in a single compact and versatile product.

Matrix 320 sets a new standard in 2D imager technology offering high performance with improved reading flexibility thanks to its intrinsic modularity.

Matrix 320 features excellent reading and verifying performance thanks to a superior 2.0 Mega pixel sensor (1920 x 1080 pixels) and smart proprietary decoding libraries.

The modular combination of lenses, illumination, filters, and accessories provide high flexibility in covering applications with various requirements.

Innovative X-PRESS™ interface, combined with a new aiming system, Green and Red Spots, and new 360 degree Visual Feedback through colored LEDs, enhance the ease of setup and use.

Rugged construction, IP67 and IP65 protection and max. 45°C operative temperature make the Matrix 320 the ideal product for industrial applications. Matrix 320 has been developed for use in numerous industries such as:

Factory Automation

- End of line traceability
- Secondary packaging traceability
- Print & Apply
- WIP traceability (automatic)
- Component/part traceability
- Direct Part Marking (DPM) reading

Intralogistic Automation / Automated Warehouses / Distribution Centers

- Reverse Logistics
- Retrieval for outbound (forklift)
- Pallet traceability / pallet wrapping
- Palletizing (automatic or manual) / cage preparation
- Order fulfillment (automatic or manual)
- Depalletizing - Part traceability
- Print & Apply verification (re-labeling)

- Inbound/pallet picking (forklift)

This technology intrinsically provides omni-directional reading.

Standard Application Program

A Standard Application Program is factory-loaded onto Matrix 320. This program controls code reading, data formatting, serial port and Ethernet interfacing, and many other operating and control parameters. It is completely user configurable from a Laptop or PC using the dedicated configuration software program DL.CODE, provided on the DL.CODE mini-DVD (downloaded .zip file).

There are different programmable operating modes to suit various code reading system requirements.

Quick, focus, positioning, calibration and code setting of the imager can be accomplished using the X-PRESS™ button and LEDs on top of the reader without the necessity of a PC.

The previous functions can also be performed through DL.CODE which includes visual feedback from the reader. This allows verification of the exact positioning of the reader and to maximize its reading performance.

Statistics on the reading performance can also be visualized through a dedicated window in DL.CODE.

Programmability

If your requirements are not met by the Standard Application Program, Custom Application Programs can be requested at your local Datalogic distributor.

Some of the main features of this reader are given below.

Excellent Performance

- Multi-core platform
- Superior 2 MPixel sensor (1920 x 1080 pixels)
- Frame Rate up to 60 frames/sec
- Hardware acceleration
- HDR (High Dynamic Range) imaging
- Powerful Internal Lighting Systems
- Electronic focus adjustment with Liquid Lenses
- Many illuminator options (up to 36 LEDs + TIR lenses)
- Outstanding decoding capability on 1D, 2D, Stacked, Postal symbologies
- Excellent performance on DPM applications
- Omni-directional reading
- Image Cropping for higher frame rate
- Up to 100 readable codes in a single frame

Ease of Setup and Use

- Quick installation without PC by using X-PRESS interface for easy and intuitive setup
- Automatic Imager calibration
- Multi-Code settings and Autolearn

- New generation FTP image saving
- Enhanced Green/Red Spot for immediate read feedback
- New 360 degree Visual Feedback provides immediate feedback on the device status during operation
- X-PRESS™ interface LEDs provide operational and performance feedback
- Aiming system with cross projection to verify exact code positioning in the Field of View and to maximize the reading performance
- Windows-based DL.CODE software to configure the reader parameters via PC Ethernet interface
- User-defined database of Image Acquisition Settings (parameter sets)
- Different operating modes to suit various application requirements
- Multi Image Acquisition Settings for higher reader flexibility
- Image saving and storage with buffering capability
- Diagnostic software tools

Flexible Solution

- Modular design
- Accessory covers for Polarized and Standard illumination
- Accessory filters: anti-YAG, color filters
- Many illuminator lights in 2 different power options (14 LEDs and 36 LEDs)
- Compact dimensions and rotating connector for easy integration

Connectivity

- Main M12 17-pin male connector
- Industrial connectivity (Serial, Giga Ethernet, Embedded Fieldbus)
- Compatible with EBC network via EBC Quick Link
- Ethernet Connectivity with TCP/IP socket for reader parameter configuration, data and image transfer, FTP client, etc.
- On-board Ethernet supports EtherNet/IP (explicit messaging), PROFINET I/O, Modbus TCP, SLMP protocols, and OPC UA protocols.
- 3 serial communication interfaces (Main, Auxiliary, ID-NET)
- 2 General purpose opto-coupled, polarity insensitive Inputs
- 3 General purpose, short-circuit protected Outputs (when using the CBX connection box, the first 2 outputs are opto-coupled)
- Giga Ethernet connector

Industrial Strength

- Industrial compact 2D reader
- Rugged construction
- Sealed circular M12 connectors
- IP67 and IP65 protection class
- 0 to 45 °C (Liquid Lens models) operating temperature
- Supply voltage: 24 Vdc

The reader is particularly suitable for industrial environments where protection against harsh external conditions is required.

The reader is contained in an aluminum housing; with its internal illuminator, Liquid Lens and protective cover, the mechanical dimensions are 109 x 54 x 56 mm for the 14 LEDs model and 116 x 126 x 70 mm for the 36 LEDs model.

Electrical connection of Power, Serial interfaces and I/O signals is provided through an M12 17-pin connector. An M12 X-Coded Giga Ethernet connector is present for TCP/IP connections.

INDICATORS AND KEYPAD BUTTON

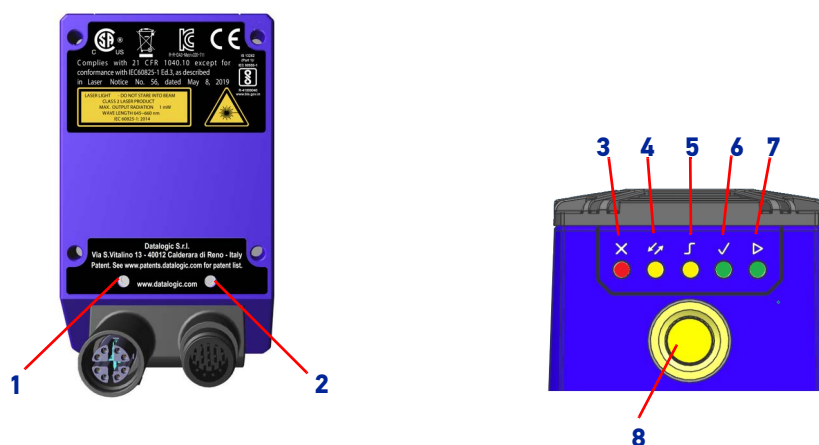


Figure 16 - Indicators

The following LED indicators are located on the reader:

PWR	blue LED indicates that the reader is connected to the power supply (Figure 16, 1)
NET	yellow LED indicates connection to the on-board Ethernet network (Figure 16, 2)

In normal operating mode the colors and meaning of the five LEDs are illustrated in the following table:

STATUS		red LED indicates a NO READ result (Figure 16, 3)
COM		yellow LED indicates active communication on the main serial port * (Figure 16, 4)
TRIGGER		yellow LED indicates the status of the reading phase (Figure 16, 5)
GOOD		green LED confirms successful reading (Figure 16, 6)
READY		green LED indicates that the reader is ready to operate (Figure 16, 7)

* When connected to a Fieldbus network through the CBX500, the COM LED is always active, even in the absence of data transmission, because of polling activity on the Fieldbus network.

During the reader startup (reset or restart phase), these five LEDs blink for one second.

In X-PRESS Configuration mode the colors and meaning of these five LEDs are described in X-PRESS Human Machine Interface.

The keypad button (Figure 16, 8) is software programmable. By default it starts the X-PRESS interface for quick installation without using a PC (see "[Step 3A - Aim and Autofocus the reader](#)" on page 3).

GREEN/RED SPOT AND 360° VISUAL FEEDBACK

Matrix 320 is equipped with a Green/Red Spot and 360° Visual Feedback through colored LEDs mounted around the illuminator window cover to provide immediate feedback on the device status during operation.


The available colors are activated by the following default events:

- **Blue** = Configuration Mode (Visual Feedback only)
- **Green** = Good Read
- **Red** = No Read



Figure 17 - 360° Visual Feedback and Green/Red Spot

On DL.CODE it is possible to select the events that will activate each Spot and 360° Feedback (e.g. Communication Channel Strings, Inputs, Read Events, Operating Mode, Script Events). To do this, go to Output Setup > LEDs.

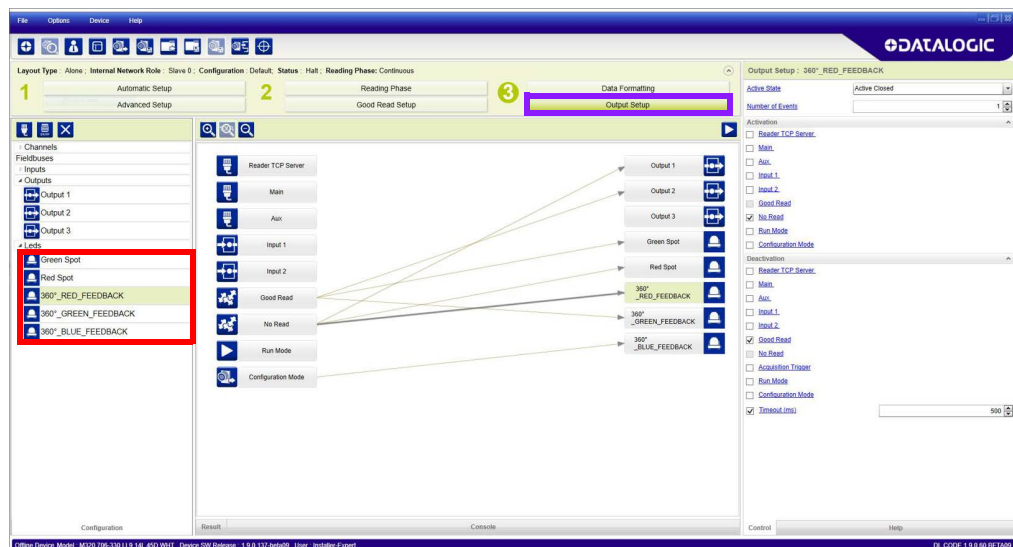


DISTANCE SENSOR

Matrix 320 C-Mount with 36 LEDs illuminator is equipped with a TOF Distance Sensor to detect target distance and optimize photometric parameter configuration for the best reading performance and increased depth of field.

The distance sensor can generate Distance Events to be used as triggers for phase/acquisition. Refer to DL.CODE Help Online for more details.



The distance sensor can also be used to easily change the Image Settings of your reader. In DL.CODE, set “Distance Ranges” as Image Settings Selection value. This way, the order in which Images Settings are processed is determined based on the distance measured by the distance sensor.

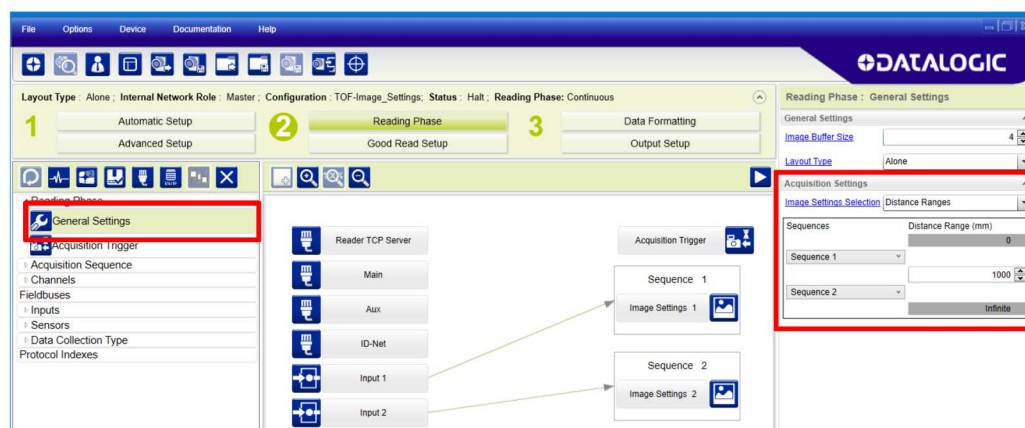


ID-NET

The ID-NET™ network is a built-in high-speed interface dedicated for high-speed reader interconnection. ID-NET is in addition to the Main and Auxiliary serial interfaces.

The following network configurations are available:

- **ID-NET Synchronized:** Single station – multiple readers

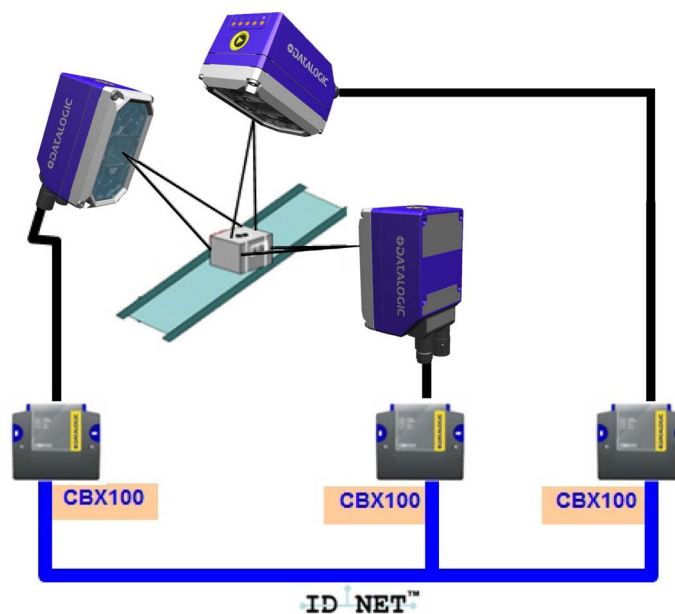


ID-NET interface allows local connection of multiple readers reading different sides of the same target. All readers share a single presence sensor and activate/deactivate simultaneously.

At the end of each reading phase a single data message is transmitted to the host. Thanks to ID-NET, data communication among readers is highly efficient so that an immediate result will be available.

See "ID-NET Interface" on page 95 for connection details and "Internal Network Configurations" on page 159 for configuration details.

- **ID-NET Multidata:** Multiple stations – single reader

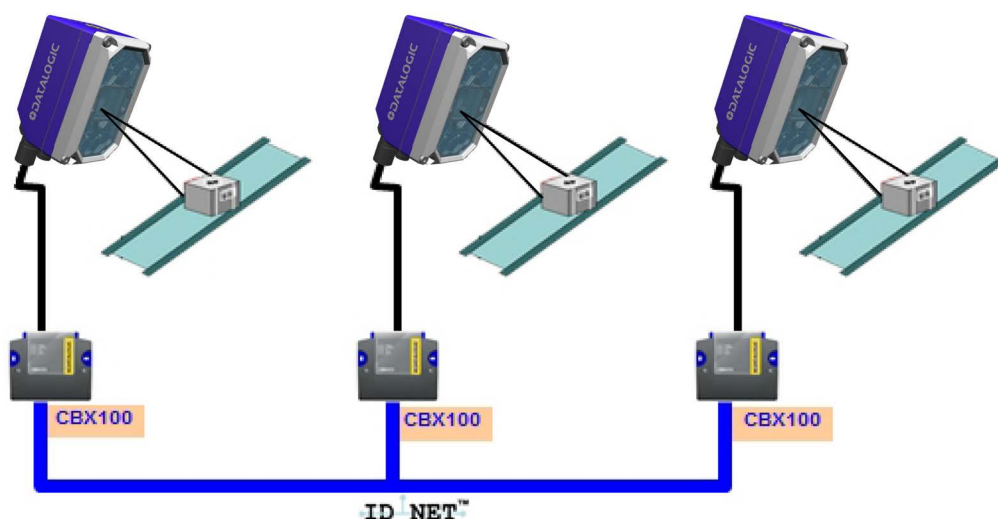

ID-NET interface allows connection of readers reading objects placed on independent conveyors. All readers are typically located far away from each other and they can have different operating modes from each other.

At the end of each reading phase, each reader transmits its own data message to the host. Thanks to ID-NET, data collection among readers is accomplished at a high speed without the need of an external multiplexing device. This leads to an overall cost reduction and to simple system wiring.


See ["ID-NET Interface" on page 95](#) for connection details and ["Internal Network Configurations" on page 159](#) for configuration details.

X-PRESS HUMAN MACHINE INTERFACE

X-PRESS is the intuitive Human Machine Interface designed to improve ease of installation and maintenance.

Status information is clearly presented by means of the five colored LEDs, whereas the single push button gives immediate access to the following relevant functions:

- Test with bar graph visualization to check static reading performance
- Aim/Autofocus to turn on the aiming system and aid positioning and focusing
- Setup to perform Exposure Time and Gain calibration
- Learn to self-detect and auto-configure for reading unknown codes

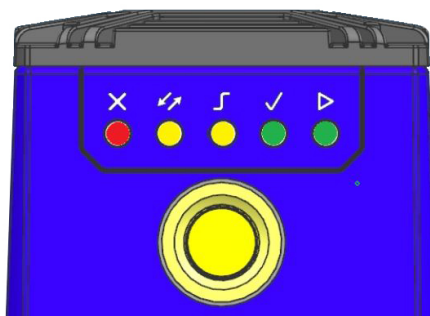


X-PRESS Functions

Quick access to the following functions is provided by an easy procedure using the push button:


1. **Press** the button (the Status LED will give a visual feedback).
2. **Hold** the button until the specific function LED is on (Test, Focus, Setup or Learn).
3. **Release** the button to enter the specific function.

Once button is pressed, the cycle of LEDs activation is as follows:

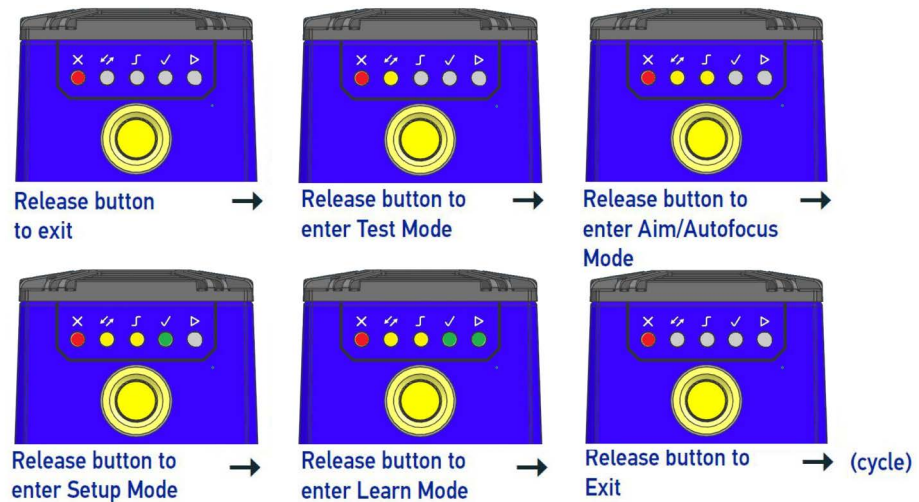

Test Mode

Once entered, the Bar Graph on the five LEDs is activated and if the imager starts reading codes the Bar-Graph shows the Good Read Rate. The Bar Graph has the following meaning:

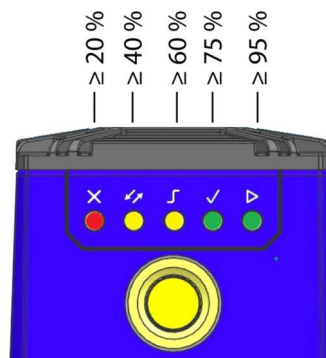

In case of a NO READ condition, only the Status LED is on and blinks.

To exit the Test Mode, press the X-PRESS push button once.



By default, the Test exits automatically after three minutes.

Aim/Autofocus

This function causes the laser pointer to turn on. The laser pointer can be used to position the imager on the code, but note that the center of the cross is 16 mm (14 LEDs model) or 30 mm (36 LEDs model) under the optical axis. The Aim LED blinks to indicate this state. After a short delay, this function also performs the Autofocus procedure for Liquid Lens models.

You can exit the Aim/Autofocus function at any time by pressing the X-PRESS push button once. After a short delay the Autofocus procedure is canceled and the laser pointer turns off.

Setup

Once entered, the imager automatically performs Image Acquisition parameter calibration for the specific code presented to it.

The Setup LED will blink until the procedure is completed.

The Setup procedure ends when the Image Acquisition parameters are successfully saved in the reader memory, the Setup LED will stop blinking and Matrix 320 emits 3 high pitched beeps.

If the calibration cannot be reached after a timeout of about 5 (five) seconds Matrix 320 will exit without saving the parameters to memory, the Setup LED will not remain on continuously but it will stop blinking. In this case Matrix 320 emits a long low pitched beep.

Learn

Once entered, the imager starts a procedure to automatically detect and recognize a **single code** which is presented to it. Successive Learns will substitute the current code.


The Learn LED will blink until the procedure is completed.

The Learn procedure ends when the Image Processing and Decoding parameters are successfully saved in the reader memory, the Green Spot is activated, the Learn LED will remain on continuously and Matrix 320 emits 3 high pitched beeps.

If the calibration cannot be reached after a timeout of about 3 (three) minutes, Matrix 320 will exit without saving the parameters to memory, the Learn LED will not remain on continuously but it will stop blinking. In this case Matrix 320 emits a long low pitched beep.


Diagnostic Indication

The “STATUS” (red) and “READY” LED (green) blink simultaneously to signal the presence of an error. Diagnostic message transmission on interfaces can be enabled to provide details about specific error conditions. See the Diagnostic Error Conditions chart in the Diagnostic page of the DL.CODE Monitor.

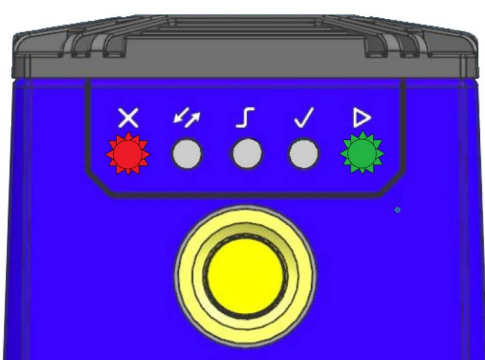	LED	STATUS
	Ready	Blink
	Good	
	Trigger	
	COM	
	Status	Blink

MODEL DESCRIPTION

Matrix 320 readers are described by their model number which indicates the characteristics listed in the diagram below. Not all combinations are available. For a complete list of combinations see "[Available Liquid Lens Models](#)" on page 46.

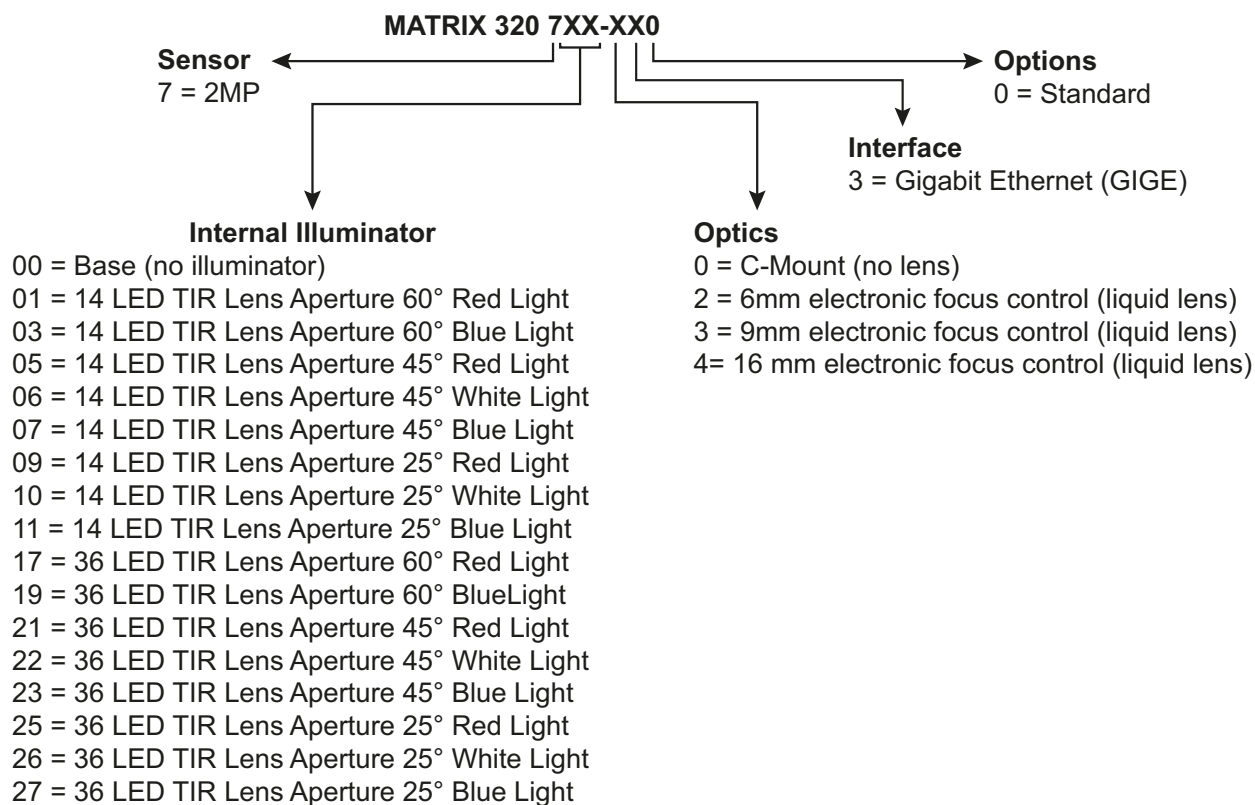

AVAILABLE LIQUID LENS MODELS

Part Number	Description
938100017	Matrix 320 701-230 LL6 14L 60D RED
938100053	Matrix 320 701-230 LL6 14L 60D RED X
938100019	Matrix 320 703-230 LL6 14L 60D BLU
938100055	Matrix 320 703-230 LL6 14L 60D BLU X
938100020	Matrix 320 705-330 LL9 14L 45D RED
938100056	Matrix 320 705-330 LL9 14L 45D RED X
938100084	Matrix 320 705-330 LL9 14L 45D RED XP
938100021	Matrix 320 706-330 LL9 14L 45D WHT
938100057	Matrix 320 706-330 LL9 14L 45D WHT X
938100085	Matrix 320 706-330 LL9 14L 45D WHT XP
938100022	Matrix 320 707-330 LL9 14L 45D BLU
938100058	Matrix 320 707-330 LL9 14L 45D BLU X
938100023	Matrix 320 709-430 LL16 14L 25D RED
938100059	Matrix 320 709-430 LL16 14L 25D RED X
938100024	Matrix 320 710-430 LL16 14L 25D WHT
938100060	Matrix 320 710-430 LL16 14L 25D WHT X
938100025	Matrix 320 711-430 LL16 14L 25D BLU
938100061	Matrix 320 711-430 LL16 14L 25D BLU X
938100086	Matrix 320 711-430 LL16 14L 25D BLU XP
938100026	Matrix 320 717-230 LL6 36L 60D RED
938100062	Matrix 320 717-230 LL6 36L 60D RED X
938100028	Matrix 320 719-230 LL6 36L 60D BLU
938100064	Matrix 320 719-230 LL6 36L 60D BLU X
938100029	Matrix 320 721-330 LL9 36L 45D RED
938100065	Matrix 320 721-330 LL9 36L 45D RED X
938100030	Matrix 320 722-330 LL9 36L 45D WHT
938100066	Matrix 320 722-330 LL9 36L 45D WHT X
938100087	Matrix 320 722-330 LL9 36L 45D WHT XP
938100031	Matrix 320 723-330 LL9 36L 45D BLU
938100067	Matrix 320 723-330 LL9 36L 45D BLU X
938100032	Matrix 320 725-430 LL16 36L 25D RED
938100068	Matrix 320 725-430 LL16 36L 25D RED X
938100033	Matrix 320 726-430 LL16 36L 25D WHT

Part Number	Description
938100069	Matrix 320 726-430 LL16 36L 25D WHT X
938100034	Matrix 320 727-430 LL16 36L 25D BLU
938100070	Matrix 320 727-430 LL16 36L 25D BLU X

ACCESSORIES

The following accessories can be used with the Matrix 320 reader.

Accessory	Description	Order No.
Cables		
CAB-DS01-S	M12-IP67 Cable To CBX or QL (1M)	93A050058
CAB-DS03-S	M12-IP67 Cable To CBX or QL (3M)	93A050059
CAB-DS05-S	M12-IP67 Cable To CBX or QL (5M)	93A050060
CAB-DS10-S	M12-IP67 Cable to CBX or QL (10M)	93A051390
CAB-GD03	CAB-GD03 M12 F/L 3M	93A050076
CAB-GD05	CAB-GD05 M12 F/L 5M	93A050077
CAB-GD10	CAB-GD10 M12 F/L 10M	93A050078
CAB-F-M12-17P01	M12-IP67 17p Flexible Cable To CBX or QL (1M)	93A050116
CAB-F-M12-17P03	M12-IP67 17p Flexible Cable To CBX or QL (3M)	93A050117
CAB-F-M12-17P05	M12-IP67 17p Flexible Cable To CBX or QL (5M)	93A050118
CAB-ETH-X-M01	M12-IP67 GIGA Ethernet Cable X-Coded (1M)	93A050122
CAB-ETH-X-M03	M12-IP67 GIGA Ethernet Cable X-Coded (3M)	93A050123
CAB-ETH-X-M05	M12-IP67 GIGA Ethernet Cable X-Coded (5M)	93A050124
CAB-ETH-X-M10	M12-IP67 GIGA Ethernet Cable X-Coded (10M)	93A050140
CAB-F-ETH-X-M01	M12-IP67 GIGA Ethernet Flexible Cable X-Coded (1M)	93A050125
CAB-F-ETH-X-M03	M12-IP67 GIGA Ethernet Flexible Cable X-Coded (3M)	93A050126
CAB-F-ETH-X-M05	M12-IP67 GIGA Ethernet Flexible Cable X-Coded (5M)	93A050127
CAB-ETH-X-RJ	Adapter Cable Full GETH-X to RJ45	93A050141
CBL-1480-0.3	CBL-1480-0.3 M12/5P MALE/FEM. 0.3M IDNET	93A050048
CBL-1480-01	CBL-1480-01 M12/5P MALE/FEM. 1M IDNET	93A050049
CBL-1480-02	CBL-1480-02 M12/5P MALE/FEM. 2M IDNET	93A050050
CBL-1480-03	CBL-1480-03 M12/5P MALE/FEM. 3M IDNET	93A050143
CBL-1480-05	CBL-1480-05 M12/5P MALE/FEM. 5M IDNET	93A050051
CBL-1490	Term. Resist. Thin M12/5P/Male	93A050046

Accessory	Description	Order No.
CBL-1496	Term. Resist. Thin M12/5P/Female	93A050047
Covers		
Cover Standard 14L	Cover STD LT 14L M320/P2/P3	93ACC0271
Cover Standard 36L	Cover STD LT 36L M320/P2/P3	93ACC0272
Cover Polarizer 14L	Cover Polarizer LT 14L M320/P2/P3	93ACC0273
Cover Polarizer 36L	Cover Polarizer LT 36L M320/P2/P3	93ACC0274
Cover ESD 14L	Cover ESD LT 14L M320/P2/P3	93ACC0278
Cover UV 36L	Cover UV LT 36L M320/P2/P3	93ACC0277
Filters		
Filter Yag 14L	Filter Yag Cut LT 14L M320/P2/P3	95A900018
Filter Yag 36L	Filter Yag Cut LT 36L M320/P2/P3	95A900022
Half Polarizer 14L	Half Polarizer Filter LT 14L M320	93ACC0275
Filter Red 14L	Filter RED Bp 635nm LT 14L M320/P2/P3	95A900015
Filter Blu 14L	Filter BLU Bp 470nm LT 14L M320/P2/P3	95A900016
Filter IR 14L	Filter IR Bp 850nm LT 14L M320/P2/P3	95A900017
Filter Red 36L	Filter RED Bp 635nm LT 36L M320/P2/P3	95A900019
Filter Blu 36L	Filter BLU Bp 470nm LT 36L M320/P2/P3	95A900020
Filter IR 36L	Filter IR Bp 850nm LT 36L M320/P2/P3	95A900021
Filter UV 14L	Filter UV Cut Lp 415nm LT 14L M320/P2/P3	95A900039
Filter UV 36L	Filter UV Cut Lp 415nm LT 36L M320/P2/P3	95A900040
Filter IR Cut 14L	Filter IR Cut LT 14L M320/P2/P3	95A900064
Filter IR Cut 36L	Filter IR Cut LT 36L M320/P2/P3	95A900065
Brackets		
BK-32-000	BK-32-000 STD FIX BRACKET M320/P2/P3	93ACC0282
BK-32-010	BK-32-010 PIVOT FIX BRACKET M320/P2/P3	93ACC0283
BK-32-020	BK-32-020 FAST REPLACEMENT BRACKET M320	93ACC0284
USX-60	Adjustable Bracket	93ACC1729
Connectivity		
CBX100	Compact Connection Box	93A301067
CBX500	Modular Connection Box	93A301068
BM100	Backup Module for CBX100/500	93ACC1808
BM150	Display Module for CBX500	93ACC1809

Accessory	Description	Order No.
Various Fieldbus Host Interface Modules and All-In-One Connection Box Kits are available		
BA100	DIN Rail Adapters	93ACC1821
BA200	Bosch and 80/20 Profile Adapters	93ACC1822
Various M12 Panel Connectors for CBX Connection Boxes are available		
BA900	Two Cable Glands Panel	93ACC1847
QL100	Quick Link Slave ID-NET T-Connector	93ACC1860
QL150	Quick Link Slave ID-NET + Service T-Connector	93ACC1868
QL200	Quick Link Slave ID-NET + Power T-Connector	93ACC1861
QL300	Quick Link Master ID-NET - Serial Host Connector	93ACC1862
QLM500	Quick Link Metal Master ID-NET - Ethernet/IP Gateway	93ACC0037
QLM600	Quick Link Metal Master ID-NET - Profibus Gateway	93ACC0033
QLM700	Quick Link Metal Master ID-NET - Profinet I/O Gateway	93ACC0038
Various M12 Service Cables and Field Mount Connectors are available for Quick Link Series Connectors		
Power Supplies		
PG6002	AC/DC Power Supply Unit (US)	93ACC1718
PG6001	AC/DC Power Supply Unit (UK)	93ACC1719
PG6000	AC/DC Power Supply Unit (EU)	93ACC1720
Sensors		
MEP-593	Photocell Kit PNP (PH-1)	93ACC1791
MEP-543	Photocell Kit-NPN	93ACC1728
S3Z-PR-5-C11-PL	Diffuse Proximity Sensor	95B010011
External Mirrors		
EMK-MTX-380	External Mirror - 380 mm	93ACC0086
EMK-TMX-600	External Mirror XRF410N - 600 mm	93ACC0116

MATRIX 320 C-MOUNT ASSEMBLY

Matrix 320 700-030 (C-Mount) can be assembled in two different configurations:

- **Embedded illumination:** base + lens + adapter + 36 LED illuminator
- **External illumination:** base + lens (+ long or short lens cover)

The following table shows the possible accessories for your assembly¹.

For the possible combinations of illuminators and lenses, refer to "[Illuminators and Lenses Combinations](#)" on page 52.

Accessory	Description	Order No.
C-Mount Base		
Base 700-030	Matrix 320 700-030 CM 2MP 1/3"	938100035
Base 700-030 X	Matrix 320 700-030 CM 2MP 1/3" X	938100071
C-Mount Lenses		
LNM 000-021	LNM 000-021 CM 4MM VF1.8 1/2" ED	93ACC0285
LNM 001-031	LNM 001-031 CM 6MM VF1.85 1/2" ED	93ACC0286
LNM 003-021	LNM 003-021 CM 8MM VF1.8 1/2.5" ED	93ACC0287
LNM 005-021	LNM 005-021 CM 12MM VF1.8 1/1.8" ED	93ACC0288
LNM 007-021	LNM 007-021 CM 16MM VF1.8 1/1.8" ED	93ACC0289
LNM 009-031	LNM 009-031 CM 25MM VF1.85 1/1.8" ED	93ACC0290
LNM 010-031	LNM 010-031 CM 35MM VF1.85 1/1.8" ED	93ACC0292
C-Mount Lens Covers		
Short Cover Lens	Cover Lens and CM Base Short M320	93ACC0279
Long Cover Lens	Cover Lens and CM Base Long M320	93ACC0280
Illuminator Kits: 36 LED illuminator + illuminator adapter (93ACC0281) + mounting bracket (93ACC0283)		
KIT LTM 002-001	KIT LTM 002-001 S36L 120D WHT white NL	93ACC0391
KIT LTM 002-601	KIT LTM 002-601 S36L 60D WHT white	93ACC0356
KIT LTM 002-451	KIT LTM 002-451 S36L 45D WHT white	93ACC0357
KIT LTM 222-451	KIT LTM 222-451 SA36L 45D WHT white	93ACC0392
KIT LTM 002-351	KIT LTM 002-351 S36L 35D WHT white	93ACC0394
KIT LTM 002-151	KIT LTM 002-151 S36L 15D WHT white	93ACC0395
KIT LTM 002-000	KIT LTM 002-000 S36L 120D RED 625nm NL	93ACC0396
KIT LTM 002-600	KIT LTM 002-600 S36L 60D RED 625nm	93ACC0397
KIT LTM 002-450	KIT LTM 002-450 S36L 45D RED 625nm	93ACC0398
KIT LTM 002-350	KIT LTM 002-350 S36L 35D RED 625nm	93ACC0399
KIT LTM 002-150	KIT LTM 002-150 S36L 15D RED 625nm	93ACC0400

1. Refer to [Accessories, starting on page 47](#) for other accessories such as cables, filters, etc.

Accessory	Description	Order No.
KIT LTM 002-002	KIT LTM 002-002 S36L 120D BLU 475nm NL	93ACC0358
KIT LTM 002-602	KIT LTM 002-602 S36L 60D BLU 475nm	93ACC0359
KIT LTM 002-452	KIT LTM 002-452 S36L 45D BLU 475nm	93ACC0360
KIT LTM 002-352	KIT LTM 002-352 S36L 35D BLU 475nm	93ACC0361
KIT LTM 002-152	KIT LTM 002-152 S36L 15D BLU 475nm	93ACC0362
KIT LTM 002-003	KIT LTM 002-003 S36L 90D IR 850nm NL	93ACC0401
KIT LTM 002-453	KIT LTM 002-453 S36L 45D IR 850nm	93ACC0363
KIT LTM 002-353	KIT LTM 002-353 S36L 35D IR 850nm	93ACC0402
KIT LTM 002-253	KIT LTM 002-253 S36L 25D IR 850nm	93ACC0403
KIT LTM 002-004	KIT LTM 002-004 S36L 130D UV 365nm NL	93ACC0364
36 LED Illuminators		
LTM 002-601	LTM 002-601 S36L 60D WHT white	93ACC0298
LTM 002-451	LTM 002-451 S36L 45D WHT white	93ACC0302
LTM 002-351	LTM 002-351 S36L 35D WHT white	93ACC0306
LTM 002-151	LTM 002-151 S36L 15D WHT white	93ACC0354
LTM 002-001	LTM 002-001 S36L 120D WHT white NL	93ACC0294
LTM 222-451	LTM 222-451SA36L 45D WHT white	93ACC0330
LTM 002-002	LTM 002-002 S36L 120D BLU 475nm NL	93ACC0295
LTM 002-602	LTM 002-602 S36L 60D BLU 475nm	93ACC0299
LTM 002-452	LTM 002-452 S36L 45D BLU 475nm	93ACC0303
LTM 002-352	LTM 002-352 S36L 35D BLU 475nm	93ACC0307
LTM 002-152	LTM 002-152 S36L 15D BLU 475nm	93ACC0355
LTM 002-000	LTM 002-000 S36L 120D RED 625nm NL	93ACC0293
LTM 002-600	LTM 002-600 S36L 60D RED 625nm	93ACC0297
LTM 002-450	LTM 002-450 S36L 45D RED 625nm	93ACC0301
LTM 002-350	LTM 002-350 S36L 35D RED 625nm	93ACC0305
LTM 002-150	LTM 002-150 S36L 15D RED 325nm	93ACC0353
LTM 002-004	LTM 002-004 S36L 130D UV 365nm NL	93ACC0309
LTM 002-003	LTM 002-003 S36L 90D IR 850nm NL	93ACC0296
LTM 002-453	LTM 002-453 S36L 45D IR 850nm	93ACC0300
LTM 002-353	LTM 002-353 S36L 35D IR 850nm	93ACC0304
LTM 002-253	LTM 002-253 S36L 25D IR 850nm	93ACC0308
36 LED Illuminator Adapter		
Adapter 36L	Adapter LT to CM M320	93ACC0281

Illuminators and Lenses Combinations

The following table shows the optimal combinations of illuminators and lenses for Matrix 320 C-Mount imager assembly.

Illuminator Models		C-Mount Lens Focal Lengths (mm)						
Description	Order No.	4	6	8	12	16	25	35
LTM 002-001 S36L 120D WHT white	93ACC0294	x	x					
LTM 002-601 S36L 60D WHT white	93ACC0298			x				
LTM 002-451 S36L 45D WHT white	93ACC0302				x			
LTM 002-351 S36L 35D WHT white	93ACC0306					x	x	
LTM 222-451 SA36L 45D WHT white	93ACC0330				x	x		
LTM 002-151 S36L 15D WHT white	93ACC0354							x
LTM 002-000 S36L 120D RED 625nm NL	93ACC0293	x	x					
LTM 002-600 S36L 60D RED 625nm	93ACC0297			x				
LTM 002-450 S36L 45D RED 625nm	93ACC0301				x			
LTM 002-350 S36L 35D RED 625nm	93ACC0305					x	x	
LTM 002-150 S36L 15D RED 625nm	93ACC0353							x
LTM 002-002 S36L 120D BLU 475nm NL	93ACC0295	x	x					
LTM 002-602 S36L 60D BLU 475nm	93ACC0299			x				
LTM 002-452 S36L 45D BLU 475nm	93ACC0303				x			
LTM 002-352 S36L 35D BLU 475nm	93ACC0307					x	x	
LTM 002-152 S36L 15D BLU 475nm	93ACC0355							x
LTM 002-004 S36L 130D UV 365nm NL	93ACC0309	x	x	x	x	x	x	x
LTM 002-003 S36L 90D IR 850nm NL	93ACC0296	x	x	x				
LTM 002-453 S36L 45D IR 850nm	93ACC0300				x			
LTM 002-353 S36L 35D IR 850nm	93ACC0304					x	x	
LTM 002-253 S36L 25D IR 850nm	93ACC0308							x

APPLICATION EXAMPLES

Document Handling

Matrix 320 is profitably used in the omnidirectional reading of 2D, stacked, linear and postal codes for example in automated document handling and mail processing systems.



Figure 18 - Address Coded in Data Matrix Symbology for Automated Mail Processing

Multiple Reading in a Single Image

The Matrix 320 high resolution image sensors allow the reading of many small codes in a single image.

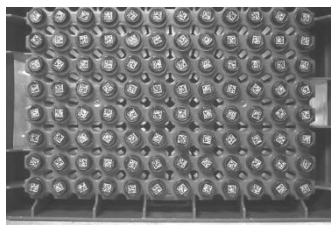


Figure 19 - 96-Vial Rack

Deformed or Overprinted Code Reading

Matrix 320 assures the reading of deformed and/or overprinted codes, even though damaged or printed on high reflective surfaces.



Figure 20 - Unidose Flow-Pack with PDF417 Code



Figure 21 - Overprinted Barcode Readable by Matrix 320 also Through the Envelope Window Film



Figure 22 – Barcode Printed on Curved Surface Readable by Matrix 300N in spite of Image Optical Distortion

Direct Part Marking

Matrix 320 is also very powerful in reading low-contrast direct part marked codes.



Figure 23 – Dot Matrix Code Directly Marked on Metal Surface by Using Dot Peening Technology

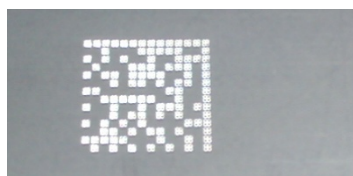


Figure 24 – Dot Peening Marking on Metal Surface with Multi-dot per Code Element



Figure 25 – Directly Marked Dot Matrix Code Characterized by Outstanding Separation Distance between Adjacent Code Elements

Ink-Jet Printing Technology

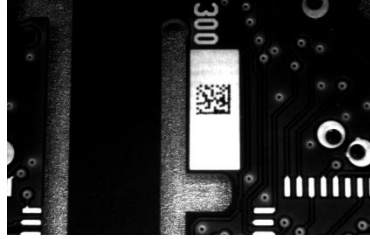


Figure 26 - Dot Matrix Code Directly Marked on PCB Copper Pad by Using Ink-Jet Technology

Laser Marking/Etching Technology



Figure 27 - Data Matrix Code Directly Marked on PCB Surface by Using Laser Etching Technology




If application codes must be read which are produced by Laser Marking in real time, use the correct diameter accessory YAG Cut Filter with the Matrix 320 reader in order to avoid burning the sensor.

High Dynamic Range (HDR) feature


Matrix 320 supports the High Dynamic Range (HDR) feature. HDR performs an image dynamic correction where low intensity pixel values are enhanced, thus improving image contrast and code readability.

This feature proves particularly useful in the following cases:


- To adjust contrast when the outer area of the image is less exposed than the central area because of a large **Skew angle**:

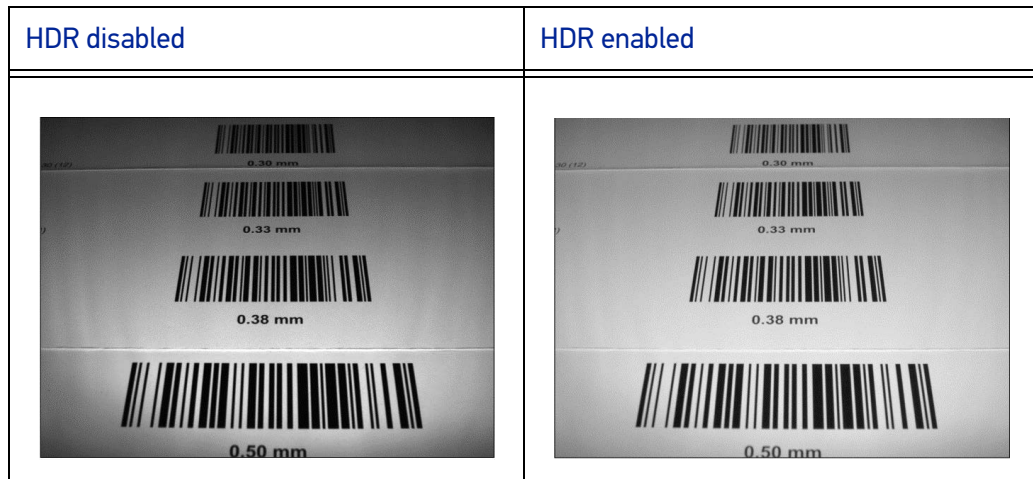

- To adjust contrast at the FoV edges when **illumination is not homogeneous**. The HDR feature helps normalize image contrast allowing the use of Standard Contrast decoding:

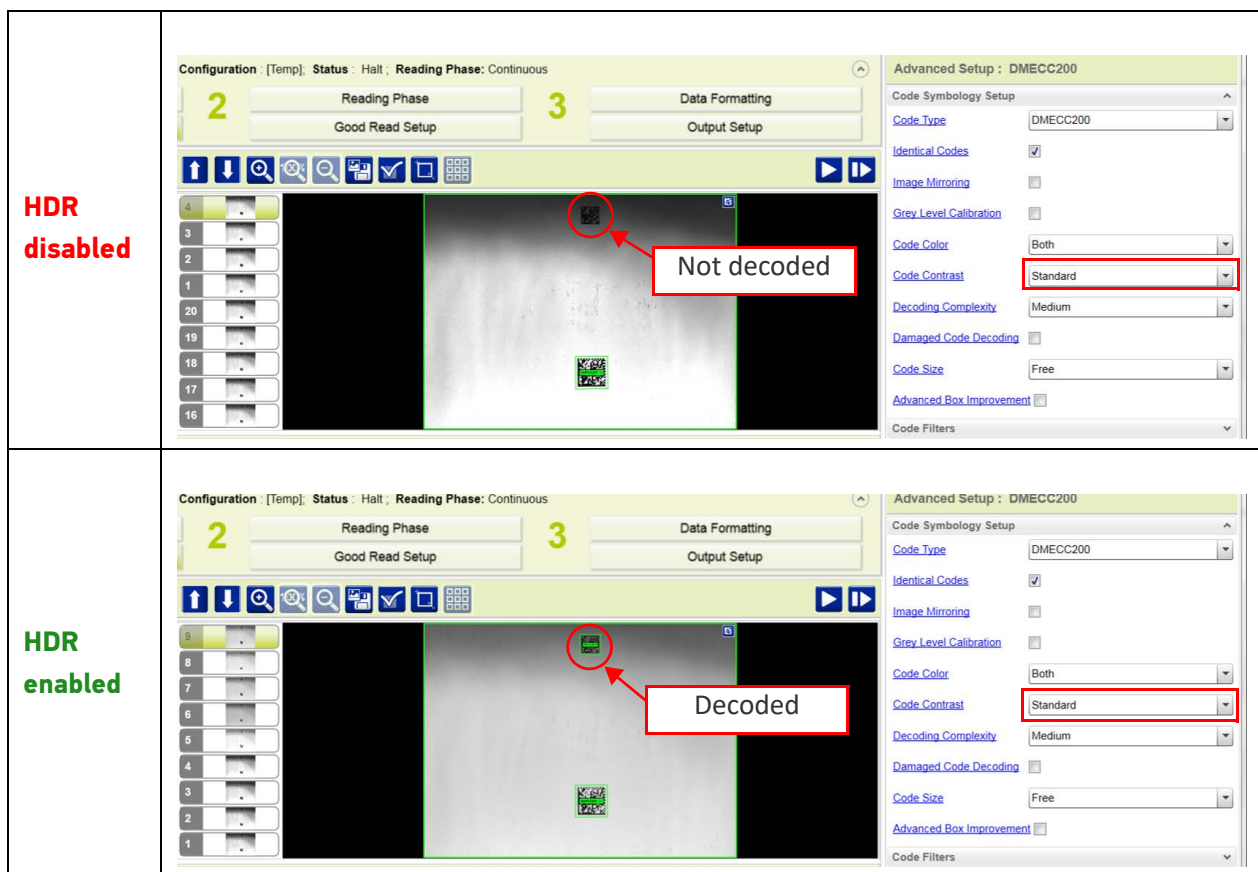

- To improve decodability when the FoV includes codes with **different levels of contrast**:

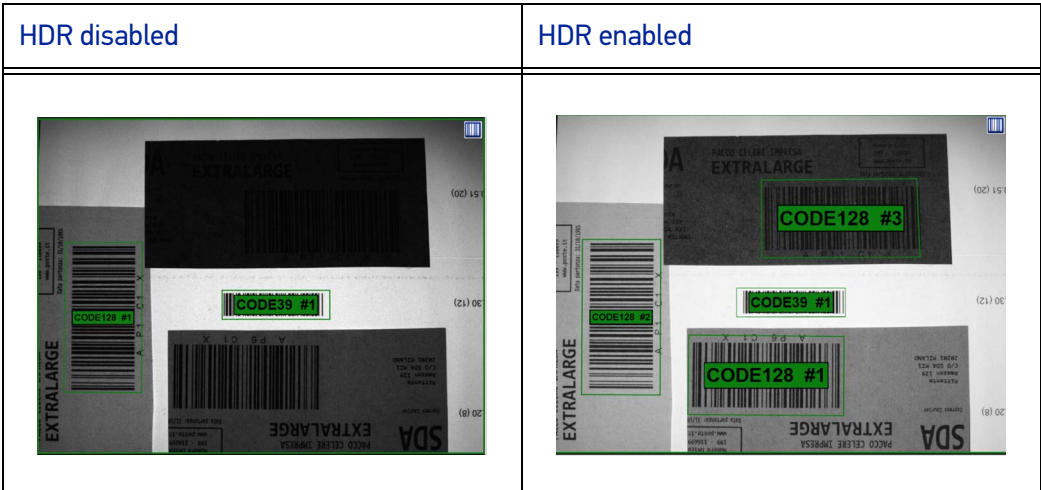

In the example above, when HDR is disabled only two out of four codes are decoded. After enabling HDR, all four codes are decoded.

- In **high speed applications**, because Exposition Time can be reduced when HDR is enabled. The allowed Exposition Time (T_{exp}) must be less than the code resolution (X) divided by the line speed (LS):

$$T_{exp} < (X / LS)$$



In the example above, C128 13 mils (0.33 mm) codes at a distance of 200 mm must be decoded. When HDR is disabled, good image contrast is obtained with the Exposition

Time set to 250 μ s, which allows a theoretical maximum application speed of 1320 mm/s. When HDR is enabled, the Exposure Time can be reduced to 100 μ s, which allows a theoretical maximum application speed of 3300 mm/s.

For more details on line speed and exposure time calculations, refer to "[Maximum Line Speed and Exposure Time Calculations](#)" on page 135.

To enable the HDR function on DL.CODE, go to Advanced Setup>Image Settings>Image Quality>HDR Selector, then select HDR.

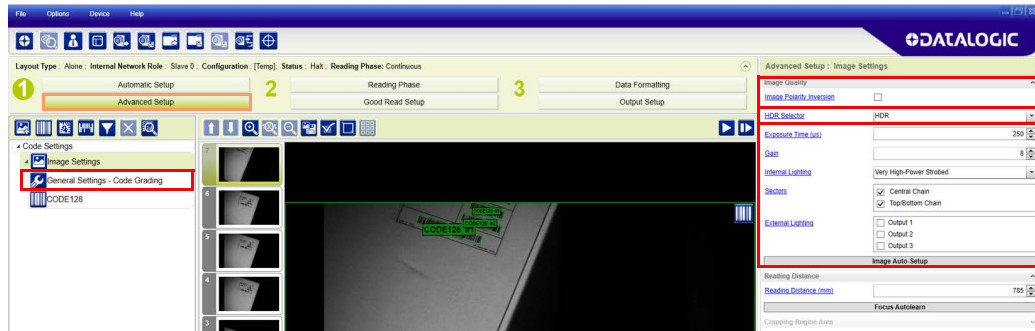


Figure 28 - Enabling HDR on DL.CODE

CHAPTER 3

INSTALLATION

PACKAGE CONTENTS

Verify that the Matrix 320 reader and all the parts supplied with the equipment are present and intact when opening the packaging.

The list of parts for Matrix 320 7xx-330 and 7xx-430 includes:

- Matrix 320 reader
- Matrix 320 Quick Reference Guide
- Matrix 320 Heat Sink Mounting Instructions
- Test Charts (2)
- Mounting Kit
 - Mounting Screws (4+3)
 - Washers (4+3)
 - Mounting Brackets (BK-32-000 Standard Fix Bracket for Matrix 320 with 14 LEDs illuminator, BK-32-010 Pivot Fix Bracket for Matrix 320 with 36 LEDs illuminator)
- Heat sink (1)

The list of parts for Matrix 320 700-030 includes:

- Matrix 320 reader
- Matrix 320 C-Mount Quick Reference Guide
- Matrix 320 C-Mount Mounting Instructions
- Test Charts (2)
- Mounting Kit
 - Mounting Screws (4+3)
 - Washers (4+3)
 - Mounting Brackets (BK-32-000 Standard Fix Bracket¹)
- Heat sink (1)

1. The BK-32-000 Standard Fix Bracket is meant to be used with Matrix 320 without illuminator. In case of a Matrix 320 with 36 LEDs illuminator, a BK-32-010 Pivot Fix Bracket or a BK-32-020 Fast Replacement Bracket should be ordered (refer to "[Accessories](#)" on page 47).

MECHANICAL DIMENSIONS

Matrix 320 can be installed to operate in different positions. The four screw holes (M4 x 8 mm) on the body of the reader are for mechanical fixture.

The diagrams below give the overall dimensions of the reader and may be used for its installation.

Refer to page 66 for various mounting solutions and correct positioning, and [Chapter 6, Reading Features](#) for FOV vs. Reading Distance considerations.

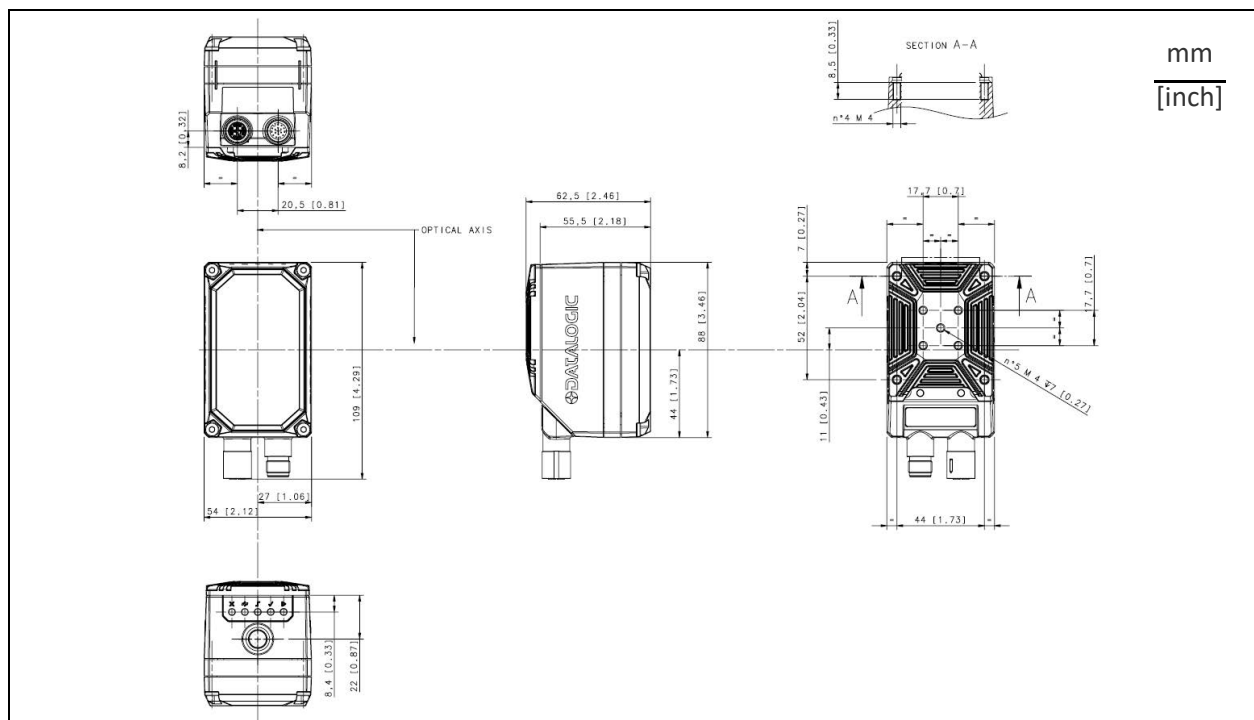


Figure 29 - Matrix 320 (Liquid Lens) with 14 LEDs illuminator (connectors 0°)

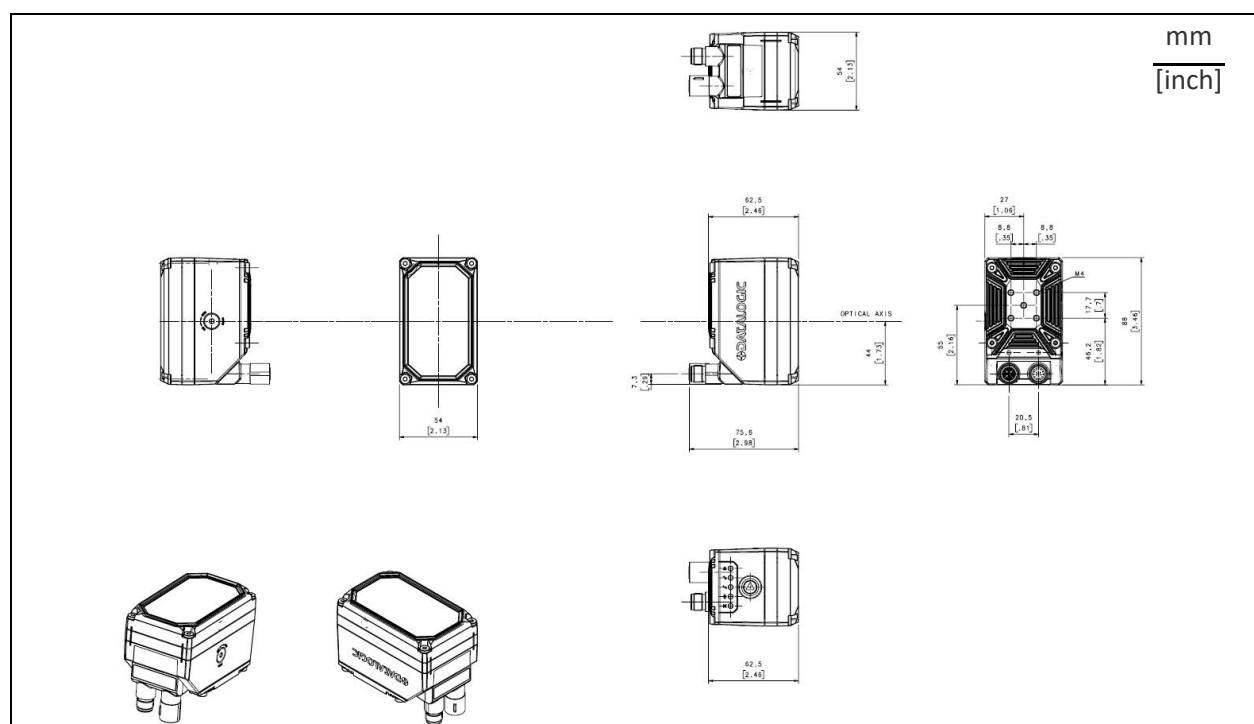


Figure 30 - Matrix 320 (Liquid Lens) with 14 LEDs illuminator (connectors 90°)

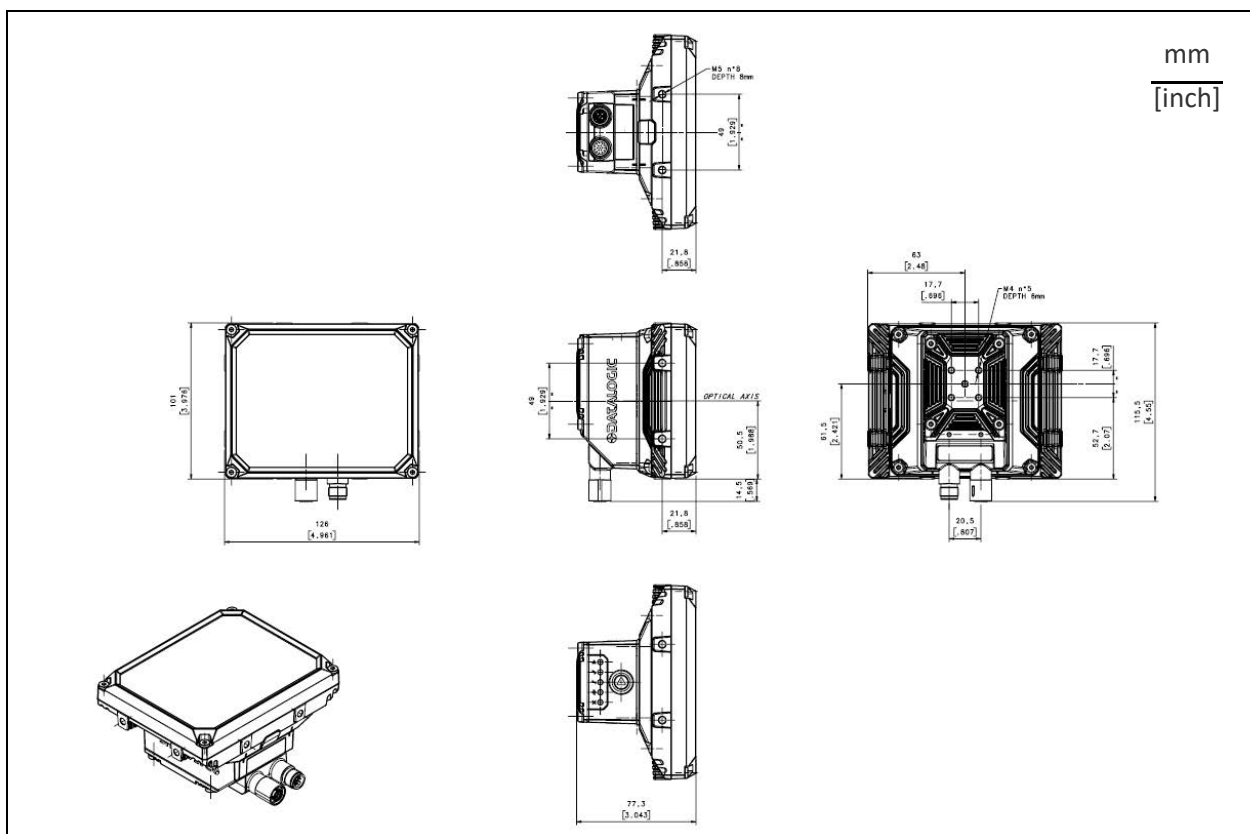


Figure 31 - Matrix 320 (Liquid Lens) with 36 LEDs illuminator (connectors 0°)

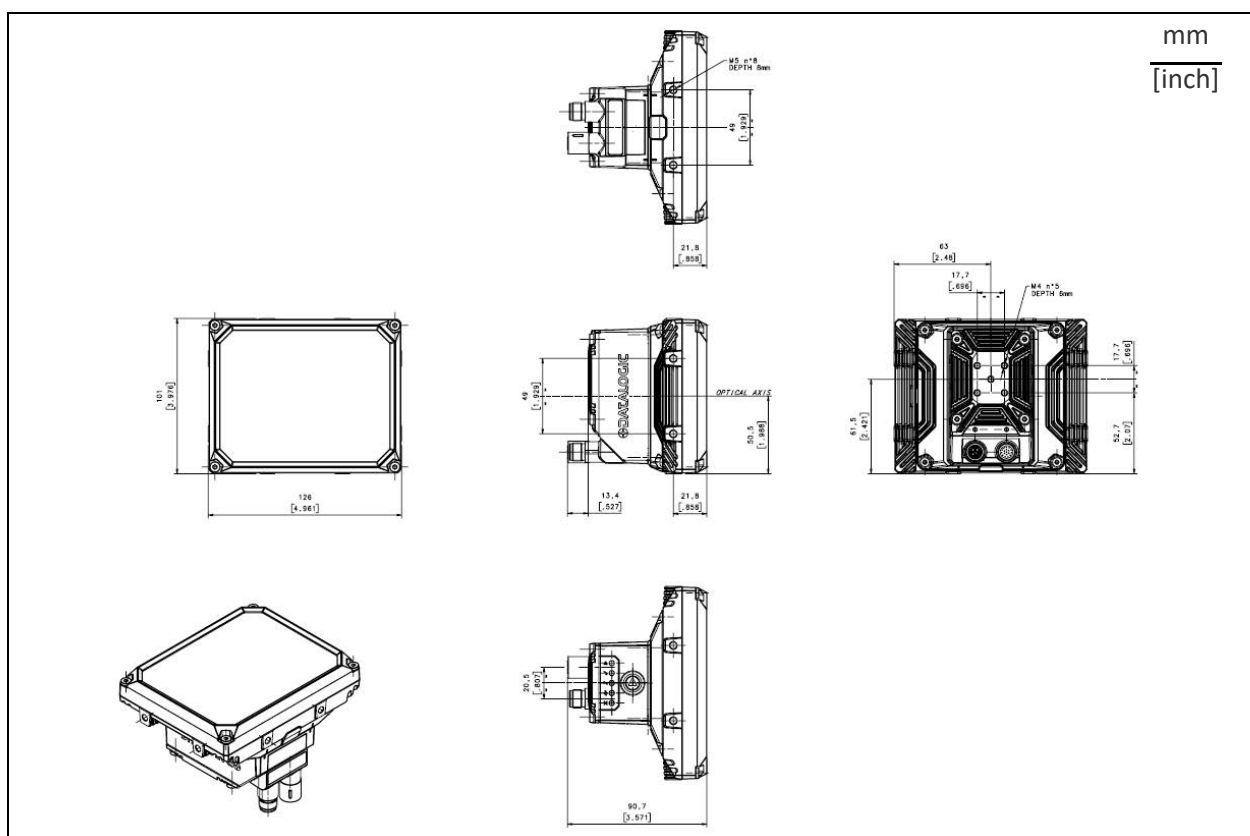


Figure 32 - Matrix 320 (Liquid Lens) with 36 LEDs illuminator (connectors 90°)

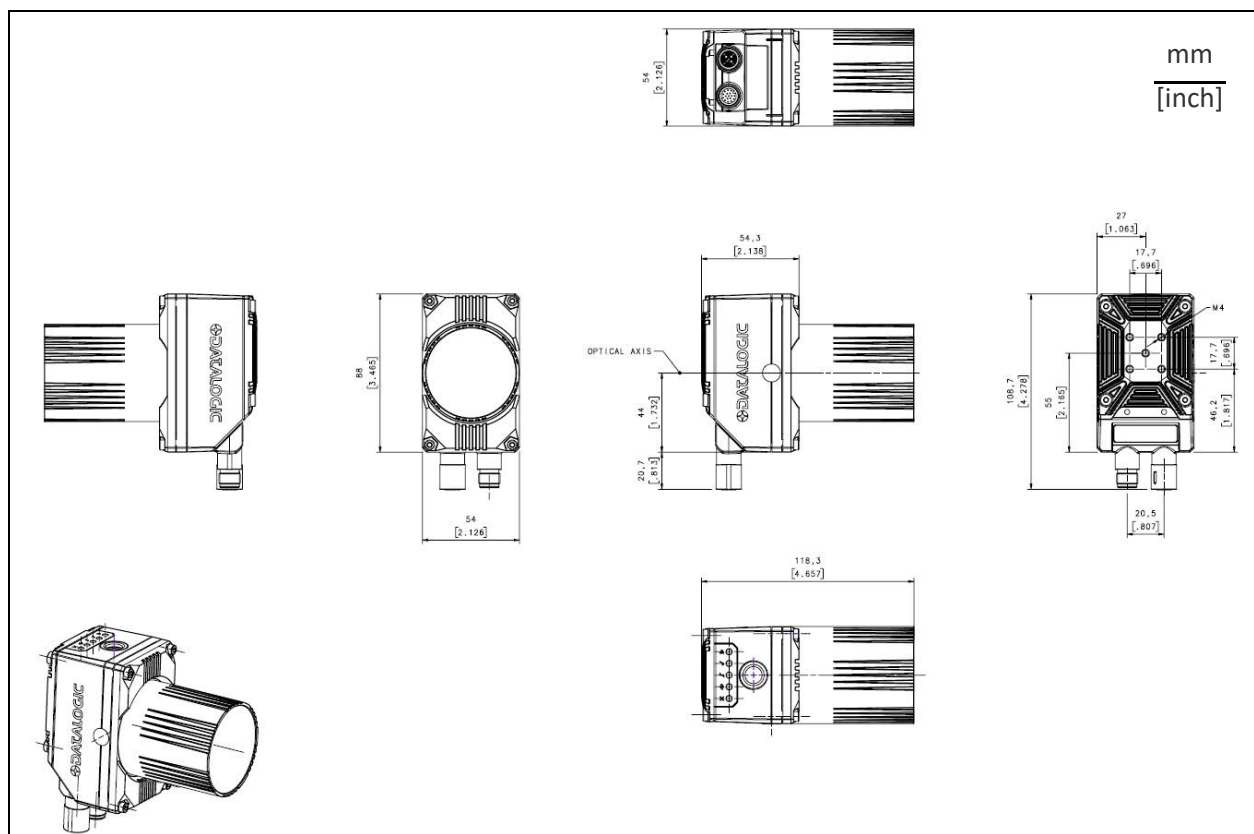


Figure 33 - Matrix 320 (C-Mount) without illuminator (connectors 0°)

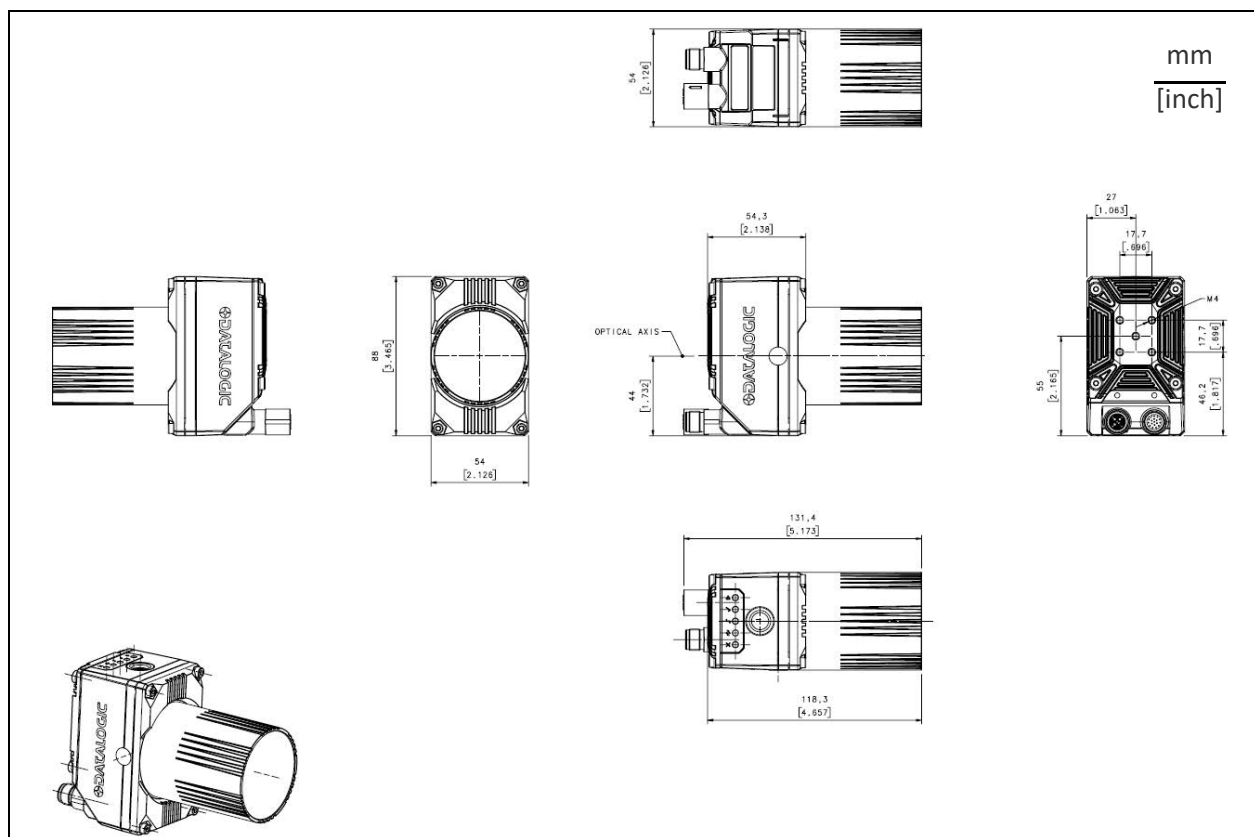


Figure 34 - Matrix 320 (C-Mount) without illuminator (connectors 90°)

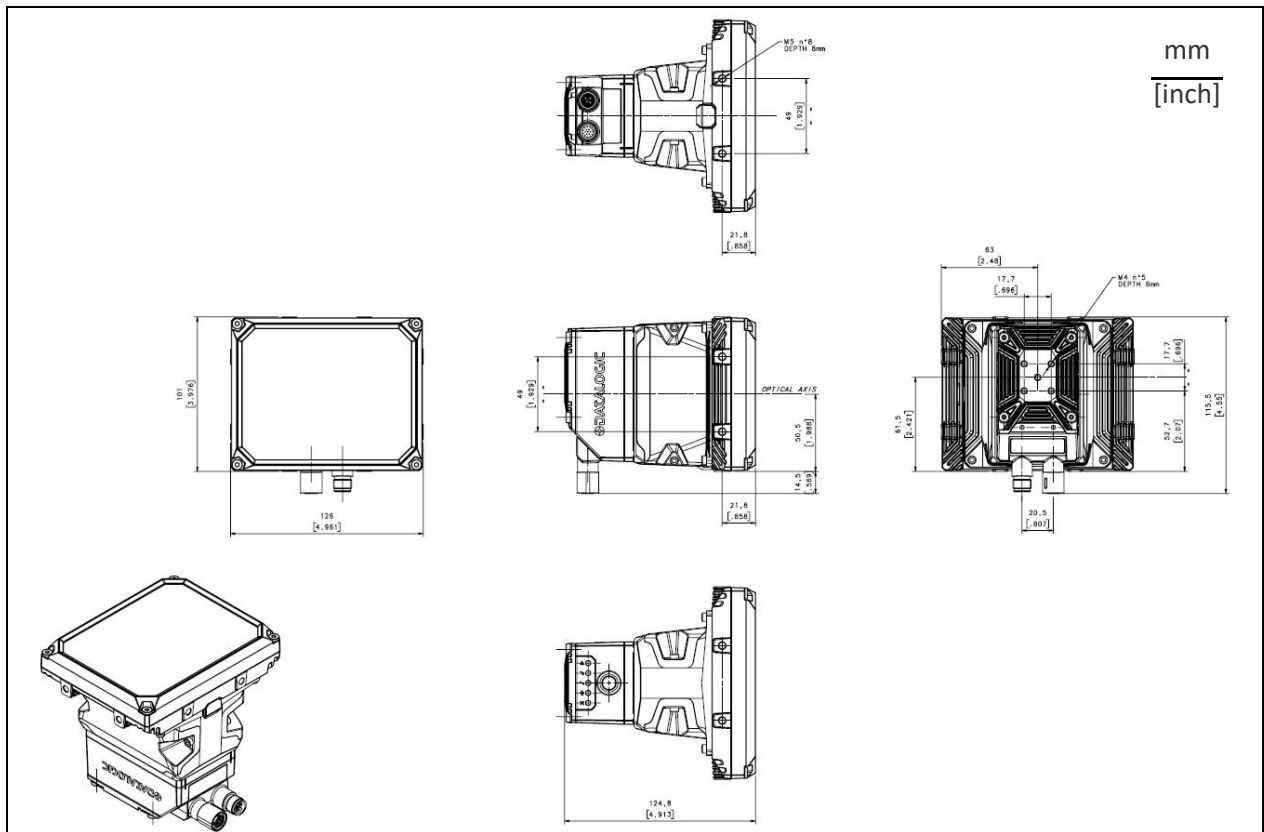


Figure 35 - Matrix 320 (C-Mount) with 36 LEDs illuminator (connectors 0°)

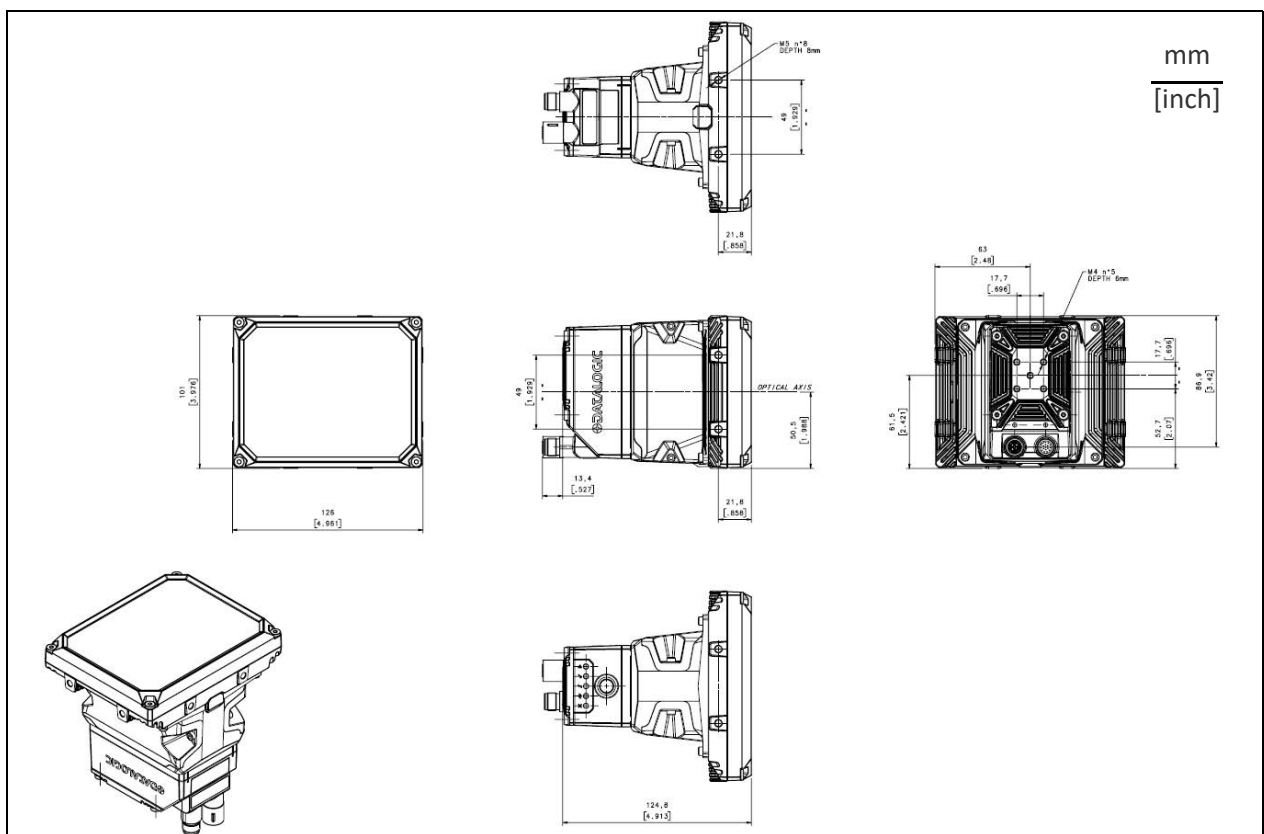


Figure 36 - Matrix 320 (C-Mount) with 36 LEDs illuminator (connectors 90°)

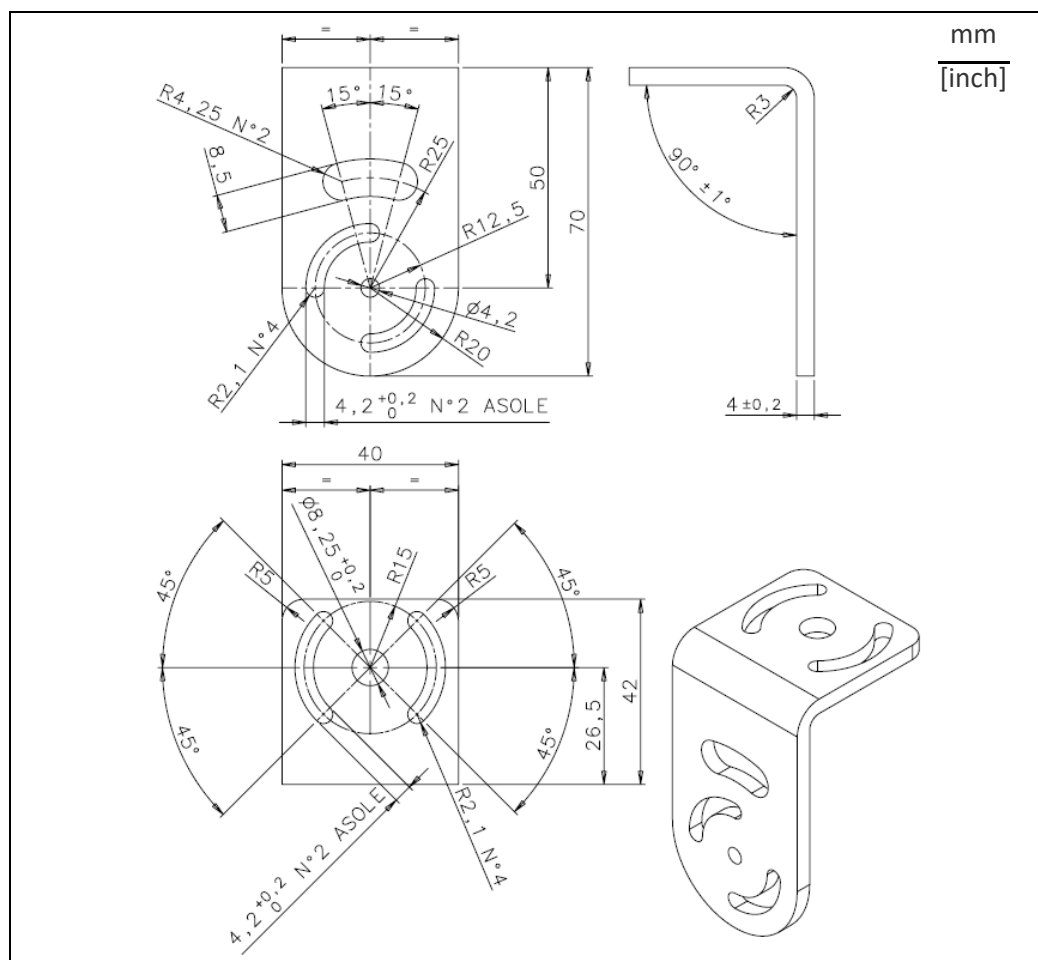


Figure 37 - Overall Dimensions: BK-32-000 Standard Fix Bracket for Matrix 320 with 14 LEDs illuminator

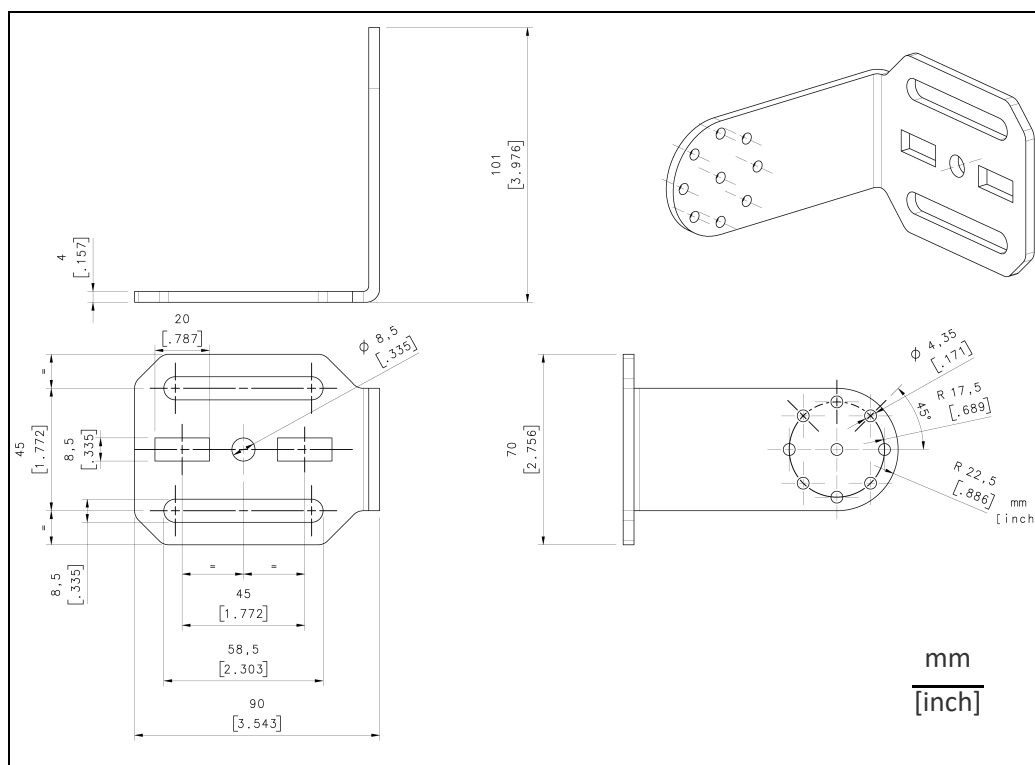


Figure 38 - Overall Dimensions: BK-32-010 Pivot Fix Bracket (1) for Matrix 320 with 36 LEDs illuminator

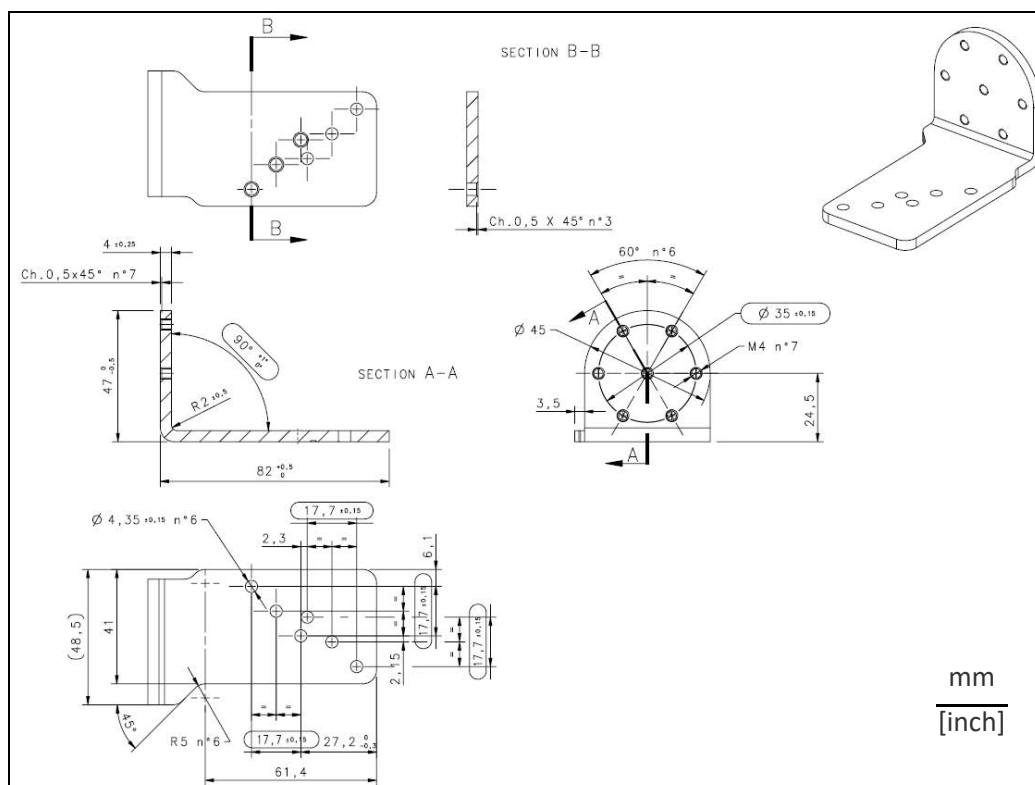


Figure 39 - Overall Dimensions: BK-32-010 Pivot Fix Bracket (2) for Matrix 320 with 36 LEDs illuminator

MOUNTING AND POSITIONING MATRIX 320

The following accessory mounting brackets are available for mounting and positioning Matrix 320:

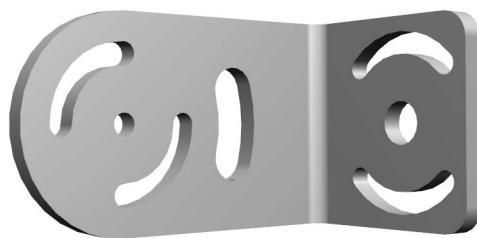


Figure 40 - BK-32-000 Standard Fix Bracket



Figure 41 - BK-32-010 Pivot Fix Bracket



NOTE

BK-32-000 Standard Fix Bracket can be used with Matrix 320 Liquid Lens models with 14 LED illuminator and C-Mount models without embedded illuminator.

BK-32-010 Pivot Fix Bracket can be used with any Matrix 320 model with 36 LED illuminator.

Mounting the BK-32-00 Standard Fix Bracket

**NOTE**

BK-32-000 Standard Fix Bracket can be used with Matrix 320 Liquid Lens models with 14 LED illuminator and C-Mount models without embedded illuminator.

The package contains the following materials to mount the Standard Fix Bracket:

- 1 Standard Fix Bracket
- 3 silver screws
- 3 silver washers

**NOTE**

Make sure that the heat sink is already installed on the reader before mounting the bracket (refer to the Heat Sink Mounting Instructions provided in the package).

To install the bracket on the reader, follow this procedure:

1. Insert the silver screws and silver washers through the bracket and thread them loosely into the heat sink. The bracket is provided with curved slots both on the reader side and the frame side, which allow installing the bracket on various axes.

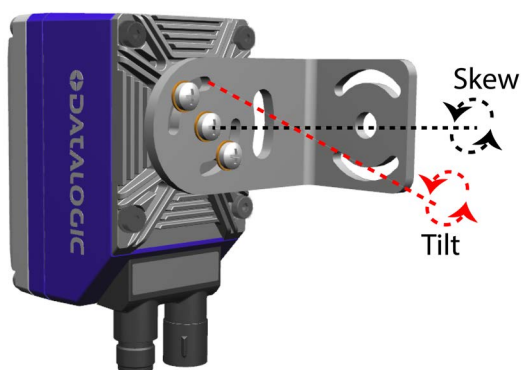


Figure 42 - Positioning with Standard Fix Bracket

2. Tighten the screws.

Mounting the BK-32-010 Pivot Fix Bracket

**NOTE**

BK-32-010 Pivot Fix Bracket can be used with any Matrix 320 model with 36 LED illuminator.

The package contains the following materials to mount the Pivot Fix Bracket:

- 1 Pivot Fix Bracket (body side)
- 1 Pivot Fix Bracket (frame side)
- 6 silver screws
- 6 silver washers

**NOTE**

Make sure that the heat sink is already installed on the reader before mounting the bracket (refer to the Heat Sink Mounting Instructions provided in the package).

The body side of the Pivot Fix Bracket has two hole sets to be used based on the desired installation. The two sets can be identified by the different machining on the holes (see Figure 43):

- SET 1 with countersunk holes, used for [Compact Mounting](#);
- SET 2 with standard holes, used for [Extended Mounting](#).

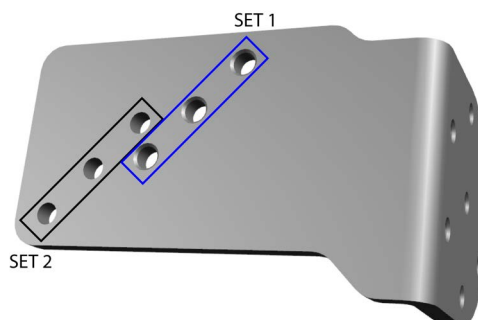


Figure 43 - Pivot Fix Bracket (body side)

Compact Mounting

Compact mounting allows installations with minimal side space and reader optical axis aligned with the bracket central hole.

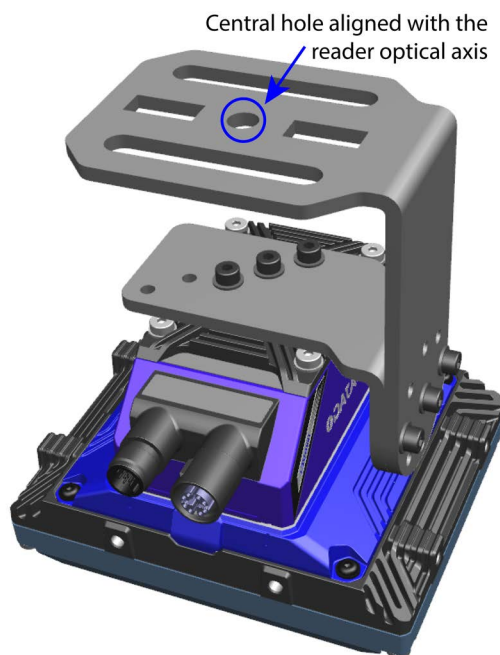


Figure 44 - Compact mounting

Extended Mounting

Extended mounting allows:

- side installations with wider range of tilt angles than compact mounting (because the side bracket frame is outside the reader volume):

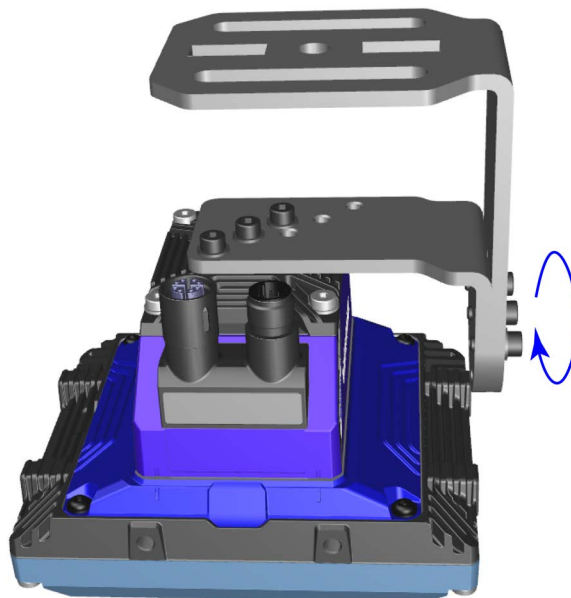


Figure 45 - Extended mounting

- frontal installations:

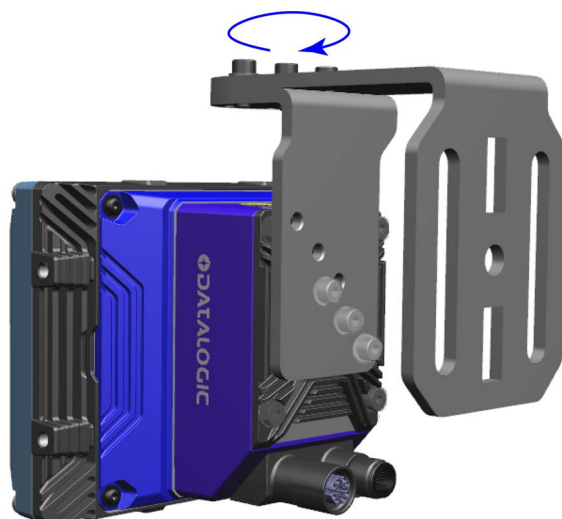


Figure 46 - Front extended mounting

Mount the body side of the Pivot Fix Bracket onto the heat sink of the reader using the proper set of holes depending on the desired mounting.

To correctly couple the body-side bracket and the frame-side bracket, follow this procedure:

1. Insert the silver screw and silver washer through the central hole of the frame bracket. Thread the screw loosely into the body-side bracket. This screw can be used as pivot to ease the rotation of the body bracket.
2. Set the desired skew angle by rotating the body-side bracket and aligning two holes (opposite to the central hole) between the body-side bracket and the frame-side bracket.
3. Tighten two silver screws and two silver washers into the aligned holes to secure the position. Finally tighten the central screw.



NOTE


The particular distribution of the holes on the two brackets allows easy adjustment of the skew angle in steps of 15°.



Figure 47 - Skew angle adjustment

Matrix 320 is able to decode code labels at a variety of angles; however significant angular distortion may degrade reading performance.

When mounting Matrix 320, take into consideration these **ideal** label position angles: **Pitch or Skew 10° to 20° and Tilt 0°.**



NOTE

Since Matrix 320 is omni-directional on the code plane, the Pitch and Skew angles have the same significance with respect to the code plane. However in some advanced code reading applications performance can be improved by modifying the Skew angle.

The **Pitch**, **Skew** and **Tilt** angles are represented in Figure 48. Follow the suggestions below for the best orientation:

Position the reader in order to avoid the direct reflection of the light emitted by the Matrix 320 reader; it is advised to **assure at least 10°** for the Skew angle.

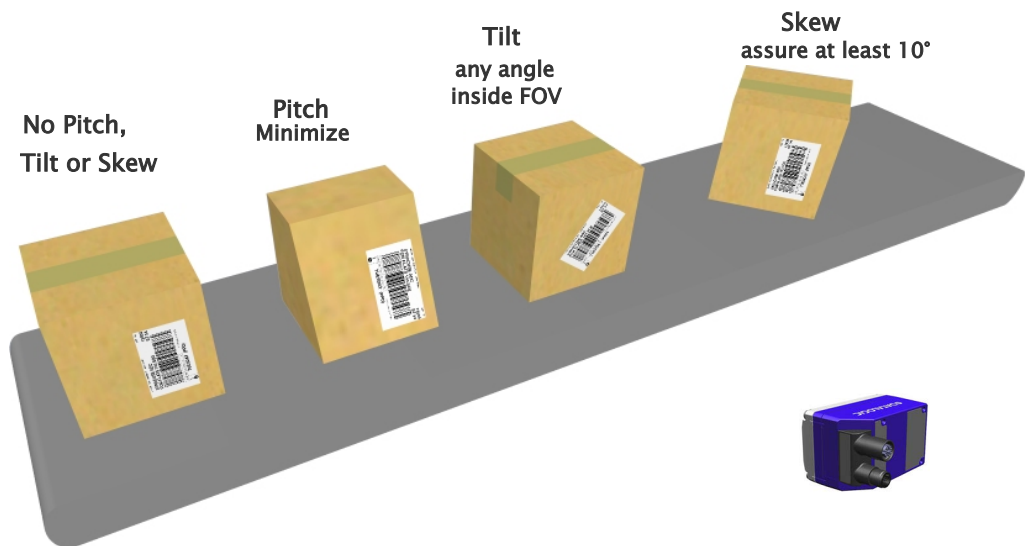


Figure 48 - Pitch, Tilt, and Skew Angles

In some cases, such as low contrast or low illumination, it can be useful to use a **Pitch or Skew** angle = 0°.

The **Tilt** angle is also represented in Figure 48. Matrix 320 can read labels with any tilt angle. Keep in mind however, that since linear barcodes are rectangular, the reader should be aligned to fit them into the horizontal FOV.

See [Chapter 6, Reading Features](#) for FOV vs. Reading Distance considerations.

MOUNTING WITH EMK MIRRORS

Accessory EMK series External Deflection Mirrors can be mounted in all applications where it is not practical to use the full DOF of the reader. In these cases a more compact reading station can be constructed. This is particularly useful in side reading applications.

The following paragraphs describe common mounting positions which help maintain reader to mirror alignment, however many variations can be constructed.




NOTE

For all of the following mounting examples, the positioning distances are not given since they depend on the application and characteristics of the reader, (lens, focus, etc.). Follow your application drawings for this information.



CAUTION

Do not mount the reader so far from the mirror that the reading area extends outside of the mirror surface.

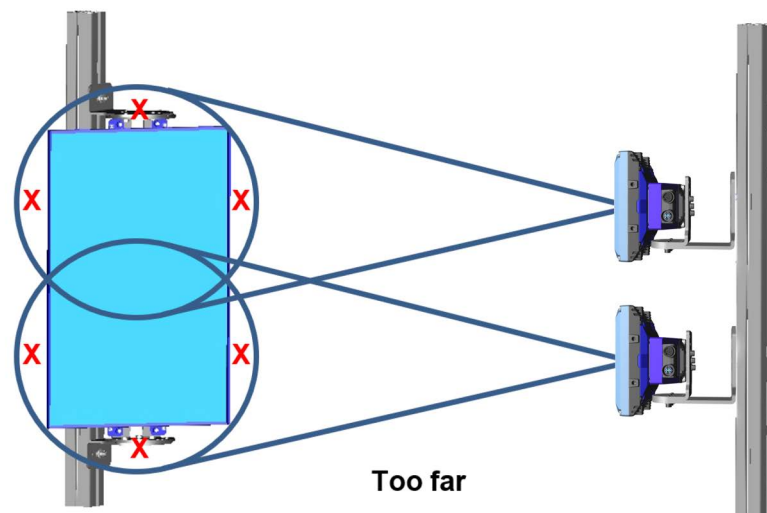

The EMK Mirror Bracket has some pre-defined skew angle slots to facilitate mounting. These are the angles that will be projected onto the conveyor surface (reflection angles).




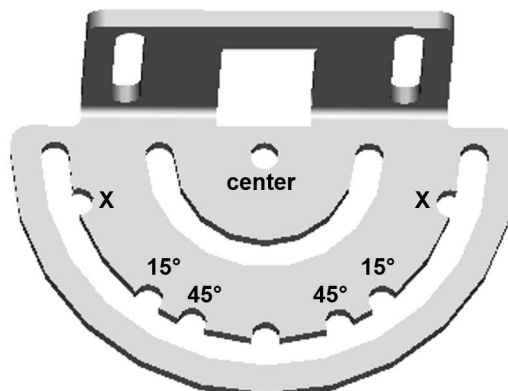


Figure 49 - Mirror Mounting Bracket

EMK-380 Side Mount - Standard

Matrix 320 and EMK-380 Mirror alignment is maintained when the EMK is mounted directly to the frame profiles. The skew angle is made at the mirror instead of at the reader.




1. Mount the mirror brackets to the profiles with one bolt in the center position and one bolt in the outer ring.
2. Rotate the mirror brackets so that the 15° skew angle slot is aligned with the profile channel (see figure below).
3. Mount the Matrix reader through the center slots of the L-bracket to the profile.
4. Move the mirror assembly to the correct distance from the reader according to your application.
5. Move the Matrix reader vertically to center it on the mirror.
6. Tighten the bolts.

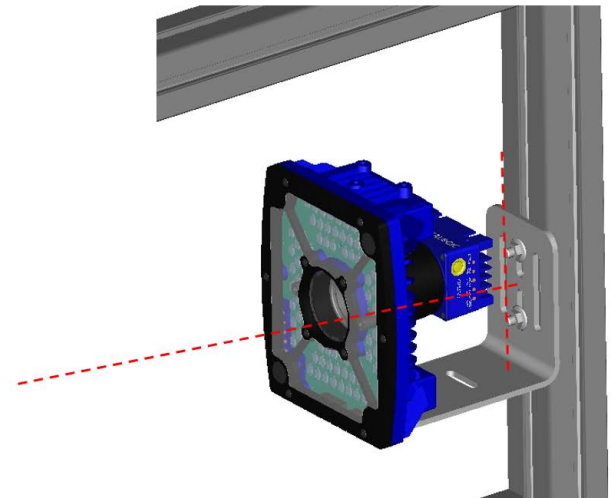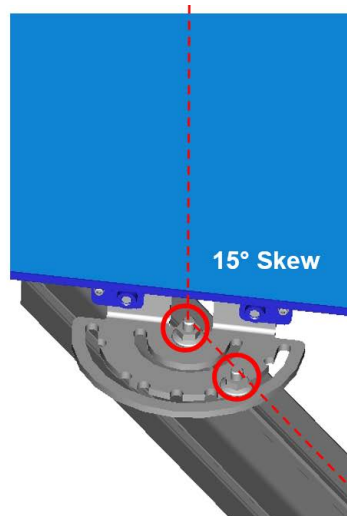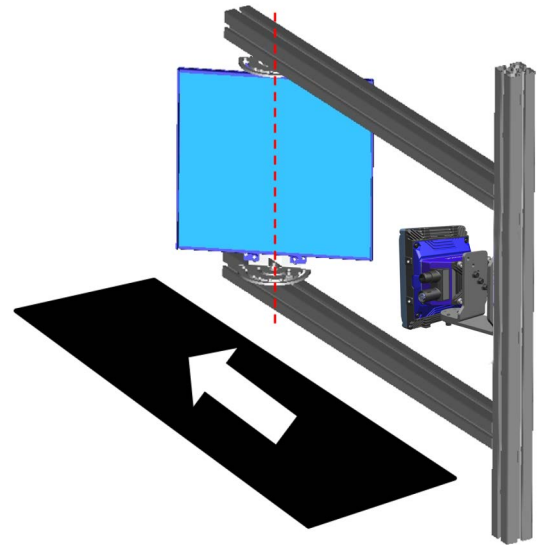

EMK-380 Side Mount - Alternative

An alternative mounting solution is to use the BK-90-040 brackets included in the package. Matrix 320 and EMK-380 Mirror alignment is obtained when the EMK is centered to the frame profiles as shown in the figures below. These brackets also provide the freedom of applying offsets to the mirror where necessary.




1. Mount and center the BK-90-040 brackets on the vertical profile.
2. Mount the mirror brackets to the BK-90-040 brackets with one bolt in the center position and one bolt in the outer ring.
3. Rotate the mirror brackets so that the 15° skew angle slot is aligned with the profile channel (see figure below).
4. Mount the Matrix reader through the center slots of the L-bracket to the profile.
5. Move the mirror assembly to the correct distance from the reader according to your application.
6. Position the Matrix reader vertically to center it on the mirror.
7. Tighten the bolts.

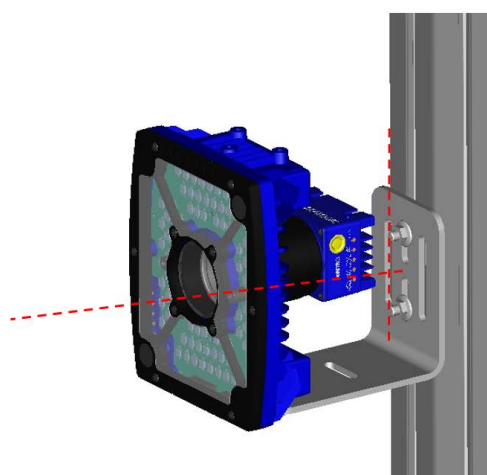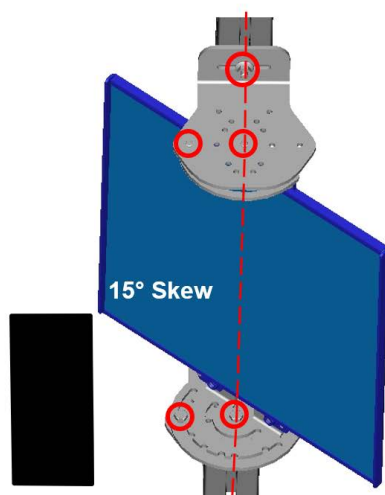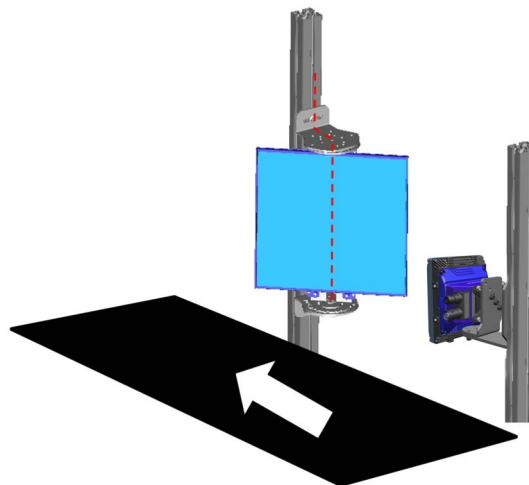

EMK-600 Side Mount - Standard

The EMK-600 mirror can be used together with two Matrix 320 readers in applications where a larger Field of View (FoV) is required. Matrix 320 and EMK-600 Mirror alignment is maintained when the EMK is mounted directly to the frame profiles. The skew angle is made at the mirror instead of at the reader.

1. Mount the mirror brackets to the profiles with one bolt in the center position and one bolt in the outer ring.
2. Rotate the mirror brackets so that the 15° skew angle slot is aligned with the profile channel (see figure below).
3. Mount the Matrix readers through the center slots of the L-bracket to the profile.
4. Move the mirror assembly to the correct distance from the readers according to your application.
5. Position the Matrix readers vertically to center them on the mirror.
6. Tighten the bolts.

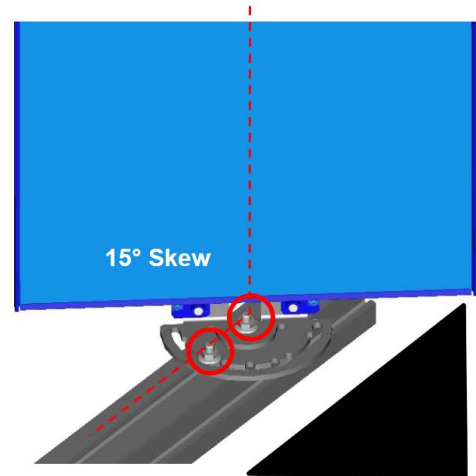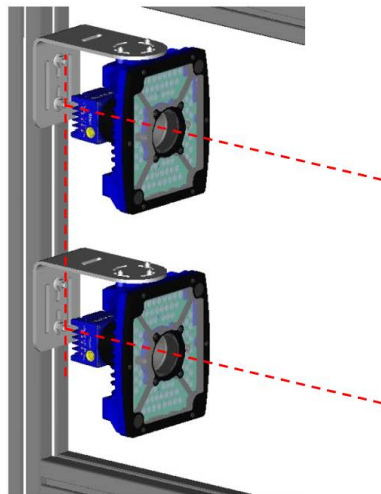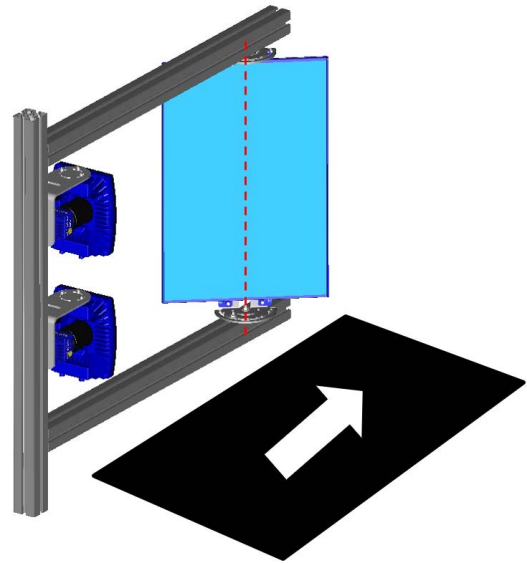

EMK-600 Side Mount - Alternative




An alternative mounting solution is to use the BK-90-040 brackets (separate accessory). Matrix 320 readers and EMK-600 Mirror alignment is obtained when the EMK is centered to the frame profiles as shown in the figures below. These brackets also provide the freedom of applying offsets to the mirror where necessary.



NOTE

The BK-90-040 brackets are a separate accessory for alternative mounting of the EMK-600 Deflection Mirror.

1. Mount and center the BK-90-040 brackets on the vertical profile.
2. Mount the mirror brackets to the BK-90-040 brackets with one bolt in the center position and one bolt in the outer ring.
3. Rotate the mirror brackets so that the 15° skew angle slot is aligned with the profile channel (see figure below).
4. Mount the Matrix readers through the center slots of the L-bracket to the profile.
5. Move the mirror assembly to the correct distance from the readers according to your application.
6. Position the Matrix readers vertically to center them according to your application drawings.
7. Tighten the bolts.

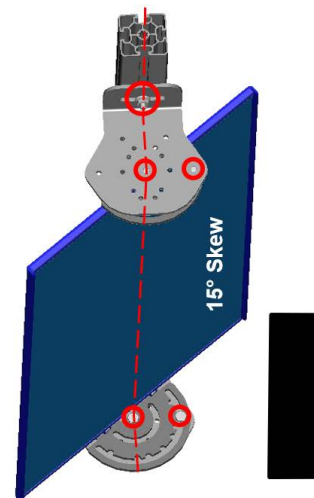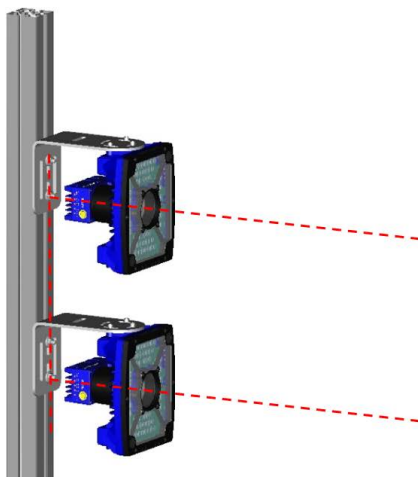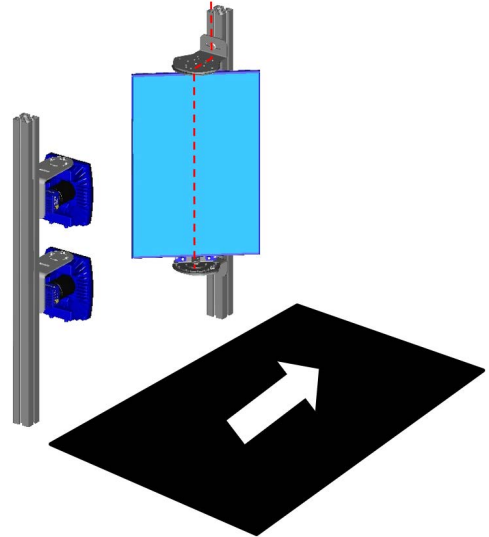

MATRIX 320 C-MOUNT MOUNTING INSTRUCTIONS

Mounting Instructions for Matrix 320 C-Mount without illuminator




Before starting the procedure, make sure the reader is powered off.



Do not touch the sensor aperture lens glass, or lens cover glass. These areas must be kept clean. Avoid any abrasive substances that might damage these surfaces during cleaning.





Observe ESD precautions when installing or removing a filter, cover, illuminator or other accessories.

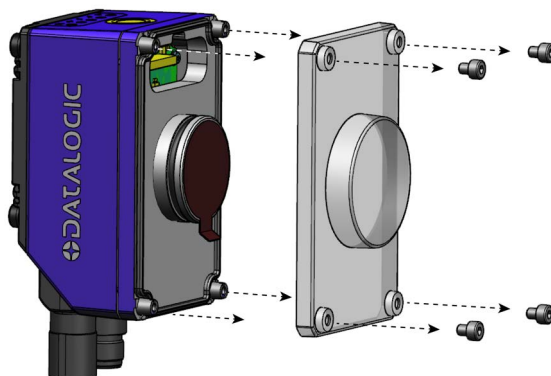

1. In a dust-free environment, remove the plastic protective blister by unscrewing the four plastic screws.

2. Remove the sensor protection label by pulling it off the base.

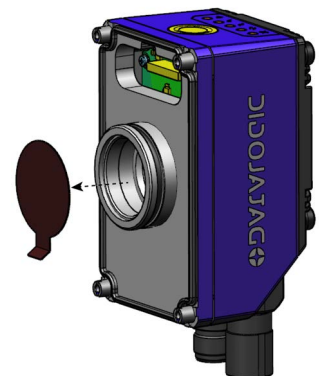


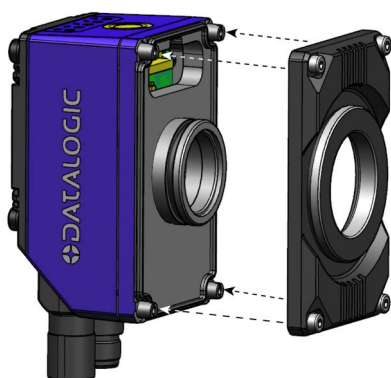

3. Mount the base cover and tighten the four screws.

4. Mount the lens by screwing it tightly onto the base.

5. Focus the reader. Refer to "[Step 3B - Focus the reader](#)" on page 5.

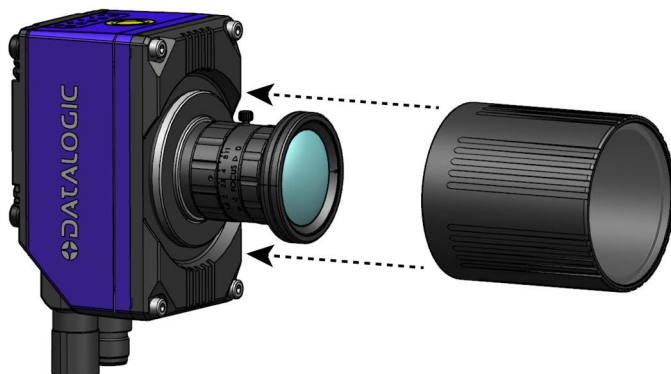

6. Mount the lens cover onto the base cover.

7. Mount the heat sink (see "[Heat Sink mounting instructions](#)" on page 82).

Mounting instructions for Matrix 320 with 36 LED illuminator




Before starting the procedure, make sure the reader is powered off.



Do not touch the sensor aperture lens glass, or lens cover glass. These areas must be kept clean. Avoid any abrasive substances that might damage these surfaces during cleaning.




Observe ESD precautions when installing or removing a filter, cover, illuminator or other accessories.

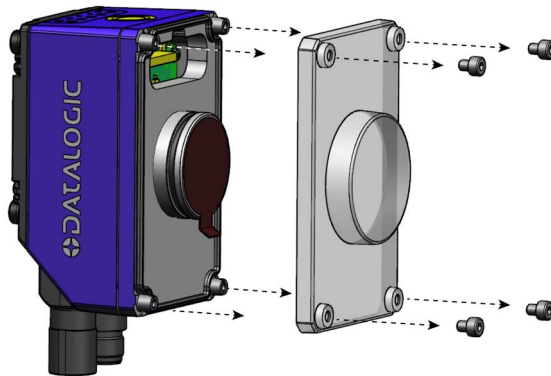

1. In a dust-free environment, remove the plastic protective blister by unscrewing the four plastic screws.

2. Remove the sensor protection label by pulling it off the base.

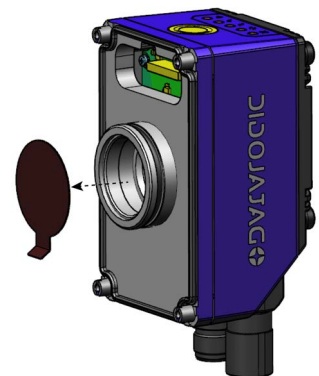




3. Mount the lens by screwing it tightly onto the base and set the lens aperture. If the lens locking knobs are pointing toward the short sides of the reader, insert the lens spacer between the anti-vibration O-ring and the lens to facilitate better access to the locking knobs later.





NOTE

If the lens locking knobs are pointing toward the short sides of the reader, remove the anti-vibration O-ring from the lens, install the lens spacer onto the threaded base of the lens, then insert the O-ring back onto the lens. This will facilitate better access to the locking knobs later.

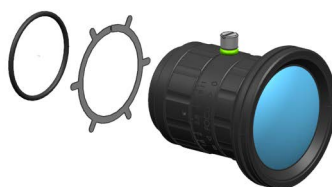

4. Mount the adapter onto the base by tightening the four captive screws.

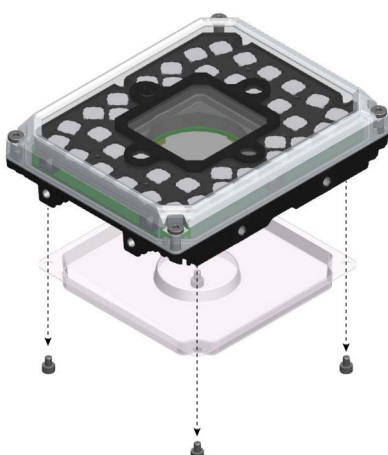
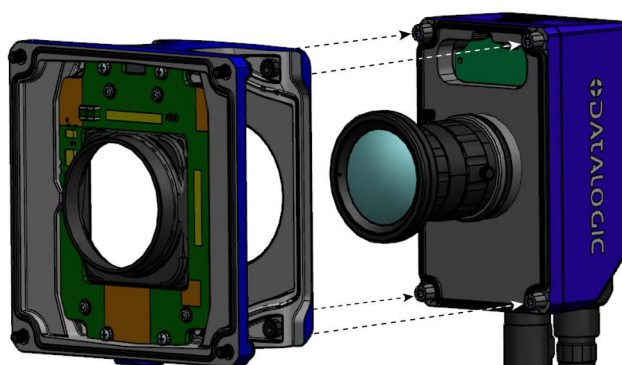


5. Remove the protective blister from the illuminator.



Do not touch the illuminator electrical components to avoid electrostatic charges on the PCB.

6. Mount the illuminator onto the adapter by tightening the four captive screws. The reader can now be powered on.
7. Focus the reader. Refer to "Step 3B - Focus the reader" on page 5.

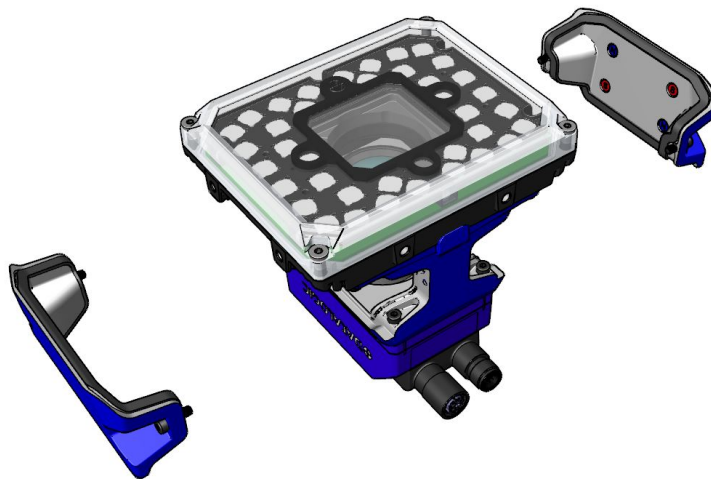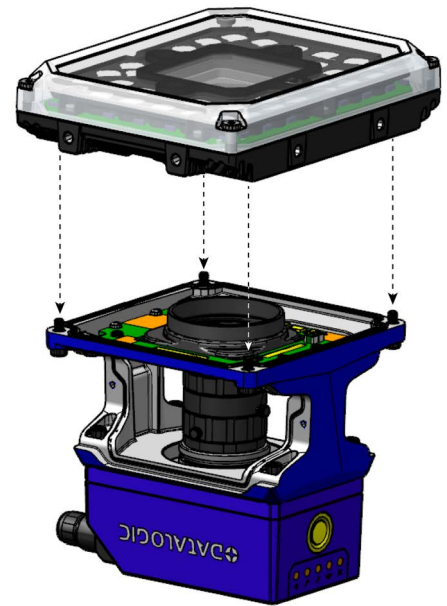

8. Mount the adapter side covers. These come with magnets, so they can be attached to a metal board or to each other to keep your hands free during installation.

9. Mount the heat sink (see "Heat Sink mounting instructions" on page 82).



NOTE

Most lenses come with a green round sticker to identify the focus locking knob. The two knobs differ in the dimension of the O-ring, designed to fit a specific adjustment ring, and are not interchangeable. Make sure that the knob with the green O-ring is always placed in the position identified by the green sticker. Once you set the desired diaphragm and focus through the adjustment rings, fix the positions by locking the corresponding knobs.



Heat Sink mounting instructions

When to mount the heat sink

The heat sink provided in the package is to be used as an adapter for rotating brackets and for heat dissipation. Its use is recommended especially in high ambient temperature applications.


How to mount the heat sink

The Matrix 320 package contains the following materials to mount the heat sink:

- 1 heat sink
- 4 black screws
- 4 black washers

To install the heat sink on the reader, please follow this procedure:

1. Insert the screws and washers through the heat sink and thread them loosely into the Matrix 320 reader, as shown in the figure below.
2. Tighten the screws

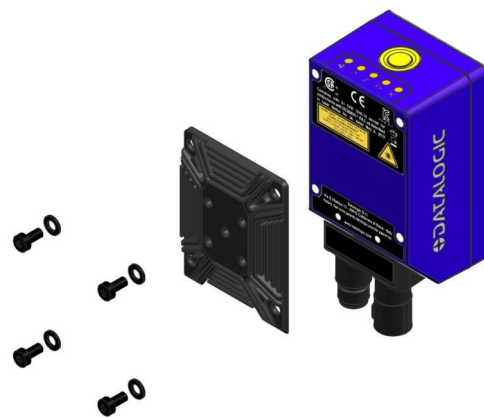

When the heat sink is installed on a Matrix 320 Liquid Lens model with 14 LEDs illuminator, the Laser Class and Warning labels applied to the device are no longer visible. Make sure to apply one of the Laser Class labels (in the relevant language) provided in the package on the Matrix 320 reader side.



For the Americas, please also apply the IEC certification label.

Complies with 21 CFR 1040.10 except for conformance with IEC 60825-1 Ed.3, as described in Laser Notice No. 56, dated May 8, 2019



ACCESSORY COVERS AND FILTERS

Covers

Standard and ESD Covers



Standard Cover LT 14 LEDs




Standard Cover LT 36 LEDs

DESCRIPTION	ORDER NUMBER
Cover STD LT 14L M320/P2	93ACC0271
Cover STD LT 36L M320/P2	93ACC0272
Cover ESD LT 14L M320/P2	93ACC0278

Polarizing Covers



Polarizing Cover LT 14 LEDs

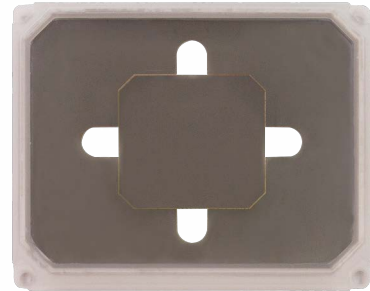

Polarizing Cover LT 36 LEDs

DESCRIPTION	ORDER NUMBER
Cover Polarizer LT 14L M320/P2	93ACC0273
Cover Polarizer LT 36L M320/P2	93ACC0274

Cover Replacement



The reader must be disconnected from the power supply during the cover replacement procedure.



Make sure to operate in a dust-free environment during the cover replacement procedure.

1. Unscrew the four screws using a 2.5 mm Allen wrench.
2. Remove the cover. The cover will remain attached to the body because of the gasket. To unmount it properly, it is recommended to gently lever the cover from its corners using a flat blade screwdriver between the cover and the body of the reader. See Figure 50 and Figure 51.

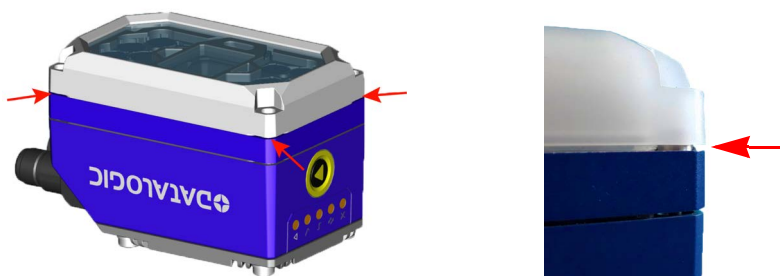


Figure 50 - Removing the cover (14 LEDs model)

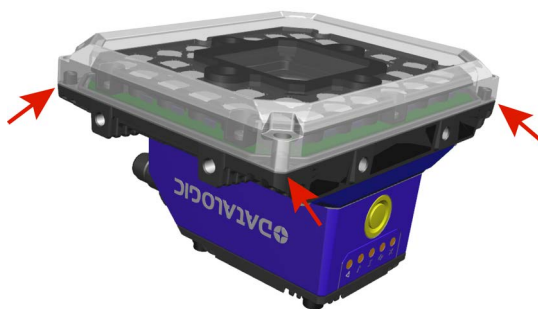



Figure 51 - Removing the cover (36 LEDs model)



When removing the cover to replace it, the Poron filter frame might stick to the removed window. Make sure to reassemble it.



Poron filter frame
(14 LEDs illuminator model)

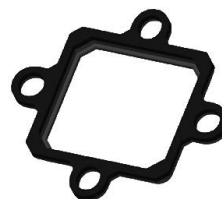

Poron filter frame
(36 LEDs illuminator model)



All accessory covers are supplied with a mounted gasket. When replacing the cover, the gasket may remain attached to the base. Make sure to remove the old gasket, since the new cover is already supplied with its own gasket.

3. Make sure the new cover is free of dust, dirt and fingerprints. If necessary, wipe it clean using soft material and alcohol. Avoid any abrasive substances.



The cover has a predefined mounting direction (see Figure 52 and Figure 53). For the 14 LEDs model (Figure 52), make sure to align the identification grooves to the right side. For the 36 LEDs model (Figure 53), the illuminator has one pin different from the other three: make sure to align this special pin with the correspondent cover seat.

4. Place the new cover on the reader and press the cover frame edges.



To avoid damage, do not press on the window.

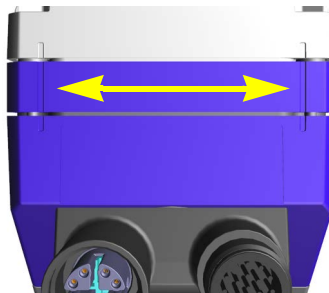


Figure 52 - Aligning the cover (14 LEDs model)

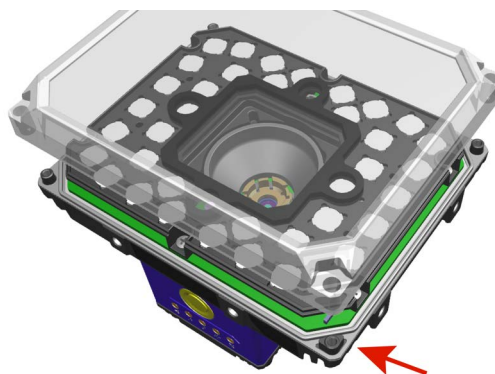


Figure 53 - Aligning the cover (36 LEDs model)

5. Insert the four screws and loosely tighten them in a clockwise direction.
6. Finally tighten the screws to a torque of 0.8 N m.

Filters



YAG Cut Filter
LT 14 LEDs

YAG Cut Filter
LT 36 LEDs

DESCRIPTION	ORDER NUMBER
Filter YAG Cut LT 14L M320/P2	95A900018
Filter YAG Cut LT 36L M320/P2	95A900022
Half Polarizer Kit LT 14L M320/P2	93ACC0275
Filter RED Bandpass 635nm LT 14L M320/P2	95A900015
Filter BLU Bandpass 470nm LT 14L M320/P2	95A900016
Filter IR Bandpass 850nm LT 14L M320/P2	95A900017
Filter RED Bandpass 635nm LT 36L M320/P2	95A900019
Filter BLU Bandpass 470nm LT 36L M320/P2	95A900020
Filter IR Bandpass 850nm LT 36L M320/P2	95A900021
Filter UV Cut Longpass 415 LT 14L M320/P2	95A900039
Filter UV Cut Longpass 415 LT 36L M320/P2	95A900040

Filter Mounting Instructions



CAUTION

The reader must be disconnected from the power supply during the cover replacement procedure.



CAUTION


Make sure to operate in a dust-free environment during the cover replacement procedure.



NOTE

For correct use of the Half Polarizer, use DL.CODE software release 1.9.2 and later.



1. Temporarily remove the front cover. Refer to "Cover Replacement" on page 84.
2. Unmount the original light shield (or any other filter) grabbing it from the sides and pulling it up.

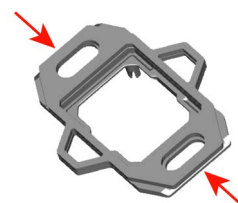

3. Place the filter in the appropriate location. The filter is equipped with two pins at the bottom that guide its insertion into the product.

**NOTE**

You can mount the filter in two equivalent directions by rotating it 180°.

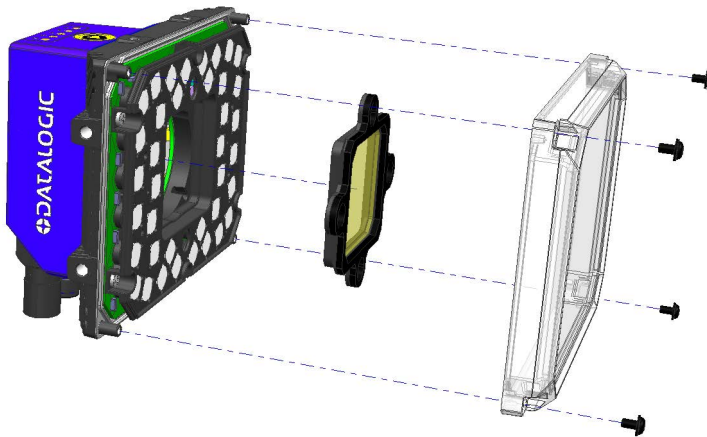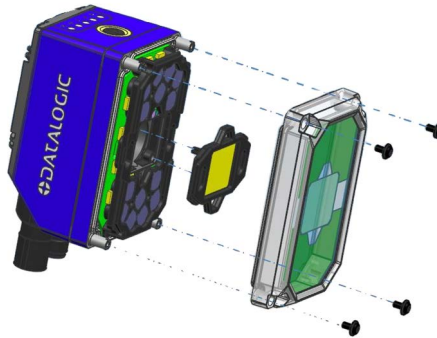**CAUTION**

Make sure that the filter is correctly placed without any tilt before mounting the cover back on the reader body.

4. Finally, mount the cover back on the reader body. Refer to "[Cover Replacement](#)" on [page 84](#).

CHAPTER 4

CBX ELECTRICAL CONNECTIONS

All Matrix 320 models can be connected to a CBX connection box through one of the available **CAB-DSxx-S** accessory cables. These accessory cables terminate in a 17-pin connector on the Matrix 320 side and in a 25-pin male D-sub connector on the CBX side.

We recommend making system connections through one of the CBX connection boxes since they offer the advantages of easy connection, easy device replacement, opto-isolated output signals, and filtered reference signals.



NOTE

If you require direct wiring to the reader the connections are the same as shown in this chapter with the exception of the digital Outputs. Direct wiring details are indicated in Appendix A.



NOTE

To avoid electromagnetic interference when the reader is connected to a CBX connection box, verify the jumper positions in the CBX as indicated in its Installation Manual.



CBX CONNECTION BOX PINOUT

The table below gives the pinout of the CBX100/500 terminal block connectors. Use this pinout when the Matrix 320 reader is connected by means of the CBX100/500:

Group	Label	Description
Input Power	Vdc	Power Supply Input Voltage +
	GND	Power Supply Input Voltage -
	Earth	Protection Earth Ground
Inputs	+V	Power Source - External Trigger
	I1A	External Trigger A (polarity insensitive)
	I1B	External Trigger B (polarity insensitive)
	-V	Power Reference - External Trigger
	+V	Power Source - Inputs
	I2A	Input 2 A (polarity insensitive)
	I2B	Input 2 B (polarity insensitive)
	-V	Power Reference - Inputs
Outputs	+V	Power Source - Outputs
	-V	Power Reference - Outputs
	O1+	Output 1 + opto-isolated and polarity sensitive
	O1-	Output 1 - opto-isolated and polarity sensitive
	O2+	Output 2 + opto-isolated and polarity sensitive
	O2-	Output 2 - opto-isolated and polarity sensitive
	O3A	Output 3 - non opto-isolated (only available through CBX500)
Auxiliary Interface	TX	Transmit Data
	RX	Receive Data
	SGND	Auxiliary Interface Signal Ground
ID-NET	REF	Network Reference
	ID+	ID-NET network data +
	ID-	ID-NET network data -
	Shield	Network Cable Shield
Main Interface	RS232	RS422 Full Duplex
	TX	TX+
	RX	*RX+
	-	TX-
	-	*RX-
	SGND	SGND



* Do not leave floating, see ["RS422 Full Duplex Interface"](#) on page 94 for connection details.

CAB-DS0x-S PINOUT

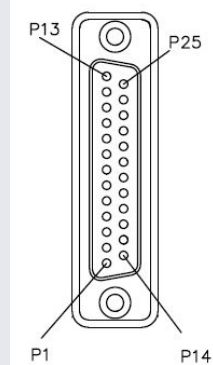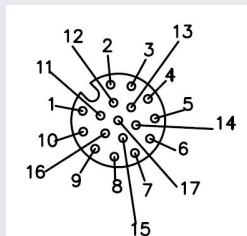

17 PINS	NAME	WIRE COLOR	25 PINS
1	VS	Red	9-13
2	GND	Black	7-25
6	XTRG_A	Orange	18
5	XTRG_B	Green/Black	19
13	IN2A	Gray	6
3	IN2B	Green/Red	10
16	OUT3	Black/White	14-16
8	OUT2	White/Red	11
9	OUT1	Purple	8
17	CO/TX	Yellow	2
11	C2/RX	Brown	3
12	C1/RTS	Pink	4
10	C3/CTS	Green	5
4	TXA	Yellow/White	21
14	RXA	Yellow/Blue	20
7	NET+	White	23
15	NET-	Blue	24
NUT	SHIELD	Both Shields	1
			12, 15, 17, 22 Not connected

CAB-GD0x-S PINOUT

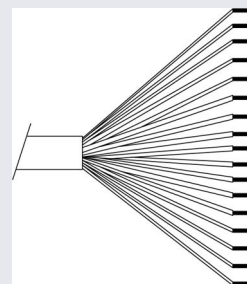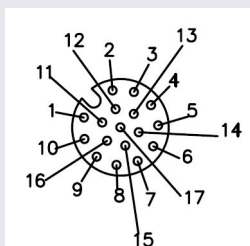

17 PINS	NAME	STRIPPED WIRE COLOR
1	VS	Brown
2	GND	Blue
6	XTRG_A	Yellow
5	XTRG_B	Pink
13	IN2A	White/Green
3	IN2B	White
16	OUT3	Yellow/Brown
8	OUT2	Gray
9	OUT1	Red
17	C0/TX	White/Gray
11	C2/RX	Gray/Pink
12	C1/RTS	Red/Blue
10	C3/CTS	Purple
4	TXA	Green
14	RXA	Brown/Green
7	NET+	Black
15	NET-	White/Yellow



CAUTION

Unused stripped wires must be insulated to prevent shorting.

POWER SUPPLY

Power can be supplied to the reader through the CBX100/500 spring clamp terminal pins as shown in Figure 54:

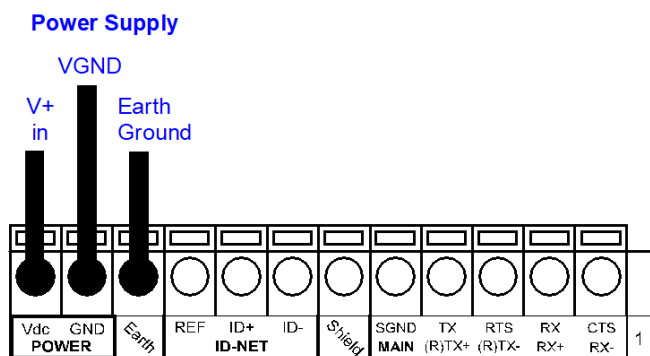


Figure 54 - Power Supply Connections

The power must be equal to 24 Vdc \pm 10%.

It is recommended to connect the device CHASSIS to earth ground (Earth) by setting the appropriate jumper in the CBX connection box. See the CBX Installation Manual for details.

MAIN SERIAL INTERFACE



CAUTION

Do not connect to the Main Interface spring clamp terminals if using Host Interface Modules (Fieldbus) with the CBX500.

The signals relative to the following serial interface types are available on the CBX spring clamp terminal blocks.

The main serial interface type and its parameters (baud rate, data bits, etc.) can be defined by the user via DL.CODE software. For more details refer to the Help On Line page of the Reading Phase step (Channels) in DL.CODE.

Details regarding the connections and use of the interfaces are given in the next paragraphs.

RS232 Interface

The RS232 interface is generally used for Point-to-Point connections. When it is connected to the host computer it allows transmission of code data.

The following pins are used for RS232 interface connection:

CBX100/500	Description
TX	Transmit Data
RX	Receive Data
SGND	Signal Ground

It is always advisable to use shielded cables. The overall maximum cable length must be less than 15 m (49.2 ft).

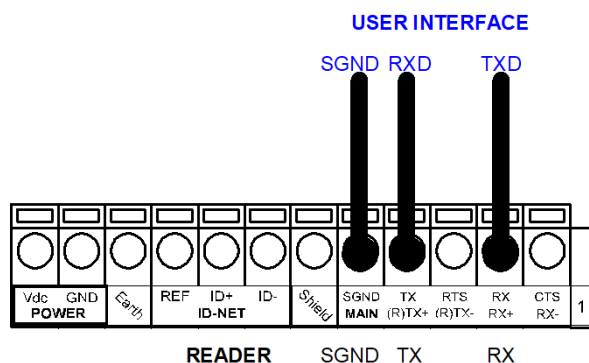


Figure 55 - RS232 Main Interface Connections

RS422 Full Duplex Interface

The RS422 full-duplex (5 wires + shield) interface is used for non-pollled communication protocols in point-to-point connections over longer distances (max 1200 m / 3940 ft) than those acceptable for RS232 communications or in electrically noisy environments.

The CBX pinout follows:

CBX100/500	Description
TX+	RS422 Transmit Data +
RX+	RS422 Receive Data +
TX-	RS422 Transmit Data -
RX-	RS422 Receive Data -
SGND	Signal Ground

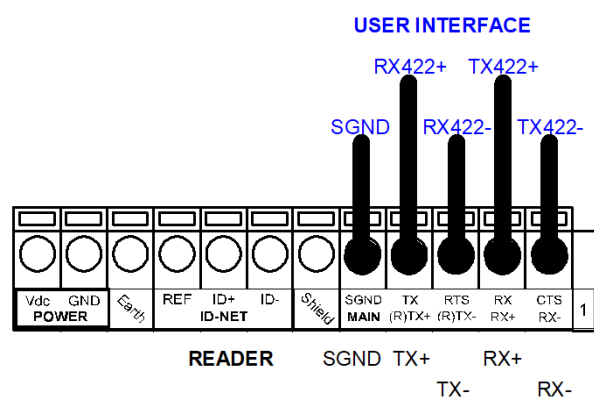


Figure 56 - RS422 Full Duplex Connections



NOTE

For applications that do not use RS422 transmission to the reader (terminal block RX+ and RX- signals), do not leave these lines floating but connect them to SGND as shown below.

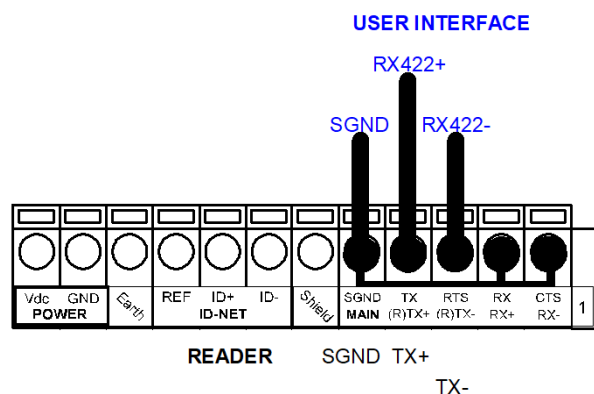


Figure 57 - RS422 Full Duplex Connections Using Only TX Signals to Host

ID-NET INTERFACE

CBX100/500	Description
Shield	Network Cable Shield
ID+	ID-NET Network Data +
ID-	ID-NET Network Data -
REF	Network Reference

ID-NET Cables

The following instructions are referred to Figure 59, Figure 60 and Figure 61.

- The general cable type specifications are: CAT5 twisted pair + additional CAT5 twisted pair, shielded cable AWG 24 (or AWG 22) stranded flexible.
We recommend using DeviceNet cables (drop or trunk type) to the following reference standards:
AN50325 – IEC 62026
UL STYLE 2502 80°C 30V
- Cable Shield **MUST** be connected to earth ground **ONLY** at the Master.
- **NEVER** use ID-NET cable shield as common reference.
- The ID-NET max cable length depends on the baudrate used (see the Baudrate Table below).
- For Common Power Connections use only 2 wires (ID+ and ID-).
 - DC Voltage Power cable (Vdc – GND) should be handled as a signal cable (i.e. do not put it together with AC cable):
 - Wire dimensioning must be checked in order to avoid voltage drops greater than 0.8 Volts.
 - Cable should lie down as near as possible to the ID-NET cable (avoiding wide loops between them).
- Reader's chassis may be connected to earth.
- Network inside the same building.

Baudrate Table				
Baudrate	125 kbps	250 kbps	500 kbps	1 Mbps
Cable Length	1200 m	900 m	700 m	*

* Application dependent, contact your Datalogic representative for details.



NOTE

The default ID-NET baudrate is 500 kbps. Lower ID-NET baudrates allow longer cable lengths.

ID-NET Response Time

The following figure shows the response time of the ID-NET network. This time is defined as the period between the Trigger activation and the beginning of data transmission to the Host.

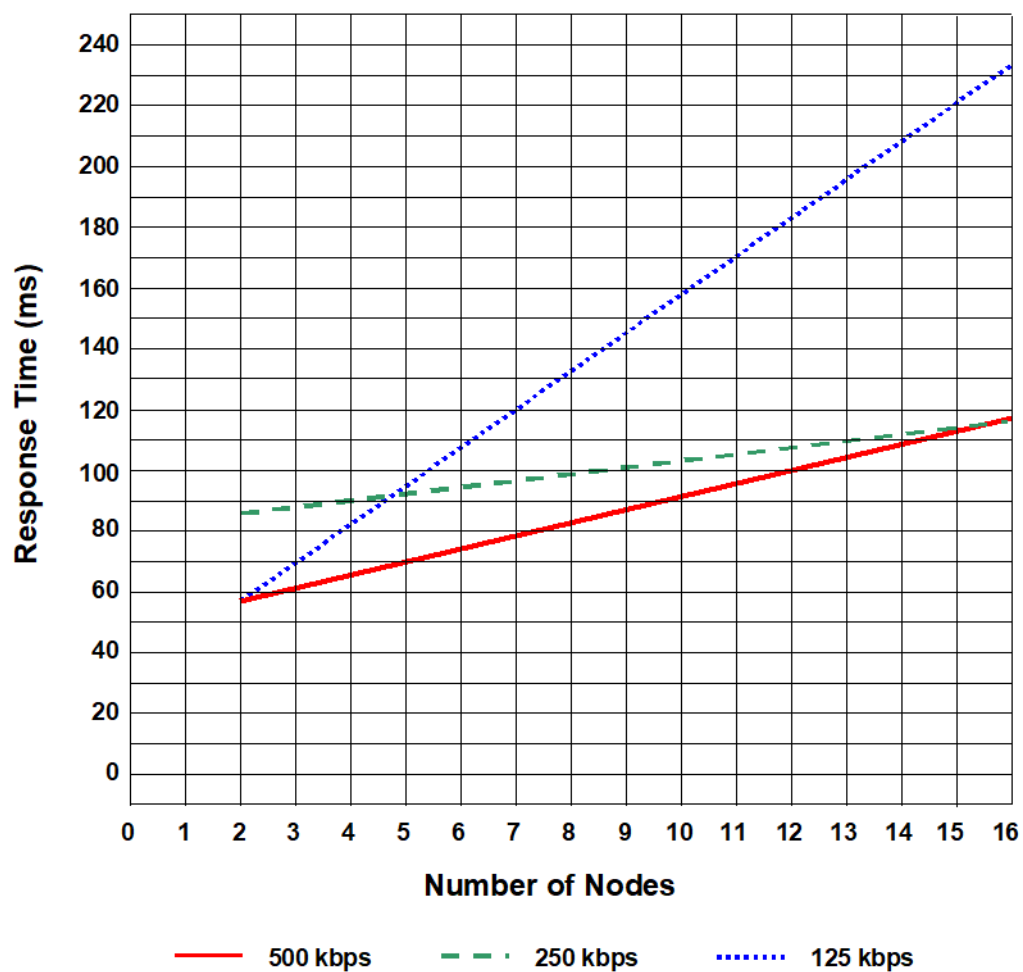


Figure 58 - ID-NET Response Time

Conditions

- ID-NET M/S Synchronized layout
- message length = 50 bytes per node

ID-NET Network Termination

The network must be properly terminated in the first and last reader of the network. This is done by setting the ID-NET Termination Resistance Switch in the CBX100/500 to ON.

ID-NET Connection Diagrams

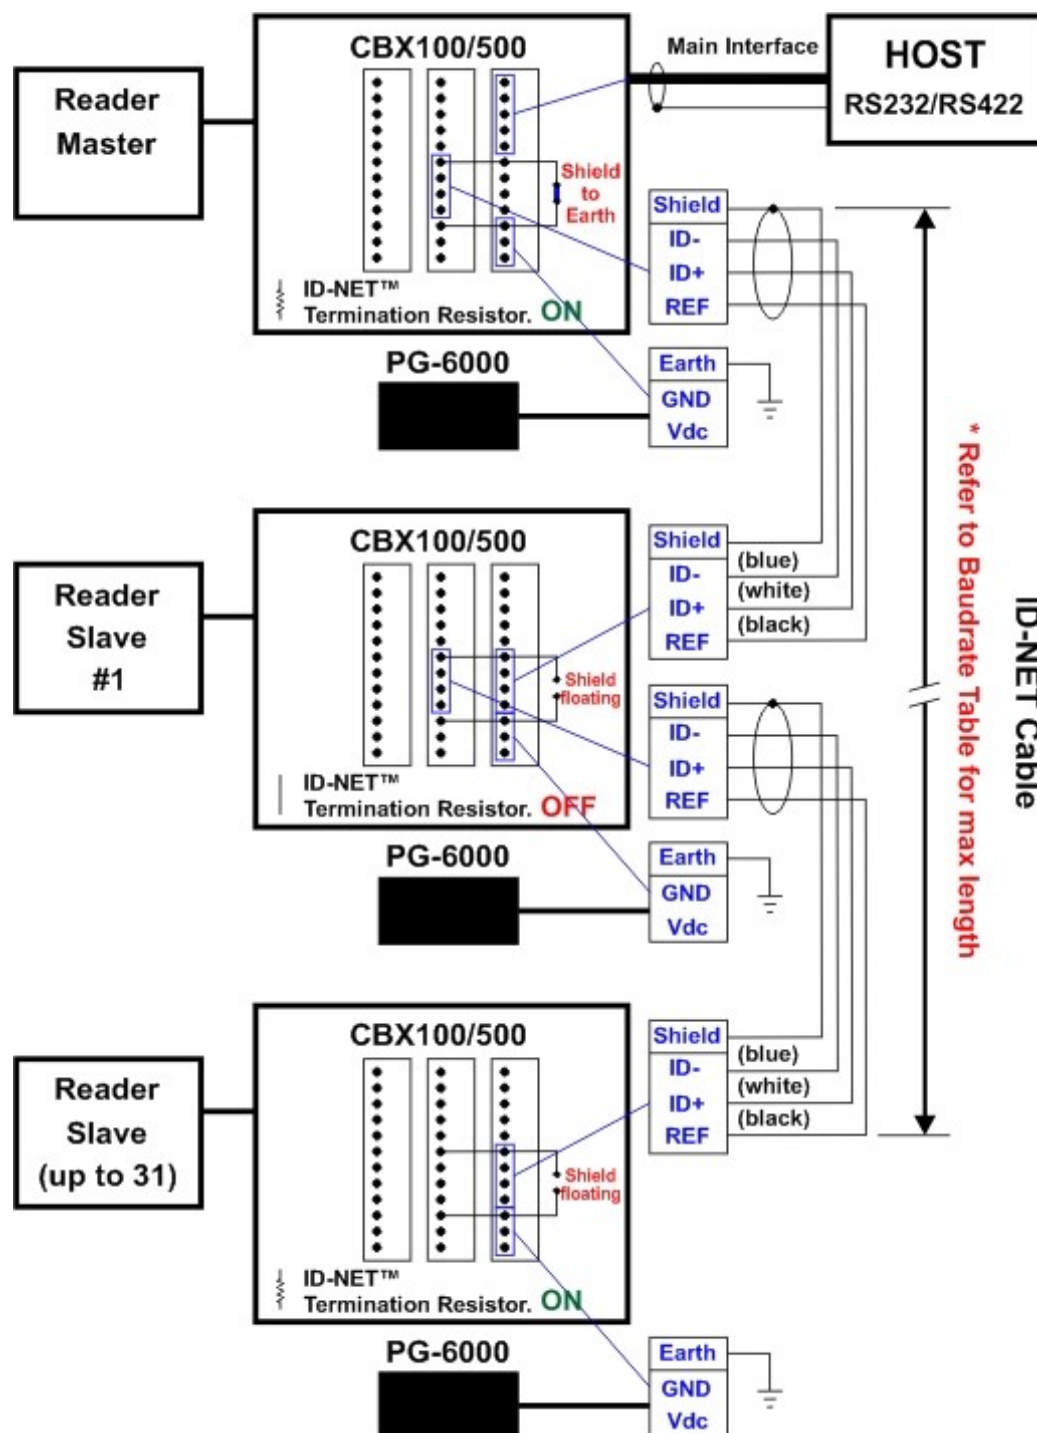


Figure 59 - ID-NET Network Connections with isolated power blocks

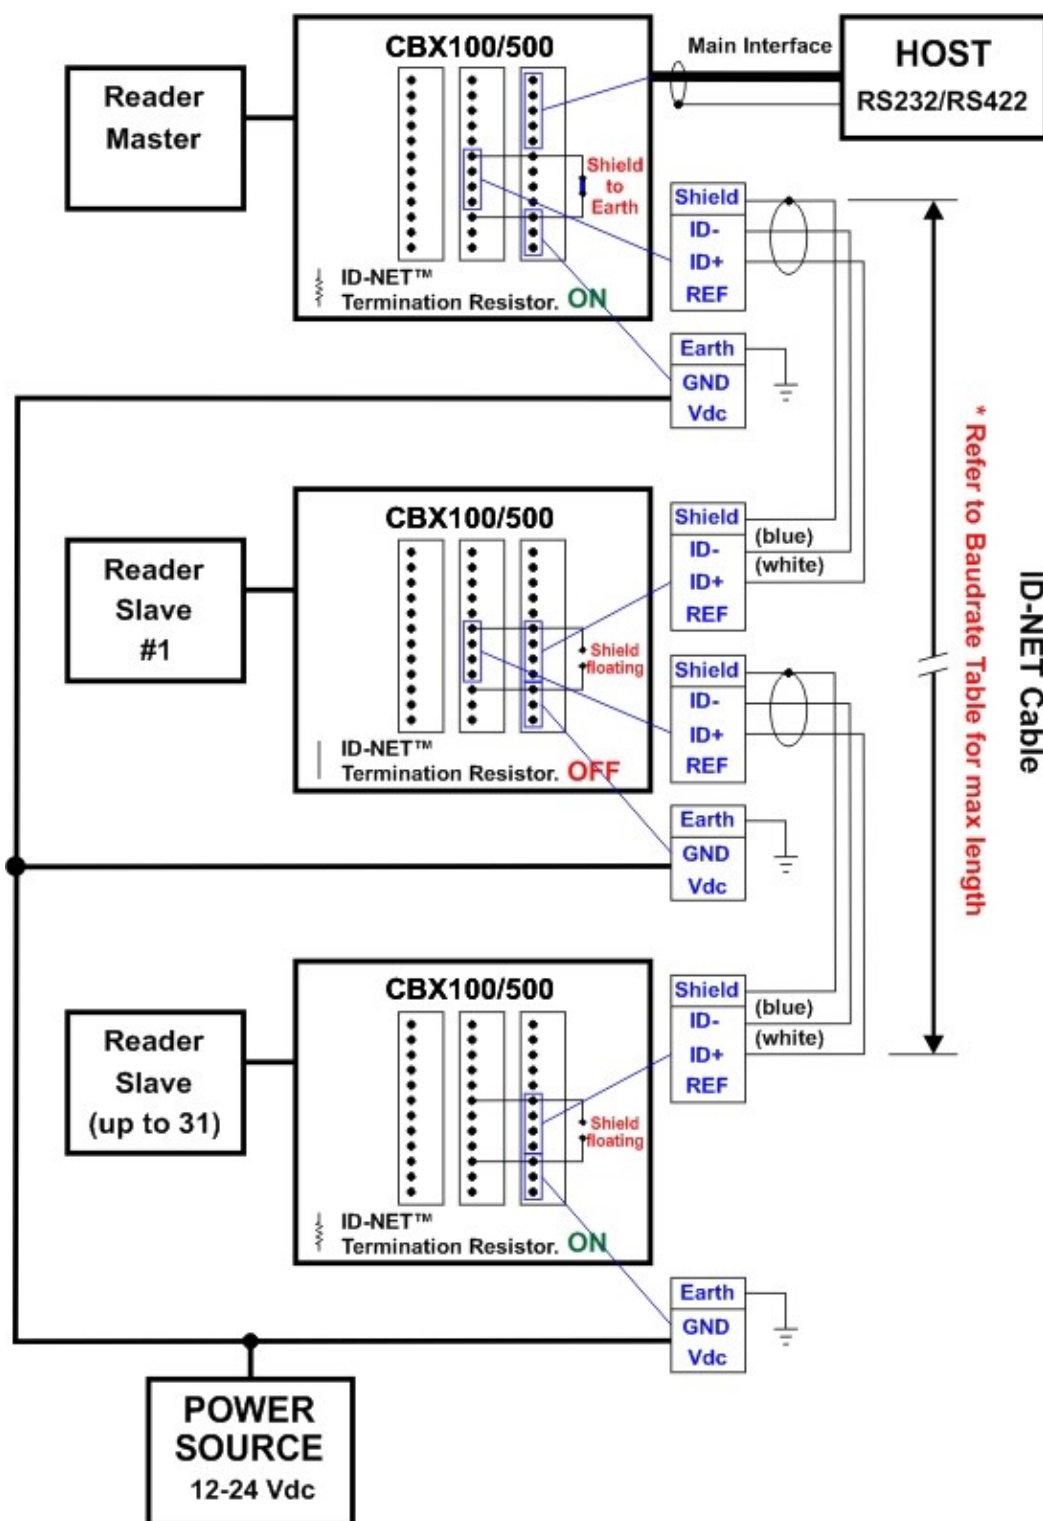


Figure 60 - ID-NET Network Connections with Common Power Branch Network

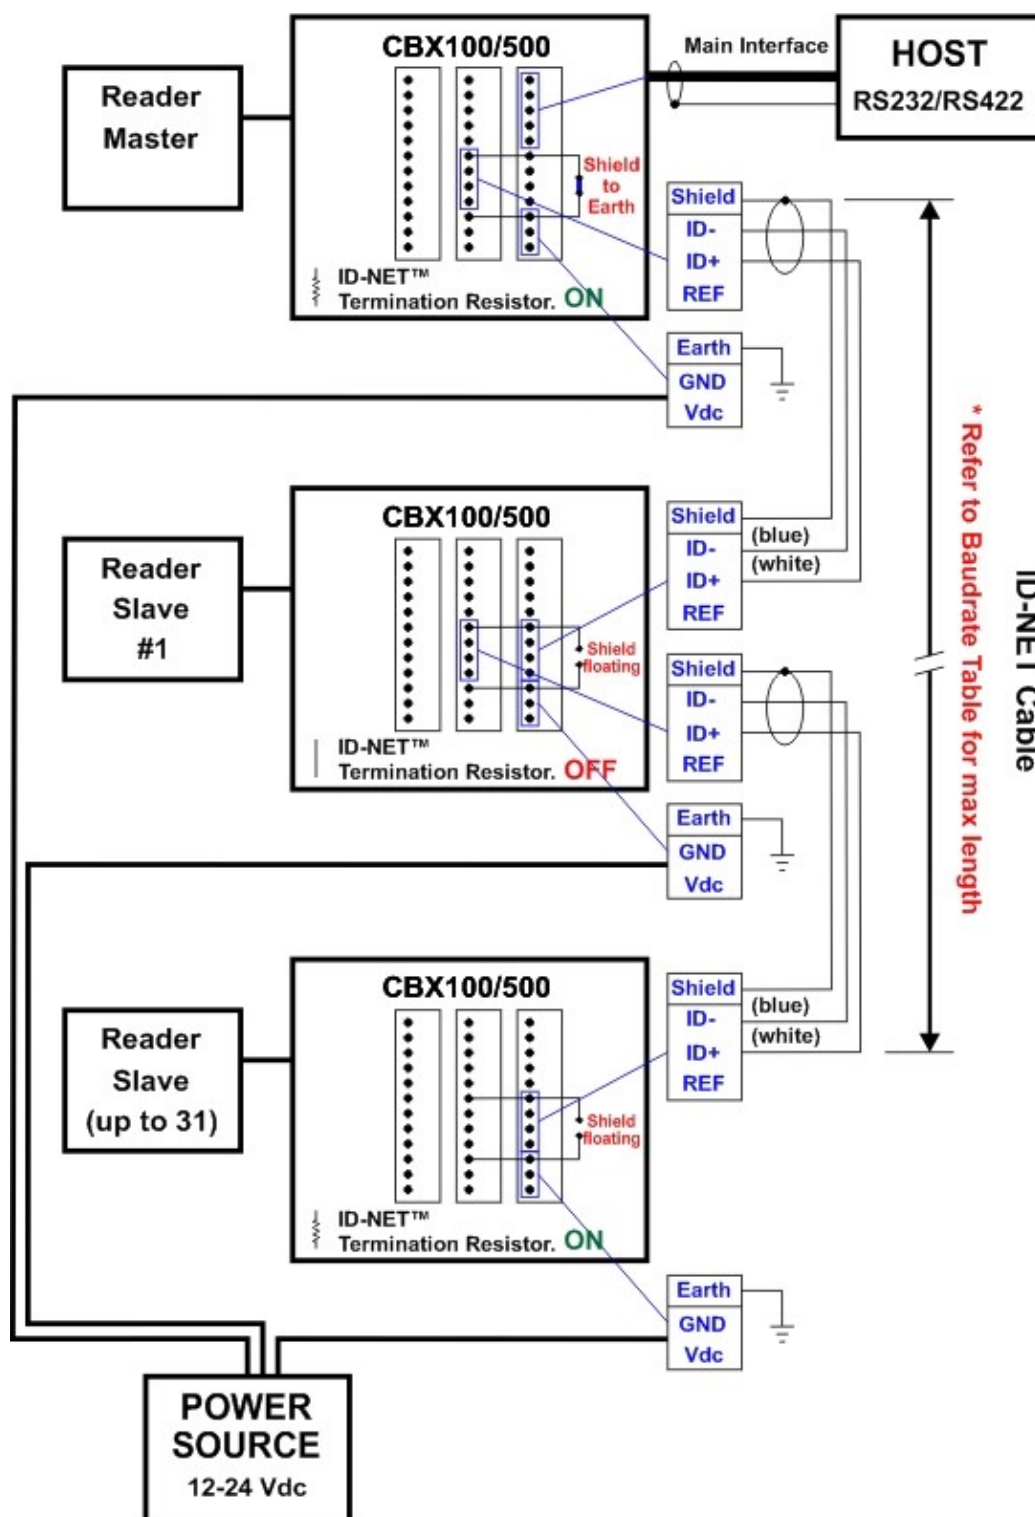


Figure 61 - ID-NET Network Connections with Common Power Star Network

AUXILIARY RS232 INTERFACE

The RS232 auxiliary interface is available for Point-to-Point connections. When it is connected to the host computer it allows transmission of code data.

The parameters relative to the aux interface (baud rate, data bits, etc.) can be defined through the Reading Phase step (Channels) in DL.CODE.

The 9-pin female Auxiliary Interface connector inside the CBX is the preferred connector for temporary communication monitoring.

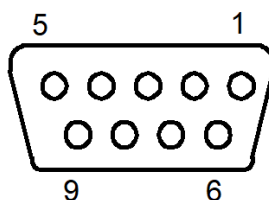


Figure 62 - 9-pin female connector

If permanent system wiring is required, the following pins are used to connect the RS232 auxiliary interface:

CBX100/500	Description
TX	Auxiliary Interface Transmit Data
RX	Auxiliary Interface Receive Data
SGND	Auxiliary Interface Reference

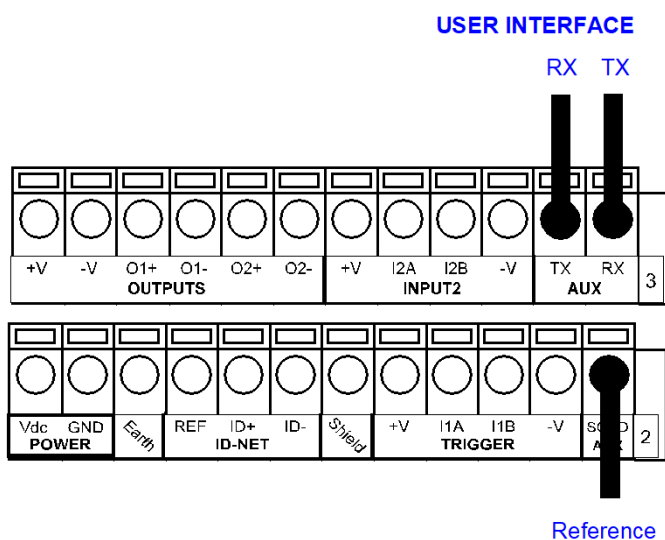


Figure 63 - RS232 Auxiliary Interface Connections



NOTE

Do not connect the Aux Interface to the CBX spring clamp connectors and the 9-pin connector simultaneously.

INPUTS

There are two optocoupled polarity insensitive inputs available on the reader: Input 1 (External Trigger) and Input 2, a generic input:

The External Trigger can be used in One Shot Mode or in Phase Mode. Its main functions are:

- acquisition trigger in One Shot Mode
- reading phase-ON/reading phase-OFF command in Phase Mode

The main functions of the general purpose Input 2 are:

- second external trigger in Phase Mode
- match code storage command when the Match Code option is enabled

The electrical features of both inputs are:

$$V_{AB} = 30 \text{ Vdc max.}$$

$$I_{IN} = 10 \text{ mA (reader) + 12 mA (CBX) max.}$$

The active state of these inputs are selected in software.

An anti-disturbance filter, by default, is implemented in software on both inputs. The value can be changed through the software parameter Debounce Filter. See the Help On Line page of the Reading Phase step (Inputs) in DL.CODE for further details on these parameters.

These inputs are optocoupled and can be driven by both NPN and PNP type commands.



NOTE

Polarity insensitive inputs assure full functionality even if pins A and B are exchanged.

The connections are indicated in the following diagrams:

CBX100/500	Description
+V	Power Source - External Trigger
I1A	External Trigger A (polarity insensitive)
I1B	External Trigger B (polarity insensitive)
-V	Power Reference - External Trigger

The yellow Trigger LED is on when the active state of the External Trigger corresponds to ON.

External Trigger Input Connections Using Matrix 320 Power



CAUTION

Power from the Vdc/GND spring clamps is available directly to the Input Device on the +V/-V spring clamps, and does not pass through the Power Switch (ON/OFF) inside the CBX. Disconnect the power supply when working inside the CBX.

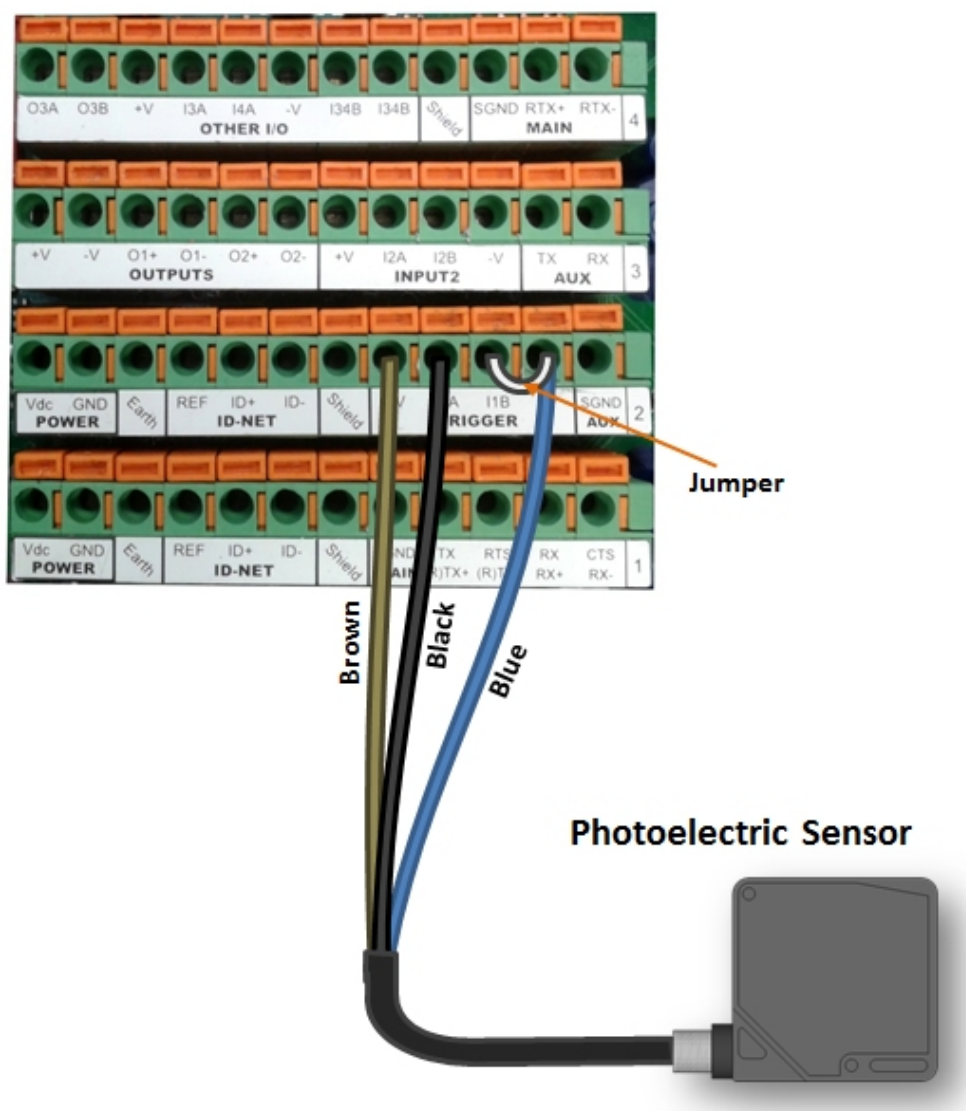


Figure 64 - PNP External Trigger Using Matrix 320 Power

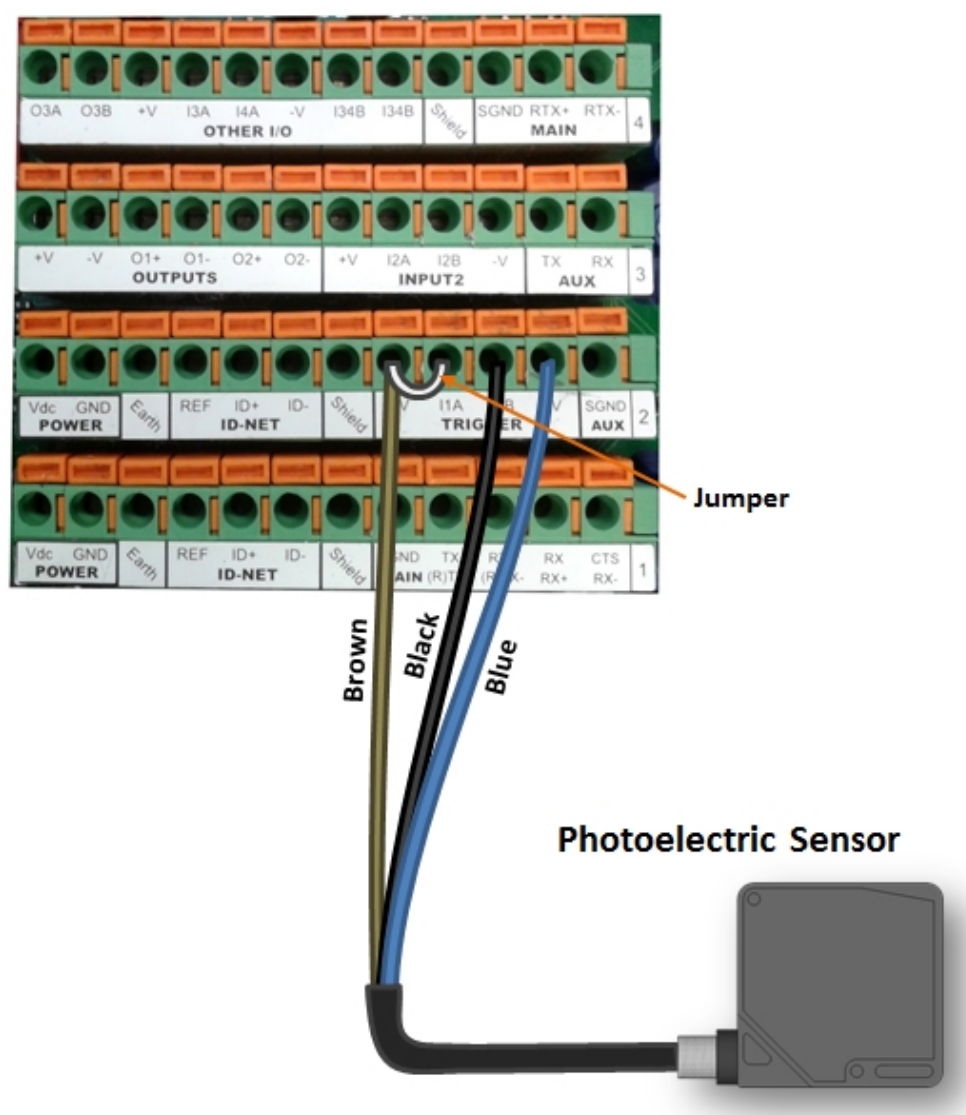


Figure 65 - NPN External Trigger Using Matrix 320 Power

External Trigger Input Connections Using External Power

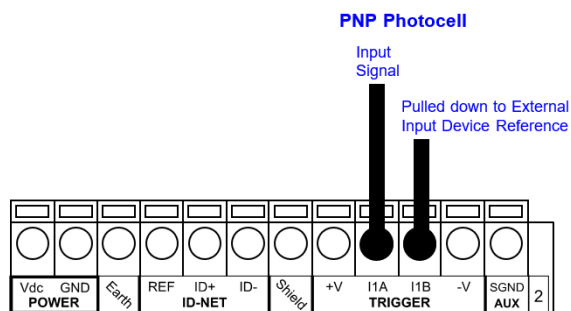


Figure 66 – PNP External Trigger Using External Power

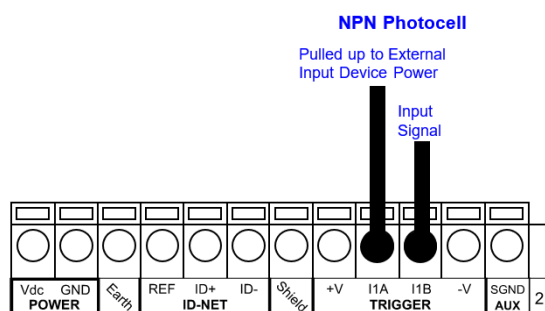


Figure 67 – NPN External Trigger Using External Power

CBX100/500	Description
+V	Power Source - External Trigger
I2A	Input 2 A (polarity insensitive)
I2B	Input 2 B (polarity insensitive)
-V	Power Reference - External Trigger

Input 2 Connections Using Matrix 320 Power



Power from the Vdc/GND spring clamps is available directly to the Input Device on the +V/-V spring clamps, and does not pass through the Power Switch (ON/OFF) inside the CBX. Disconnect the power supply when working inside the CBX.

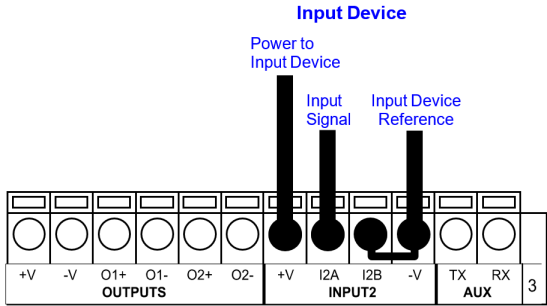


Figure 68 - PNP Input 2 Using Matrix 320 Power

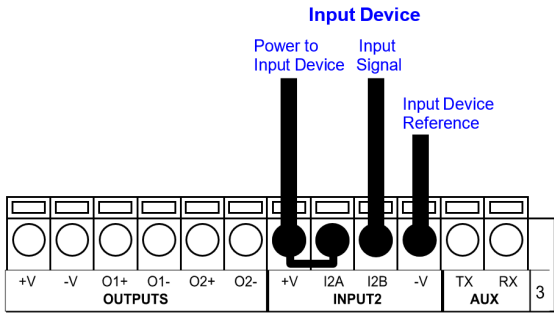


Figure 69 - NPN Input 2 Using Matrix 320 Power

Input 2 Connections Using External Power

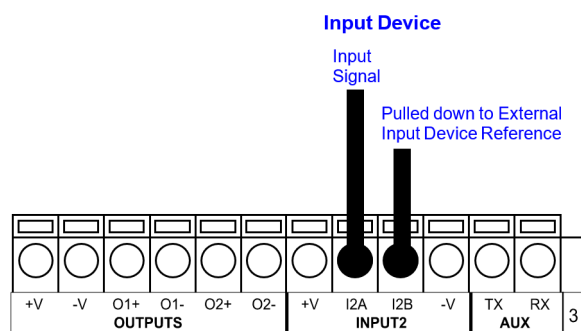


Figure 70 - PNP Input 2 Using External Power

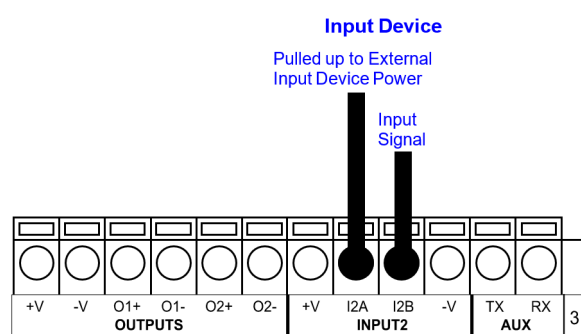


Figure 71 - NPN Input 2 Using External Power

Input 3 Connections (CBX500 Only)

RESERVED

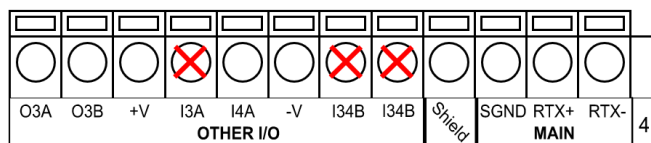


Figure 72 - Input 3 Using External Power



Do not connect to I3A or I34B signals, they are reserved.

OUTPUTS



When Outputs 1 and 2 are connected through the CBX connection box, they become opto-isolated and polarity sensitive and acquire the electrical characteristics listed below. To function correctly, they require setting the Output Line Type configuration parameters to NPN for the respective output. The hardware connection to the CBX can be either NPN or PNP.

Three general purpose outputs are available and their meaning can be defined by the user. They are typically used either to signal the data collection result or to control an external lighting system.

CBX100/500	Description
+V	Power Source - Outputs
O1+	Output 1 + opto-isolated and polarity sensitive
O1-	Output 1 - opto-isolated and polarity sensitive
O2+	Output 2 + opto-isolated and polarity sensitive
O2-	Output 2 - opto-isolated and polarity sensitive
O3A	Output 3 non opto-isolated (only available on CBX500)
-V	Power Reference - Outputs

The electrical features of the outputs are the following:

Outputs 1 and 2	Output 3
$V_{CE} = 30 \text{ Vdc max.}$	Reverse-Polarity and Short-Circuit Protected
$I_{CE} = 40 \text{ mA continuous max.; } 130 \text{ mA pulsed max.}$	$V_{OUT} (I_{LOAD} = 0 \text{ mA}) \text{ max} = 30 \text{ Vdc}$
$V_{CE \text{ saturation}} = 1 \text{ Vdc max. @ } 10 \text{ mA}$	$V_{OUT} (I_{LOAD} = 100 \text{ mA}) \text{ max} = 3 \text{ Vdc}$
$P_D = 90 \text{ mW Max. @ } 50 \text{ }^\circ\text{C ambient temp.}$	$I_{LOAD} \text{ max} = 100 \text{ mA}$

By default, Output 1 is associated with the No Read event, which activates when the code(s) signaled by the external trigger are not decoded, and Output 2 is associated with the Good Read event, which activates when all the selected codes are correctly decoded.

The output signals are fully programmable being determined by the configured Activation/Deactivation events, Deactivation Timeout or a combination of the two. Refer to the DL.CODE parameters Help On Line for further details.

Output 1 and 2 Connections Using Matrix 320 Power



CAUTION

Power from the Vdc/GND spring clamps is available directly to the Output Device on the +V/-V spring clamps, and does not pass through the Power Switch (ON/OFF) inside the CBX. Disconnect the power supply when working inside the CBX.

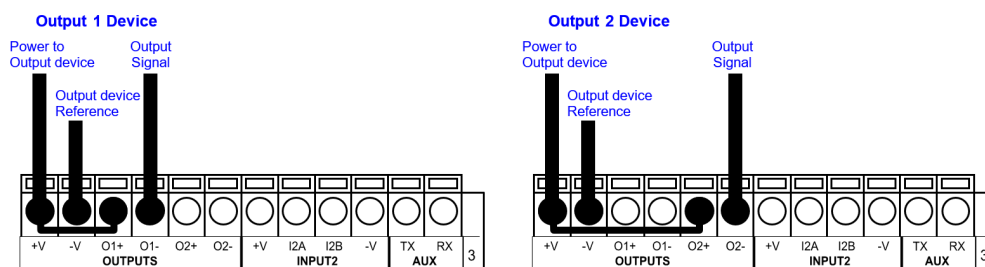


Figure 73 - PNP/Open Emitter Output Using Matrix 320 Power

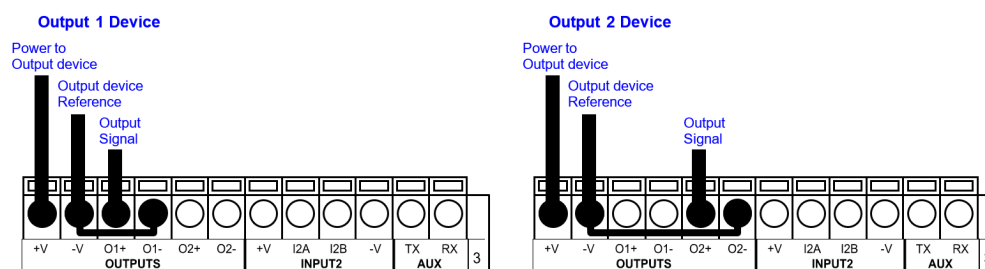


Figure 74 - NPN/Open Collector Output Using Matrix 320 Power

Output 1 and 2 Connections Using External Power

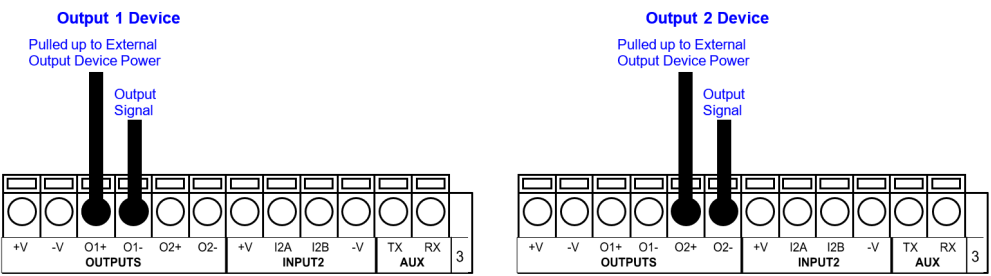


Figure 75 - PNP/Open Emitter Output Using External Power

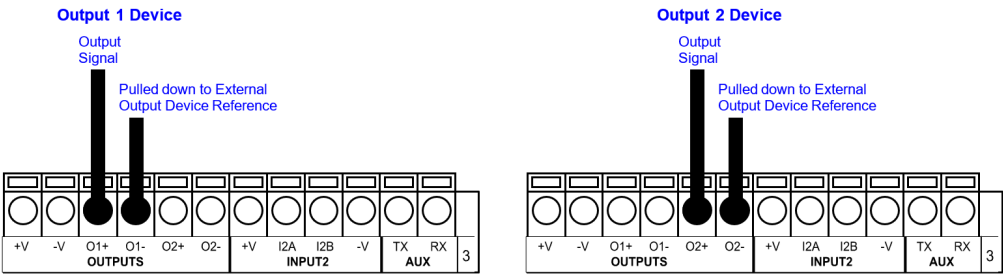


Figure 76 - NPN/Open Collector Output Using External Power

Output 3 is **not opto-isolated** but can be assigned to the same events. By default it is not assigned to any event. The CBX500 must be used to connect this output.



For Output 3, set the Line Type configuration parameter according to the hardware connection to the CBX: NPN, PNP or Push-Pull.

NOTE

Output 3 Connections Using Matrix 320 Power (CBX500 Only)

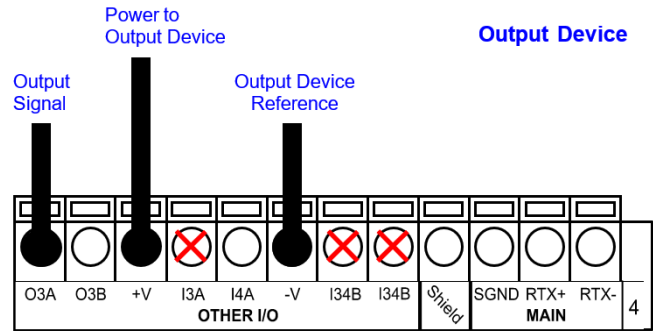


Figure 77 - Output 3 Using Matrix 320 Power

Output 3 Connections Using External Power (CBX500 Only)

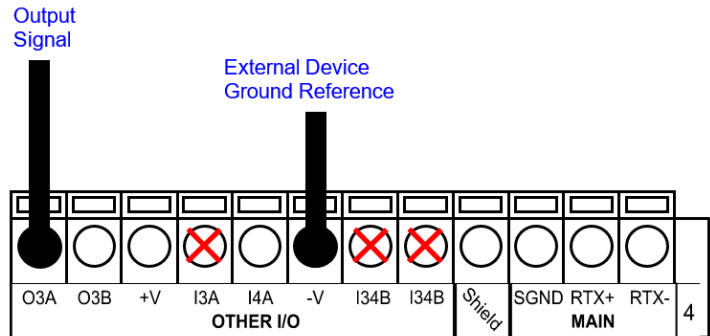


Figure 78 - Output 3 Using External Power



Do not connect to I3A or I34B signals, they are reserved.

ON-BOARD ETHERNET INTERFACE

The on-board Ethernet Interface can be used for TCP/IP communication with a remote or local host computer by connecting the reader to either a LAN or directly to a host PC. There is no need to use a crossover adapter since Matrix 320 incorporates an auto-cross function.

A **CAB-ETH-X-M0x** cable can be used to connect to a LAN.

On the Matrix 320 on-board Ethernet interface the following communication channels are available:

- TCP Client
- TCP Server
- UDP Channel
- FTP Client

The following Fieldbus protocols are also available over the on-board Ethernet interface:

- EtherNet/IP
- PROFINET IO
- Modbus TCP Client
- Modbus TCP Server
- SLMP

For further details refer to the Help On Line page of the Reading Phase step (Channels) and (Fieldbuses) in DL.CODE.



The following IoT protocol is also available over the on-board Ethernet interface:

- OPC UA

For further details, refer to "[OPC UA protocol](#)" on page 113.

USER INTERFACE - SERIAL HOST

The following table contains the pinout for standard RS232 PC Host interface. For other user interface types please refer to their own manual.

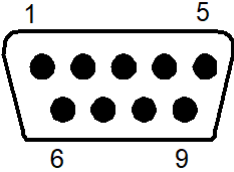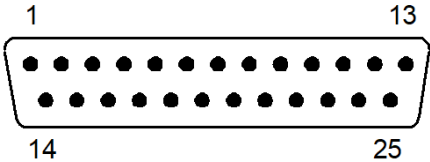RS232 PC-side Connections			
 9-pin male connector		 25-pin male connector	
Pin	Name	Pin	Name
2	RX	3	RX
3	TX	2	TX
5	GND	7	GND

OPC UA PROTOCOL

OPC Unified Architecture is a platform-independent standard that enables different kinds of systems and devices to communicate by sending request and response messages between Clients and Servers over various types of networks. It supports secure communication that assures the identity of OPC UA Applications and resists attacks.

Being platform-independent means that it functions on any hardware platforms (traditional PC hardware, cloud-based servers, PLCs, etc.) and any operating systems (Microsoft Windows, Apple OS X, Android, or any distribution of Linux, etc.). Furthermore, OPC UA offers the necessary infrastructure for interoperability across the enterprise, from machine-to-machine, machine-to-enterprise and everything in between.

OPC UA Companion Specifications

OPC UA specifies base information models that define commonly used objects including both real-time and historical data variables and alarms.

Based on these, new information models for specific industries can be created. The specifications of these models are called Companion Specifications. A number of Companion Specifications have already been created. Datalogic implements the OPC UA for AutoID Specification and the Device Information Model Specification. For more information on the Companion Specifications, visit the OPC Foundation website.

Available commands (methods)

A complete description of the commands, or methods, is provided in the AutoID Companion Specification. The commands are also described in the OPC UA Technical Note (download it from Datalogic website).

The Matrix 320 reader can perform the ScanStart and ScanStop methods in OPC UA environment:

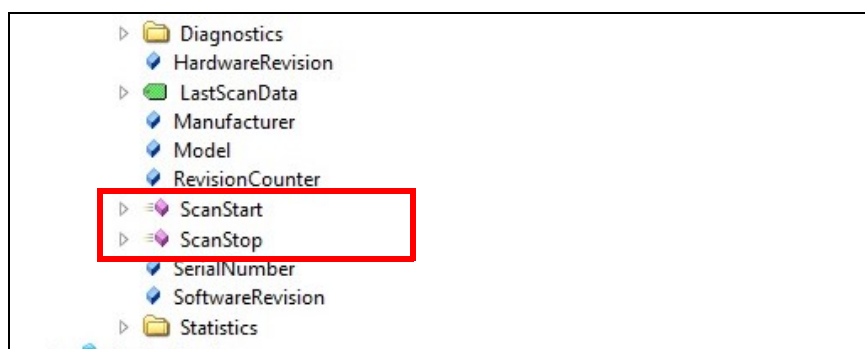


Figure 79 - OPC UA available methods on Matrix 320

Compatible OPC UA Clients

The Matrix 320 reader is compatible with all OPC UA Clients working in accordance with the AutoID Companion Specification. For example, the following OPC UA Clients can be used:

- UAExpert – Unified Automation
- dataFeed OPC UA Client – Softing

A specific OPC UA Client can be programmed with the OPC UA Stack provided by the OPC Foundation. It is also possible to use the OPC UA SDKs of other manufacturers.

OPC UA on DL.CODE

The OPC UA server is disabled on DL.CODE by default. To enable it, go to Device>Settings>Settings>OPC-UA Settings.

The screenshot shows the 'Device Environment Configuration' window. The 'Startup Configuration' is set to 'OneShot'. The 'About Device...' section lists various software versions. The 'Ethernet Settings' section includes MAC Address, IP Address, Subnet Mask, Gateway Address, and DNS 1 Address. The 'Internal Network Settings' section includes X-PRESS Configuration, LED Configuration, Maintenance Settings, and Web Monitor Settings. The 'OPC-UA Settings' section is highlighted with a red box, showing the 'OPC-UA Server' checkbox checked.

Figure 80 - Enabling OPC UA Server on DL.CODE

The user can also set a username and a password to access the OPC UA device. To enable protection, go to Device>Settings>Security Settings>OPC-UA Settings.

The screenshot shows the 'Security Settings' window. The 'Web Monitor Settings' section is expanded, and the 'OPC-UA Settings' section is highlighted with a red box. The 'OPC-UA Settings' section includes the 'Enable Protection' checkbox checked, the 'Username' field set to 'matrix-user', the 'Password' field set to '*****', and the 'Confirm Password' field set to '*****'. A red text note below the password fields states: 'Password must contain between 8 and 32 characters, at least one uppercase letter, one lowercase letter and one number.' The 'Apply' button is visible at the bottom right of the highlighted section.

Figure 81 - OPC UA security settings

For more information on OPC UA, download the OPC UA Technical Note from Datalogic website.

CHAPTER 5

TYPICAL LAYOUTS

The following typical layouts refer to system hardware configurations. However, they also require the correct setup of the software configuration parameters. Dotted lines in the figures refer to optional hardware configurations within the particular layout.



NOTE

All software configurations are made through DL.CODE which connects to the reader through the on-board Ethernet interface.



NOTE

DL.CODE now supports several different multi device configuration types using the PASS-THROUGH configuration. In particular this feature allows MULTIDATA ID-NET network configurations to be made. Master/Slave SYNCHRONIZED ID-NET network configurations are also configurable as before.



NOTE

The Master/Slave Role is only significant for the Internal ID-NET Network. If your layout doesn't use the ID-NET network then the device's Role is not significant and can be ignored.

ETHERNET CONNECTION

The Ethernet connection is possible in two different layouts.

In a Point-to-Point layout the reader is connected to a local host by using a CAB-ETH-X-M0x cable. There is no need to use a crossover adapter since Matrix 320 incorporates an autocross function.

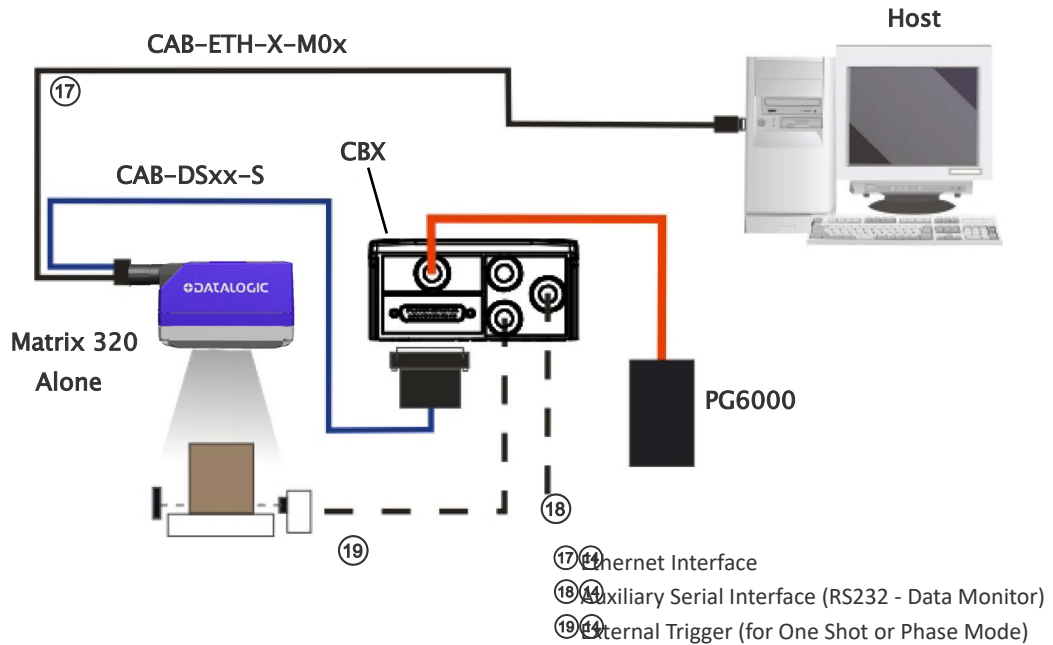


Figure 82 - Ethernet Point-to-Point Layout

All devices always support multiple output channels (i.e. for data monitoring).

When using a Local Area Network (LAN), one or more Matrix 320 readers can be connected to the network by using **CAB-ETH-X-M0x** cables:

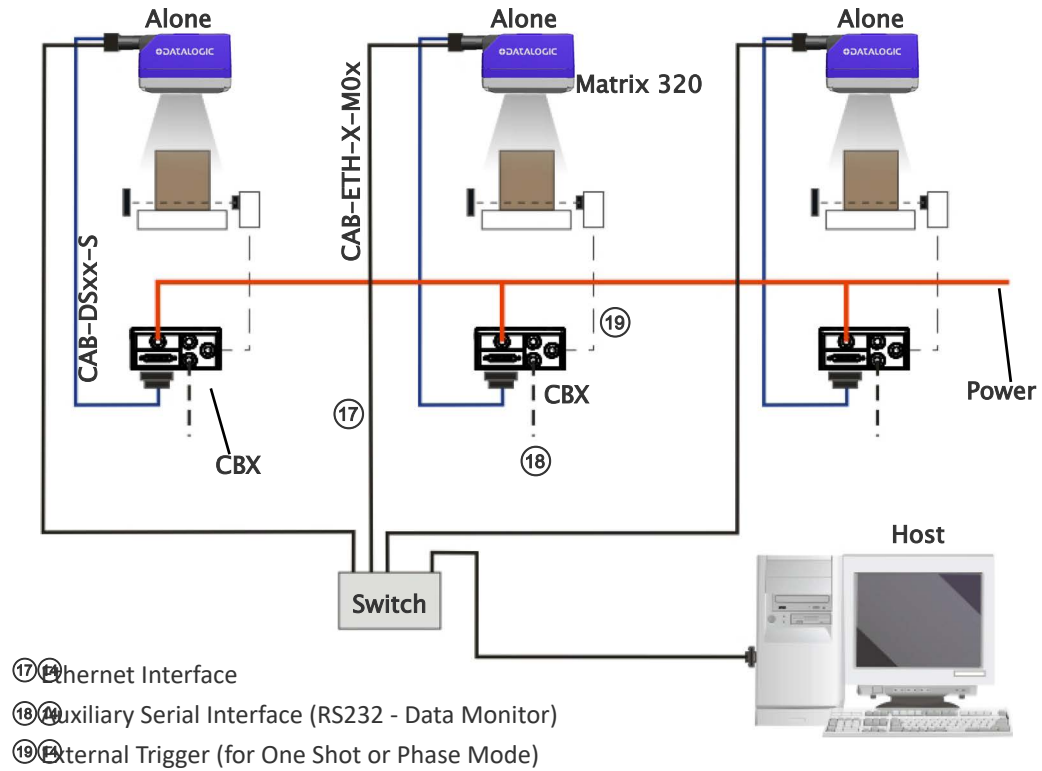


Figure 83 - Ethernet Network Layout

SERIAL CONNECTION

In this layout the data is transmitted to the Host on the main serial interface. The Ethernet interface can be used for reader configuration by connecting a laptop computer running DL.CODE.

Data can be transmitted on the RS232 auxiliary interface independently from the main interface selection to monitor data.

When One Shot or Phase Mode operating mode is used, the reader can be activated by an External Trigger (for example a pulse from a photoelectric sensor) when the object enters its reading zone.

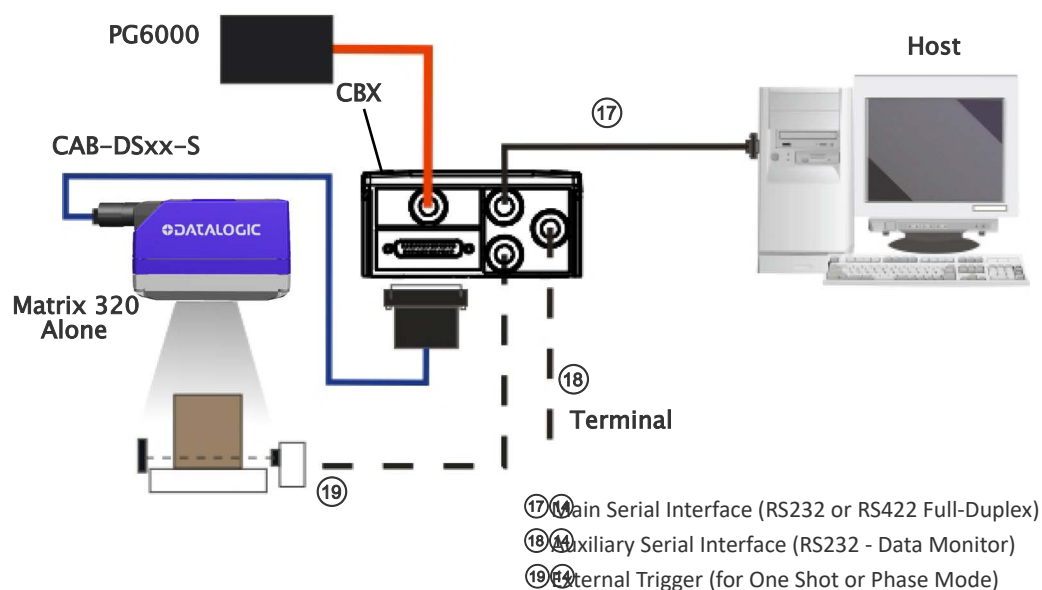


Figure 84 - Serial Interface Point-to-Point Layout

All devices always support multiple output channels (i.e. for data monitoring).

FIELD BUS CONNECTION

In this layout a single reader functions as a Slave node on a Fieldbus network. The data is transmitted to the Host through an accessory Fieldbus interface board installed inside the CBX500 connection box.

Reader configuration can be accomplished through the Ethernet interface using the DL.CODE configuration program.

Data can be transmitted on the RS232 auxiliary interface independently from the Fieldbus interface selection to monitor data.

When One Shot or Phase Mode operating mode is used, the reader can be activated by an External Trigger (photoelectric sensor) when the object enters its reading zone.

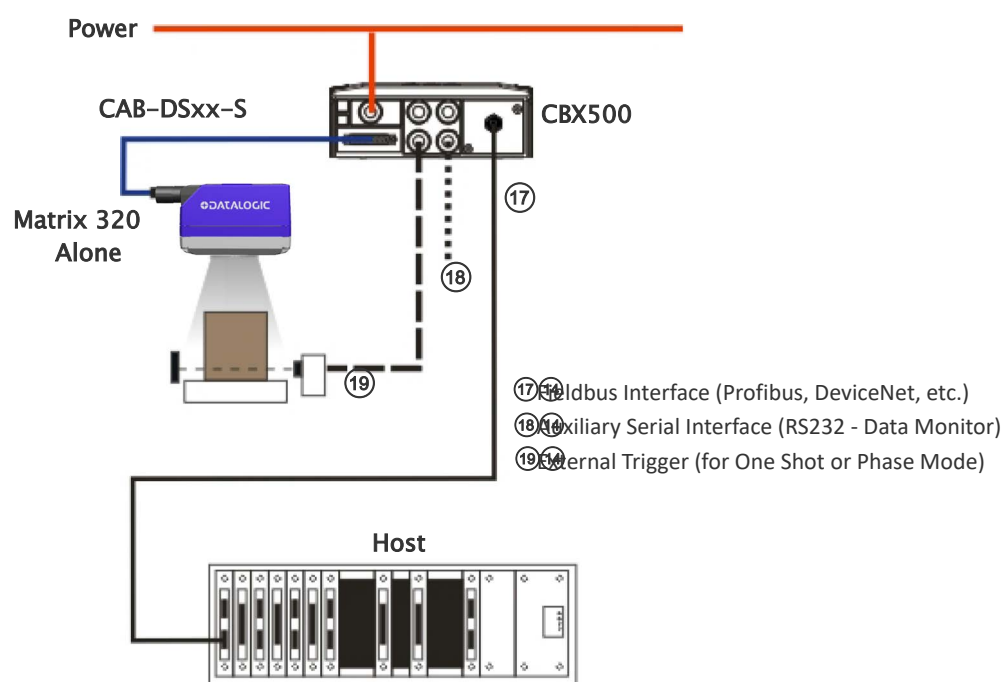


Figure 85 - Fieldbus Interface Point-to-Point Layout

All devices always support multiple output channels (i.e. for data monitoring).

PASS-THROUGH

The pass-through layout allows each device **working Alone**, to collect data from one or more pass-through input channels and send this data plus its own on one or more different output channels.

In this way independent devices can be connected together in combinations to create multi device networks. Many devices reading independently can send their messages through a common output channel which instead of being directed at a Host can be collected by another device on its pass-through input channel and sent to a Host on a different output channel.

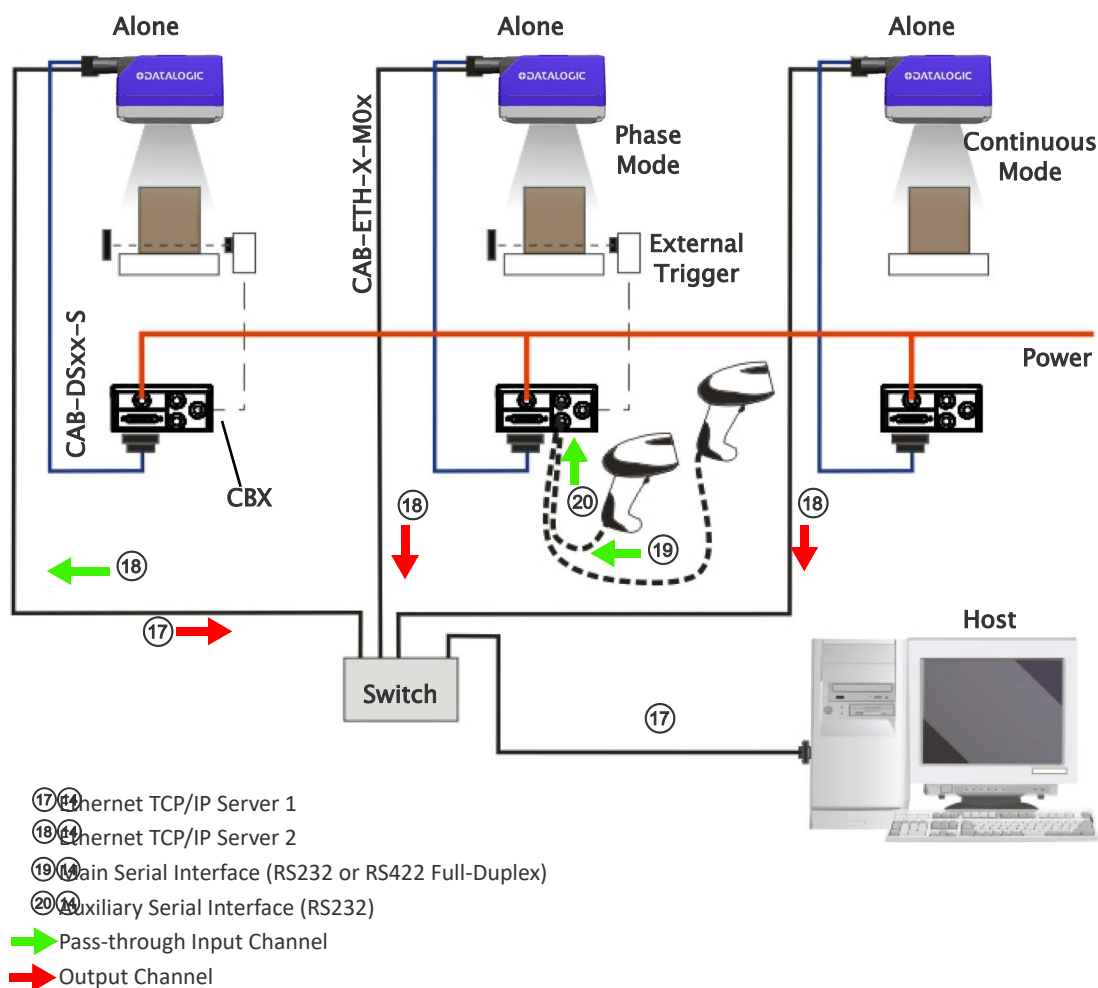


Figure 86 - Pass-Through Layout

In a Pass-through layout each device supports multiple pass-through configurations to accept input from different devices on different channels (i.e. middle reader above). However, readers are not required to have a pass-through configuration if they don't need to receive data from an input channel (i.e. right reader above). The overall data collection device always has at least one pass-through configuration to collect the input data from the other devices and send it to the Host (i.e. left reader above).

All devices always support multiple output channels (i.e. for data monitoring).

In a Pass-through layout each device can have a different operating mode: Continuous, One Shot, Phase Mode, etc.

ID-NET MULTIDATA NETWORK (PASS-THROUGH)

A special case of the pass-through layout allows each Slave device **working Alone**, to collect data from one or more pass-through input channels and send this data plus its own on the ID-NET output channel to the Master.

The Slave readers are connected together using the ID-NET interface. Every Slave reader must have an ID-NET address in the range 1-31.

The Master collects the data from its pass-through ID-NET input channel and sends it to the Host on a different output channel.

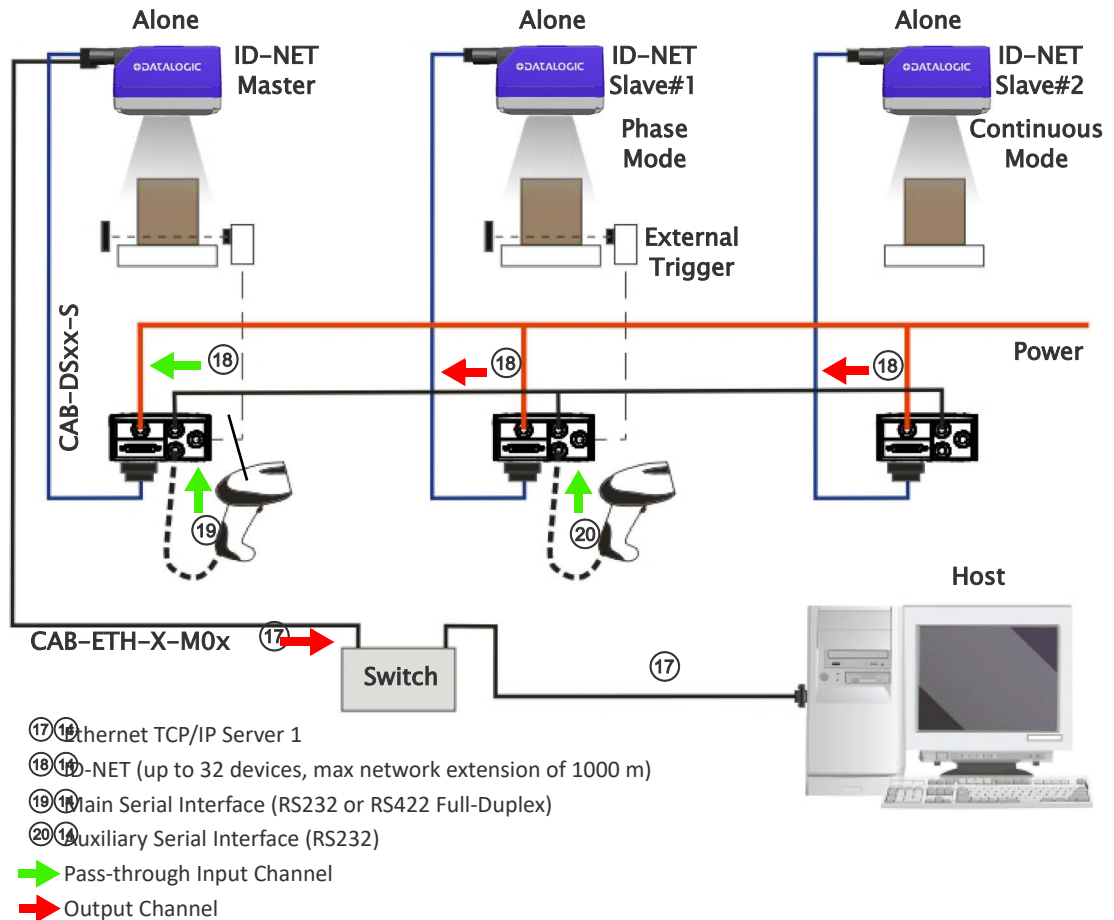


Figure 87 - ID-NET Multidata Layout (Pass-through)

In a Pass-through layout each device supports multiple pass-through configurations to accept input from different devices on different channels (i.e. Master reader above). However, ID-NET Slave readers are not required to have a pass-through configuration if they don't need to receive data from an input channel (i.e. right reader above). The ID-NET Master always has at least one pass-through configuration to collect the ID-NET Slaves data and send it to the Host.



Slave devices cannot receive data from a pass-through ID-NET input channel and Master devices cannot send data on an ID-NET output channel.

All devices always support multiple output channels (i.e. for data monitoring).

In a Pass-through layout each device can have a different operating mode: Continuous, One Shot, Phase Mode, etc.

ID-NET SYNCHRONIZED NETWORK

When the device is **working Synchronized**, the ID-NET connection is used to collect data from several readers to build a multi-point or a multi-sided reading system; there can be one Master and up to 31 Slaves connected together.

The Slave readers are connected together using the ID-NET interface. Every slave reader must have an ID-NET address in the range 1-31.

The Master reader is also connected to the Host on one of its communication channels. In the following examples the RS232/RS422 main serial interface is used.

For a Master/Slave Synchronized layout the External Trigger signal is unique to the system; there is a single reading phase and a single message from the Master reader to the Host computer. **It is not necessary to bring the External Trigger signal to all the readers.**

In the Master/Slave Synchronized layout the Master operating mode can only be set to PackTrack or Phase Mode.

The Main and ID-NET interfaces are connected as shown in the following figures.

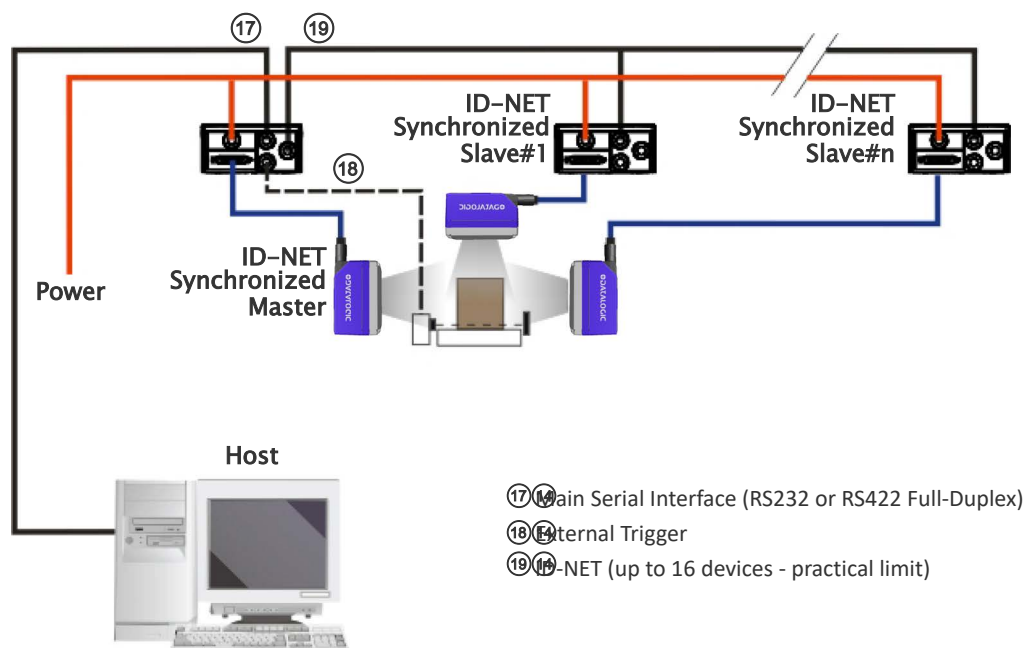


Figure 88 - ID-NET Synchronized Layout

The Master reader can be connected to the CBX series connection box with the advantage of the Backup and Restore configuration function (CBX + BM100 module).

All devices always support multiple output channels (i.e. for data monitoring)

CHAPTER 6

READING FEATURES

FOV CALCULATION

Use the data in the following table to calculate the FOV for your application, referring to Figure 89 and the formula below.

Model	F/#	d ₀ Offset (mm)	Viewing Angle Horizontal	Viewing Angle Vertical	Viewing Angle Diagonal	Min Focus Distance (mm)	Max Focus Distance (mm)
Matrix 320 14L LQL 6 mm	5.6	17	48°	28°	54°	50	536
Matrix 320 14L LQL 9 mm	6.1*	22	34°	19°	39°	35	1000
Matrix 320 14L LQL 16 mm	6.5	21	20°	11°	23°	70	1500
Matrix 320 36L LQL 6 mm	5.6	32	48°	28°	54°	50	536
Matrix 320 36L LQL 9 mm	6.1*	37	34°	19°	39°	35	1000
Matrix 320 36L LQL 16 mm	6.5	36	20°	11°	23°	70	1500
Matrix 320 C-Mount 4mm	1.8	40.4	67.8°	41.4°	75.3°	0	∞
Matrix 320 C-Mount 6mm	1.8	41.1	48.3°	28.3°	54.4°	24	∞
Matrix 320 C-Mount 8mm	1.8	49.6	37.1°	21.4°	42.2°	24	∞
Matrix 320 C- Mount 12mm	1.8	54.8	25.3°	14.4°	28.8°	65	∞
Matrix 320 C- Mount 16mm	1.8	66	19.1°	10.8°	21.8°	162	∞
Matrix 320 C- Mount 25mm	1.85	59	12.3°	6.9°	14.1°	164	∞
Matrix 320 C- Mount 35mm	1.85	55	8.8°	4.9°	10.1°	185	∞

* F/# = 6.1 for Red/Blue illuminator. For White illuminator, F/# = 6.5.

The viewing angle has a tolerance of $\pm 1^\circ$ depending on the reading distance.

$$FOV_x = 2 [(d + d_0) * \tan (\alpha_x/2)]$$

where:

FOV_x = horizontal, vertical or diagonal FOV

α_x = horizontal, vertical or diagonal viewing angles.

d = reading distance (in mm) from window surface to code surface

d_0 = offset (in mm) from center of lens to external window surface

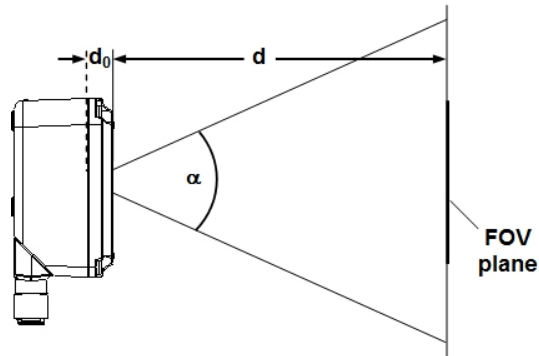


Figure 89 - Reading Distance References

Example:

The FOV for a **Matrix 320 7xx-330** at a reading distance of 600 mm is:

$$FOV_H = 2 [(600 \text{ mm} + 22 \text{ mm}) * \tan (34^\circ/2)] \cong 380 \text{ mm}$$

$$FOV_V = 2 [(600 \text{ mm} + 22 \text{ mm}) * \tan (19^\circ/2)] \cong 208 \text{ mm}$$

GLOBAL FOV DIAGRAMS



NOTE

The following diagrams are given for typical performance at 25°C using high quality grade A symbols according to ISO/IEC 15416 (1D code) and ISO/IEC 15415 (2D code) print quality test specifications. Testing should be performed with actual application codes in order to maximize the application performance.



The following diagrams show the **maximum obtainable** Field of View for 1D and 2D codes. Depending on the code resolution, symbology, and number of characters in the code, the Reading Area can be different from the FOV.





NOTE

The following diagrams refer to Matrix 320 with 14 LEDs illuminator. For Matrix 320 C-Mount models with 36 LEDs illuminator, the reference distances from the exit window should be reduced by 15 mm (internal offset difference between 14 LEDs and 36 LEDs Liquid Lens models).



Global FOV for Matrix 320 LQL-6

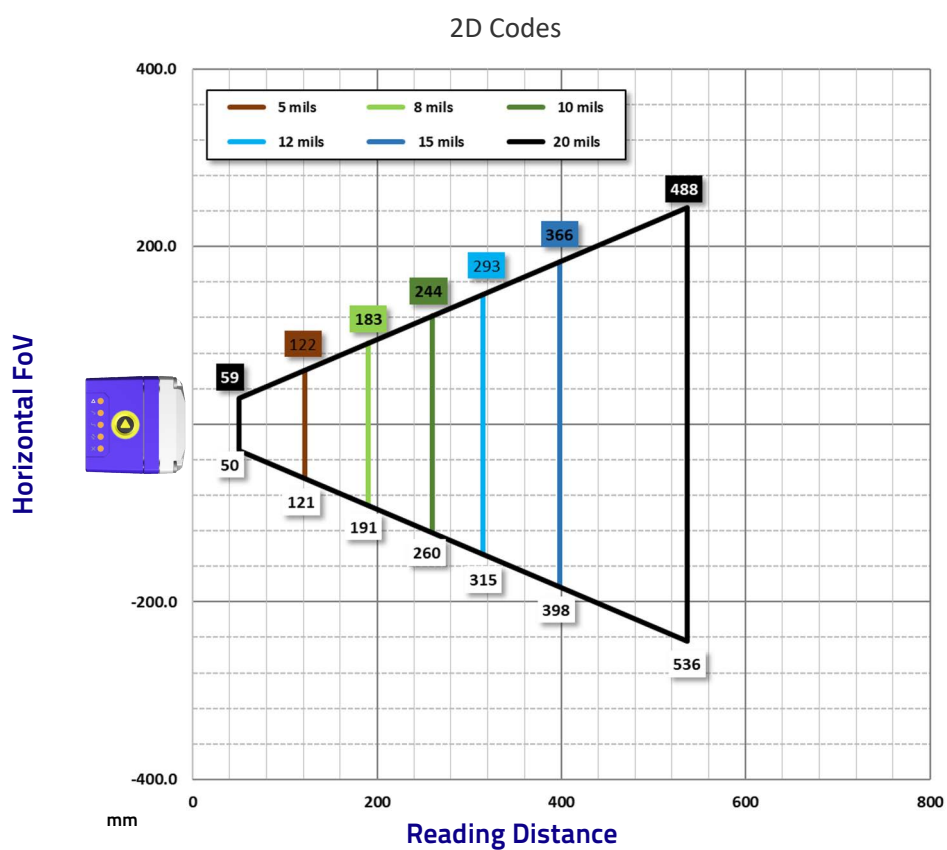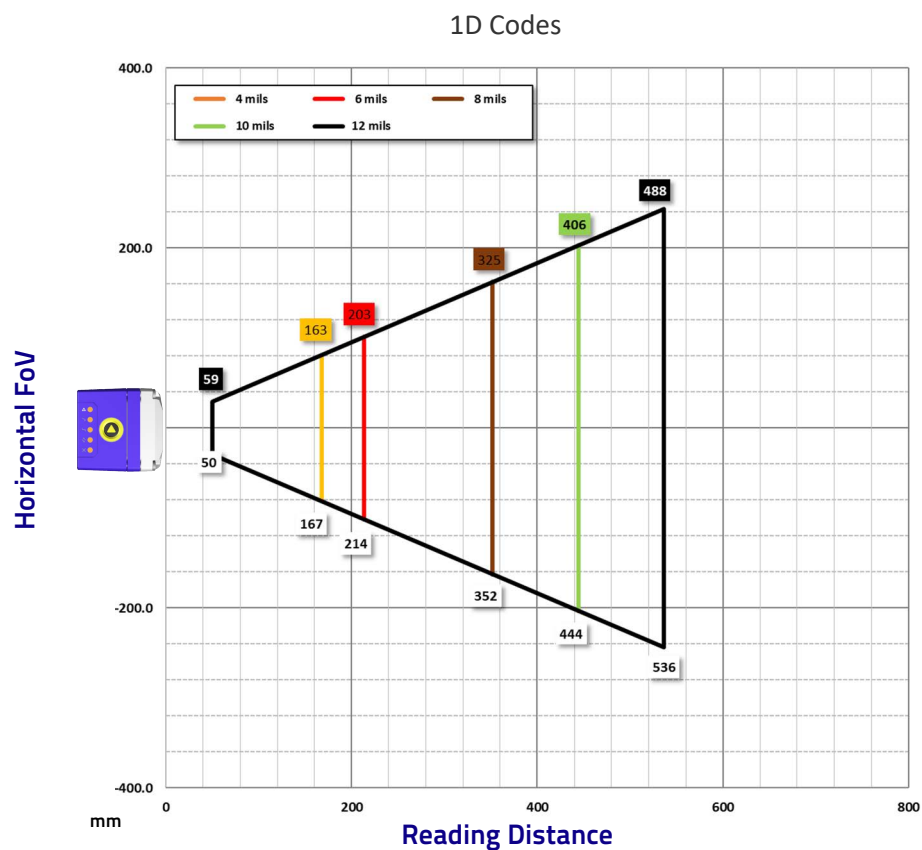



Global FOV for Matrix 320 LQL-9

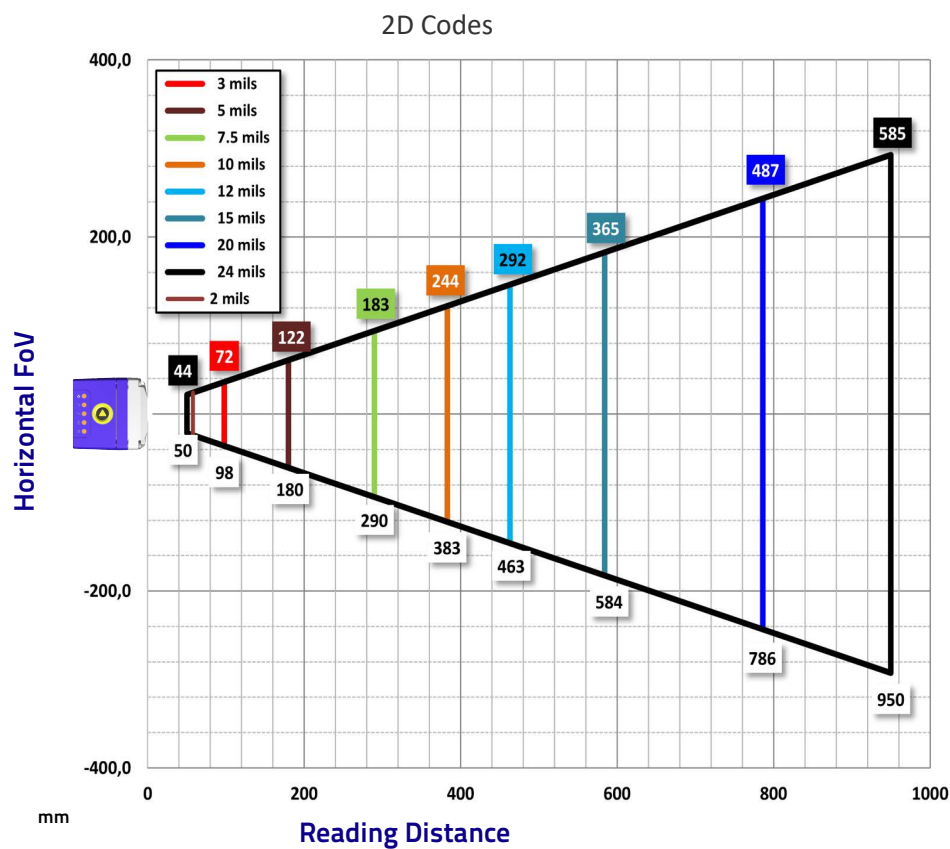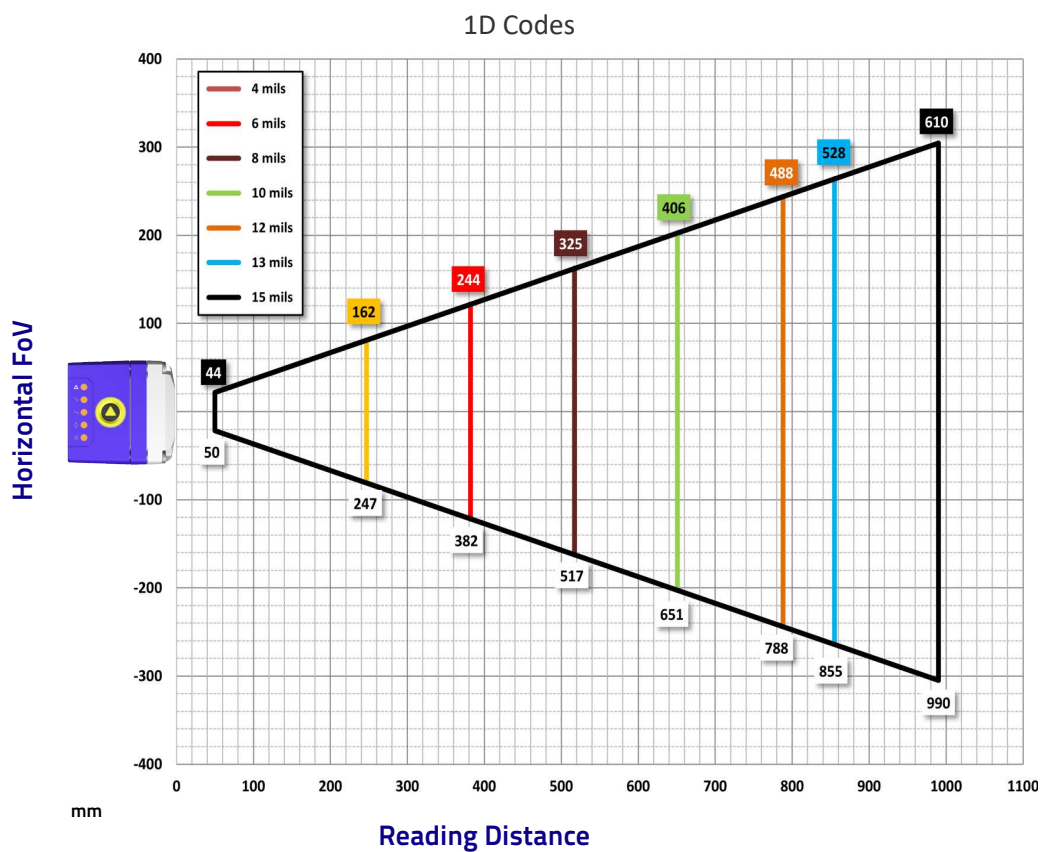

Global FOV for Matrix 320 LQL-16

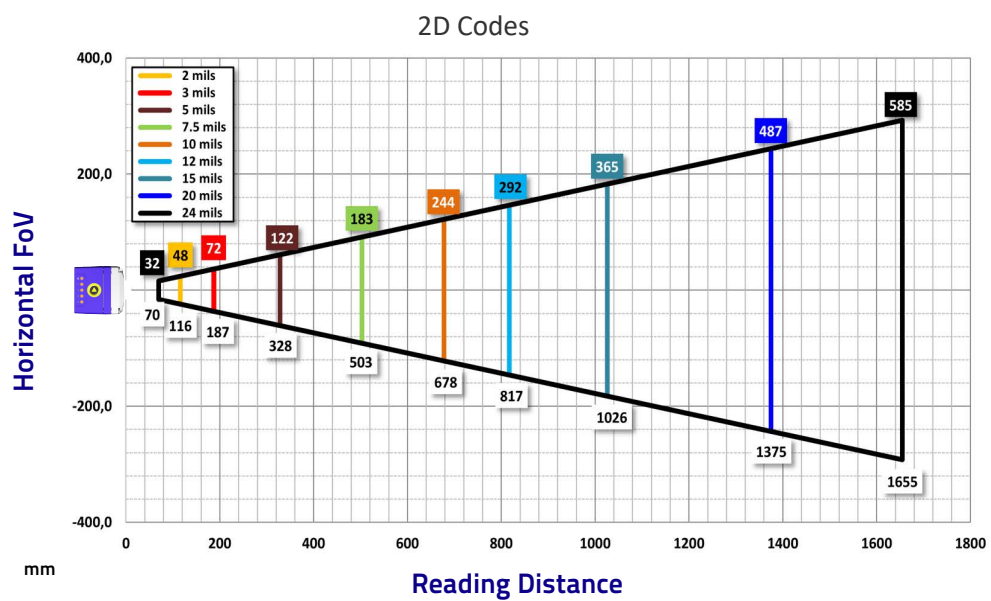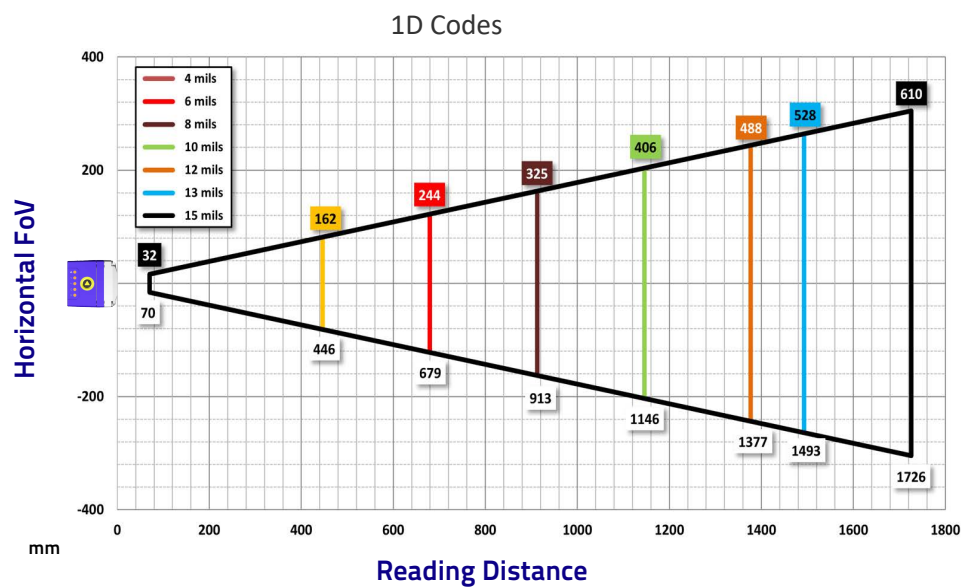


Global FOV for Matrix 320 C-Mount LNS-4

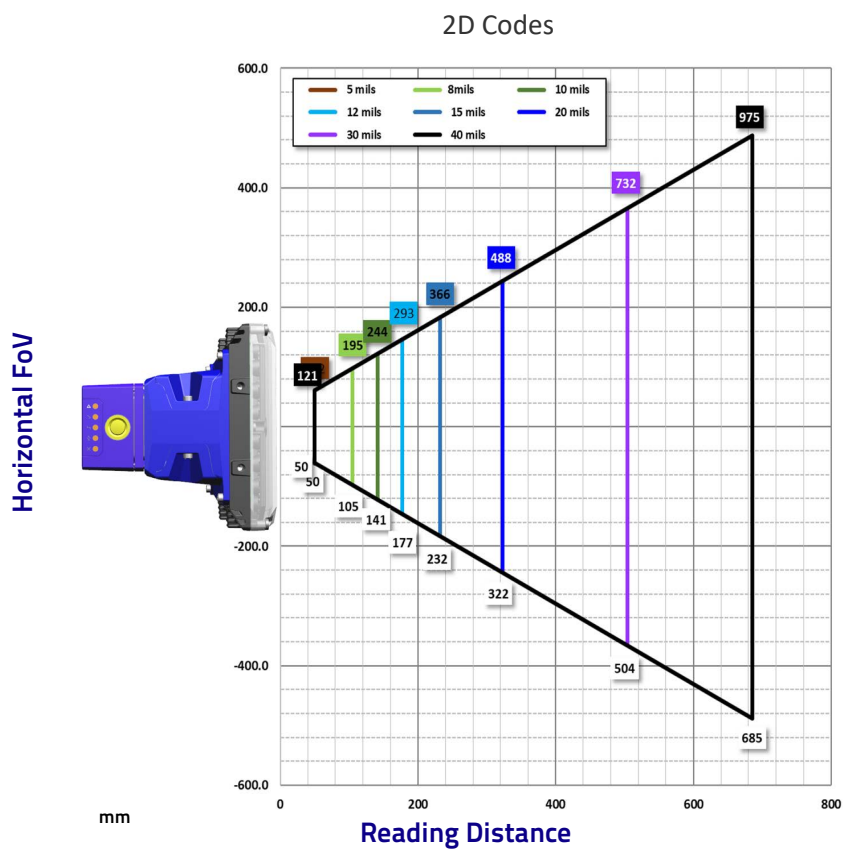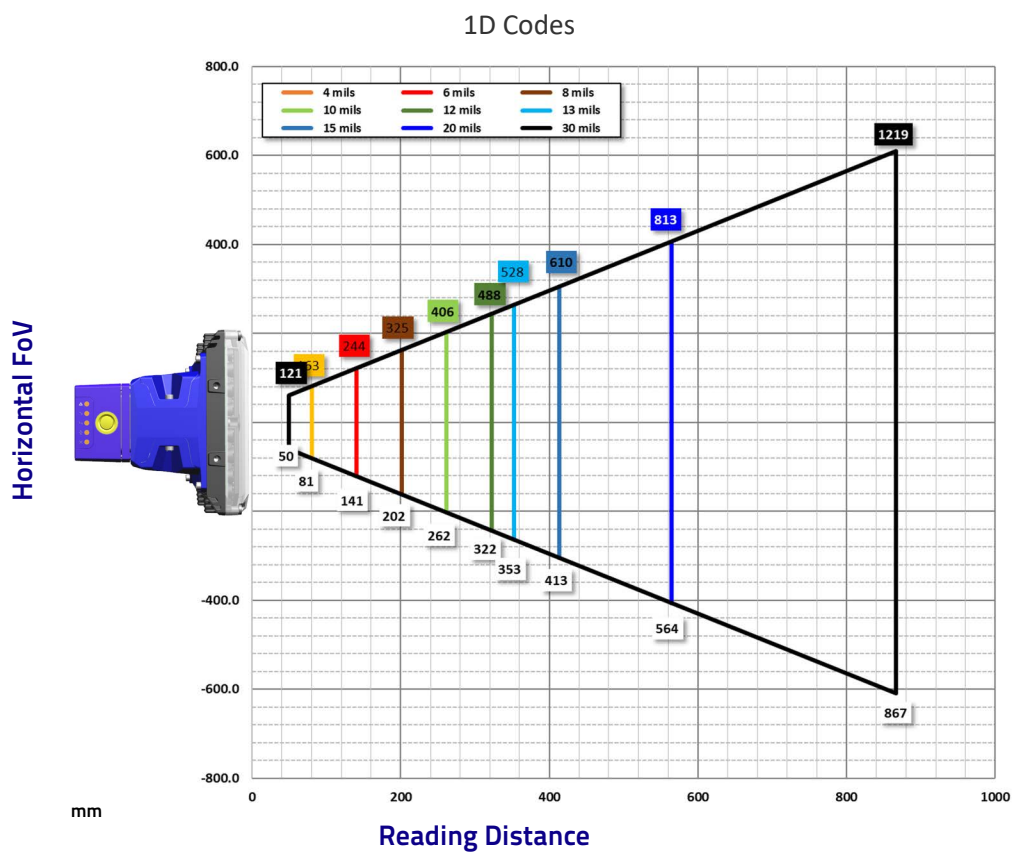


Global FOV for Matrix 320 C-Mount LNS-6

1D Codes

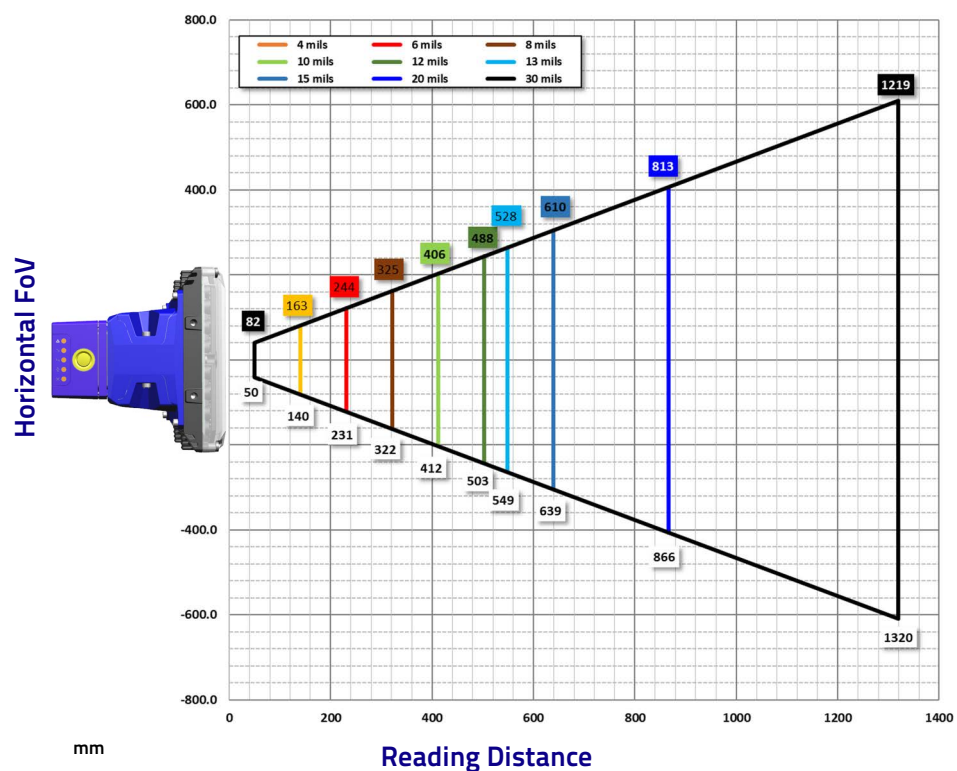


2D Codes

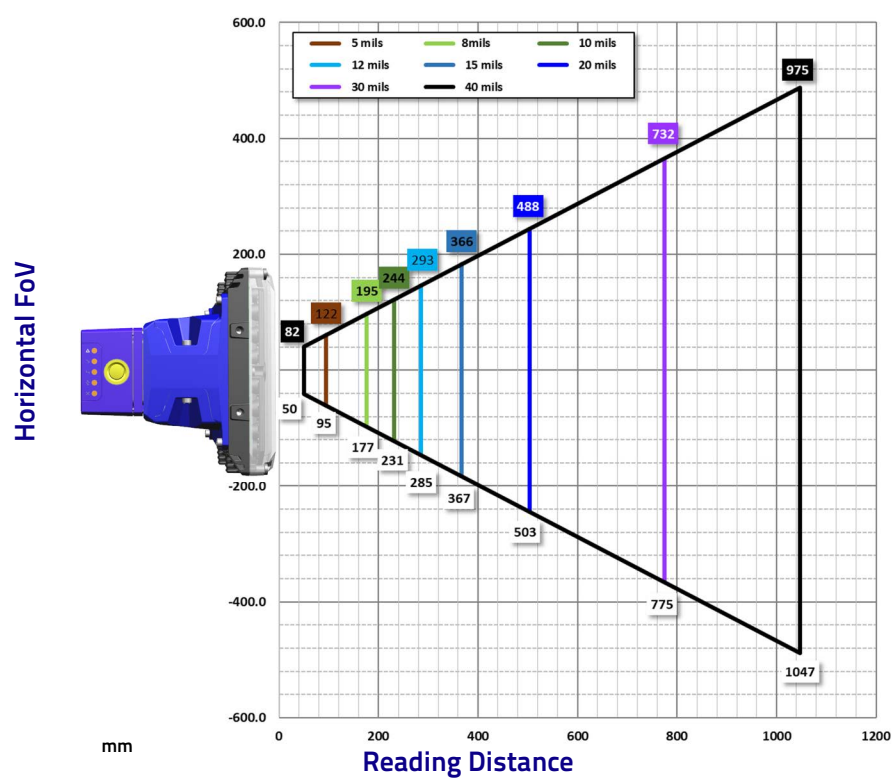


Global FOV for Matrix 320 C-Mount LNS-8

1D Codes

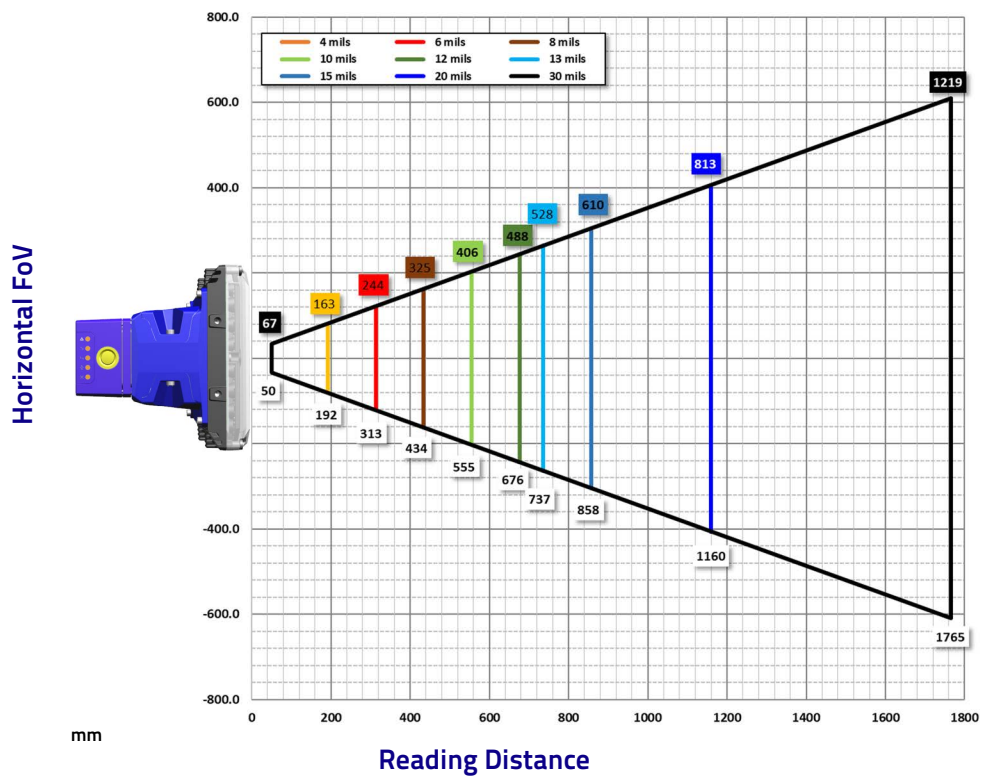


2D Codes

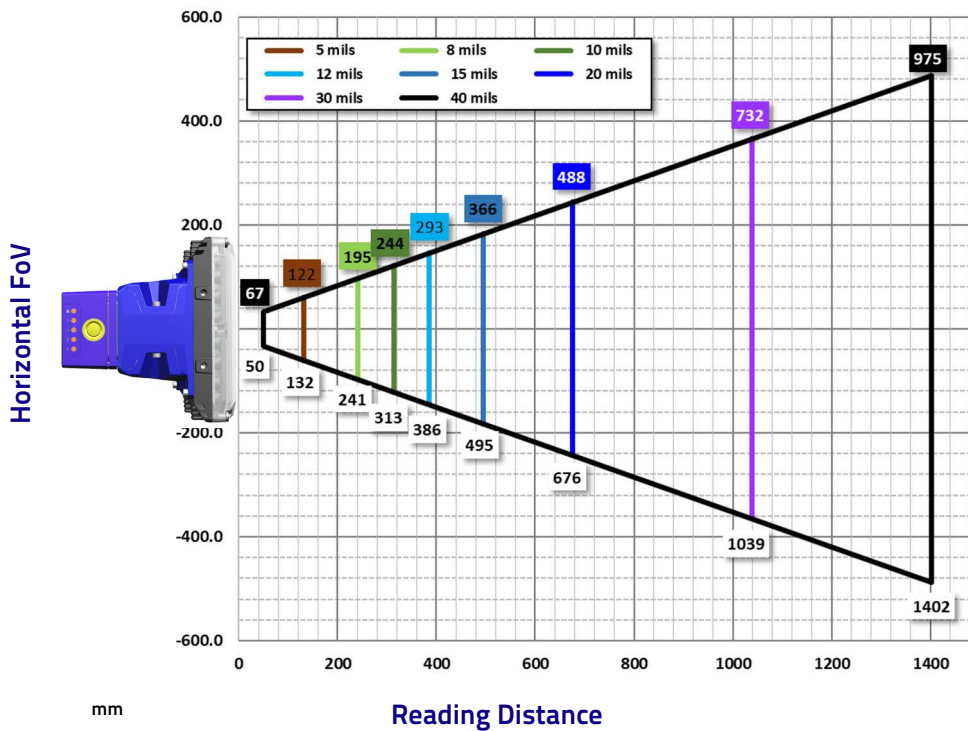


Global FOV for Matrix 320 C-Mount LNS-12

1D Codes

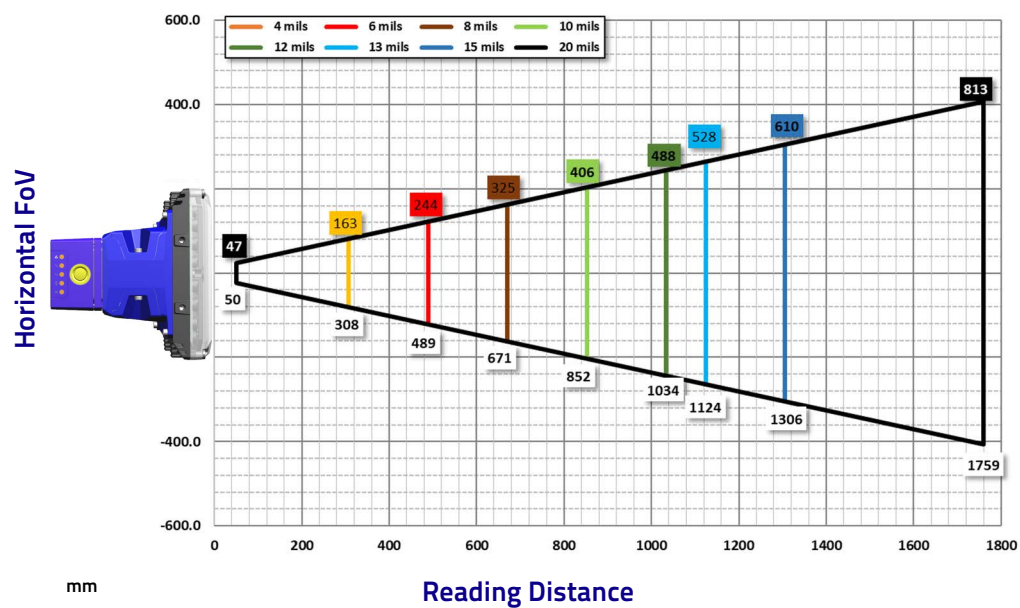


2D Codes

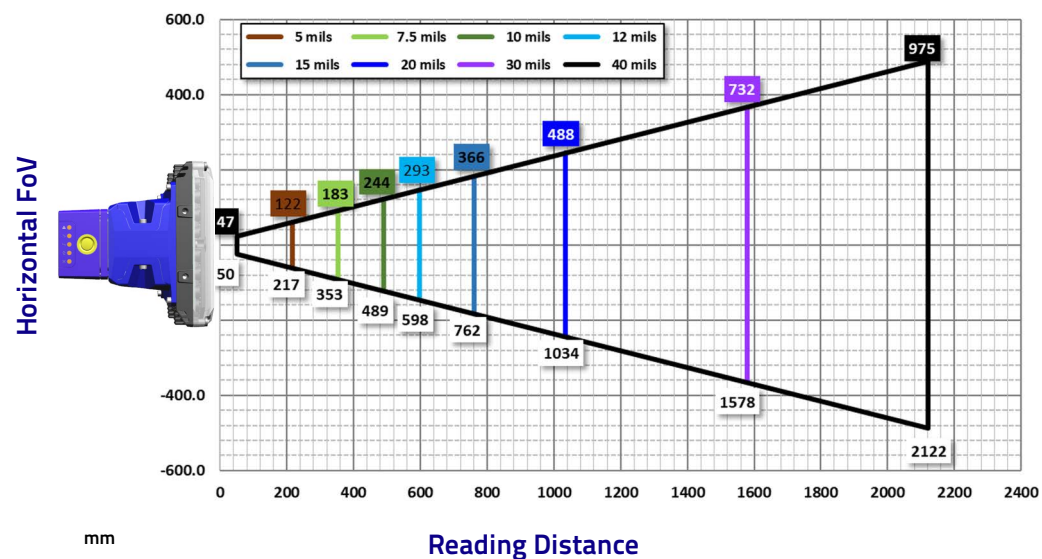


Global FOV for Matrix 320 C-Mount LNS-16

1D Codes

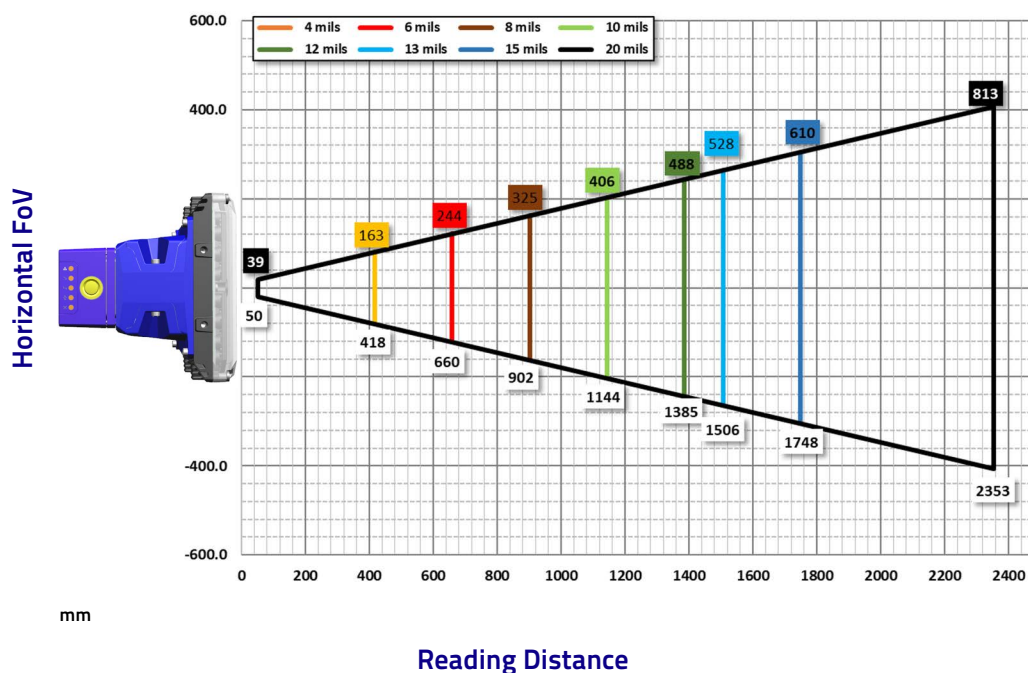


2D Codes

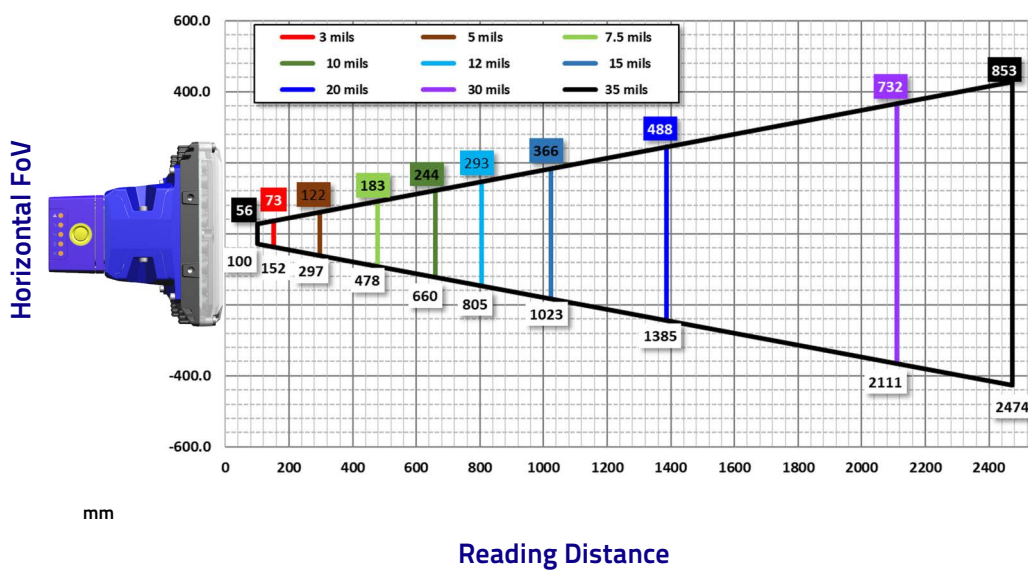


Global FOV for Matrix 320 C-Mount LNS-25

1D Codes

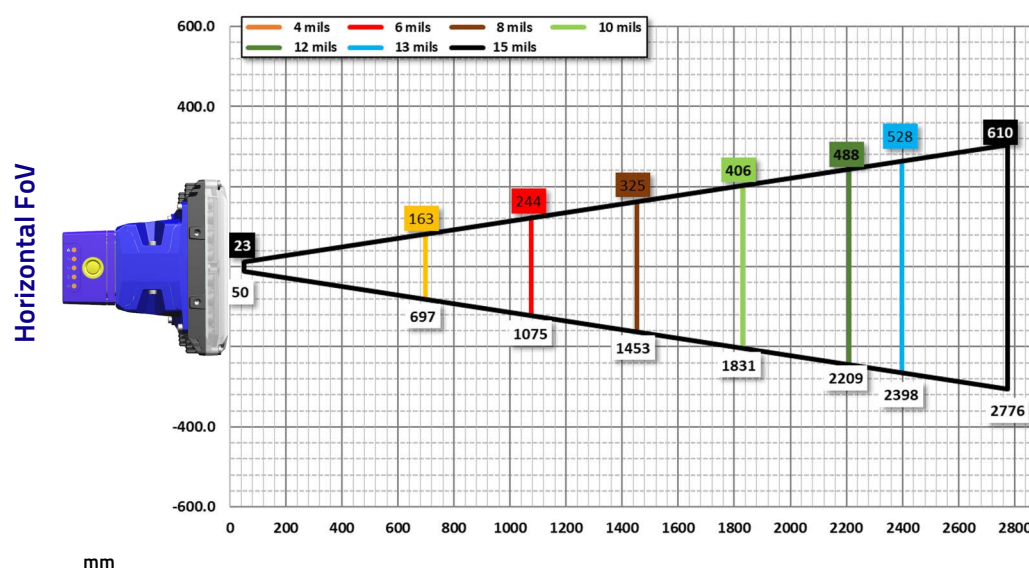

Reading Distance


2D Codes

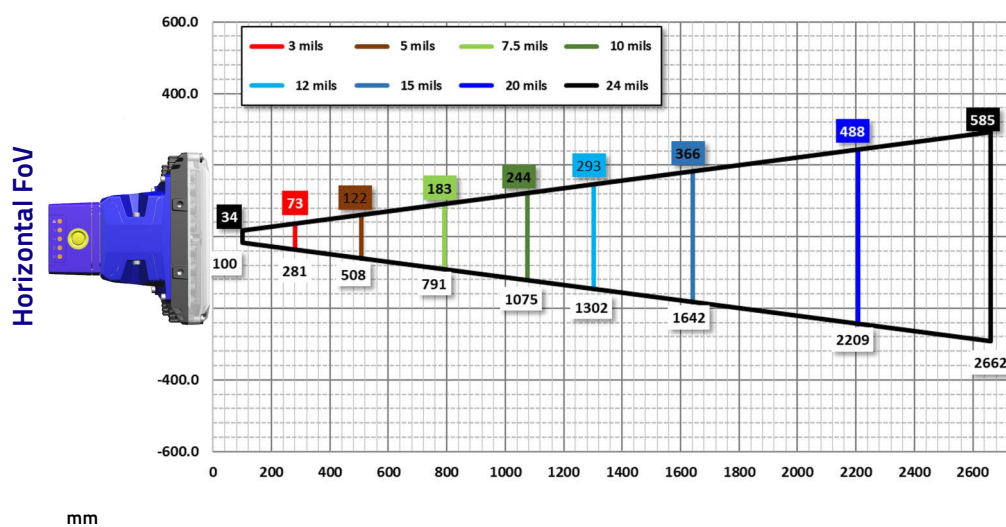


Reading Distance

Global FOV for Matrix 320 C-Mount LNS-35

1D Codes

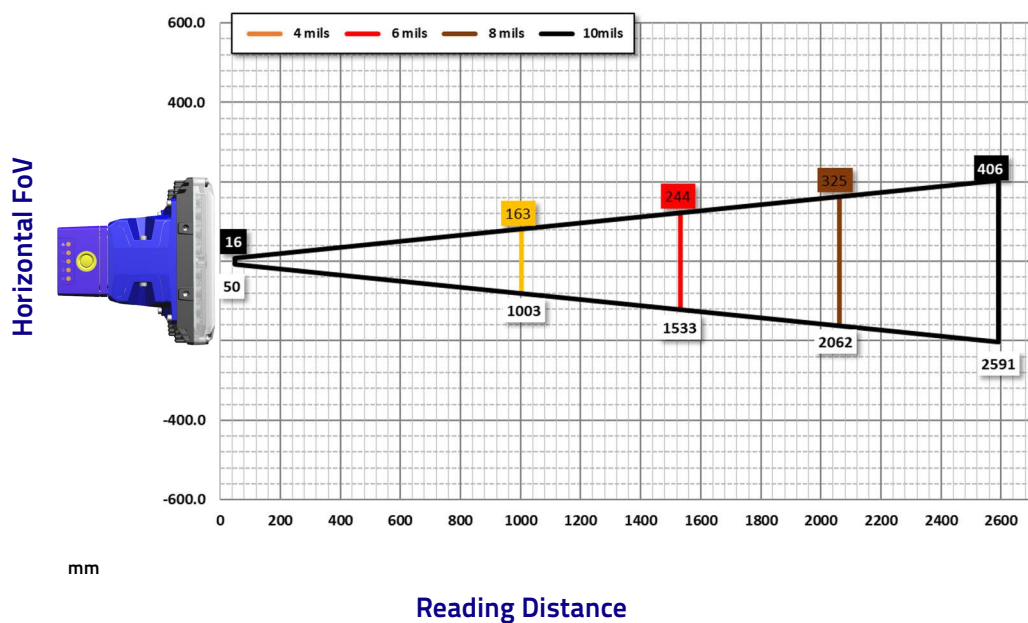

2D Codes

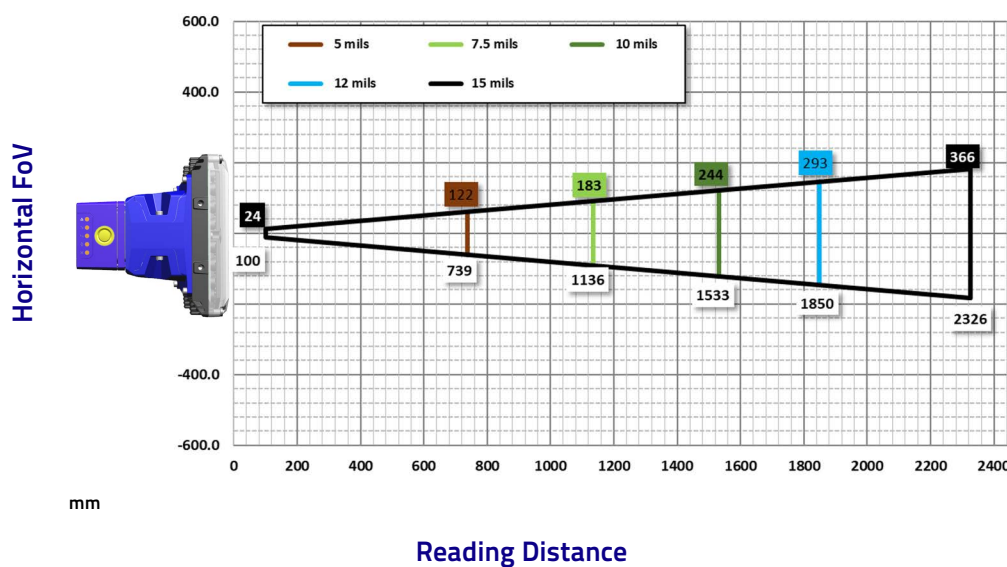

MAXIMUM LINE SPEED AND EXPOSURE TIME CALCULATIONS

The **Exposure Time** (or **Shutter**) parameter defines the time during which the image will be exposed to the reader sensor to be acquired. This parameter depends heavily on the environmental conditions (external lighting system, image contrast etc.).

In general, a longer time corresponds to a lighter image but is susceptible to blurring due to the code movement; a shorter exposure time corresponds to a darker image.



NOTE

The following considerations must be applied only when the internal lighting system and 2D codes are used. The Maximum line speed allowed for linear codes or postal code reading applications heavily depends on the direction of symbol movement. When the direction of movement is parallel to the elements of the code, the maximum speed is greater

Assuming:

- **X**: Code Resolution (mm)
- **T_{exp}**: Exposure Time (s)
- **LS**: Line Speed (mm/s)

The essential condition to avoid blurring effects between two adjacent elements in a dynamic reading application is:

$$LS * T_{exp} \leq X$$

The maximum (theoretical) line speed **LS** can be calculated as follows:

$$X / T_{exp (min)} = LS_{(max)}$$

T_{exp (min)} is the minimum **Exposure Time** value obtainable for the specific application. It can be evaluated in static reading conditions and depends on the Matrix reader model selected for the application (internal lighting system, optical lens, reading distance) and on any external lighting system. It may also depend on code printing quality, and reader position.

Example

A Matrix 320 using:

Internal Lighting Mode = Very High Power Strobe

Exposure Time (μs) = 100 μs

Code Resolution (X) = 0.254 mm (10 mils)


has a maximum line speed of:

$$0.254 \text{ (mm)} / 0.0001 \text{ (s)} = 2540 \text{ mm/s}$$

Likewise, **T_{exp (max)}** is the maximum **Exposure Time** value that can be used without blurring for the given application line speed and code resolution. Therefore:

$$X / LS = T_{exp (max)}$$

$T_{exp(max)}$ and $LS_{(max)}$ are represented in the graph below as the curved line for X (code resolution). Values above the curve result in blurring. In practice, the application values are somewhere below the theoretical line, (in the green area), due to environmental and other conditions.

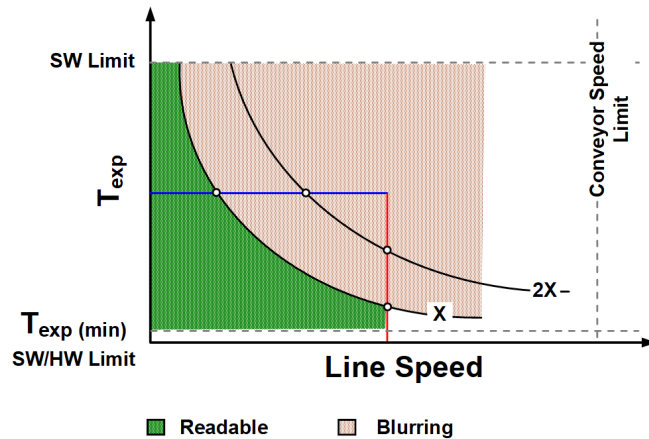

For example, the maximum target speed in the application is also affected by these conditions:

- **Code/Background Contrast:** maximum speed decreases when decreasing image contrast (poor quality codes, reflective transparent coverings, different supports and printing techniques).
- **Code Resolution:** maximum speed increases when decreasing code resolution, (i.e. $2X$). There is a decrement of overlapping effects between two adjacent elements.
- **Tilt Angle:** maximum speed decreases when increasing Tilt angle (from 0 to 45 degrees).

The **Internal Lighting** parameter allows setting the operating mode of the internal lighting system. The possible values are:

- *Disabled:* the built-in LED array is turned off all the time. This option can be useful if using an external lighting system;
- *Always ON:* the built-in LED array is turned on all the time at the lowest power level. This option is useful if the LED-array blinking (Strobed operating mode) disturbs the operator.
- *-Power Strobed:* the built-in LED array is on only during the image exposure time. Different Power Strobed lighting levels can be set.



NOTE

To avoid LED array overheating, for Power Strobed settings, the program automatically limits the range of allowed values for the Exposure Time parameter. Therefore, after changes to Internal Lighting, recheck Exposure Time.

- *Continuous High-Power:* the internal lighting system is turned on continuously at the highest power level. This option is useful if the LED-array blinking (Strobed lighting mode) disturbs the operator.

CHAPTER 7

SOFTWARE CONFIGURATION

Software configuration of your Matrix 320 for static reading or simple code reading applications can be accomplished by the Rapid Configuration procedure using the X-PRESS HMI (which requires no external configuration program). This procedure is described in [Chapter 1, Rapid Configuration Steps 4-6](#).

For the majority of applications however you will use DL.CODE, connecting to the reader through the on-board Ethernet interface. See [Chapter 1, Rapid Configuration Steps 7-8](#).

DL.CODE SYSTEM REQUIREMENTS



DL.CODE does not currently support Windows Embedded (often used in industrial PCs and/or PLCs).

To install and run DL.CODE you should have a Laptop or PC that meets or exceeds the following:

- 2.00 GHz or faster microprocessor
- Windows: 7, 8.1, or 10
- 1 GB RAM
- 2 GB hard disk for 64-bit machines; 1 GB hard disk for 32-bit machines
- 100 Base-T Ethernet
- One 19" or larger monitor (optimized for 1280x1024 resolution)



The Windows XP operating system is no longer supported by DL.CODE.

READER CONFIGURATION

For an example of Matrix device configuration see the example in [Chapter 1, Rapid Configuration](#), Steps 7-8.



NOTE

Especially for lengthy configurations, it is always good practice to periodically save the configuration to permanent memory (Save on Device) to avoid losing the configuration in Temporary Memory. You must give a name to the new configuration or overwrite an existing one (except for Default which cannot be modified).

When all the configuration parameters are set correctly and saved to the device, you can perform a Backup to File and/or to an External storage device (BM100, etc.). See "Backup and Restore Through DL.CODE" on page 174.




NOTE

Datalogic guarantees that the reader's permanent memory can store at least 50 configurations without script formatting or with a script with less than 2048 characters. The actual number of configurations may be larger depending on the type of configuration and Matrix model.

In addition to your application configuration(s), the Default configuration is always present on the reader and in fact it is not modifiable and cannot be deleted.

Auto-Calibration

DL.CODE provides the **Image Auto-Setup** tool to maximize the reading performance by tuning the acquisition parameters (photometry) automatically. By selecting the **Image Auto-Setup** tool from the Image Settings branch in the Advanced Setup step, the following window appears: Select the Static or Dynamic Self-Tuning option; Start Image Auto-

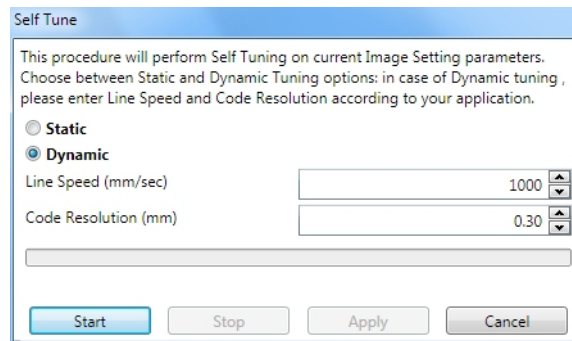

Setup and Apply to the Image Settings. The Advanced Setup window works interactively so that you can see the results of the parameter setting changes as well as the decoding results (Results panel).

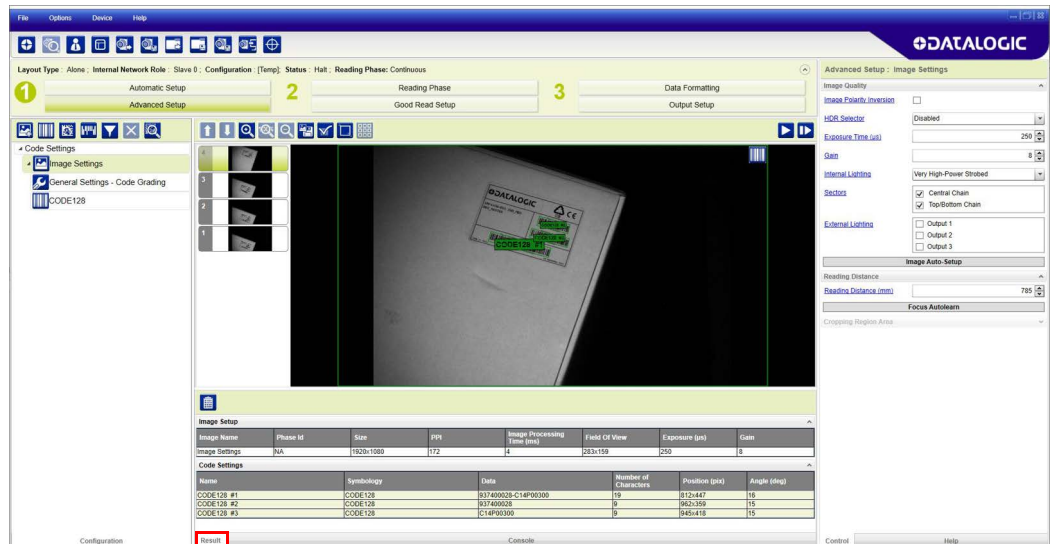


Figure 90 - Decoding Results OK

Manual Calibration

The following examples show some of the typical conditions occurring during the installation and how they can be tuned manually:

Under-exposure

To correct this result it is recommended to change the following parameters in their order of appearance:

1. increase the **Exposure Time**
2. increase the **Gain**



NOTE

In general, a longer exposure time corresponds to a lighter image but it is susceptible to blurring due to code movement. Exposure time is also limited by the Internal Lighting mode parameter. Longer exposure times can be set if the power strobe level is lowered.

High gain settings may produce a grainy image that may affect the decoding process.

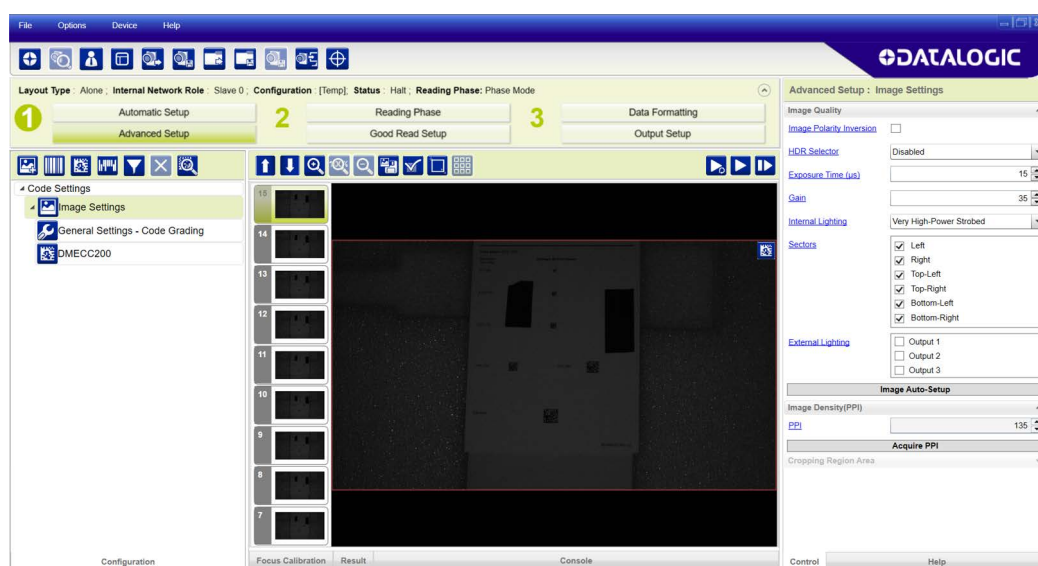


Figure 91 - Example Under Exposure: Too Dark

Over-exposure

To correct this result it is recommended to change the following parameters in their order of appearance:

1. decrease the **Gain**
2. decrease the **Exposure Time**

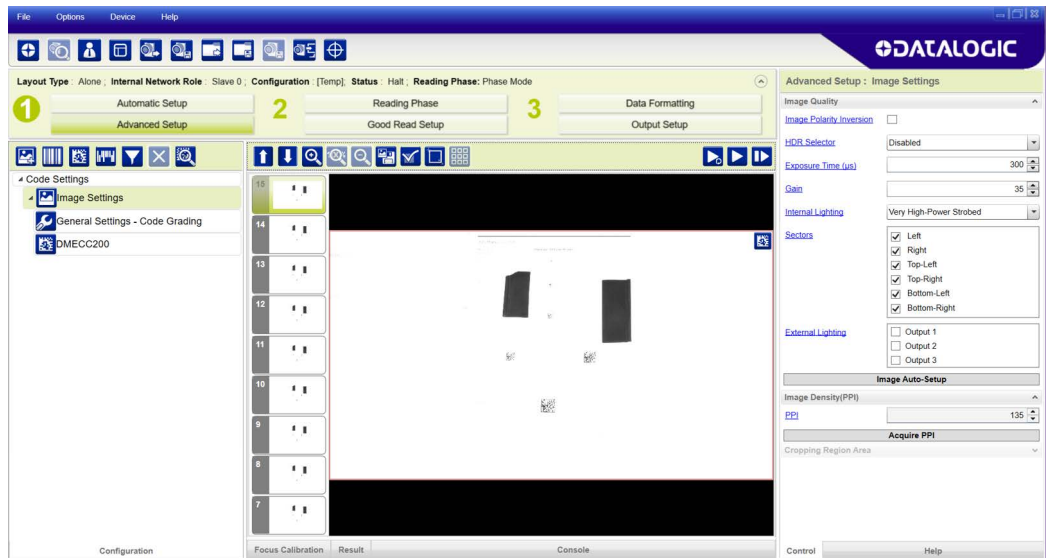


Figure 92 - Example Over Exposure: Too Light

Moving code out of the Field of View

To correct this result and have the code completely visible in FOV, it is possible to follow one or both the procedures listed below:

- reposition the reader
- use the **Delay on Trigger** and set the **Time** or **Space** values.

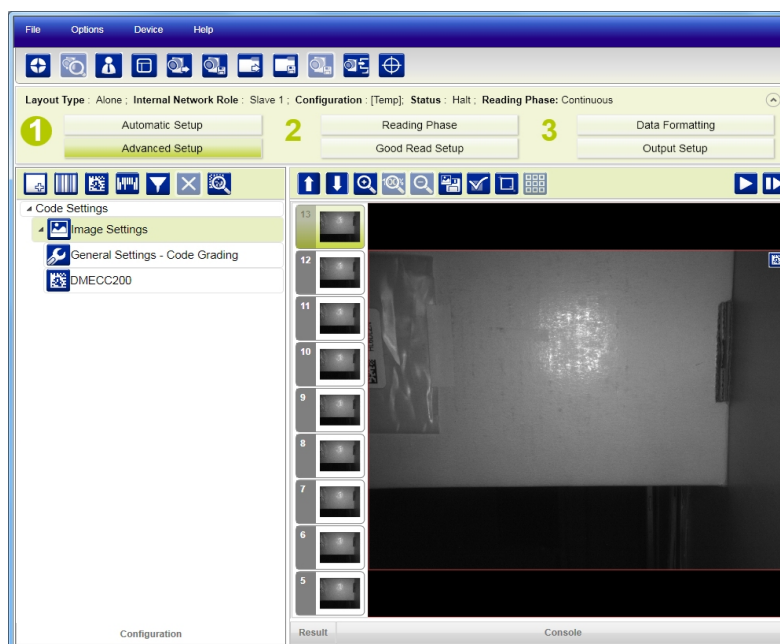


Figure 93 - Example Out of FOV

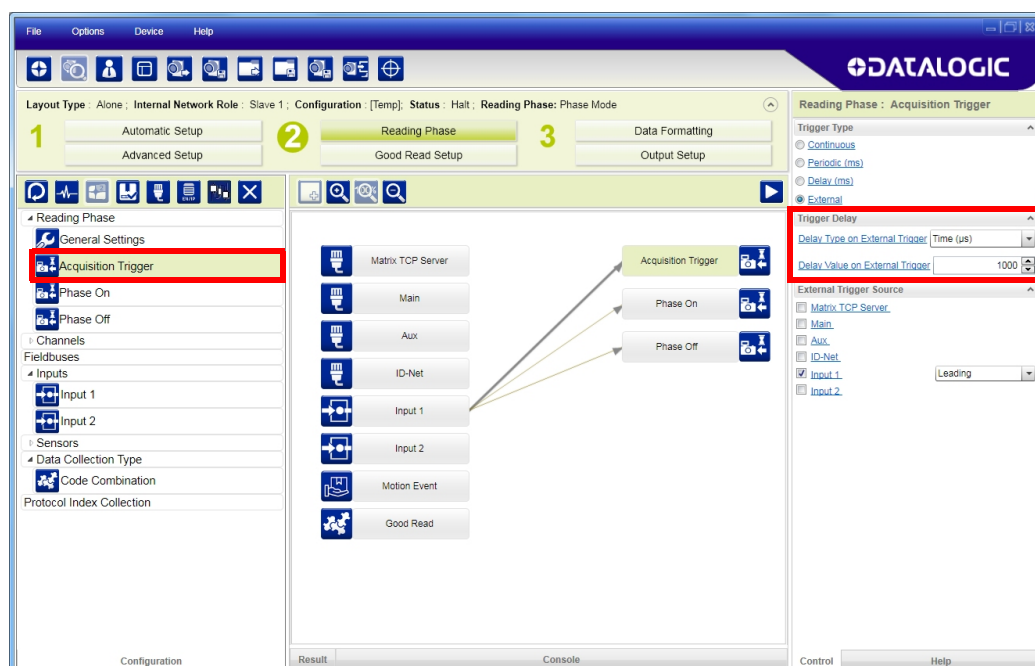


Figure 94 - Add Delay on Trigger to Correct Out of FOV

MULTI IMAGE ACQUISITION SETTINGS


When controlled variable conditions occur in the application, Multiple **Image Acquisition Settings** can be defined to create a database of parameter groups that handle each specific application condition. This database of pre-defined settings improves system flexibility and readiness by being applied either automatically or selectively by an activation event.

For example, an application may have several stable but different lighting conditions which require different lighting options. One Image Acquisition Setting could enable and use an internal illuminator and another setting could enable and use an external lighting system.

This feature is available for all Operating Modes.



Image Settings are found in the DL.CODE **Advanced Setup** step. Up to 10 different Image Settings can be configured by adding them with the icon.

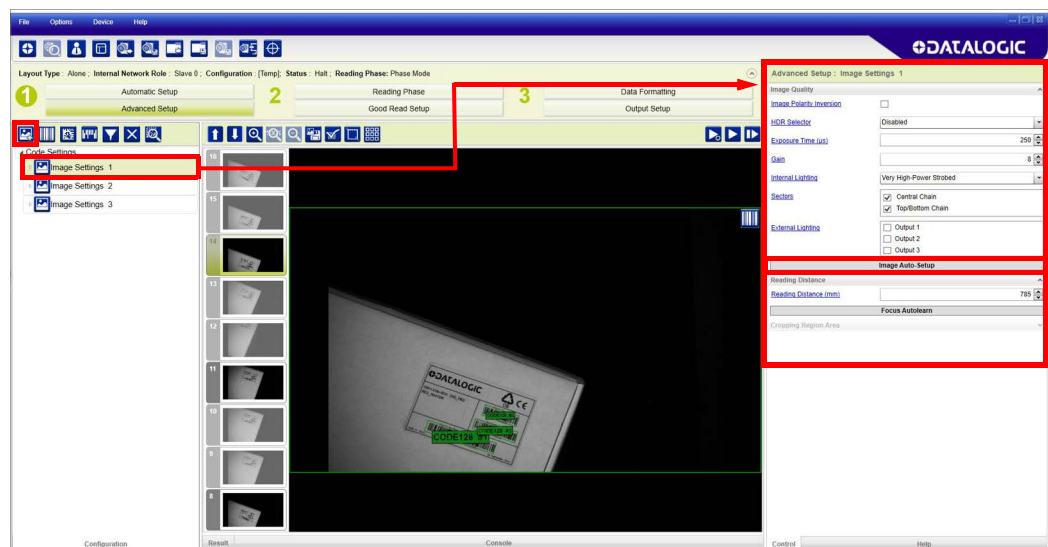


For each Image Setting condition start **Image Auto-Setup**, select the Static or Dynamic Self-Tuning option; and Apply it.

Automatic Image Settings Selection

If we don't know from one item to the next which reading condition will be presented, we will cycle through the pre-defined database of Image Settings (one per acquisition) in order to automatically capture the correctly lighted image over the course of several acquisitions. When the correct condition is matched, the result should be able to produce a Good Read.

When the Image **Settings Selection** is **Automatic** (default), then these Image Settings groups will be used cyclically.

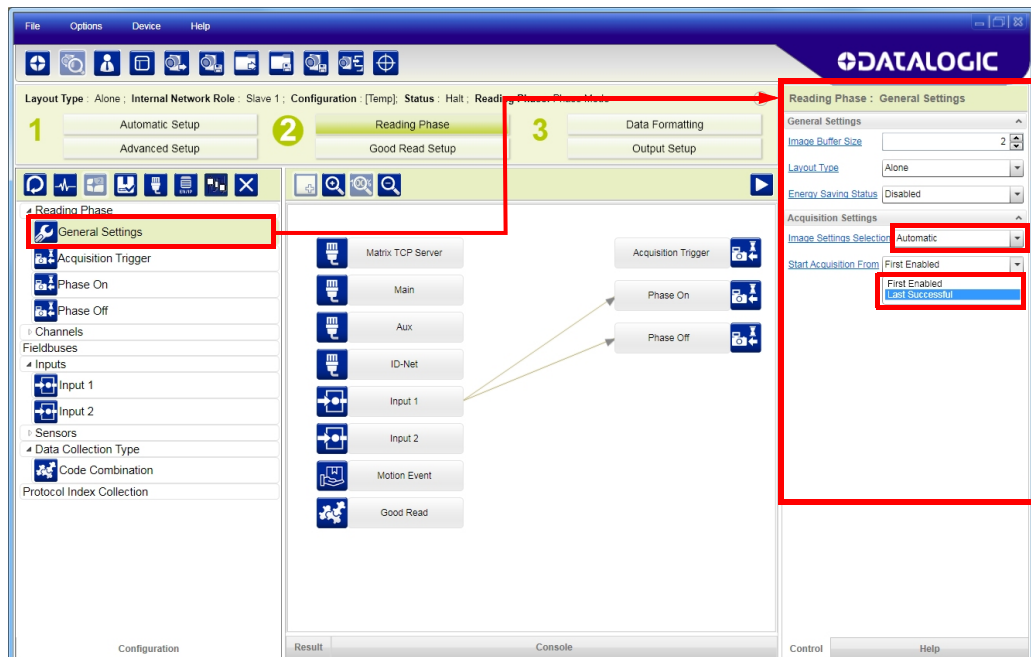

NOTE


Applications typically require more than one acquisition to obtain sufficient Good Read percentages. This means that for N acquisitions we will surely have captured the correct lighting condition but we will also have captured some acquisitions with the wrong lighting condition. A consequence then is that we cannot run these types of applications at the maximum speed because not all the acquisitions are useful to us. We must wait for a sufficient number of acquisitions that will guarantee a Good Read result.

If items to be read having the same lighting conditions are grouped together, then we can improve the read rate through the **Start Acquisition From** parameter. By choosing the **Last Successful** value, we will start with the Image Setting that last produced a Good Read. For this group of items the last Image Setting used will be correct for the next item and so we start each cycle with the acquisition that will potentially produce a Good Read.


External Image Settings Selection

There are some applications where the lighting conditions are known before each item is read and therefore we can pre-select the correct Image Setting from an external source.


When the **Image Settings Selection** is **External**, Acquisition Sequences are created and by default each Image Setting has its own Acquisition Sequence.

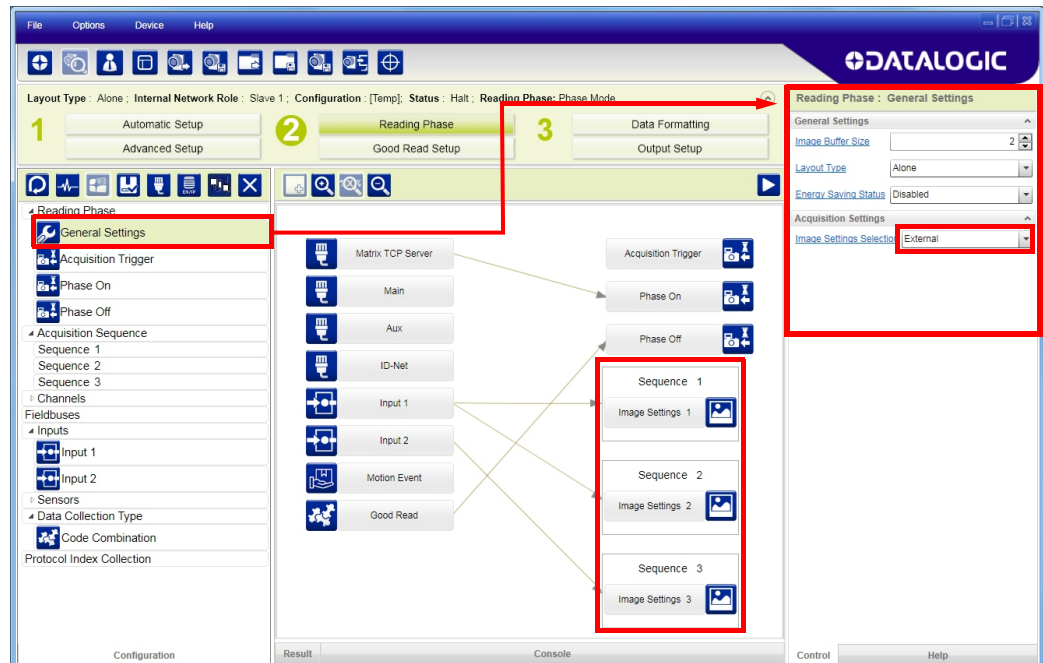

Each **Acquisition Sequence** can be activated exclusively by a single event, either through a string from an available communication channel or by a digital input.

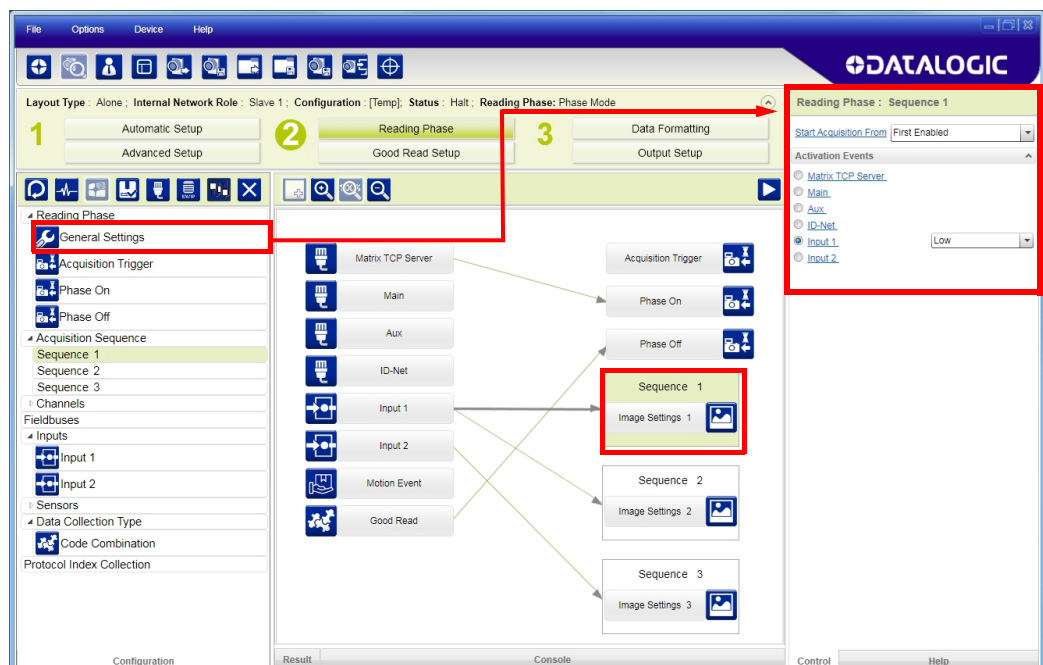


Alternatively a hybrid configuration can be made where more than one **Image Setting** can be grouped into an Acquisition Sequence by dragging it into the desired Sequence box. Select the empty Sequence box and delete it with the delete key.

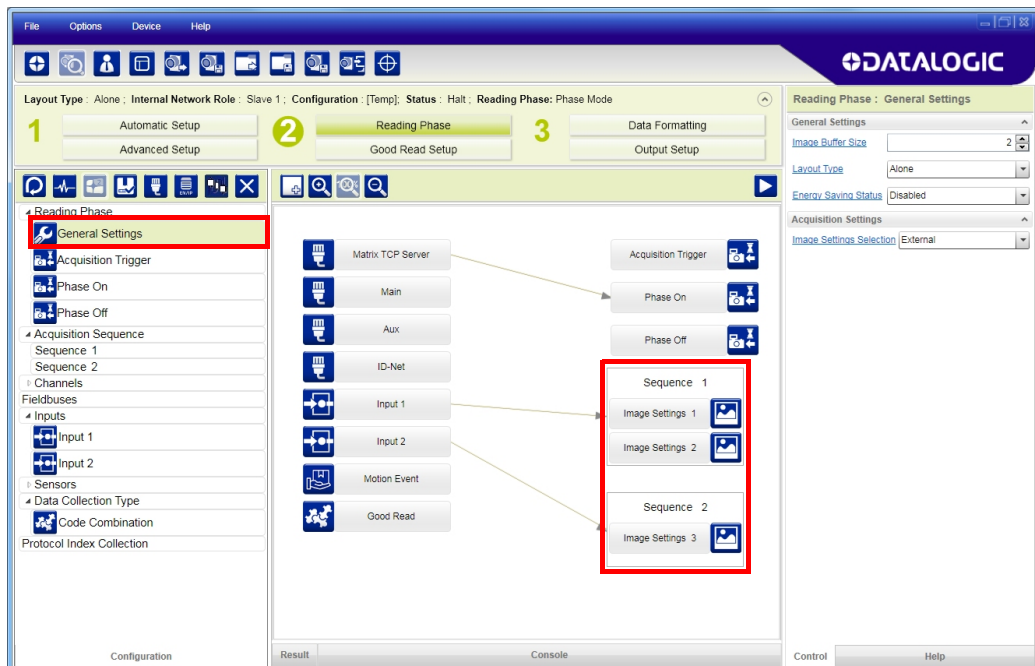

Each **Acquisition Sequence** can be activated exclusively by a single event, either through a string from an available communication channel or by a digital input.

In this case the **Start Acquisition From** parameter can improve the read rate for that Sequence. It has no meaning for a Sequence containing only one Image Setting.

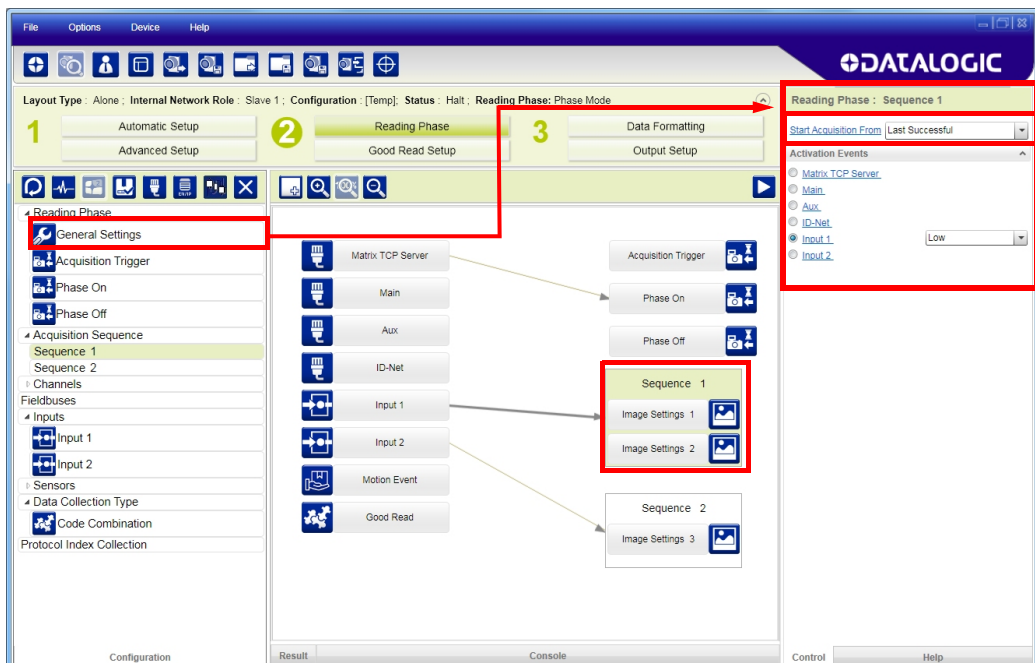

EXTENDING DOF WITH AUTOMATIC IMAGE SETTINGS SELECTION (CYCLE ALL IN SAME PHASE) FOR LIQUID LENS MODELS

For Liquid Lens models, multiple Image Acquisition Settings can be configured and enabled internally through the application software to extend the reader's depth of field. During each reading phase, decoding will be attempted by applying each enabled Image Acquisition Setting (cyclically).

Example

Read a 15 mil Data Matrix ECC 200 code covering a range from 140 to 320 mm. The reading distance range is too long to be covered by a single acquisition setting, so two acquisition settings could be used in which the first has a *Reading Distance of 195 mm* and the second has a *Reading Distance of 300 mm*. When both are enabled, the reader cycles through the two settings effectively producing the extended DOF.



NOTE

Cycling through Image Acquisition Settings that require changing the Reading Distance parameter (for liquid lens models), drastically reduces the frame rate due to the liquid lens refocusing delay as well as by the number of settings simultaneously enabled. Therefore this may not be the best solution for high speed applications. For high speed applications it is best to use the External Image Settings Selection (Input Select) feature described on page 148. Otherwise use multiple readers set to different reading distances.

Since many factors and parameters contribute to maximizing the reading process, it is suggested to use the DL.CODE Image Auto-Setup and Focus Autolearn tools to set the different acquisitions settings.



NOTE

By default the Image Settings Selection parameter is set to Automatic.

Multi Image Acquisition Settings Procedure using Automatic Image Settings Selection:

1. Using the DL.CODE Image Auto-Setup and Focus Autolearn tools, set the first acquisition setting (default) for the 195 mm Reading Distance. Then Save on Device.
2. Add another Image Setting, and using the DL.CODE Image Auto-Setup and Focus Autolearn tools, set the second acquisition setting for the 300 mm Reading Distance. Then **Save on Device**.
3. On the Reading Phase step > General Settings > Acquisition Settings, set the **Image Settings Selection** to **Automatic** (default). Then **Save on Device**.
4. Verify that the reader decodes at both distances with the DL.CODE Monitor.

EXTENDING DOF WITH AUTOMATIC IMAGE SETTINGS SELECTION SEQUENCE (INPUT SELECT) FOR LIQUID LENS MODELS

For Liquid Lens models, multiple Image Acquisition Settings can be configured and enabled externally through a distance sensor to extend the reader's depth of field. The specific Image Acquisition Setting Sequence is selected prior to the reading phase so that only the correct setting (or group of settings) will be applied to the entire reading phase.

When only two Image Acquisition Settings are used to extend DOF (one in each sequence), this effectively allows switching DOF while keeping the lens refocusing delay outside the reading phase.

This feature is recommended for high speed applications.



NOTE

Within each sequence, if more than one Image Acquisition Setting is enabled, they will be cycled as in the case where Image Settings Selection is Automatic.

Example

Read a 15 mil Data Matrix ECC 200 code covering a range from 140 to 320 mm at an application speed of 1 m/s. The reading distance range is too long to be covered by a single acquisition setting, so two acquisition settings could be used in which the first has a *Reading Distance of 195 mm* and is assigned to **Image Settings #1**, and the second has a *Reading Distance of 300 mm* and is assigned to **Image Settings #2**.

By assigning the **Image Settings Selection** to **External**, a proximity sensor (i.e. S3Z) mounted at least 150 ms before the **Acquisition Trigger** and connected to an input (i.e. Input 2), the correct DOF can be selected by enabling the correct sequence.

As an example, for a conveyor speed of 1 meter/second the **Activation Event Trigger** (Input 2 sensor) must be placed at least 150 mm before the reading phase start (Ext. Trigger).

The proximity sensor must be calibrated to trigger on packs in the near zone (140-215 mm) and therefore select the Sequence with **Image Settings #1** (the Image Acquisition Setting relative to the 195 mm Reading Distance). Packs farther away do not trigger the proximity sensor and so the Sequence with **Image Settings #2** is selected with the Image Acquisition Setting relative to the 300 mm Reading Distance.

The settings overlap in the range 210-220 mm and can be read by either one.

In this way the effective reading DOF covers the 140 -320 mm distance.

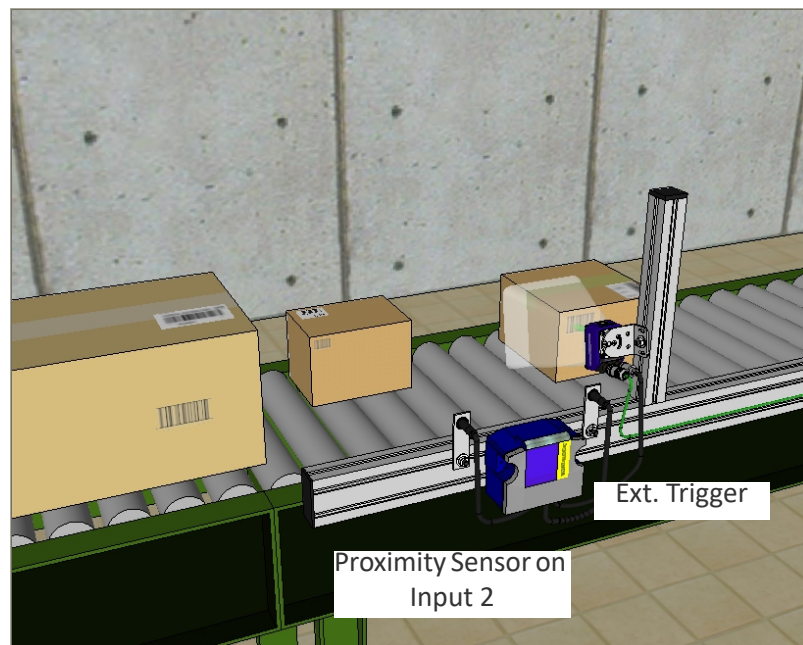


Figure 95 - Example Extending DOF Using External Image Settings Selection

Since many factors and parameters contribute to maximizing the reading process, it is suggested to use the DL.CODE Image Auto-Setup and Focus Autolearn tools to set the different acquisitions settings.

Multi Image Acquisition Settings Procedure using External Image Settings Selection:

1. Using the DL.CODE Image Auto-Setup and Focus Autolearn tools, set the first acquisition setting (default) for the 195 mm Reading Distance. Then **Save on Device**.
2. Add another Image Setting, and using the DL.CODE Image Auto-Setup and Focus Autolearn tools, set the second acquisition setting for the 300 mm Reading Distance. Then **Save on Device**.
3. On the Reading Phase step > General Settings > Acquisition Settings, set the **Image Settings Selection** to **External**.
4. You will now see the Sequences appear in the DL.CODE display area. Click on the sequence with **Image Settings #1** and select the **Input 2** Activation Event to **High**. Then **Save on Device**.
5. Verify that the reader decodes at both distances with the DL.CODE Monitor.




NOTE

The Acquisition Sequences (and therefore Image Settings) can alternatively be preselected by a string from an available communication channel instead of a digital input. In any case the activation event is exclusive (only one).


IMAGE CROPPING

In some applications, the Image Cropping feature in DL.CODE can help to increase decoding and result performance. Image cropping is performed from the Advanced Setup tab by clicking on the Add Cropping Region icon as shown below.


In Matrix 320 the frame rate is dependent on the number of rows and columns in the defined window. Image cropping allows reducing the Image processing area from the full FoV to a smaller area where codes are present. By excluding portions of the FoV, processing time is reduced.

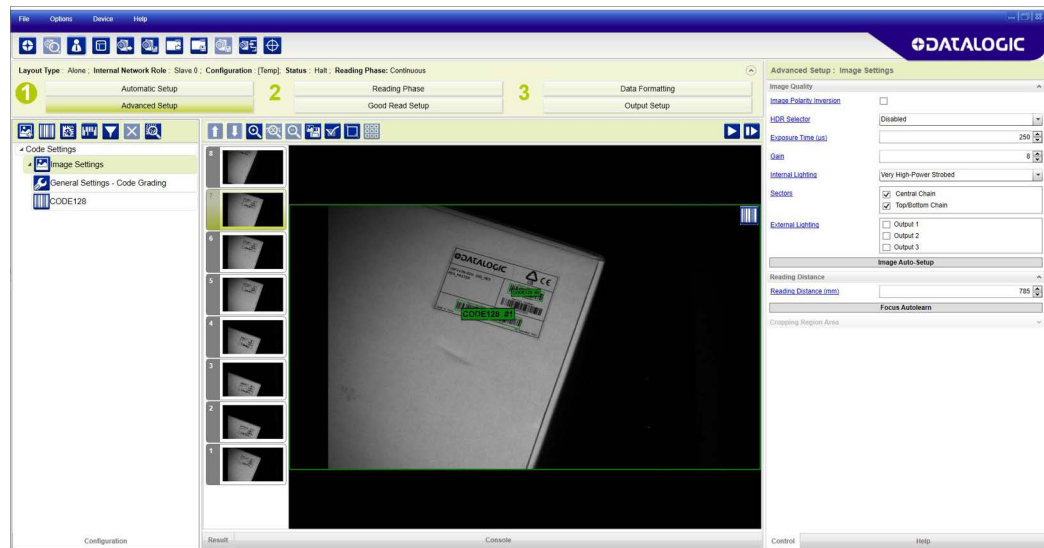

After clicking the Add Cropping Region icon, a blue border appears which by default is equal to the FoV.

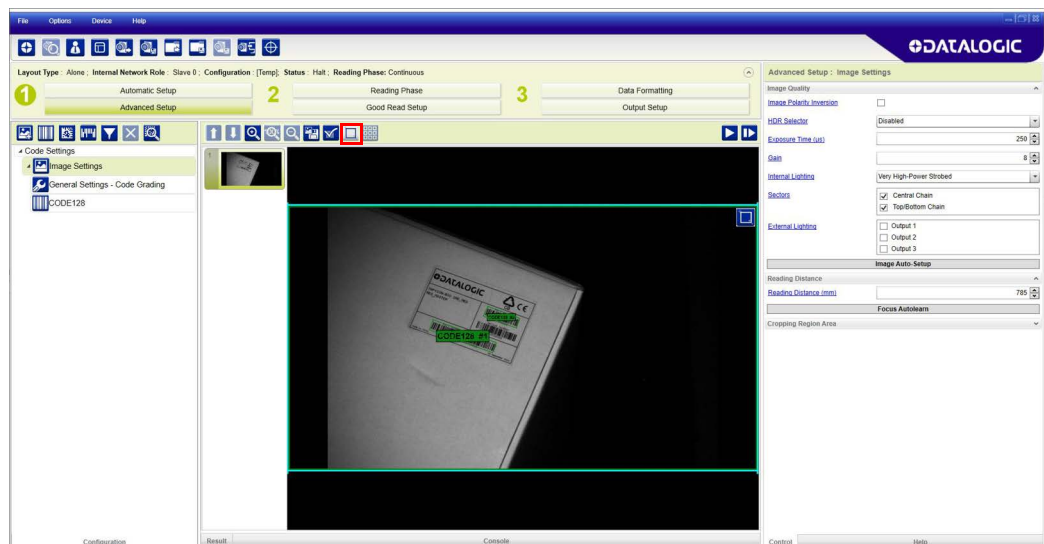


By dragging the edges with the mouse (resizing) you can crop the image to a specific location where codes are present. The numbers in the blue boxes refer to pixel references.

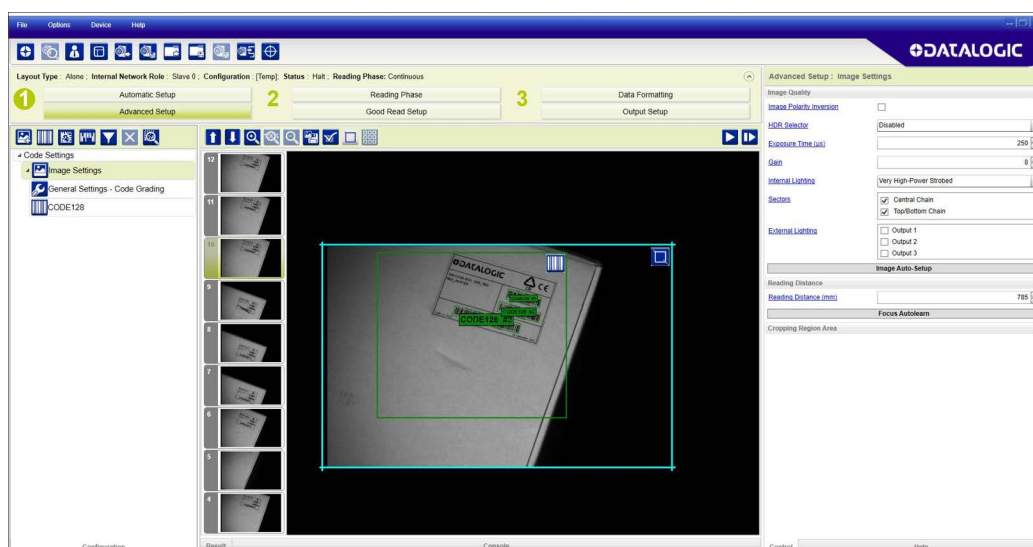

NOTE

The cropped area can be moved by dragging the center.

You can also set the cropped image size and position through the Cropping Region Area group of parameters; size = **Width** and **Height**, position = **Left**, **Top** (x,y) coordinates.

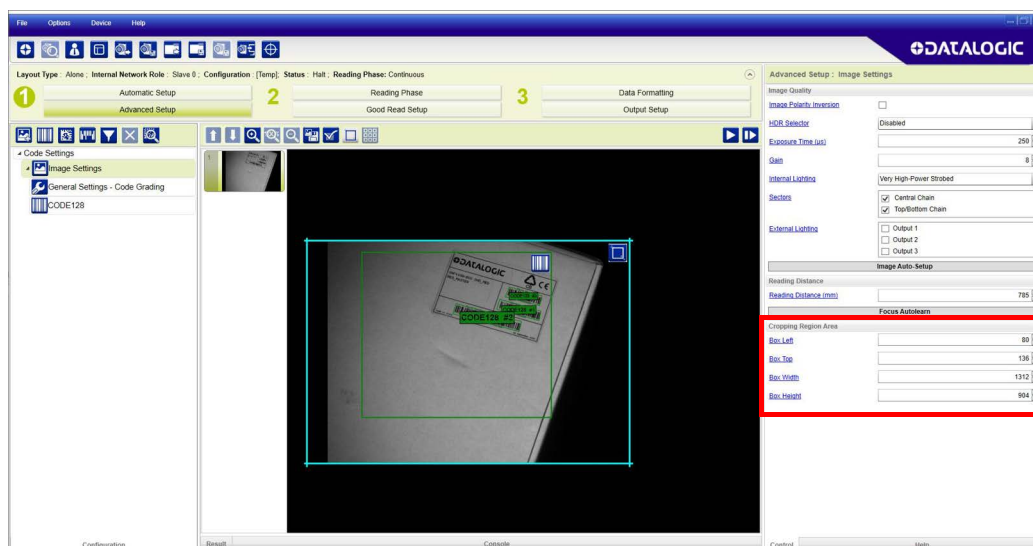

DIRECT PART MARKING APPLICATIONS

For **Data Matrix** family codes the **Decoding Complexity** parameter is available when Processing Mode is set to Standard and selects the decoding algorithm according to the printing/marketing technique used to create the symbol and on the overall printing/marketing quality.

The possible selections progress from Low to Very High where Low can improve decoding time for good print/mark quality and/or relatively normal size codes. This is the default setting. Very High can improve the decode rate for low print/mark quality and/or small size codes. This algorithm is much more aggressive but in general it may have longer decoding times than the lower complexity algorithms. **To minimize decoding time it is better to select the lowest value that still guarantees good decoding.**



Washed out and Axial Distortion



Dot Peening On Scratched Surface




Low Contrast Problem



Background Problems




Marked On Curved Shiny Surface

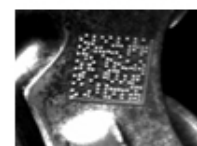

Axial distortion



Half moon effects

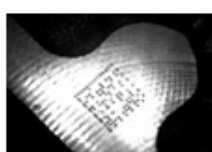

Shiny surface, noisy background



Low contrast, noisy background

Figure 96 - Problematic Direct Part Marking Examples


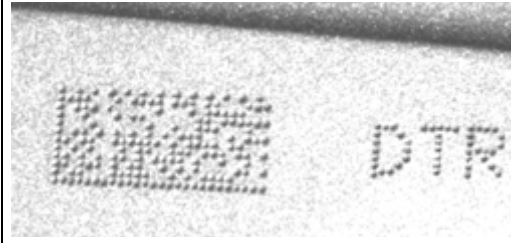
For **QR** code the **Decoding Method** parameter allows the Dot Peen Decoding algorithm to be selected which improves the decode rate for low quality Direct Part Mark codes and in general for Direct Part Mark codes with dot peening type module shapes.

Image Filter



Sets the filter to be applied to the image before being processed. This parameter can be used to successfully decode particular ink-spread printed codes (e.g. direct part mark codes).

Different filters can be applied to a single code or group of codes in one or more *Image Settings*. See the DL.CODE User’s Manual for examples of Image Filter application.

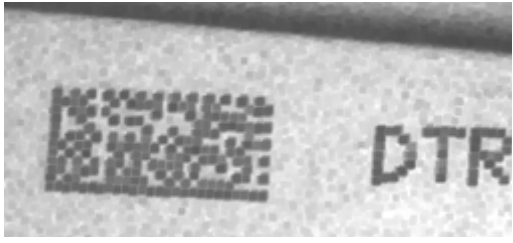

The **Erode** Filter enlarges the image dark zones to increase readability.

	
Before - No Read	After - Readable

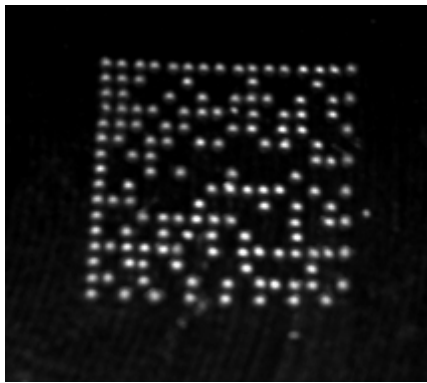The **Dilate** Filter enlarges the image white zones to increase readability.

	
Before - No Read	After - Readable


The **Close** filter eliminates dark areas (defects) in the white zones of the image.

	
Before - No Read	After - Readable

The **Open** filter eliminates white areas (defects) in the dark zones of the image.






Before - No Read

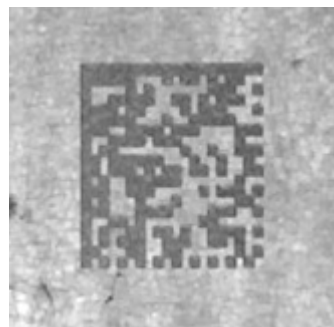



After - Readable

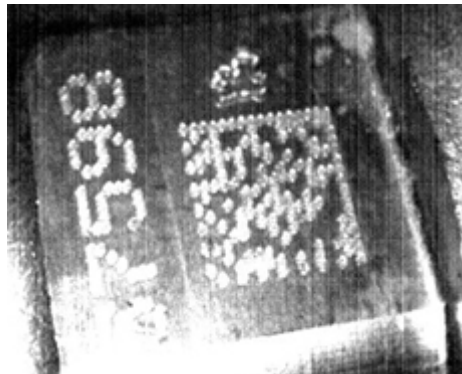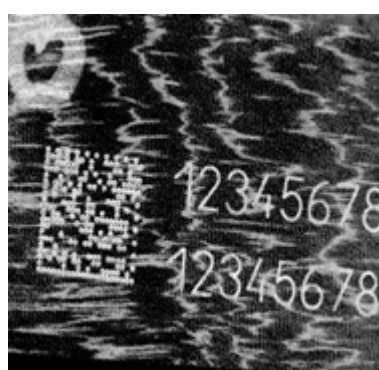
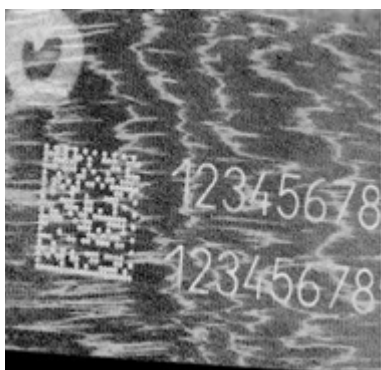
The **Contrast Stretching** filter maximizes image contrast.





Before - No Read




After - Readable

The Histogram Equalization filter makes the gray level distribution uniform.	
	
Before - No Read	After - Readable

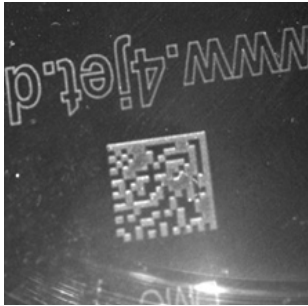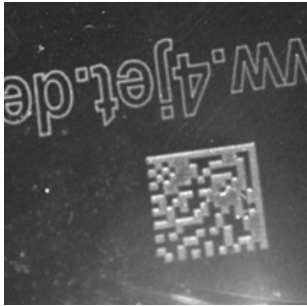The Smoothing filter deletes small (insignificant) details in the center of the image.	
	
Before - No Read	After - Readable

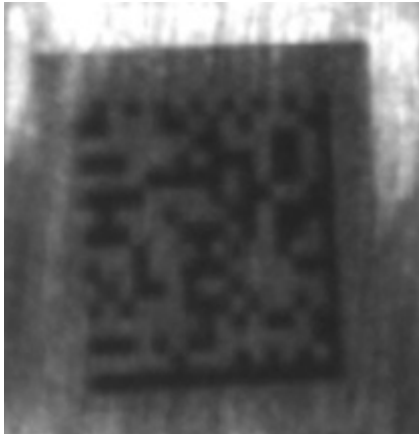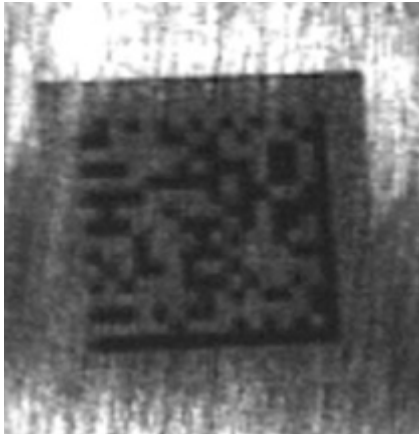The Sharpening filter improves out of focus images.	
	
Before - No Read	After - Readable

The **Deblurring** filter improves blurred images.

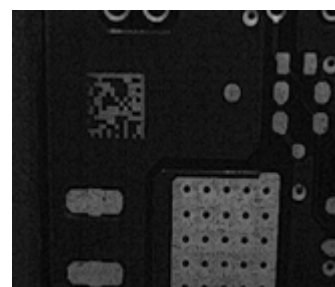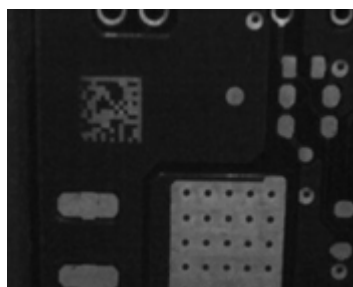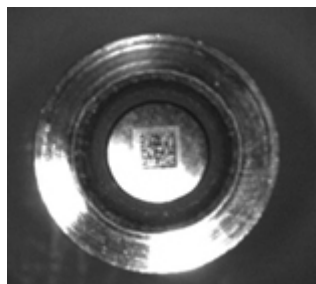

Before - No Read

After - Readable


The **Black Enhancement** filter produces a nonlinear increase in the black level for light images.



Before - No Read

After - Readable

The **White Enhancement** filter produces a nonlinear increase in the white level for dark images.

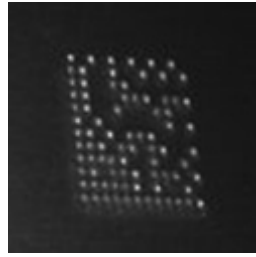

Before - No Read



After - Readable

PASS-THROUGH CONFIGURATIONS

DL.CODE supports pass-through multi device configurations.

The pass-through configuration allows individually working devices (Alone), to collect data from other devices (also working Alone), and pass this data to a third device through a different communication channel.

The following screenshots show the pass-through configuration settings for the three devices in the example in "Pass-Through" on page 120.

The screenshot displays the DL.CODE configuration interface for 'Reader #1'. The top status bar shows 'Layout Type : Alone', 'Internal Network Role : Slave 0', 'Configuration : Station 1', 'Status : Halt', and 'Reading Phase: Phase'. The left sidebar contains a tree view with categories like 'Output Data Format', 'Diagnostic Messages', 'Channels', 'Fieldbuses', 'Images Saving Conditions', and 'Passthrough Configuration'. The 'Passthrough Configuration' item is selected. The central workspace shows the 'Passthrough Field' and 'Output Data Channels' sections. The 'Output Data Channels' section lists 'Good Read', 'Message1', 'No Read', 'Message2', and 'Matrix TCP Server 2 Passthrough'. The 'Matrix TCP Server 2 Passthrough' item is highlighted with a green box. The right sidebar shows 'Data Formatting : Passthrough' settings, including 'Header', 'Terminator', 'Passthrough Input Data', 'Passthrough Content Field', and 'Output Channels'. The 'Output Channels' section lists 'Matrix TCP Server 1', 'Matrix TCP Server 2', 'Main', and 'Aux'. The 'Matrix TCP Server 2' item is checked and highlighted with a green box.

Layout Type : Alone Internal Network Role : Slave 0 ; Configuration : Station 2; Status : Halt ; Reading Phase: Phase

Reader #2 2 Reading Phase 3 Data Formatting

Good Read Setup Output Setup

Output Data Format

- Output Messages
 - Message 1
 - Message 2
- Diagnostic Messages
- Channels
 - Matrix TCP Server 1
 - Matrix TCP Server 2
 - Main
 - Aux
- Fieldbuses
- Images Saving Conditions
- Passthrough Configuration
 - Passthrough 1
 - Passthrough 2

Passthrough 2 Field

Output Data Channels

Good Read Message1 No Read Message2 Main Passthrough1 Aux Passthrough2

Matrix TCP Server 1 Matrix TCP Server 2 Main Aux

Data Formatting : Passthrough 2

Header <STX> Terminator <CR><LF>

Passthrough Input Data

Header <STX> Terminator <CR><LF>

Input Channel Aux

Passthrough Content Field

Output Channels

☐ Matrix TCP Server 1 ☒ Matrix TCP Server 2 ☐ Main ☐ Aux

Layout Type : Alone Internal Network Role : Slave 0 ; Configuration : Station 3; Status : Halt ; Reading Phase: Conti

Reader #3 2 Reading Phase 3 Data Formatting

Good Read Setup Output Setup

Output Data Format

- Output Messages
 - Message 1
 - Message 2
- Diagnostic Messages
- Channels
- Fieldbuses
- Images Saving Conditions
- Passthrough Configuration

Message 1 Field

Expected Code 1

Output Data Channels

Good Read Message1 No Read Message2

Matrix TCP Server 1 Matrix TCP Server 2 Main Aux

Data Formatting : Message 1

Header <STX> Terminator <CR><LF>

Code Related Field

Output Channels

☐ Matrix TCP Server 1 ☒ Matrix TCP Server 2 ☐ Main ☐ Aux

Event Type

INTERNAL NETWORK CONFIGURATIONS

Internal Network configurations (also called Master/Slave configurations), are designed to collect data from several devices connected together in an ID-NET™ network and send data output to the Host system.

DL.CODE has a Net Autoset feature for the Internal ID-NET Network which automatically recognizes and assigns addresses to all connected Slave readers.


In order to automatically recognize the ID-NET Slaves, all devices must be physically installed and electrically connected (including ID-NET network wiring).

The general procedure (also detailed in the following paragraphs) is to:


1. Mount all the readers mechanically (refer to "[Mechanical Dimensions](#)" on page 60 and "[Mounting And Positioning Matrix 320](#)" on page 66) and electrically (refer to "[ID-NET Interface](#)" on page 95) with factory default settings (Layout Type = Alone, Internal Network Role = Slave).
2. Run DL.CODE and verify that all the devices are discovered and shown in the device list area.
3. Connect to the designated Master device in DL.CODE and open the **Setup Internal Network Configuration**. You will be prompted to change the device to Master. Click OK. The Slave units will automatically be recognized. See "[Master Configuration](#)" on page 160.
4. Depending on the application, select Set Default Multidata Configuration or Set Default Synchronized Phase Mode Configuration.
5. Connect to each Slave reader via Ethernet and set the Slave specific parameters depending on the application type. Save each Slave specific configuration. See "[Multidata ID-NET Network Configurations](#)" on page 162 or "[Synchronized ID-NET Network Configurations](#)" on page 167.
6. For Synchronized networks Verify/Test network performance. See "[Verify Master/Slave Synchronized Configuration](#)" on page 171.
7. Perform the **Backup current Internal Network configurations** procedure. See "[Backup](#)" on page 175.

Master Configuration


First start with the desired device to assign as ID-NET Master (current default setting is Slave). Click on Setup Internal Network Configuration from the Task area.

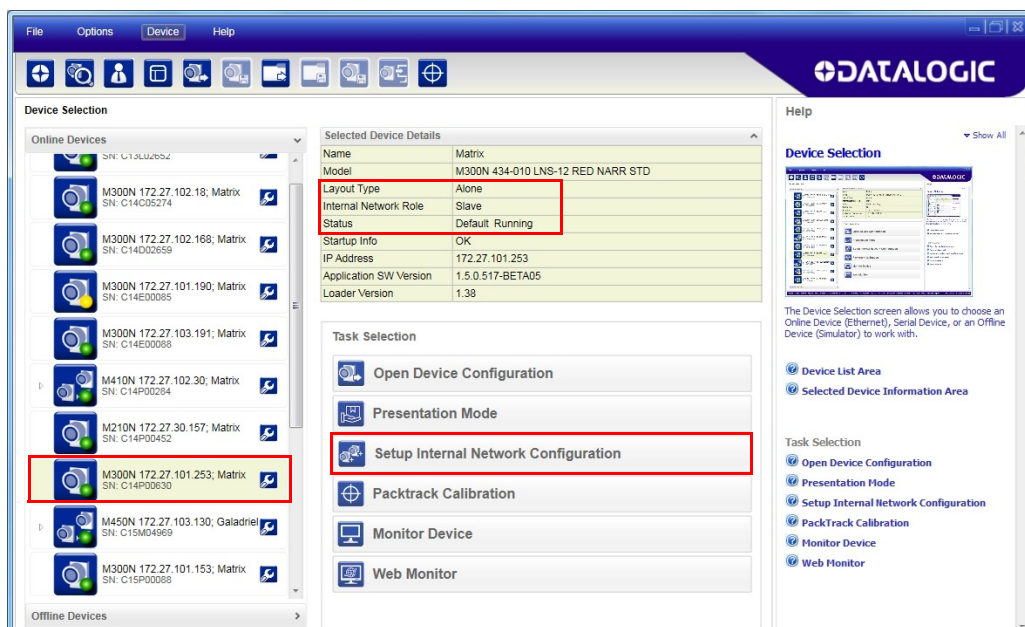


You will be advised that the device role will be changed to Master.

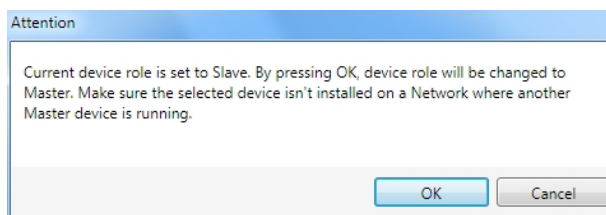


Click OK. The Net Autoset feature automatically starts to find Slave devices connected to the ID-NET network of the Master.

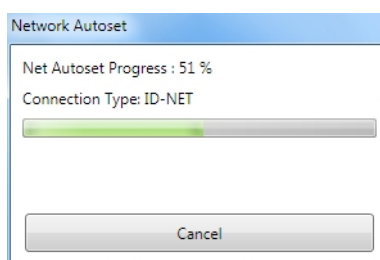

When finished, all the Slaves should have been correctly recognized. If not, verify all device connections and power and then repeat the operation by clicking on the Start Net Autoselect button.

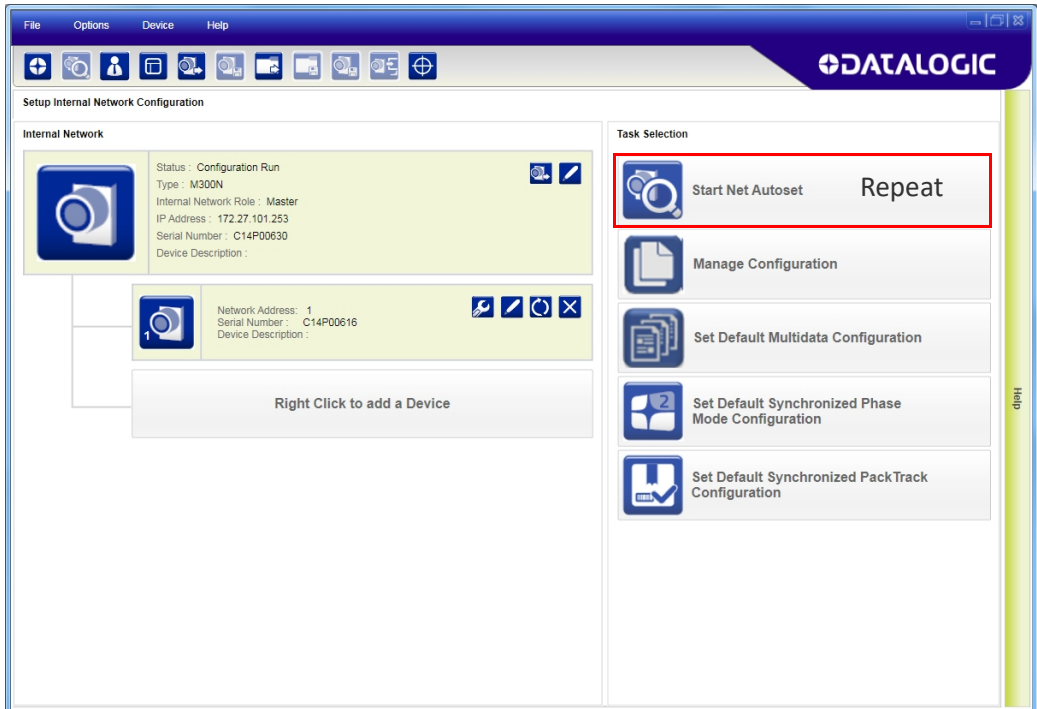

Depending on the application, select one of the Default Internal Network Configurations: **Multidata**, **Synchronized Phase Mode** or **Synchronized PackTrack**.

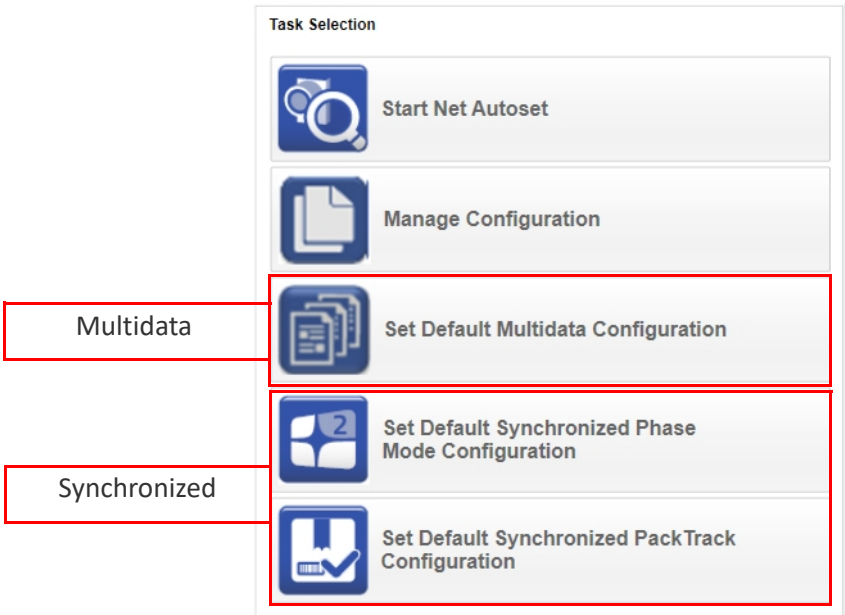

This selection will open a pre-configured job for the Master reader according to the selection. Follow the specific application instructions in the following paragraphs.

Multidata ID-NET Network Configurations

The Multidata ID-NET network communications between Master and Slave are managed by the application job (configuration) using the pass-through feature. A pre-configured job is loaded with the correct pass-through settings for both the Master and Slaves when the Default Multidata Configuration is selected from the Internal Network Setting feature.

1. Complete the configuration of all the application parameters (including Image Settings) and save them to the Master with an application specific name.

Optionally, checking the **Save on Slave Device** box can be helpful to save all the current individual Slave configurations with the new configuration *name*. This does not clone any parameters. If not checked, Slave configurations will remain as *Temp* configurations and you will be warned that changes to the Master have not been saved to the Cluster.

For Multidata configurations, the option to **Clone Master configuration on Slaves** **must not be checked**.

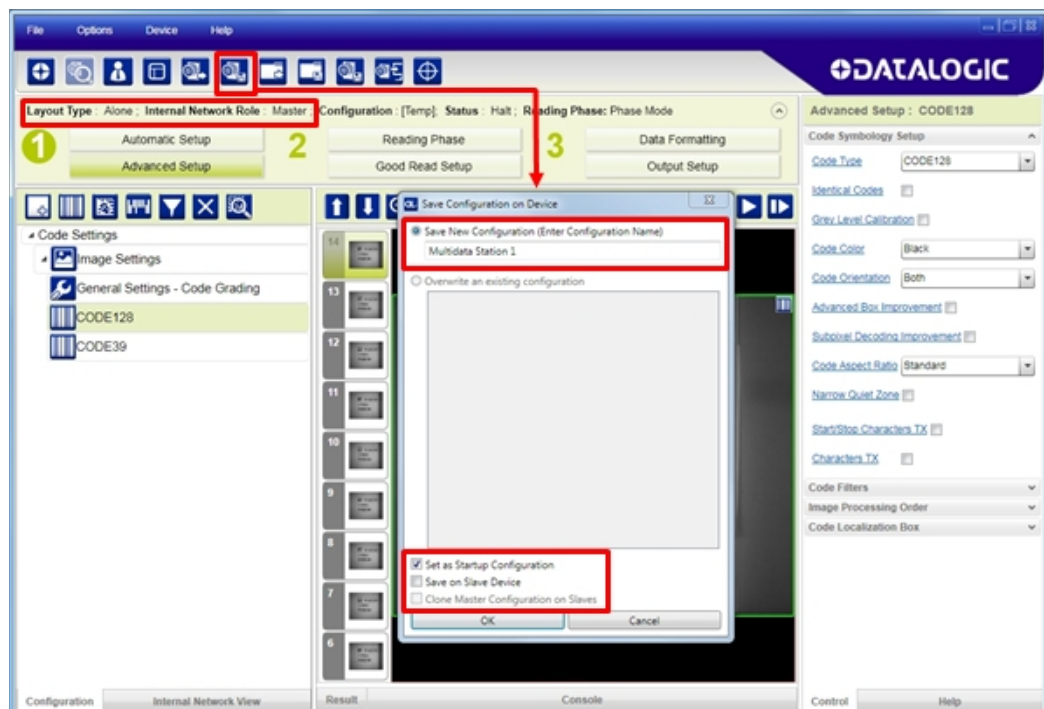


Figure 97 - Saving Multidata Configuration to Master


The jobs must not be cloned because the Master and Slaves have different input/output communication channels. The readers are also working independently from each other, often on separate stations with different code reading requirements, different operating modes, etc.

2. Connect to each Slave reader via Ethernet (see note below), and set all the configuration parameters of each Slave device.




NOTE


If necessary, Slave device photometric (Image Settings) parameters must be configured separately through DL.CODE. This is preferably done through each device's Ethernet TCP/IP channel. If Slave devices are not connected to Ethernet you must temporarily (manually) connect them one by one to perform Image Settings.

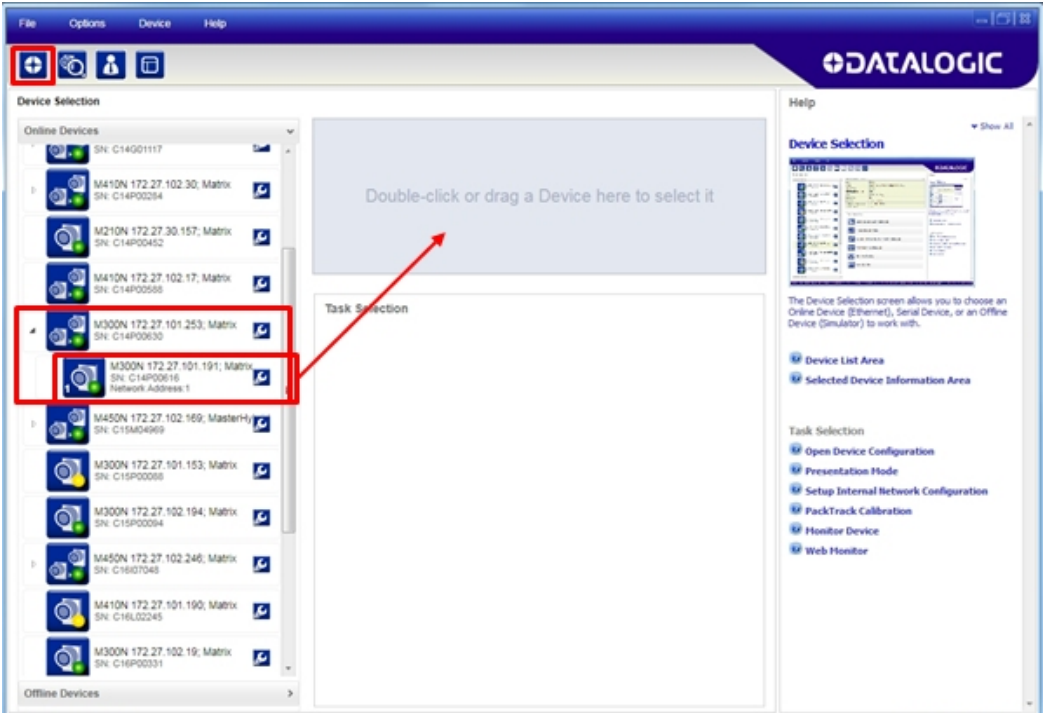

Open the **Slave specific application** job, (it will either have the new name saved from the Master or Temp depending on the **Save on Slave Device** selection).

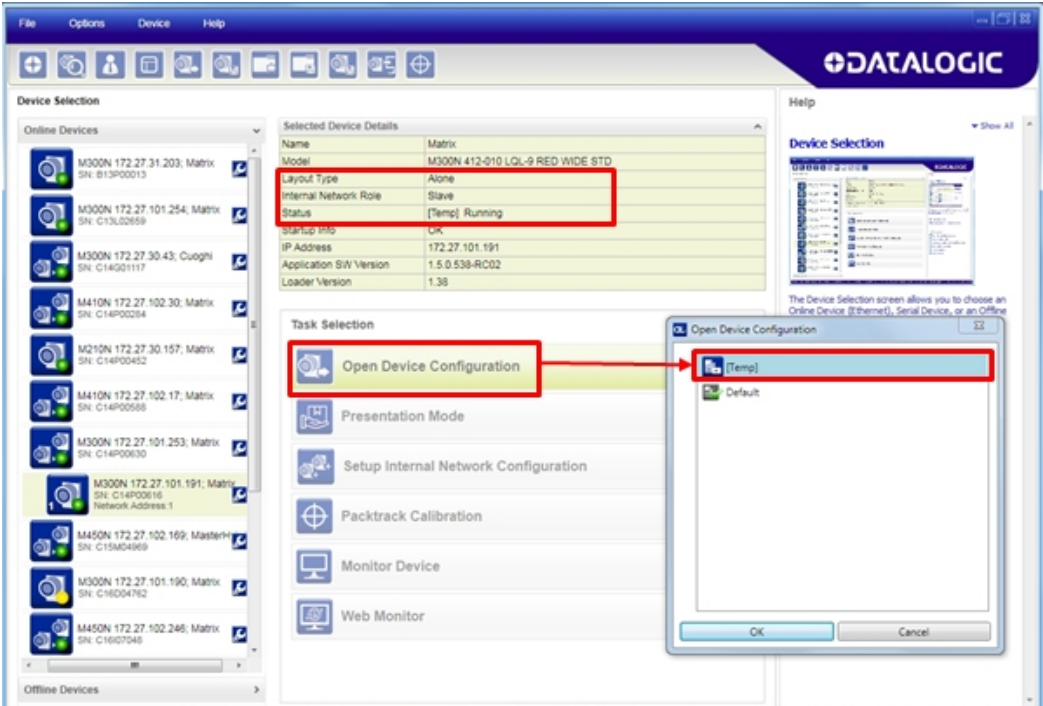

When the configuration opens, pause run mode and set all the application specific configuration parameters (including Image Settings).

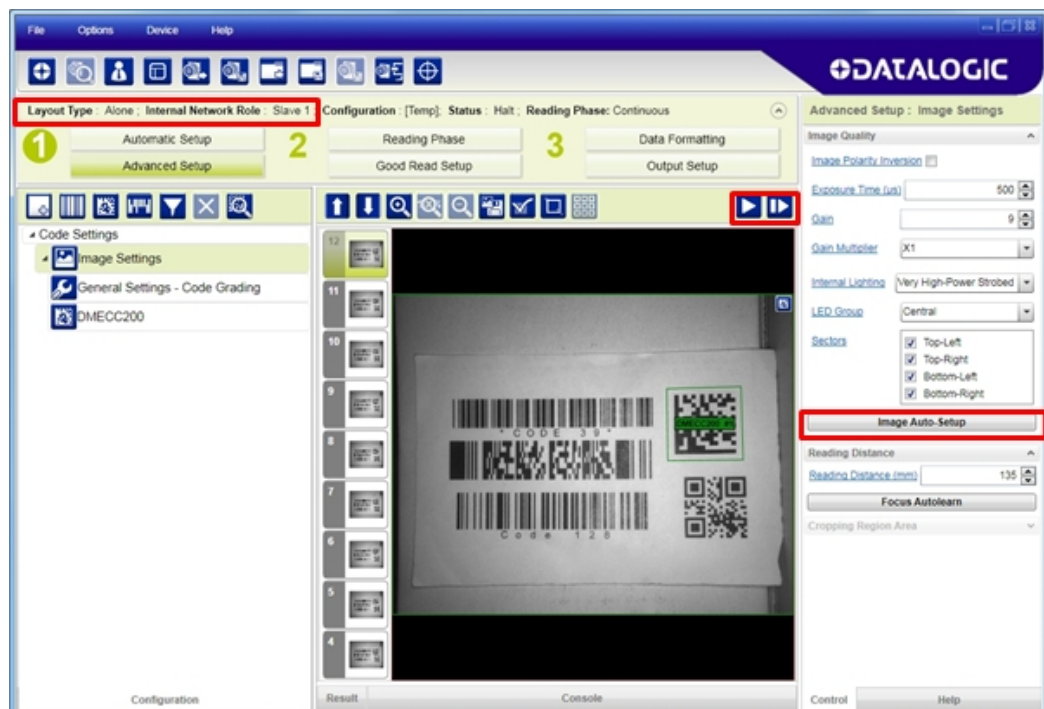

Verify the focus and decoding with the capture image button.

3. Now save them to a new Slave specific application job¹.


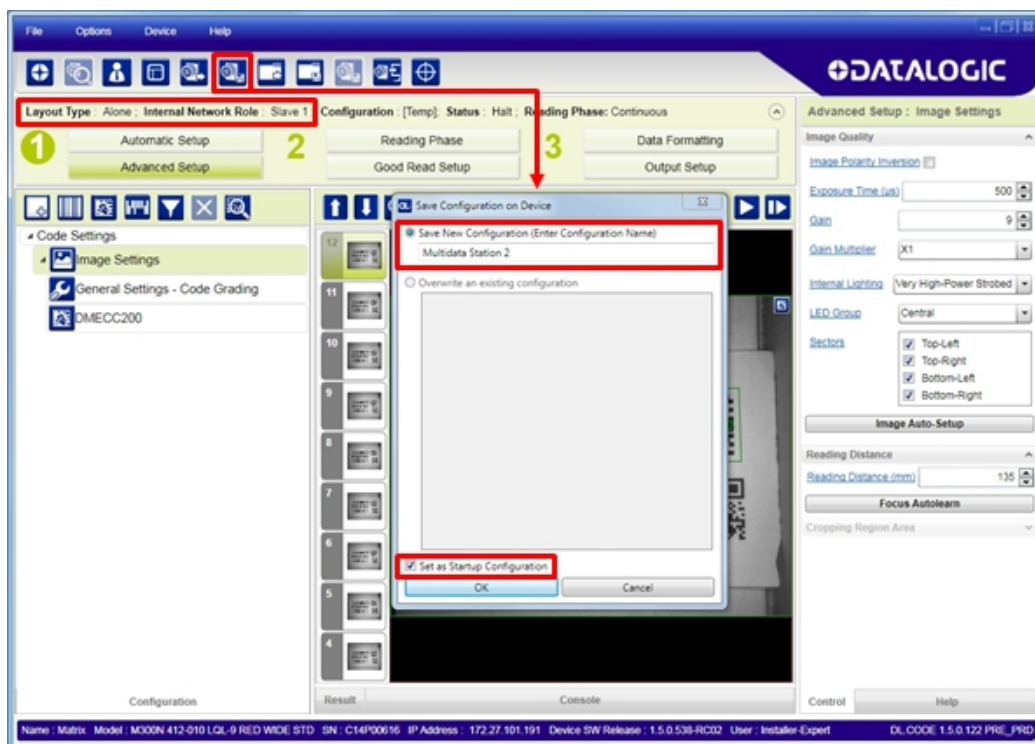


Figure 98 - Saving Multidata Configuration to Slave 1

Repeat this procedure for each Slave device until the entire network is configured.

The following screenshots show the pass-through configuration settings.

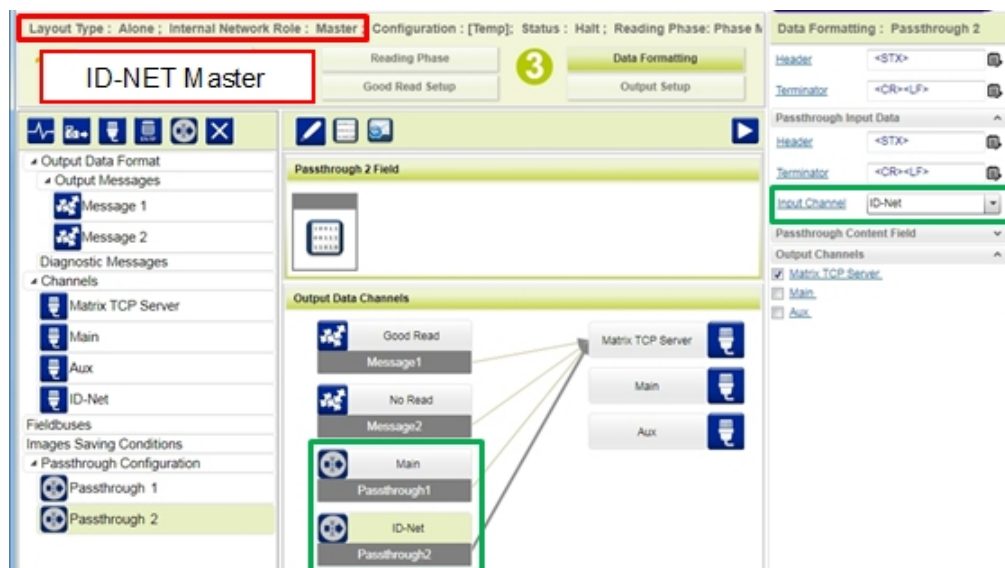

1. If **Save on Slave Device** was selected when saving the Master configuration, an application job with the same name (but with all Slave specific configuration parameters), has been saved to the Slaves. No parameters have been cloned from the Master. There are no common parameters managed by the Master for Multidata configurations.

Layout Type : Alone ; Internal Network Role : Slave 1 Configuration : [Temp]; Status : Halt ; Reading Phase: Phase 1

ID-NET Slave #1

Reading Phase 3 Data Formatting

Good Read Setup Output Setup

Output Data Format

- Output Messages
 - Message 1
 - Message 2
- Diagnostic Messages
- Channels
 - Matrix TCP Server
 - Main
 - Aux
 - ID-Net
- Fieldbuses
- Images Saving Conditions
- Passthrough Configuration
 - Passthrough

Passthrough Field

Output Data Channels

Good Read Message1

No Read Message2

Aux Passthrough

Matrix TCP Server

Main

Aux

ID-Net

Data Formatting : Passthrough

Header <STX>

Terminator <CR><LF>

Passthrough Input Data

Header <STX>

Terminator <CR><LF>

Input Channel Aux

Passthrough Content Field

Output Channels

- Matrix TCP Server
- Main
- Aux
- ID-Net

Layout Type : Alone ; Internal Network Role : Slave 2 Configuration : [Temp]; Status : Halt ; Reading Phase: Contin

ID-NET Slave #2

Reading Phase 3 Data Formatting

Good Read Setup Output Setup

Output Data Format

- Output Messages
 - Message 1
 - Message 2
- Diagnostic Messages
- Channels
 - Matrix TCP Server
 - Main
 - Aux
 - ID-Net
- Fieldbuses
- Images Saving Conditions
- Passthrough Configuration

Message 1 Field

Expected Code 1

Output Data Channels

Good Read Message1

No Read Message2

Matrix TCP Server

Main

Aux

ID-Net

Data Formatting : Message 1

Header <STX>

Terminator <CR><LF>

Code Related Field

Output Channels

- Matrix TCP Server
- Main
- Aux
- ID-Net

Event Type

Synchronized ID-NET Network Configurations

The Synchronized ID-NET network communications between Master and Slave are internally managed by the application software. A pre-configured job is loaded with the Synchronized Layout Type and the correct Operating Mode for both the Master and Slaves when either the Phase Mode or PackTrack Configuration is selected from the Internal Network Setting feature.

1. Complete the configuration of all the application parameters (including Image Settings) and save them to the Master with an application relative name and **with** the option to **Clone Master configuration on Slaves**.

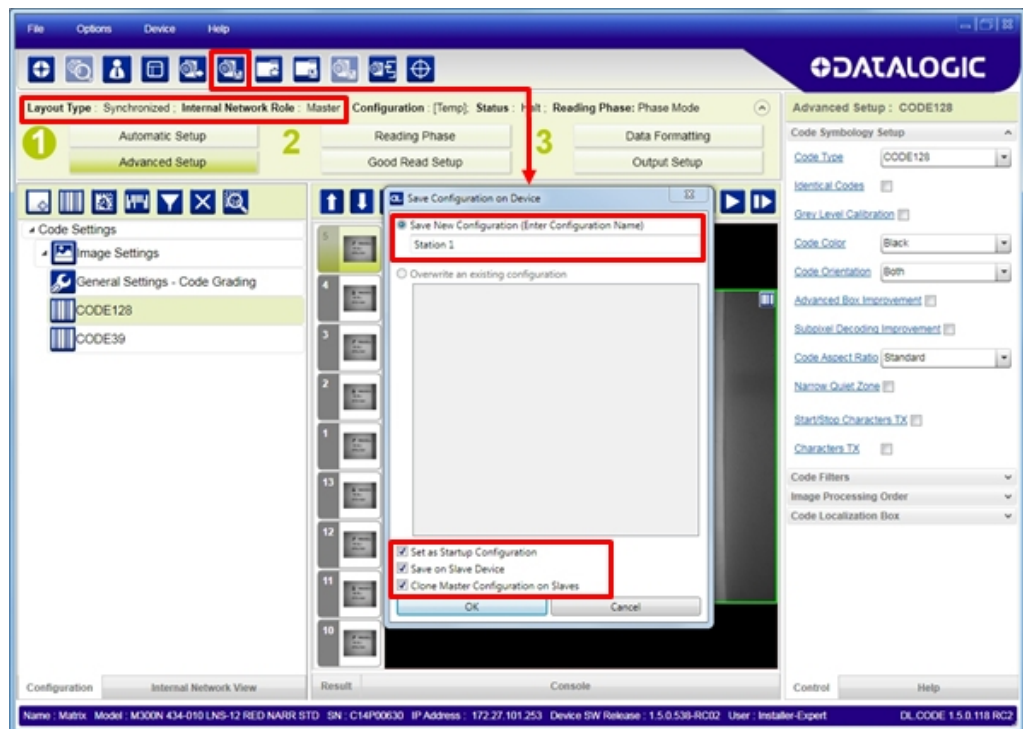



Figure 99 – Saving Synchronized Phase Mode Configuration to Master

2. Connect to each Slave reader via Ethernet (see note below), and set the Slave specific parameters.




NOTE

If necessary, Slave device photometric (Image Settings) parameters must be configured separately through DL.CODE. This is preferably done through each device's Ethernet TCP/IP channel. If Slave devices are not connected to Ethernet you must temporarily (manually) connect them one by one to perform Image Settings.

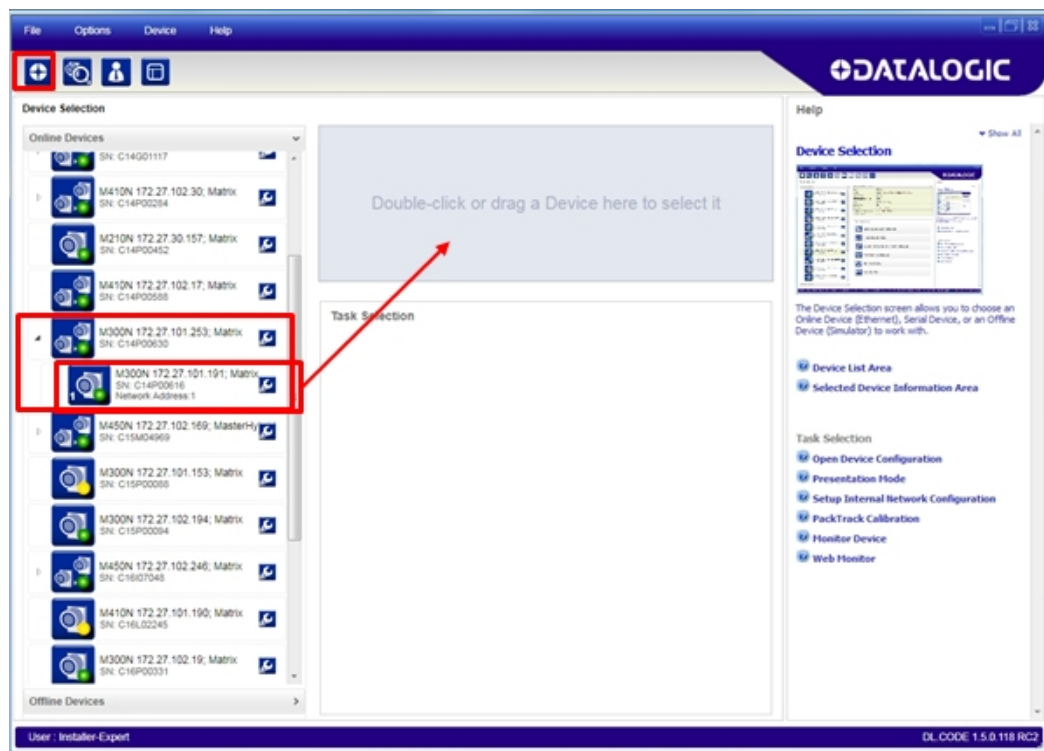


Open the cloned application job.

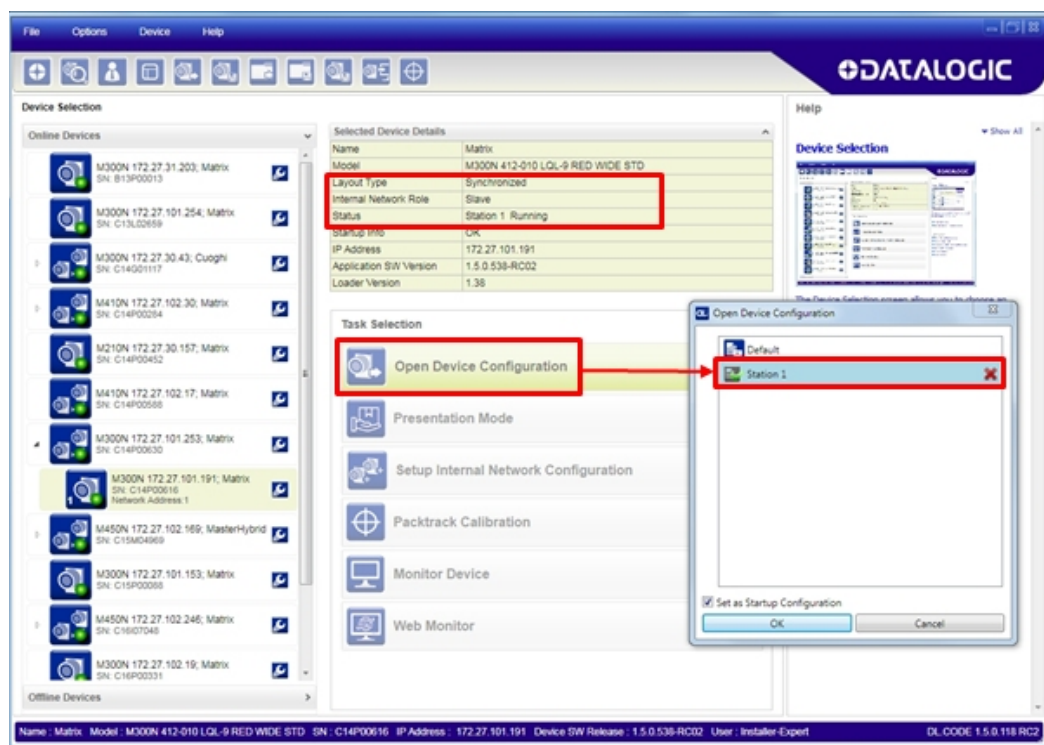

When the job opens, pause run mode and configure the Slave specific parameters. These depend on the application and include the following:

- photometric parameters (Image Auto-Setup feature in the Advanced Setup – Image Settings step)
- Acquisition Trigger Delays necessary to avoid lighting interference between adjacent or oppositely positioned readers (Reading Phase step)
- Images Saving if used (Data Formatting step)
- Encoder Sensor: if used, (for all Slaves, the Encoder Type must be set to **Internal**)

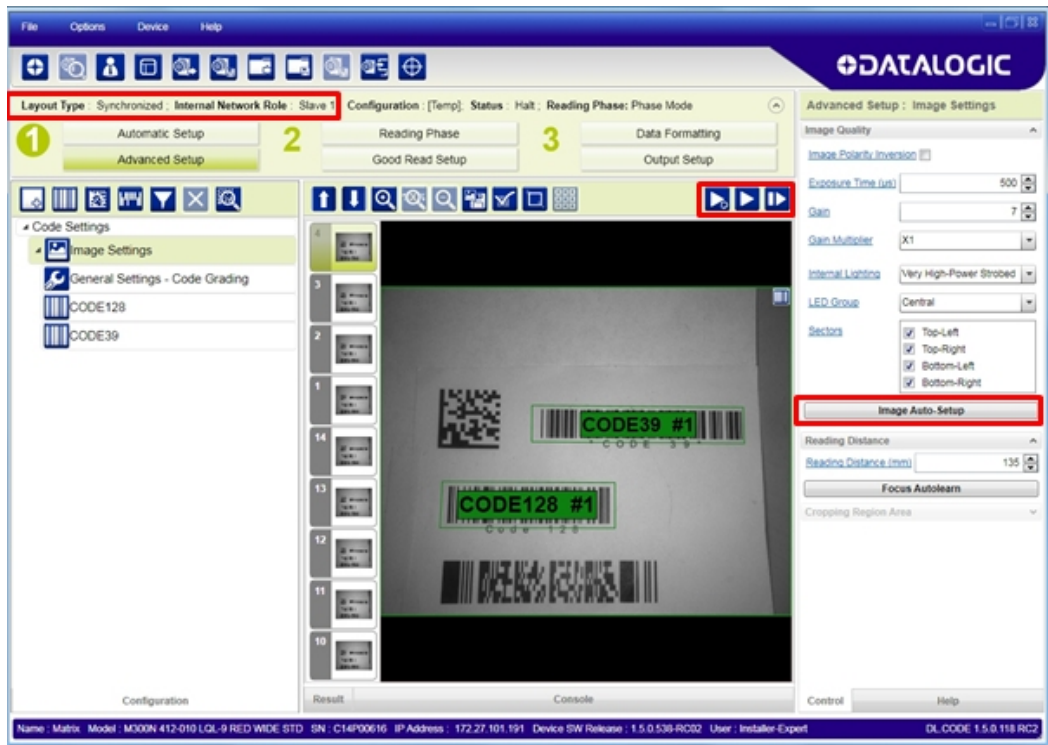

Verify the focus and decoding with the capture image button.

3. Now save them, overwriting the cloned application job¹.

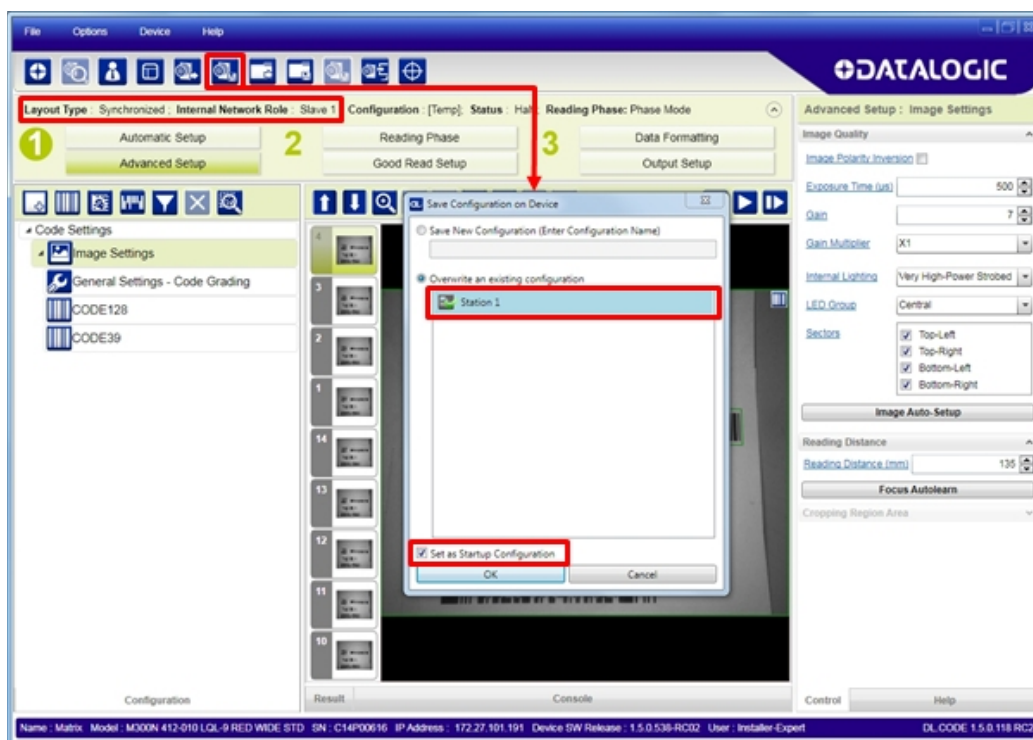


Figure 100 - Saving Synchronized Phase Mode Configuration to Slave

Repeat this procedure for each Slave device until the entire network is configured.

See "ID-NET Synchronized Network" on page 122 for an example.


1. An application job with the same name as the Master's has been cloned to the Slaves. Each Slave can have its own Image Settings parameters saved in its own copy of the application job. Common parameters managed by the Master such as Operating Mode cannot be modified in the Slave jobs and are shown in dark gray.

Verify Master/Slave Synchronized Configuration


From the Master configuration, run the application and monitor the output data from the DL.CODE Console or a configured channel terminal.

If necessary, as a troubleshooting tip, you can temporarily apply the **Reading Mask** field in place of each Code Content field to verify if all devices are reading. To do this:

1. Connect to the Master device via Ethernet and from the Data Formatting step, change each Expected Code Field Type from Code Content to Reading Mask.

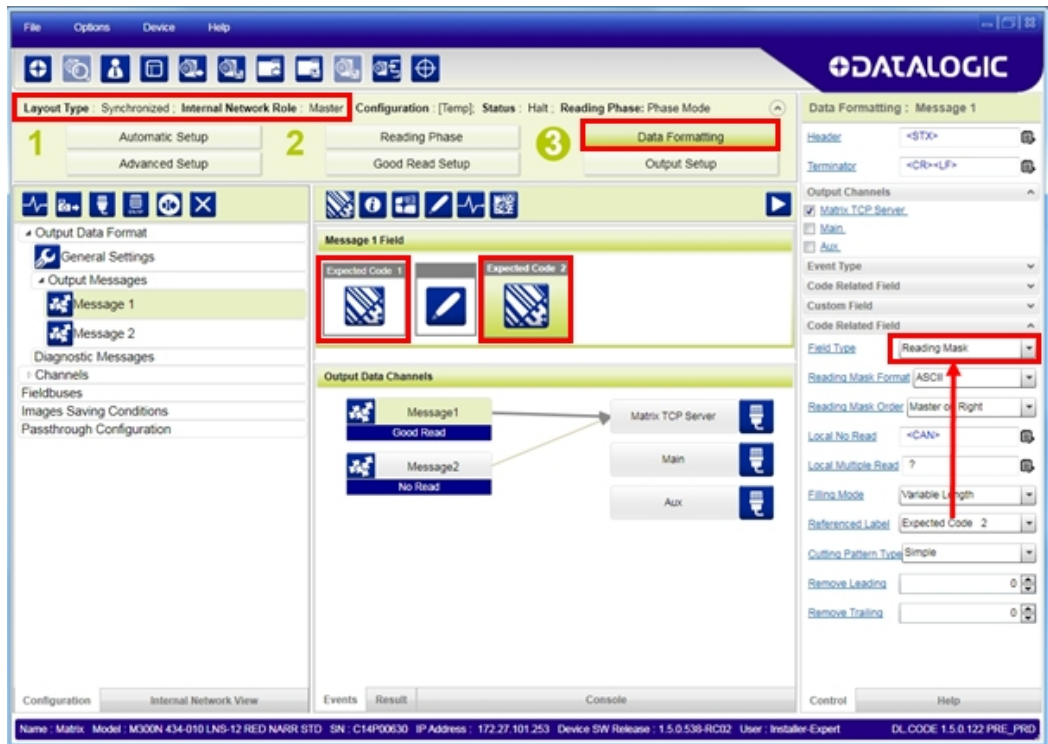

2. Run the application and monitor the output data from the DL.CODE Console or a configured channel terminal.

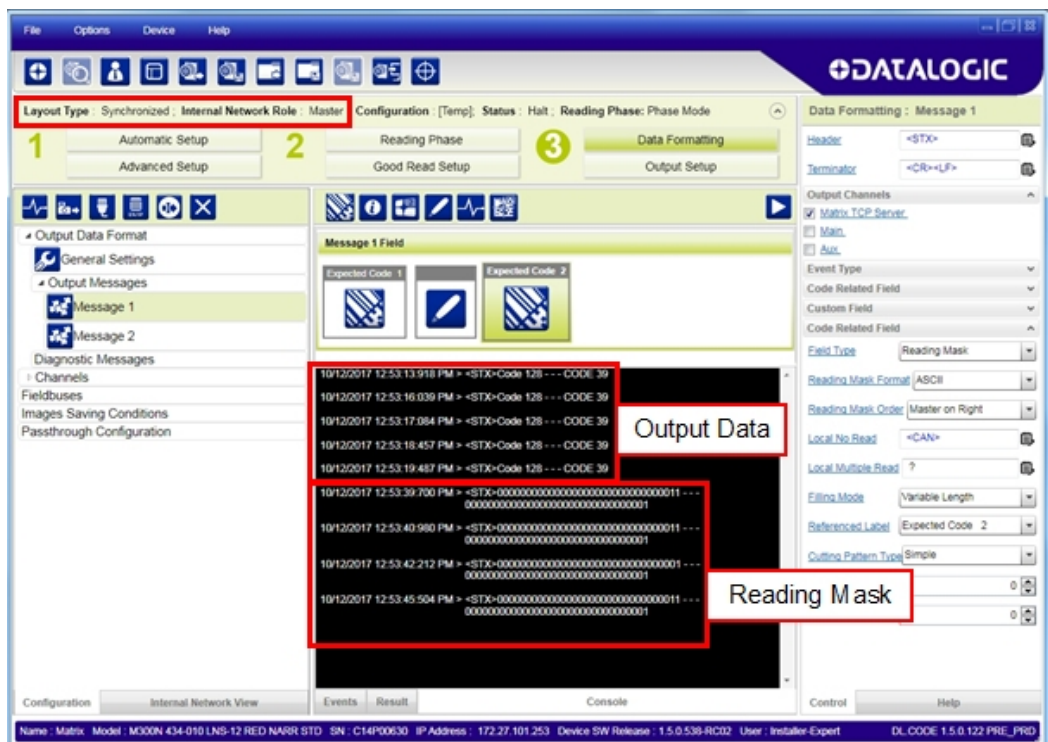

The Reading Mask shows which device reads which Expected Code. The mask is composed of a fixed 32-character string (0=No Read or 1=Read) representing the 32 possible readers in an ID-NET network. By default the Master is the last character in the string (**Master on Right**) but this can be changed. The Slaves are shown adjacent to the Master in order (1 to 31), by default from right to left.

Example: Master + Slave 1 = 00000000000000000000000000000011


The figure above shows that both the Master and Slave 1 are reading Code 128 while only the Master is reading Code 39.

3. After verifying correct functioning of the reading devices, return the Expected Code fields from Reading Mask to Code Content.
4. If you haven't made any other changes you can exit without saving. Otherwise, save the Master device configuration overwriting its previous one, making sure to save **without Clone Master Configuration on Slaves**, otherwise the Slave configurations will be overwritten.

To view the connected Slave configurations:

1. Click on the Internal Network View tab at the bottom of the screen.
2. Open the Master branch by clicking on the arrow to the left of the Master icon.
3. Select any slave. Wait for the configuration to load.
4. Click The Configuration tab at the bottom of the screen.

By selecting the various configuration steps above you can visualize the slave configuration.

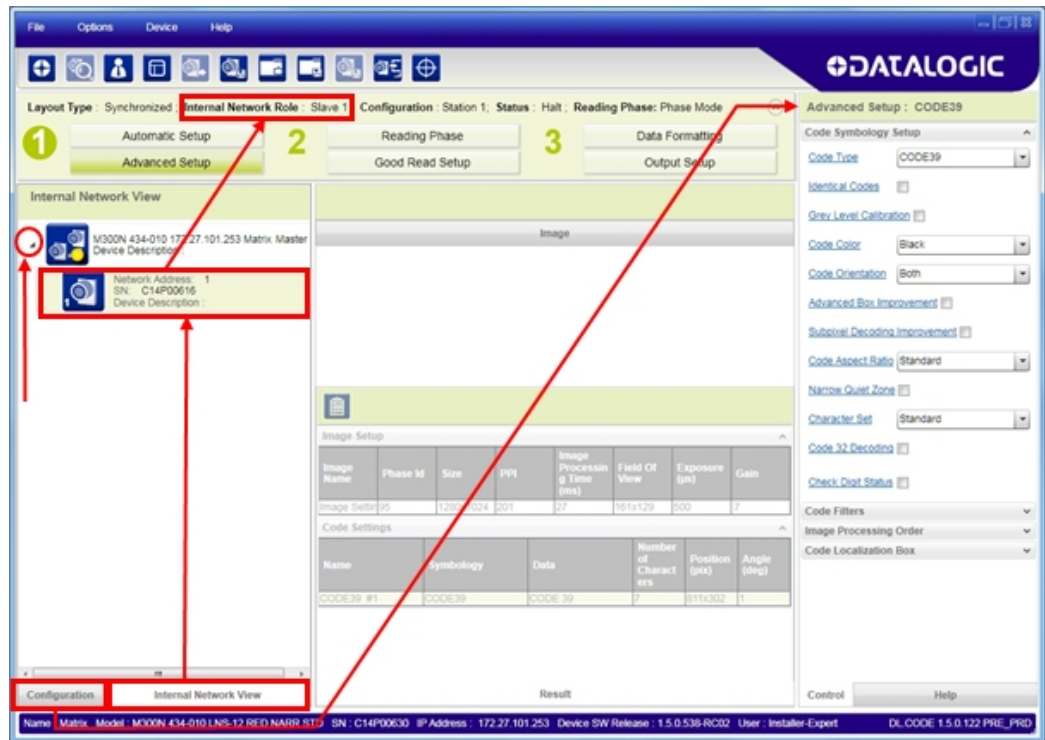

NOTE

You can modify some Slave Synchronized parameters from this view but you cannot save them here.

To save changed slave parameters here, you must click on the Master and Save the configuration overwriting it, making sure to select **Save on Slave Device** but **without Clone Master Configuration on Slaves**, otherwise all the Slave configuration parameters will be overwritten by the Master configuration.

BACKUP AND RESTORE THROUGH DL.CODE

DL.CODE allows Backup and Restore to be performed to/from the configuration PC via file or to an external storage device such as BM100/BM150.

DL.CODE provides complete backup and restore functions (Configuration and Environmental parameters) with the following difference:

For Single Readers or individual ID-NET Slaves:

- Backup and Restore functions provide parameter storage including all configuration jobs present on the reader.

For Master Readers in ID-NET Master/Slave networks:

- Backup and Restore functions provide parameter storage of only the Startup Configuration for the Master and all Slaves present in the network.



CAUTION

For Master/Slave networks any other configurations (jobs) stored in the device memory will not be backed up. Therefore, all jobs other than the startup configuration will be overwritten (erased) upon a restore. It is strongly recommended to save all configurations to backup files.

Slave devices must always be configured with the same network baudrate as the Master device for correct functioning including performing Backup and Restore procedures.

When performing Backup and Restore to/from file, device firmware can be included.


Regardless of the reader network configuration, Backup to and Restore from external device is supported by DL.CODE for all reading devices when connected to:

- CBX + BM100
- QLM-Series Gateways



NOTE


Before executing a Backup to a BM100 backup module make sure the Write Protection switch is set to Unlocked.

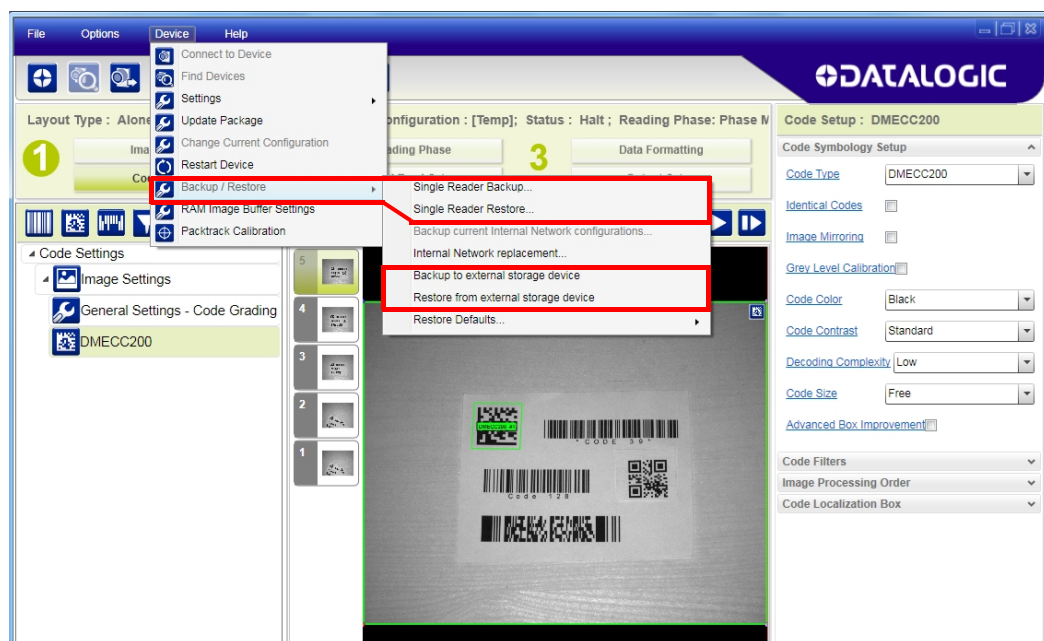

Backup


To perform a **Backup**:

1. From the DL.CODE Device menu, select either **Single Reader Backup** (to file on PC); or **Backup to external storage device**.






For ID-NET network Backup, select the Backup current Internal Network configurations selection.


You will be reminded that configuration in temporary memory will not be saved so you should save the configuration to the reader before performing Backup.

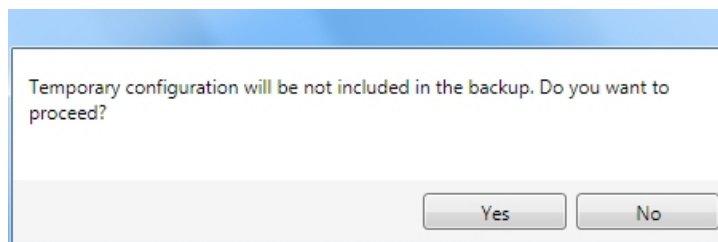

If you are performing a backup to a file you will be asked whether to include the firmware or not.

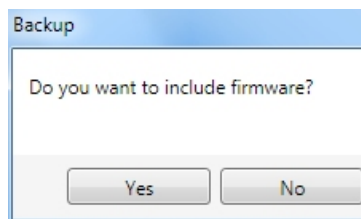

At the end of the backup, DL.CODE shows a message indicating successful completion.

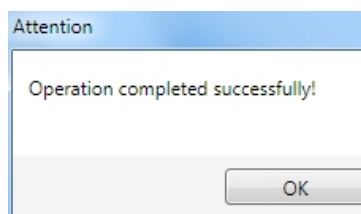

Restore


To perform a **Restore**:

1. From the DL.CODE Device menu, select either **Single Reader Restore** (from file on PC); or **Restore from external storage device**.




NOTE

For ID-NET network Restore, select the Internal Network replacement selection.



If restoring an ID-NET network through the Master, this may take a few minutes.

At the end of the restore, DL.CODE shows a message indicating successful completion.

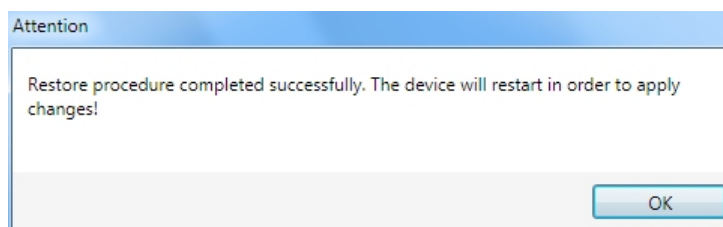

Replacement



CAUTION

The replacement device must be the exact same model as the device it is replacing.

The **Restore** function also provides easy and secure Single Device Replacement:

1. Remove the device to be replaced.
2. Connect the new device (make sure the new device has been previously set to factory default).
3. Run the Restore procedure by selecting either **Single Reader Restore** (from file on PC) or **Restore from external storage device** item (see: Restore procedure).



NOTE

In case of Backup or Restore operation failures, error messages will be displayed in the Monitor Diagnostic page.


RESTORE DEFAULTS

The device parameters are divided into two main classes, Configuration and Environment which are affected differently by the Restore Defaults commands.

- The Configuration parameters are the ones set in the various steps of the configuration process and are specific to each application. When multiple configurations (jobs) are saved on a single device, these parameters can be different from one configuration to the next.
- Environment parameters regard the device Identity and Position in a Network (Ethernet, ID-NET, etc.) and are not influenced by the Default (or any other) Configuration present in memory.

Restore Default Environment


Restore Default Environment returns all Environment parameters to their factory default settings. The default IP address will be restored as well as all the parameters managed in the Device Environment Configuration window.

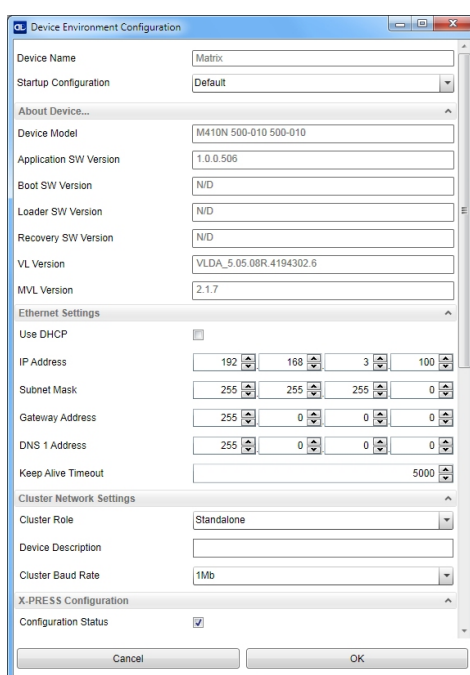

The Factory Default static IP address for all Matrix N Family readers is:

IP Address = 192.168.3.100


Go to the Device menu >Backup/Restore > Restore Defaults > **Restore Default Startup Configuration**.

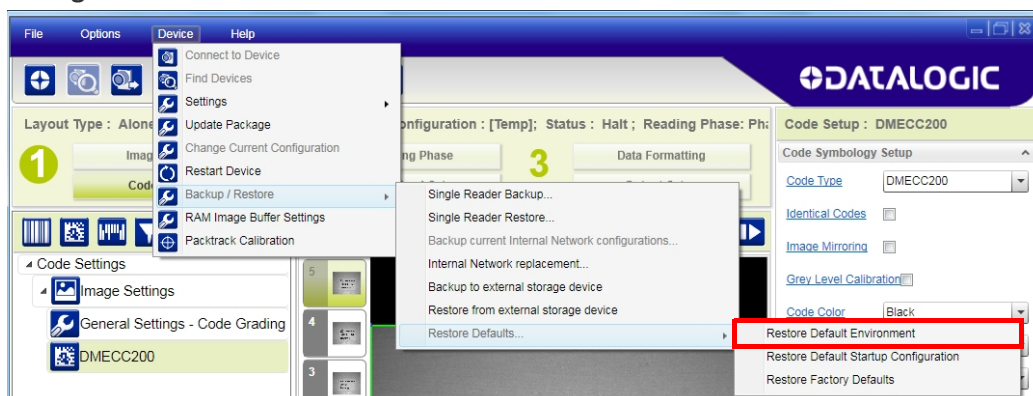


Any previously saved configurations on the device will remain in memory, but the Default configuration is set as the startup configuration.

Restore Default Startup Configuration

The Default configuration is always present on the reader and in fact it is not modifiable and cannot be deleted. It can always be restored by simply selecting it from the Open from Device configuration list.

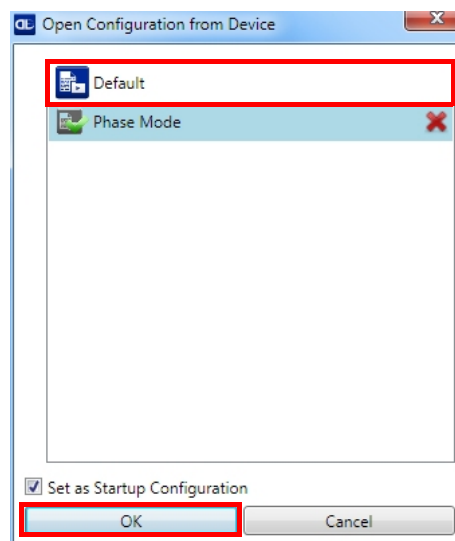


The same action can be performed from the Device menu > Backup/Restore > Restore Defaults > **Restore Default Startup Configuration**. The Default Configuration will be set to run at startup and the reader will be reset.

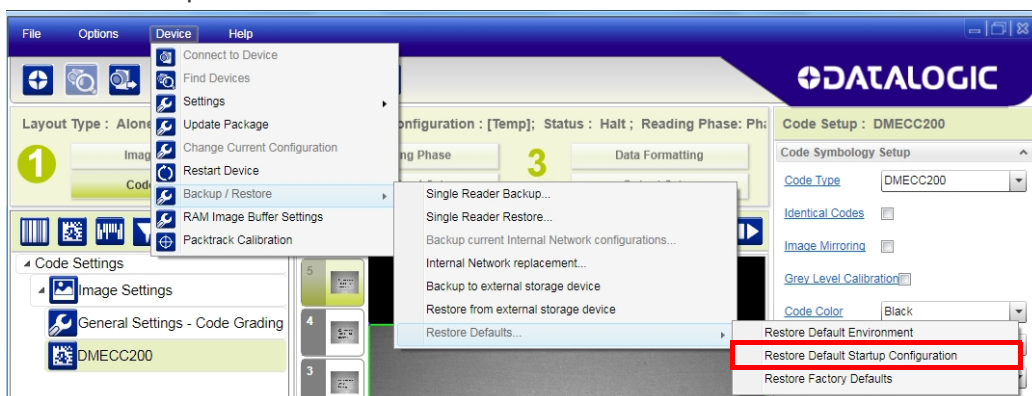

Any previously saved configurations on the device will remain in memory, but the Default configuration is set as the startup configuration.

Restore Factory Defaults

In order to return a device to its absolute Factory default parameters (for example device replacement) it is necessary to use the **Restore Factory Defaults** command. You will be prompted to confirm.

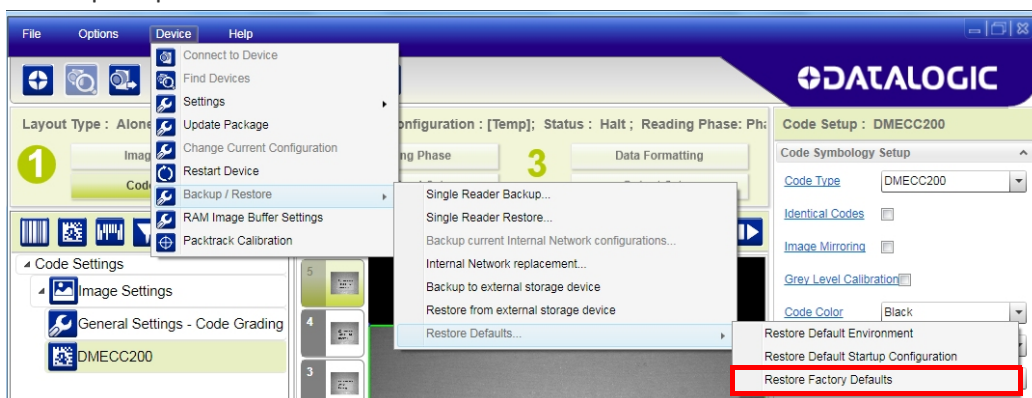

All Environment parameters will be restored to Factory default values and **any existing configurations stored on the device will be erased**. The device will be reset and therefore start in run mode with the factory default configuration.

DIAGNOSTIC ALARMS

By using the **DL.CODE Monitor** functions from the File menu (or Monitor icon), you can get information about diagnostic alarms. Any alarms will show up as warning lights on the alarm panel.

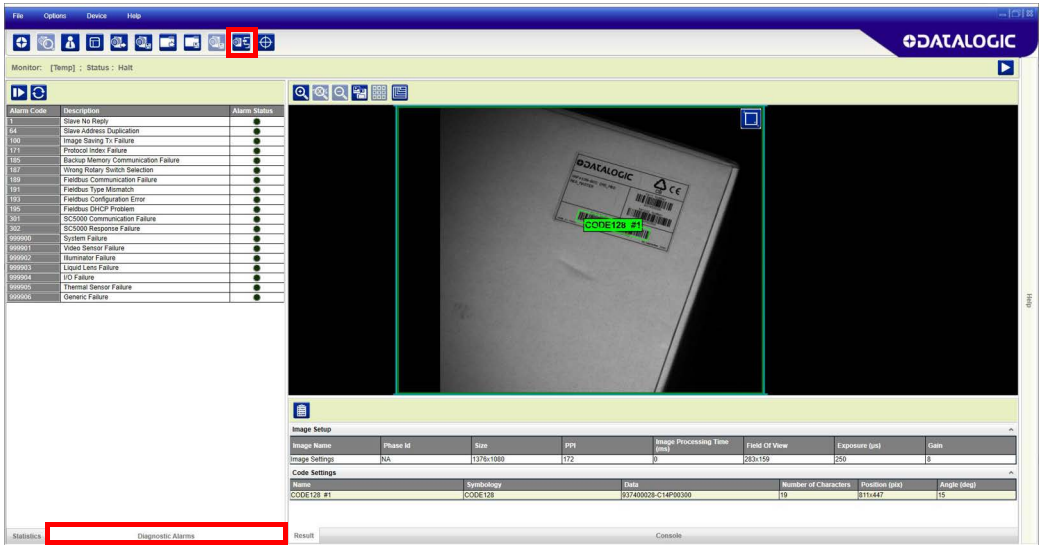


Figure 101 - Diagnostic Alarms

STATISTICS

Statistics on the reading performance can be viewed by enabling the Statistics panel from the **DL.CODE Monitor** item selected from the File menu (or Monitor icon).


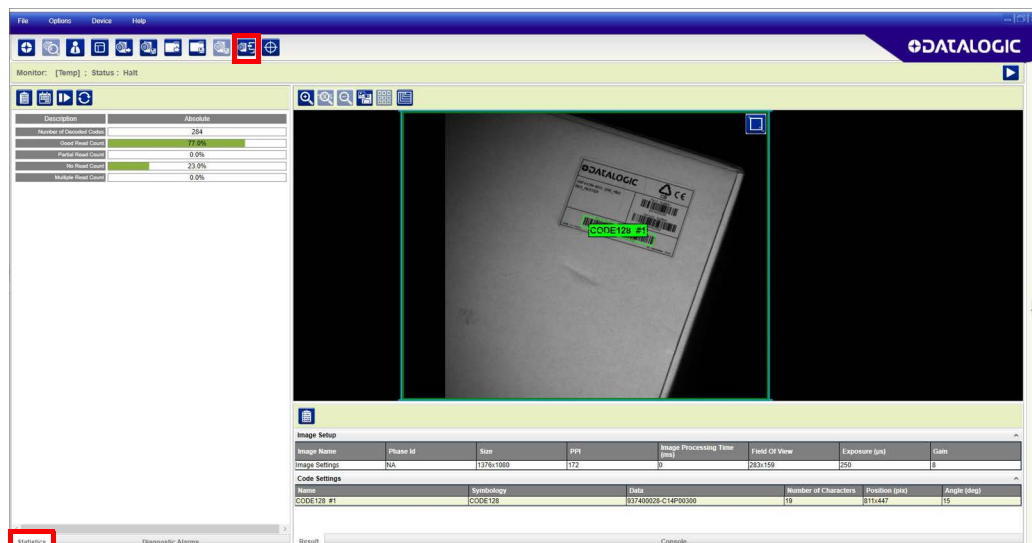


Figure 102 - Reading Statistics

The enabled Statistical Counters can be selected from the Device>Settings>Configuration Settings menu.

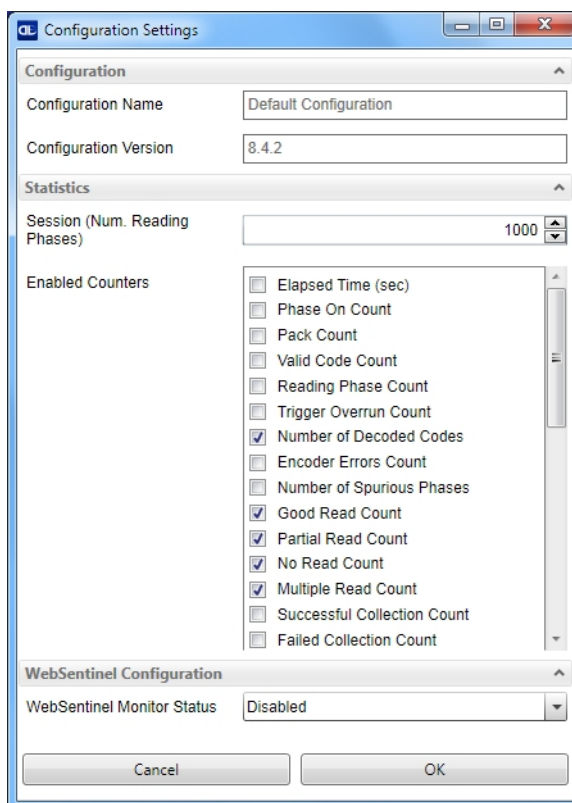

BM150 DISPLAY MODULE CONFIGURATION AND MESSAGES

The BM150 display module is an optional accessory for the CBX500 connection box. Although independent, it is an extension of the reader's HMI Interface, so through its keypad it provides execution of HMI features such as Test, Focus/Locate, Calibration and Code Setting. It also displays device status information, reading results, diagnostic and network messages. Since it connects through the BM100 backup memory module, it provides access to Backup and Restore features through its Extended menu.

Configuration Through DL.CODE


BM150 must be detected through the BM100 backup memory module at power-up/reset and this is done through a command setting in DL.CODE. By connecting the reader to DL.CODE the following parameters can be managed.

In the Device>Settings>Settings>Maintenance window:

- **Enable BM100 Detection**
Checked (Enabled): the BM100 backup memory module will be detected on power-up/reset; therefore the BM150 display module (if present), will also be enabled.
Unchecked (Disabled): the BM100 backup memory module will **not** be detected on power-up/reset; therefore the BM150 display module (if present), will also **not** be enabled.
- **BM150 Display Layout (Master Only)**
Reading Mask Only: the Reading Mask screen is sent to the BM150 display.
Reading Mask/Device State: the Reading Mask/Device State screen is sent to the BM150 display.

Accessing the HMI Interface Through Keypad and Display Menu

Through its keypad and display, the BM150 provides a remote extension of the reader's HMI Interface. The HMI default menu items can be accessed as well as the View menu for Master devices and the Extended menu for Backup and Restore functions.

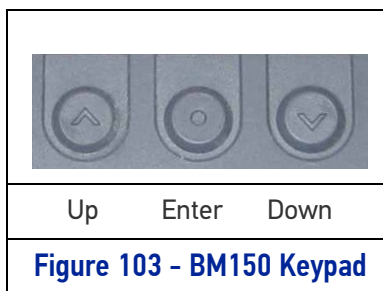

To enter the Main Menu press the **Up** and **Down** buttons simultaneously. The menu structure is shown below.

Main Menu

- **[Exit]** (exits HMI Interface menu)
- **Test Mode** (performs Test mode)
- **Focus/Locate** (performs Focus function: turns on LED pointer)
- **Calibration** (performs Setup function)
- **Code Setting** (performs Learn function)
- **Match Code Tra...** (Training: allows to read a code and store it as the Match code)

View Menu (Master Only)

- **[Exit]** (returns to Main menu)
- **Standard** (displays the Standard Reading Results screen during run mode)
- **Reading Mask** (displays the Reading Mask or Reading Mask/Device State screen during run mode) depends on the selection in DL.CODE see par. Configuration Through DL.CODE.
- **Network State** (displays the Network State screen during run mode)

Extended Menu

- **[Exit]** (returns to Main menu)
- **Backup** (performs Backup - uninterruptible)
- **Restore** (performs Restore - uninterruptible)
- **Erase** (erases the backup configuration in external memory - uninterruptible)

To move through the list press and release the **Up** or **Down** key.

To select an item or enter a submenu, press and release the **Enter** key. After executing an HMI function the display shows a result message and then automatically exits from the menu structure.

To exit a menu manually, press and release the **Enter** key at the [Exit] item or press the **Up** and **Down** buttons simultaneously.

To exit from a running HMI function, press the **Up** and **Down** buttons simultaneously. These functions will also exit upon their configured timeout.

**NOTE**

When the HMI Interface is entered from either the Local Device (reader) or Remote Device (BM150), the key(s) on the other device are disabled.

**NOTE**

When the reader is connected to DL.CODE, access to the BM150 HMI Interface is disabled.

**NOTE**

The "Reset Reader to Factory Default Environment" function of the HMI Interface is only available on the local device (reader), and not on the BM150.

Display Messages

The following examples of Remote Display messages are given to help interpret the information reported. The content of these messages depends on the connected reader.

Welcome Message

```

M M M M M M M M M M M M M
K K K V V V V V V V V V V   R R R   N N N
S N   D D D D D D D D D D
E T H   A A A   A A A   A A A   A A A

```

M = scanner model

K = software – STD=Standard, SS =Special

V = software version

R = Device Network Type – MUL=Multidata, SYN=Synchronized, ALN=Alone

N = Device Network Setting – M00=ID-NET Network Master, Sxx= ID-NET Network Slave address, Null string= Alone (no network)

D = device serial number

A = Ethernet IP Address

Test Mode Results

```

A A A %   Z Z Z Z Z Z Z Z Z Z Z Z Z Z Z Z Z
Z Z Z Z Z Z Z Z Z Z Z Z Z Z Z Z Z Z Z Z Z
Z Z Z Z Z Z Z Z Z Z Z Z Z Z Z Z Z Z Z Z Z

```

A = reading percentage from 000 to 100%.

Z = code content.

Calibration (Setup) Results

```

E x p = X X X X
G a i n = G G
C a l i b r a t i o n
O K ( p e r m a n e n t )

```

X = exposure value (in μ s).

G = gain value

Code Setting (Learn) Results

```

X X X X X X X X X
C o d e   S e t t i n g
O K ( p e r m a n e n t )

```

X = recognized code symbology.

Diagnostic Alarms

Diagnostic error messages are sent to the BM150 display as numeric Alarm Codes (even if Failure Messages are selected for data transmission the numeric Alarm Code is sent to the display).

```

A l e r t      :
F a i l u r e      # X X X

R R R      N N N

```

X = numeric Alarm Code (see below for the list of Alarm Codes)

R = Device Network Type – MUL=Multidata, SYN=Synchronized, ALN=Alone

N = Device Network Setting – M00=ID-NET Network Master, Sxx= ID-NET Network Slave address, Null string= Alone (no network)

Alarm Code	Description
1	Slave No Reply
64	Slave Address Duplication
171	Protocol Index Failure
185	Backup Memory Communication Failure
187	Wrong Rotary Switch Selection
189	Fieldbus Communication Failure
191	Fieldbus Type Mismatch
193	Fieldbus Configuration Error
195	Fieldbus DHCP Problem
201	No XRF Slave(s) Detected

Slave Node Alarms (Master only)

```

A l e r t      : I D - N E T
N o d e # X X      M i s s i n g

R R R      M 0 0

```

X = slave node number (1-31)

R = Device Network Type – MUL=Multidata, SYN=Synchronized

Network State (Master only)

```

0      N e t w o r k      1 5
M S S S S S S S S S S S S S S
1 6      N e t w o r k      3 1
S S S S S S S S S S S S S S S

```

M = Master diagnostic condition; S = Slave diagnostic condition:

* = scanner OK

- =scanner not detected at startup

? =scanner detected at startup but not responding to diagnostic polling

! = scanner diagnostic error

Standard Reading Results

A	A	A	A	A	A	A	A	A	A	A	A	A	A	A	A	A	A	A	A
X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Y	Y	C	o	d	e	s													

A = reading result – Good Read, Partial Read, Multiple Read

X = code content

Y = number of codes read

Reading Mask Only (Master Only)

X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
G	Y	Y	Y	%	N	Y	Y	Y	%	M	Y	Y	Y	%	P	Y	Y	Y	%
S	S	S	S	S	S	S	S	S	S	S	S	S	S	S	S	S	S	S	S
T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T

X = code content (or "No Read" or "Multiple Read")

Y = Good Read, No Read, Multiple Read and Partial Read counters on the last 100 codes read (%)

S = Reading Mask for Stand Alone or Master plus Slave readers 1 - 15

(0 = No Read, 1 = Good Read, M = Multiple Read)

T = Reading Mask for Slave readers 16 - 31

(0 = No Read, 1 = Good Read, M = Multiple Read)

Reading Mask/Device State (Master Only)

X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.	.	.
P	=	Y	Y	Y	Y	Y	Y	Y		G	R	=	Z	Z	Z		Z	Z	%
S	S	S	S	S	S	S	S	S	S	S	S	S	S	S	S	S			
U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U	U			

X = Recognized code label data (or "No Read" or "Multiple Read")

Y = Phase Counter (range: 0000000 to 9999999)

Z = Good Read or Multiple Read counters (%)

S = Reading Mask for Stand Alone or Master plus Slave readers 1 - 15

(0 = No Read, 1 = Good Read, M = Multiple Read)

U = Diagnostic condition for Stand Alone or Master plus Slave readers 1 - 15:

* = reader OK

- = reader not detected at startup

? = reader detected at startup but not responding to diagnostic polling

! = reader diagnostic error

BM150 Backup and Restore Procedure

The Backup and Restore functions are valid for any application layout type (point-to-point, network, etc.) using CBX500 connection boxes through the BM100 Backup module (required accessory for BM150 installation).

The Backup and Restore functions are managed through the BM150 display and keypad and therefore are disabled at the BM100 Backup/Restore button.

If it ever becomes necessary to replace the reading device, it can be quickly configured through the restore procedure.

BM150 provides complete backup and restore functions (Configuration and Environmental parameters) with the following difference:

For Single Readers or individual ID-NET Slaves:

- Backup and Restore functions provide parameter storage including all configuration jobs present on the reader.

For Master Readers in ID-NET Master/Slave networks:

- Backup and Restore functions provide parameter storage of only the Startup Configuration for the Master and all Slaves present in the network.



For Master/Slave networks any other configurations (jobs) stored in the device memory will not be backed up. Therefore upon a restore, all jobs other than the startup configuration will be overwritten (erased). It is strongly recommended to save all configurations to backup files.

The Slaves must always be configured with the same network baudrate as the Master for correct functioning including performing Backup and Restore procedures.

Backup and Restore functions cannot be interrupted once started.

To perform *Backup*

1. Make sure the Write Protection switch on the BM100 is unlocked.
2. Select the **Backup** item from the Extended menu and press the Enter key.
3. When the procedure is complete a message appears on the display showing the results (**Backup OK 1 File Saved** or an error message).
4. Set the Write Protection switch to locked.

To perform *Restore*

1. Select the **Restore** item from the Extended menu and press the Enter key.
2. When the procedure is complete a message appears on the display showing the results (**Restore OK 1 File Restored** or an error message).

CHAPTER 8

ILLUMINATORS

STANDARD ILLUMINATORS FOR SOFTWARE ADJUSTABLE FOCUS MODELS (LIQUID LENS)

14 LEDs Illuminator



14 LEDs MODELS AND LED CHAIN CONFIGURATION	
LIGHTS ON	LEDs COLOR
All Chains	White, Red, Blue
Central Chain	White, Red, Blue
Top/Bottom Chain	White, Red, Blue



Figure 104 - LED chains for 14 LEDs models

36 LEDs Illuminator



36 LEDs MODELS AND LED CHAIN CONFIGURATION

LIGHTS ON	LEDs COLOR
All Chains	White, Red, Blue
Top Left	White, Red, Blue
Top Right	White, Red, Blue
Left	White, Red, Blue
Right	White, Red, Blue
Bottom Left	White, Red, Blue
Bottom Right	White, Red, Blue

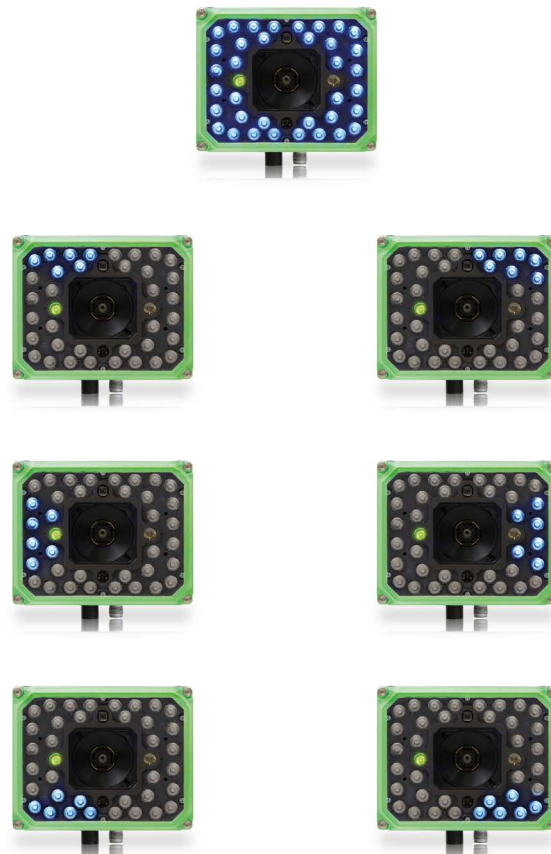


Figure 105 - LED chains for 36 LEDs models

STANDARD ILLUMINATORS FOR MANUAL ADJUSTABLE FOCUS MODELS (C-MOUNT)

36 LEDs Illuminator



36 LEDs MODELS AND LED CHAIN CONFIGURATION

LIGHTS ON	LEDs COLOR
All Chains	White, Red, Blue
Top Left	White, Red, Blue
Top Right	White, Red, Blue
Left	White, Red, Blue
Right	White, Red, Blue
Bottom Left	White, Red, Blue
Bottom Right	White, Red, Blue



Figure 106 - LED chains for 36 LEDs models

POLARIZER





Figure 107 - Standard and polarizing cover for 14 (left) and 36 (right) LEDs models


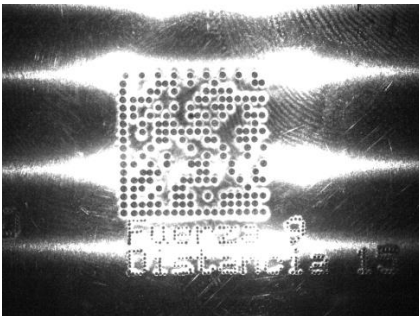
Matrix 320 also comes with a polarizing cover. This is the ideal solution to reduce hot spots on reflective surface applications, such as:



- DPM on reflective metal surfaces
- DPM on non-metal reflecting surfaces
- DPM on electronic circuit boards
- Glossy labels
- Labels under plastic films

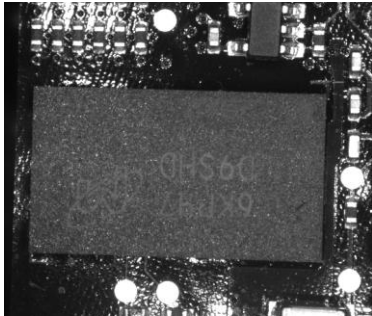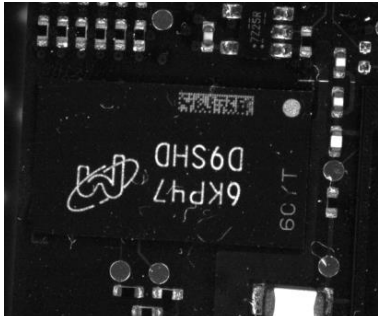

By removing LED reflection, Matrix 320 with polarized illuminators features extreme mounting flexibility, as it can be mounted 90° to the target surface. This in turn avoids code distortion and allows more reliable code grading.

The following examples show the difference between codes read with and without polarizing filters:

DPM: Data Matrix on electronic components	
Non polarized	Polarized
	

DPM: Data Matrix and QR codes on metal surfaces	
Non polarized	Polarized
	
	
	

Bar Code under plastic film	
Non polarized	Polarized
	

Bar Code on glossy surfaces	
Non polarized	Polarized
	



NOTE

If no polarized illuminator is used, the user may avoid LED reflections by turning on one or more sectors according to the code position in the reader’s Field of View.

DIRECT PART MARKING APPLICATIONS

For **Data Matrix** family codes the **Decoding Complexity** parameter is available when Processing Mode is set to Standard and selects the decoding algorithm based on the printing/marketing technique used to create the symbol and on the overall printing/marketing quality.

The possible selections progress from Low to Very High where Low can improve decoding time for good print/mark quality and/or relatively normal size codes. This is the default setting. Very High can improve the decode rate for low print/mark quality and/or small size codes. This algorithm is much more aggressive but in general it may have longer decoding times than the lower complexity algorithms. **To minimize decoding time it is better to select the lowest value that still guarantees good decoding.**



Washed out and Axial Distortion



Dot Peening On Scratched Surface




Low Contrast Problem



Background Problems




Marked On Curved Shiny Surface

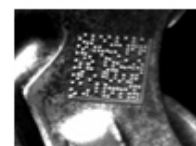

Axial distortion



Half moon effects

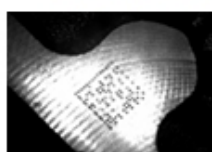

Shiny surface, noisy background



















Low contrast, noisy background

For **QR** codes the **Decoding Method** parameter allows the Dot Peen Decoding algorithm to be selected, which improves the decode rate for low quality Direct Part Mark codes and in general for Direct Part Mark codes with dot peening type module shapes.

MATRIX 320 RECOMMENDED ILLUMINATION

In the following table these macro-cases are listed, each of them highlighting the most suitable Matrix 320 lighting system used to resolve the application with a Standard cover (STD.) with white/blue/red illuminator, a polarizer (PLZ.) with white/blue/red illuminator, and the LT-51x external red illuminator.

Application Characteristics	STD. cover with white ill.	STD. cover with blue ill.	STD. cover with red ill.	PLZ. cover with white ill.	PLZ. cover with blue ill.	PLZ. cover with red ill.	LT-51x ext. red ill.
Printed codes on opaque paper or labels having a flat surface							
Laser Etching or Ink Jet code marking on an opaque, flat surface having no evident machining flaws							
Code marking on an opaque, rough surface							
Code marking on a flat surface with evident machining flaws produced by machining tools							
Laser Etching or Dot Peening code marking on a flat, highly reflective surface							
Code marking on a curved background							
Red-printed code on white background							
Mixed color codes/background							
Havana background on cardboard							
Code under plastic film or glossy surface with 0 skew							

Legend:



Suggested



Compatible



Not recommended





Color Contrast Considerations




Matrix 320 models are available in White, Blue, and Red Light versions to help resolve applications that have colored codes and/or backgrounds.

The choice between the white, blue or red illuminator should be done in order to maximize the contrast between the code and its background; in general, a code illuminated with a light of the same color becomes brighter, on the other hand when illuminated with an opposite color it appears darker (see the Chromatic Circle Chart).

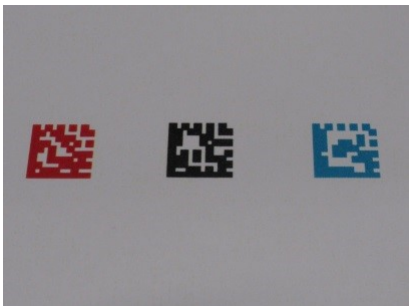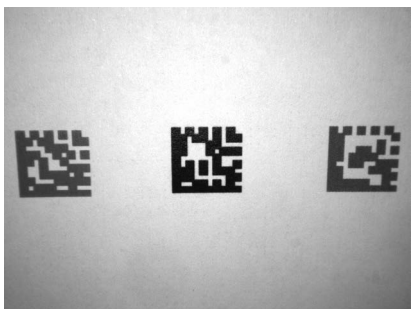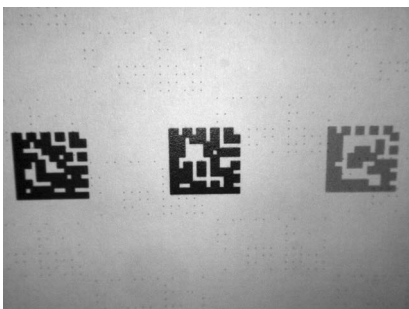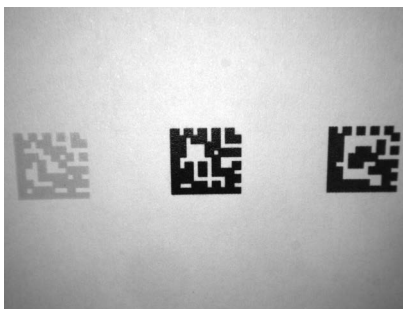

Consequently during the reading phase the lighting system changes the chromatic rendering of the target according to the color of the illuminator, modifying the contrast between target and background. See the examples below.

Color Photo of Codes				
				
Matrix 320 White Illuminator	Matrix 320 Blue Illuminator		Matrix 320 Red Illuminator	
				
Good contrast on all codes	Red code (left) has good contrast	Blue code (right) has low contrast	Red code (left) has very low contrast	Blue code (right) has good contrast

Illumination Color	White	Blue	Red
Red-printed code on light background White-printed code on red background	OK		
Red-printed code on dark background Black-printed code on red background	OK		
Blue-printed code on light background White-printed code on blue background	OK		
Blue-printed code on dark background Black-printed code on blue background	OK		

Legend:

Suggested Lighting System



Compatible Lighting System



Lighting System Not Recommended



The minimum and maximum DPM application distance is limited by both the lighting system working distance and the reader focus distance.

For example, the minimum application distance is limited by the reader minimum focus distance (35 mm for liquid lens models). The maximum application distance is limited by the smaller of the illuminator maximum working distance or the lens maximum focus distance. See also “Global FOV Diagrams” on page 124.

CHAPTER 9

MAINTENANCE

CLEANING

Clean the lens cover periodically for continued correct operation of the reader. See General View.

Dust, dirt, etc. on the lens cover may alter the reading performance.

Repeat the operation frequently in particularly dirty environments.

Use soft material and alcohol to clean the lens cover and avoid any abrasive substances. In particular, wipe it clean using a soft cloth and isopropyl alcohol.

CHAPTER 10

TROUBLESHOOTING

GENERAL GUIDELINES

- When wiring the device, pay careful attention to the signal name (acronym) on the CBX100/500 spring clamp connectors ([Chapter 4, CBX Connection Box Pinout](#)). If you are connecting directly to the Matrix 320 M12 17-pin connector, pay attention to the pin number of the signals ([Appendix A](#),).
- If you need information about a certain reader parameter you can refer to the DL.CODE help on line. Connect the device and click on the link to the parameter you're interested in.
- If you're unable to fix the problem and you're going to contact your local Datalogic office or Datalogic Partner or ARC, we suggest providing (if possible): Application Program version, Parameter Configuration file, Serial Number and Order Number of your reader. You can get most of this information while DL.CODE is connected to the reader.

Troubleshooting Guide	
Problem	Suggestion
DL.CODE Installation: Autorun or Start.hta doesn't run	Check Windows settings to see if Autorun is disabled. Associate the file type .hta with the Microsoft HTML Application host mshta.exe in Windows\System32.
Power ON: the "POWER" LED is not lit.	Is power connected? If using a power adapter (like PG6000), is it connected to wall outlet? If using rail power, does rail have power? If using CBX, does it have power (check switch and LED)? Check if you are referring to the M12 17-pin connector or to the CBX spring clamp connectors. Measure Voltage either at pin 1 and pin 2 (for 17-pin connector) or at spring clamp Vdc and GND (for CBX).

Troubleshooting Guide	
Problem	Suggestion
One Shot or Phase Mode using the Input 1 (External Trigger) or Input 2: the "TRIGGER" LED is not blinking while the External Trigger is switching.	Check if you are referring to the 17-pin connector or to the CBX spring clamp connectors. Is the sensor connected to Input 1 or Input 2? Is power supplied to the photo sensor? For NPN configuration, is power supplied to one of the two I1 or I2 signals (A or B)? For PNP configuration, is one of the two I1 or I2 signals grounded (A or B)? Are the photo sensor LEDS (if any) working correctly? Is the sensor/reflector system aligned (if present)? On the Reading Phase step check the Input 1 or Input 2 <i>Debounce Time</i> parameter setting. On the Reading Phase step check the settings for <i>Acquisition Trigger</i> , <i>Reading Phase-ON</i> , and <i>Reading Phase-OFF</i> parameters.
One Shot or Phase Mode using serial trigger source: the "TRIGGER" LED is not blinking.	On the Reading Phase step check the settings for <i>Acquisition Trigger</i> , <i>Reading Phase-ON</i> , and <i>Reading Phase-OFF</i> parameters. Are the COM port parameters (<i>Baud Rate</i> , <i>Parity</i> , <i>Data Bits</i> , <i>Stop Bits</i>) correctly assigned? On the Reading Phase step check the settings of <i>Acquisition Trigger String</i> , <i>Reading Phase-ON String</i> , and <i>Reading Phase-OFF String</i> parameters. Is the serial trigger source correctly connected?
Phase Mode: the "TRIGGER" LED is correctly blinking but no image is displayed in the DL.CODE window.	Is the Phase frequency lower than the maximum frame rate?
Continuous Mode: the "TRIGGER" LED is not blinking.	Verify the correct software configuration settings.
Any Operating Mode: the "TRIGGER" LED is correctly blinking but no result is transmitted by the reader at the end of the reading phase collection.	Check the Code Collection parameters on the Reading Phase step and the Data Formatting parameters on the Data Formatting step.
Image not clear:	verify the Focus procedure
Image focused but not decoded:	verify the Calibrate Image Density procedure.

Troubleshooting Guide	
Problem	Suggestion
Reading: the reader always transmits the <i>No Read Message</i>	Run the Rapid Configuration procedure in Chapter 1, Rapid Configuration . Position the reader as described in " Mounting And Positioning Matrix 320 " on page 66 and through DL.CODE: Tune the Acquisition Delay on Trigger, if the moving code is out of the reader field of view; Set the Continuous Operating Mode if no external trigger source is available; Tune the Image Settings to improve the code image quality; Check the parameter settings in the Advanced Setup step: 2D Codes, 1D Codes, and Postal Codes; View the full resolution code image to check the printing or marking quality.
Communication: reader is not transmitting anything to the host.	Is the serial cable wiring correct? If using CBX, be sure the RS422 termination switch is OFF. Are the host serial port settings the same as the reader serial port settings? In DL.CODE Device menu > Settings > Settings > LED Configuration, the COM LED Function can be configured to indicate Main Serial Port TX or Main Serial Port RX.
Communication: data transferred to the host are incorrect, corrupted or incomplete.	Are the host serial port settings the same as the reader serial port settings? In the DL.CODE Data Formatting step check the settings of Header and Terminator String parameters. In the DL.CODE Data Formatting step, check the various Message Field parameter settings.
Configuration: cannot access environment parameters in DL.CODE (Device>Settings>Settings menu item is gray)	Are you using the Installer - Expert User level? If not change it in the Options>Change User menu.
How do I obtain my reader Serial Number?	The reader Serial Number consists of 9 characters: one letter, 2 numbers, another letter followed by 5 numbers. The reader Serial Number is printed on a label that is affixed to the case or connector block of the reader. The Serial Number is also visible from the DL.CODE Device List Area.
How do I obtain my reader Order Number?	The reader Order Number consists of 9 numbers. The reader Order Number can be obtained by comparing the Device Model (in DL.CODE Device Menu > Settings > Settings > About Device) with the product models page on the Datalogic website.

APPENDIX A

TECHNICAL FEATURES

ELECTRICAL FEATURES		
Power	Matrix 320 with Software Adjustable Focus	Matrix 320 with Manual Adjustable Focus
Supply Voltage	24 Vdc ± 10%	
Peak Supply Current	1 A max.	Without illuminator: 0.25 A max. With illuminator ^a : 0.85 A max.
Average Supply Current	14 LEDs model: 0.42 A 36 LEDs model: 0.62 A	Without illuminator: 0.15 A With illuminator: 0.52 A
Communication Interfaces		
Main: RS232, RS422 Full-duplex	2400 to 115200 bit/s	
Auxiliary: RS232	2400 to 115200 bit/s	
ID-NET		
Ethernet (Built-in) supported application protocols	10/100/1000 Mbit/s TCP/IP, UDP, FTP, EtherNet/IP, Modbus TCP, PROFINET-IO	
Inputs		
Input 1(External Trigger) and Input 2	Opto-coupled and polarity insensitive	
Max. Voltage	30 Vdc	
Max. Input Current	10 mA	
Outputs ^b		
Output 1, 2 and 3	NPN, PNP, or PP short circuit protected;	
V _{OUT} (I _{LOAD} = 0 mA) Max.	24 Vdc	
V _{OUT} (I _{LOAD} = 100 mA) Max.	3 Vdc	
I _{LOAD} Max.	100 mA	

- a. Peak supply current with white illuminator. Other available illuminators have the following peak supply current:
- Blue illuminator: 0.80 A
 - IR illuminator: 0.55 A
 - UV illuminator: 0.25 A
- b. when connected to the CBX connection boxes the electrical features for Output 1 and 2 become the following:
- Opto-isolated; V_{CE} = 30 Vdc max.; I_{CE} = 40 mA continuous max.; 130 mA pulsed max.;
- V_{CE saturation} = 1 Vdc max. @ 10 mA; P_D = 90 mW Max. @ 50 °C ambient temp.

OPTICAL FEATURES		
	Matrix 320 with Software Adjustable Focus	Matrix 320 with Manual Adjustable Focus
Image Sensor	CMOS	
Image Format	2.0 Mpixel (1920 x 1080)	
Frame Rate	60 frames/s	
Pitch	± 35°	
Tilt	0° - 360°	
LED Safety	according to EN 62471	
Lenses	Liquid Lenses	C-Mount Lenses (4mm, 6mm, 8mm, 12mm, 16mm, 25mm, 35mm)
Lighting System	Internal illuminator (14 or 36 LEDs)	External or internal illuminator (36 LEDs)
Illumination	Liquid Lens 6 mm: Blue and Red internal illuminator. Liquid Lens 9 mm and 16 mm: Blue, Red, and White internal illuminator.	Internal illuminators with blue, white, IR, UV lights
Aperture Angle	Liquid Lens 6 mm: 48° Liquid Lens 9 mm: 34° Liquid Lens 16 mm: 20°	73°, 51°, 38°, 25°, 19°, 12°, 9°
Reading Range	min. 0 mm, max. 2500 mm Refer to "FOV Calculation" on page 123	
Aiming System	Laser cross red projection aiming	
Polarizing Filter	Polarizing cover accessory	

PHYSICAL FEATURES				
	Matrix 320 with Software Adjustable Focus		Matrix 320 with Manual Adjustable Focus	
	Matrix 320 with 14 LEDs illuminator	Matrix 320 with 36 LEDs illuminator	Matrix 320 without illuminator	Matrix 320 with illuminator
Dimensions (with lens cover) Connector at 0°	H x W x L 109 x 54 x 56 mm (4.3 x 2.1 x 2.2 in)	H x W x L 115.5 x 126 x 70 mm (4.6 x 4.9 x 2.8 in)	H x W x L 108.7 x 54 x 54.3 mm (4.3 x 2.1 x 2.14 in)	H x W x L 115.5 x 126 x 124.8 mm (4.6 x 4.9 x 4.91 in)
Connector at 90°	88 x 54 x 76 mm (3.5 x 2.1 x 2.1 in)	101 x 126 x 91 mm (4.6 x 4.9 x 2.8 in)	88 x 54 x 54.3 mm (3.5 x 2.1 x 2.14 in)	101 x 126 x 138.2 mm (4.6 x 4.9 x 5.44 in)
Weight	with lens and internal illuminator		C-Mount base only	Base+Adapter+Illuminator
	380 g (13.4 oz)	640 g (22.6 oz)	300 g (10.6 oz)	900 g (31.7 oz)
Material	Aluminum			

ENVIRONMENTAL FEATURES		
	Matrix 320 with Software Adjustable Focus	Matrix 320 with Manual Adjustable Focus
Operating Temperature ^a	0 to 45 °C (32 to 113 °F)	-10 to 50 °C (14 to 122 °F) ^b
Storage Temperature	-20 to 70 °C (-4 to 158 °F)	
Max. Humidity	90% non condensing	
Vibration Resistance EN 60068-2-6	14 mm @ 2 to 10 Hz; 1.5 mm @ 13 to 55 Hz; 2 g @ 70 to 500 Hz; 2 hours on each axis	
Bump Resistance EN 60068-2-29	30g; 6 ms; 5000 shocks on each axis	
Shock Resistance EN 60068-2-27	30g; 11 ms; 3 shocks on each axis	
Protection Class ^c EN 60529	IP65 and IP67	

- a. high ambient temperature applications should use metal mounting bracket and the heat sink provided in the package for heat dissipation.
- b. operating temperature is 0 to 50 °C (32 to 122 °F) for model 938100071.
- c. when correctly connected to IP67 cables with seals and the Lens Cover is correctly mounted.

CODE QUALITY METRICS	
Standard	Supported Symbolologies
ISO/IEC 16022 (always enabled)	Data Matrix ECC 200
ISO/IEC 18004 (always enabled)	QR Code
AIM DPM	Data Matrix ECC 200, QR Code
ISO/IEC 15416	Code 128, Code 39, Interleaved 2 of 5, Codabar, Code 93, EAN-8-13, UPC-A/E

USER INTERFACE	
LED Indicators	Power, Ready, Good; Trigger; Com, Status, (Ethernet Network); Good Read (Green Spot)
Keypad Button	Configurable via DL.CODE

SOFTWARE FEATURES

Readable Code Symbologies

1D and Stacked	2D	Postal
PDF417 Standard and Micro PDF417 Code 128 (GS1-128) Code 39 (Standard and Full ASCII) Code 32 MSI Standard 2 of 5 Matrix 2 of 5 Interleaved 2 of 5 Codabar Code 93 Pharmacode EAN-8/13 - UPC-A/E (including Addon 2 and Addon 5) GS1 DataBar Family Composite Symbologies	Data Matrix ECC 200 (Standard, GS1 and Direct Marking) QR Code (Standard and Direct Marking) Micro QR Code MAXICODE Aztec Code DotCode	Australia Post Royal Mail 4 State Customer Kix Code Japan Post PLANET POSTNET POSTNET (+BB) Intelligent Mail Swedish Post
Operating Mode	Continuous, One Shot, Phase Mode, PackTrack	
Configuration Methods	X-PRESS Human Machine Interface DL.CODE Windows-based SW (Ethernet or Serial interface) Serial Host Mode Programming sequences	
Parameter Storage	Permanent memory (Flash)	

APPENDIX B

ALTERNATIVE CONNECTIONS

The connector pinouts and notes given in this appendix are for custom cabling applications.

POWER, COM AND I/O CONNECTOR FOR STANDARD MODELS

The Matrix 320 reader is equipped with an M12 17-pin male connector for connection to the power supply, serial interfaces, and input/output signals. The details of the connector pins are indicated in the following table:

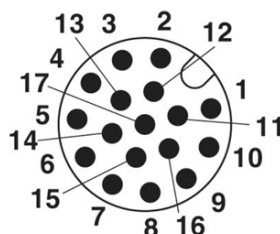


Figure 1 - M12 17-pin male Power, COM and I/O Connector

POWER, COM AND I/O CONNECTOR PINOUT			
PIN	NAME	DESCRIPTION	
1	Vdc	Power supply input voltage +	
2	GND	Power supply input voltage -	
Connector case	CHASSIS	Connector case provides electrical connection to the chassis	
6	I1A	External Trigger A (polarity insensitive)	
5	I1B	External Trigger B (polarity insensitive)	
13	I2A	Input 2 A (polarity insensitive)	
3	I2B	Input 2 B (polarity insensitive)	
9	O1	Output 1 *	(NPN, PNP or PP short circuit protected and software programmable)
8	O2	Output 2 *	
16	O3	Output 3	
14	RX	Auxiliary RS232 RX	
4	TX	Auxiliary RS232 TX	
7	ID+	ID-NET network data +	
15	ID-	ID-NET network data -	

POWER, COM AND I/O CONNECTOR PINOUT			
PIN	NAME	DESCRIPTION	
		RS232	RS422 Full-Duplex
17	Main Interface (SW Selectable)	TX	TX+
11		RX	RX+ **
12		-	TX-
10		-	*RX-

* Output 1 and Output 2 are opto-coupled when using a CBX.

** Do not leave floating, see "RS422 Full Duplex Interface" on page 94 for connection details.

In order to meet EMC requirements:

- connect the reader chassis to the plant earth ground by means of a flat copper braid shorter than 100 mm;
- connect your cable shield to the locking ring nut of the connector.

ON-BOARD ETHERNET CONNECTOR

An M12 X-Coded female connector is provided for the on-board Ethernet connection. This interface is IEEE 802.3 10 BaseT, IEEE 802.3u 100 BaseTx, and IEEE 802.3ab 1000BaseT compliant.

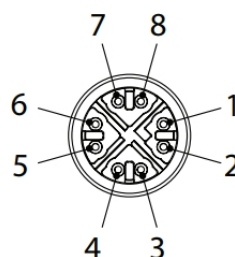


Figure 2 - M12 X-Coded Female Ethernet Network Connector

ON-BOARD ETHERNET NETWORK CONNECTOR PINOUT			
PIN	NAME	DESCRIPTION	
1	DA+	Bidirectional data DA+	
2	DA-	Bidirectional data DA-	
3	DB+	Bidirectional data DB+	
4	DB-	Bidirectional data DB-	
5	DD+	Bidirectional data DD+	
6	DD-	Bidirectional data DD-	
7	DC-	Bidirectional data DC-	
8	DC+	Bidirectional data DC+	

ID-NET NETWORK TERMINATION

The network must be properly terminated by a 120 Ohm resistor at the first and last reader of the network.

INPUTS

There are two opto-coupled polarity insensitive inputs available on the M12 17-pin connector of the reader: Input 1 (External Trigger) and Input 2, a generic input. See "[Inputs](#)" on page 101 for more details.

The electrical features of both inputs are:

INPUT	$ V_{AB} $ MIN.	$ V_{AB} $ MAX.	I_{IN} MAX.
Open	0 V	2 V	0 mA
Closed	4.5 V	30 V	10 mA

The relative pins on the M12 17-pin connector are:

INPUT PINOUT		
PIN	NAME	DESCRIPTION
1	Vdc	Power Supply input voltage +
6	I1A	External Trigger A (polarity insensitive)
5	I1B	External Trigger B (polarity insensitive)
13	I2A	Input 2 A (polarity insensitive)
3	I2B	Input 2 B (polarity insensitive)
2	GND	Power Supply input voltage -

OUTPUTS

Three general purpose **non opto-isolated** but short circuit protected outputs are available on the M12 17-pin connector.

The pinout is the following:

OUTPUT PINOUT		
PIN	NAME	DESCRIPTION
9	O1	Configurable digital output 1
8	O2	Configurable digital output 2
16	O3	Configurable digital output 3
2	GND	Output reference signal



NOTE

Output 1 and Output 2 are opto-coupled when using a CBX.

The electrical features of the three outputs are the following:

Reverse-Polarity and Short-Circuit Protected

V_{OUT} ($I_{LOAD} = 0$ mA) max = 30 Vdc

V_{OUT} ($I_{LOAD} = 100$ mA) max = 3 Vdc

I_{LOAD} max = 100 mA

The output signals are fully programmable being determined by the configured Activation/Deactivation events, Deactivation Timeout or a combination of the two. For further details refer to the Help On Line page for the Output Setup step in DL.CODE.

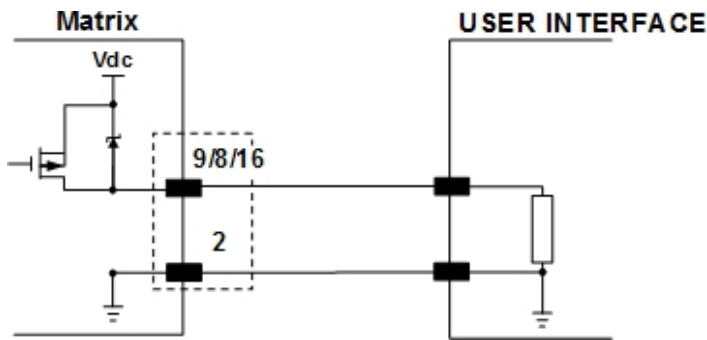


Figure 3 - PNP Output Connection

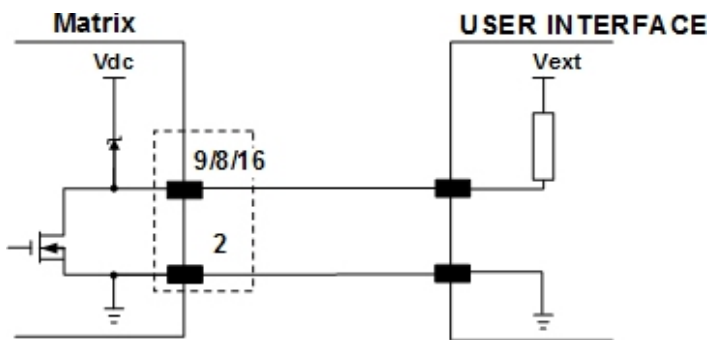


Figure 4 - NPN Output Connection



For NPN output connections, the external interface voltage (V_{ext}) must not exceed the Matrix 320 power supply source voltage (V_{dc}) otherwise correct output functioning cannot be guaranteed.


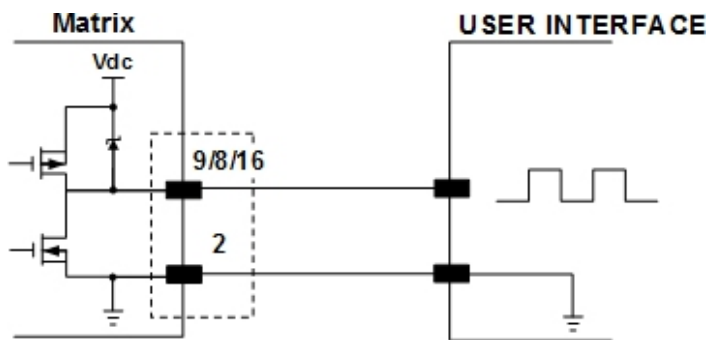


Figure 5 - Push-Pull Output Connection

USER INTERFACE - SERIAL HOST

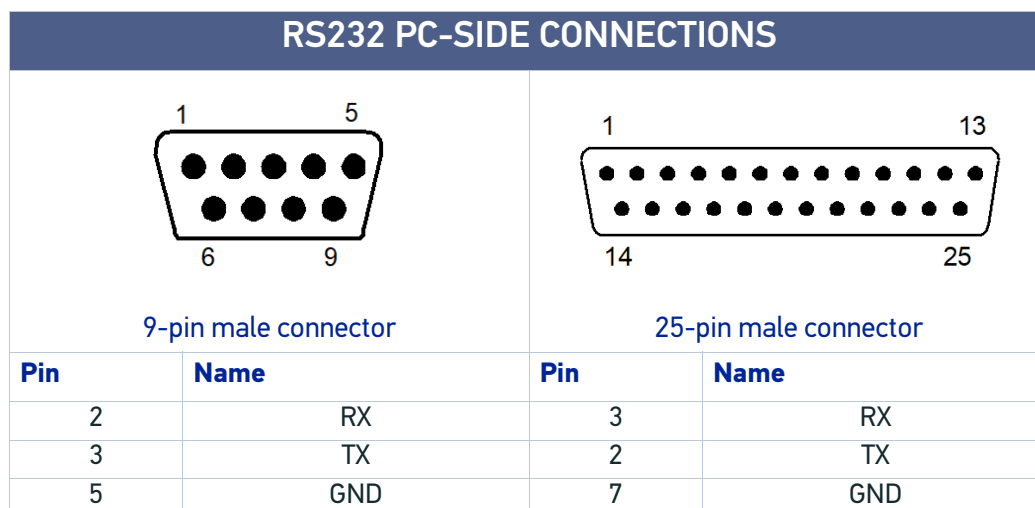

How To Build A Simple Interface Test Cable

The following wiring diagram shows a simple test cable including power, external (push-button) trigger and PC RS232 COM port connections.

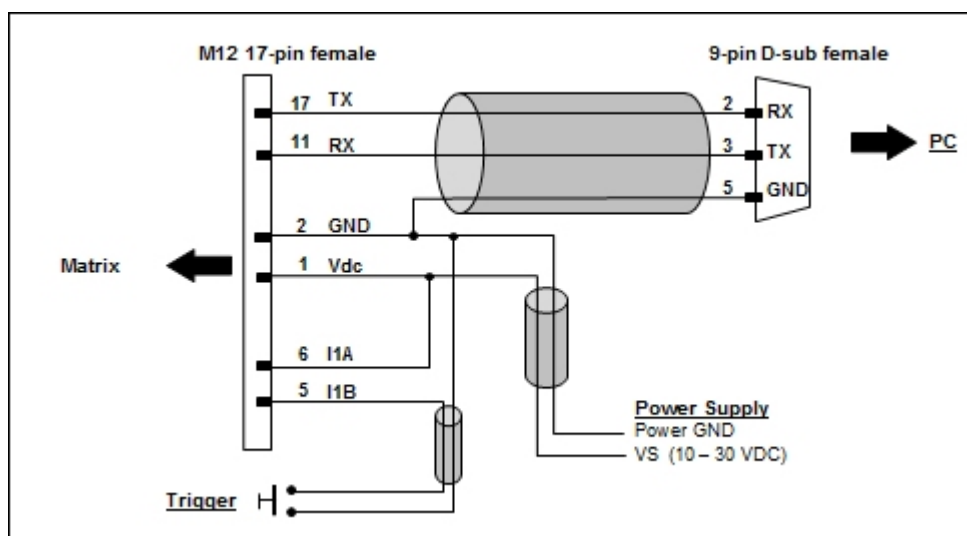


Figure 6 - Test Cable

APPENDIX C

EBC CONNECTION MODULE™



EBC (Ethernet Based Connectivity) is a network normally used for Laser Scanner interoperability.


Thanks to the EBC Connection Module™, Matrix readers and Laser Scanners can be connected to the same network as Slave devices using a SC5100 Controller as a Master.

PACKAGE CONTENT

Verify that the EBC Connection Module and all the parts supplied with the equipment are present and intact when opening the packaging. The list of parts includes:

- EBC Connection Module
- Installation Manual
- Mounting screws and washers (2)
- M12 protective caps (3)

GENERAL VIEW

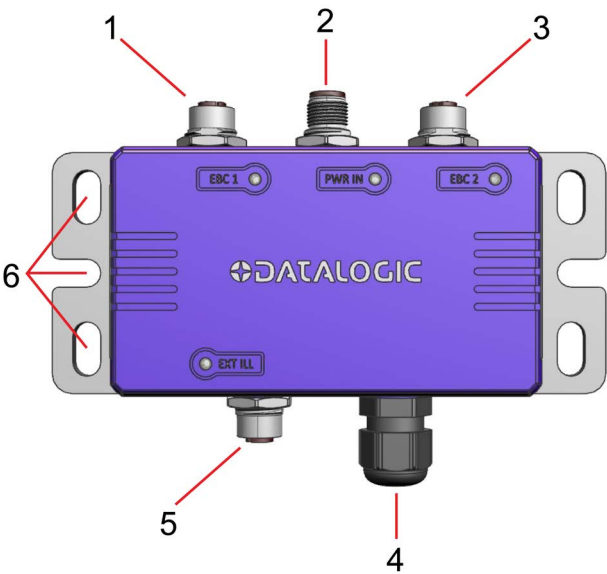


1. EBC 1 connector and LED	4. Pigtail connector
2. PWR IN connector and LED	5. EXT ILL connector and LED
3. EBC 2 connector and LED	6. Mounting slots (6)

MECHANICAL INSTALLATION

The EBC Connection Module is intended to be installed on Bosch frames with common T-head bolts. Alternatively, the screws and washers provided in the kit can be used.

The diagram below gives the overall dimensions of the module.

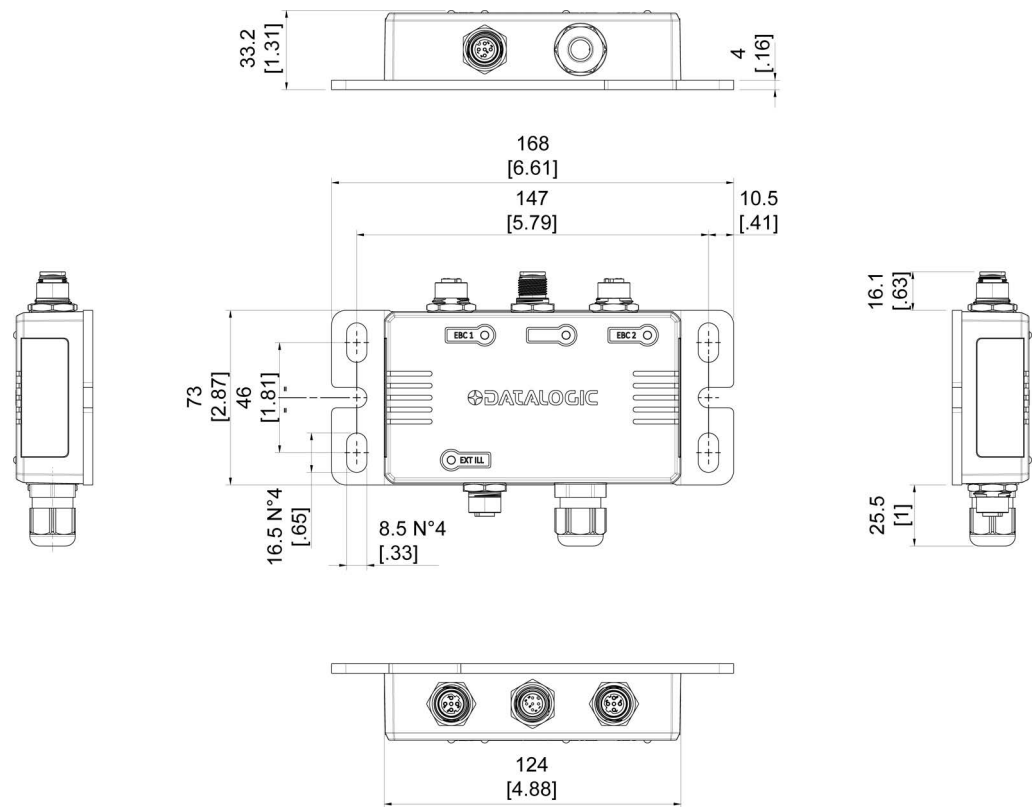

SYSTEM WIRING/CABLING

The connection and wiring procedure for the EBC Connection Module is described as follows:

1. Make sure that all EBC Connection Module M12 connectors are not connected.
2. Use the PWR Cable AS-I to M12 crimping it on the AS-I Bus as described in the instructions included in the AS-I cable package.
3. Connect the power supply cable to the PWR IN connector (with no other devices connected) and apply power. The blue LEDs of the PWR IN and EXT ILL connectors will turn on.
4. Once the proper connection to the power supply is established, disconnect the power supply.
5. Connect the M12 pigtail connector to the Matrix reader.
6. Connect the ETH ports to other devices in the EBC ring.
7. If desired, connect EXT ILL to an External Illuminator. If the connector is not used, do not remove the protective cap.
8. Power on the device.



To guarantee the module GND connection to Earth, the Bosch frame on which the module is mounted must be connected to Earth.

INDICATOR LEDs

There are four indicator LEDs.

PWR IN and EXT ILL

These LEDs light up blue when power is properly applied to the EBC Connection Module.


EBC 1

This LED blinks yellow when there is Link Activity on Port 1.

EBC 2

This LED blinks yellow when there is Link Activity on Port 2.

ELECTRICAL CONNECTIONS

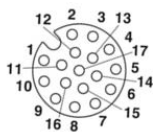


Pigtail connector - M12 17 poles female

PIN	NAME	DESCRIPTION
1	Vdc	24 V power supply input voltage + for Matrix readers
2	GND	24 V power supply input voltage - for Matrix readers
3	/	
4	RS232_RX	AUX Serial RX
5	/	
6	/	
7	/	
8	OUT2	Digital Output 2
9	/	
10	RS422_TXN	MAIN Serial TX-
11	RS422_TXP	MAIN Serial TX+
12	RS422_RXN	MAIN Serial RX-
13	/	
14	RS232_TX	AUX Serial TX
15	/	
16	OUT3	Digital Output 3
17	RS422_RXP	MAIN Serial RX+




PWR IN connector - M12 5 poles male

PIN	NAME	DESCRIPTION
1	Vcc	24 V power supply input voltage + for EBC module
2	/	
3	GND	24 V power supply input voltage - for EBC module
4	/	
5	/	



EXT ILL connector - M12 5 poles female

PIN	NAME	DESCRIPTION
1	Vcc	24 V power supply input voltage + for Ext. Illuminator
2	/	
3	GND	24 V power supply input voltage - for Ext. Illuminator
4	STROBE	Strobe signal for External Illuminator
5	/	

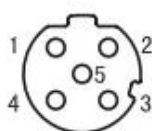

Ethernet connector - M12 5 poles female

PIN	NAME	DESCRIPTION
1	TX+	Ethernet TX+
2	RX+	Ethernet RX+
3	TX-	Ethernet TX-
4	RX-	Ethernet RX-
5	/	

SOFTWARE CONFIGURATION

Minimum software requirements

- DL.CODE / Matrix reader: version 1.11.3 and later
- SC5100: version 1.4.10 or version 1.6.x and later
- DX8210 / DS8110: version 3.8.1 and later
- DS5100 PNET: version 6.14.4 and later

Adding new devices to the network

1. Make sure to have the latest software versions installed on all devices used in the EBC network.
2. Connect to the SC5100 web page by:
 - entering the SC5100 IP address in the browser (default 192.168.1.100), OR
 - clicking on the SC5100 icon under the Device Selection menu in DL.CODE.
 Then log on to e-Genius (refer to the SC5100 Product Reference Guide for more information).

3. From DL.CODE, click on the SC5100 icon under the Device Selection menu and connect to the device.
4. From e-Genius, go to System Info > EBC Devices.
5. Assign an ID node to the devices to be connected to the network. Note that all devices outside the EBC network appear at the bottom of the page. If the list is empty, click Discover Scanners and wait. Then add the node ID to the discovered devices.
6. Click on Update All to confirm the new configuration.

Configuration

7. From e-Genius, go to Global Settings > Operating Mode, and select the operating mode for your application.



NOTE

The Matrix reader does not support Continuous mode.

8. Go to Global Settings > Barcode Settings Table and select the symbologies to decode.
9. From DL.CODE, connect to the Matrix reader to start configuration (it will appear under the SC5100 cluster).
10. Configure the Matrix reader according to the Operating Mode selected on the SC5100.

ACCESSORIES

Accessory	Order No.
PWR IN cables	
AS-I to M12 straight - 1mt	93ACC0067
AS-I to M12 straight - 2mt	93ACC0068
Ethernet cables	
ETH Cable M12-M12 (Straight-Straight) - 1mt	93A050065
ETH Cable M12-M12 (Straight-Straight) - 3mt	93A050066
ETH Cable M12-M12 (Straight-Straight) - 5mt	93A050067
Illuminator cables	
CBL-1480-01 M12/5P MALE/FEMALE 1M IDNET	93A050049
CBL-1480-02 M12/5P MALE/FEMALE 2M IDNET	93A050050

*For a complete list of the available accessory cables, see the product page on www.data-logic.com.

TYPICAL LAYOUTS


Large Synchronized Network Layout

The SC5100 controller can be connected to the host in several different layouts, depending on the controller model and host interfaces.

External devices (e.g. presence sensor, encoders) are all connected to the SC5100 through a CBX510 connection box using one of the two I/O connectors.


Ethernet TCP/IP to Host

The host can be connected to the controller through an Ethernet direct cable or through a hub/switch:

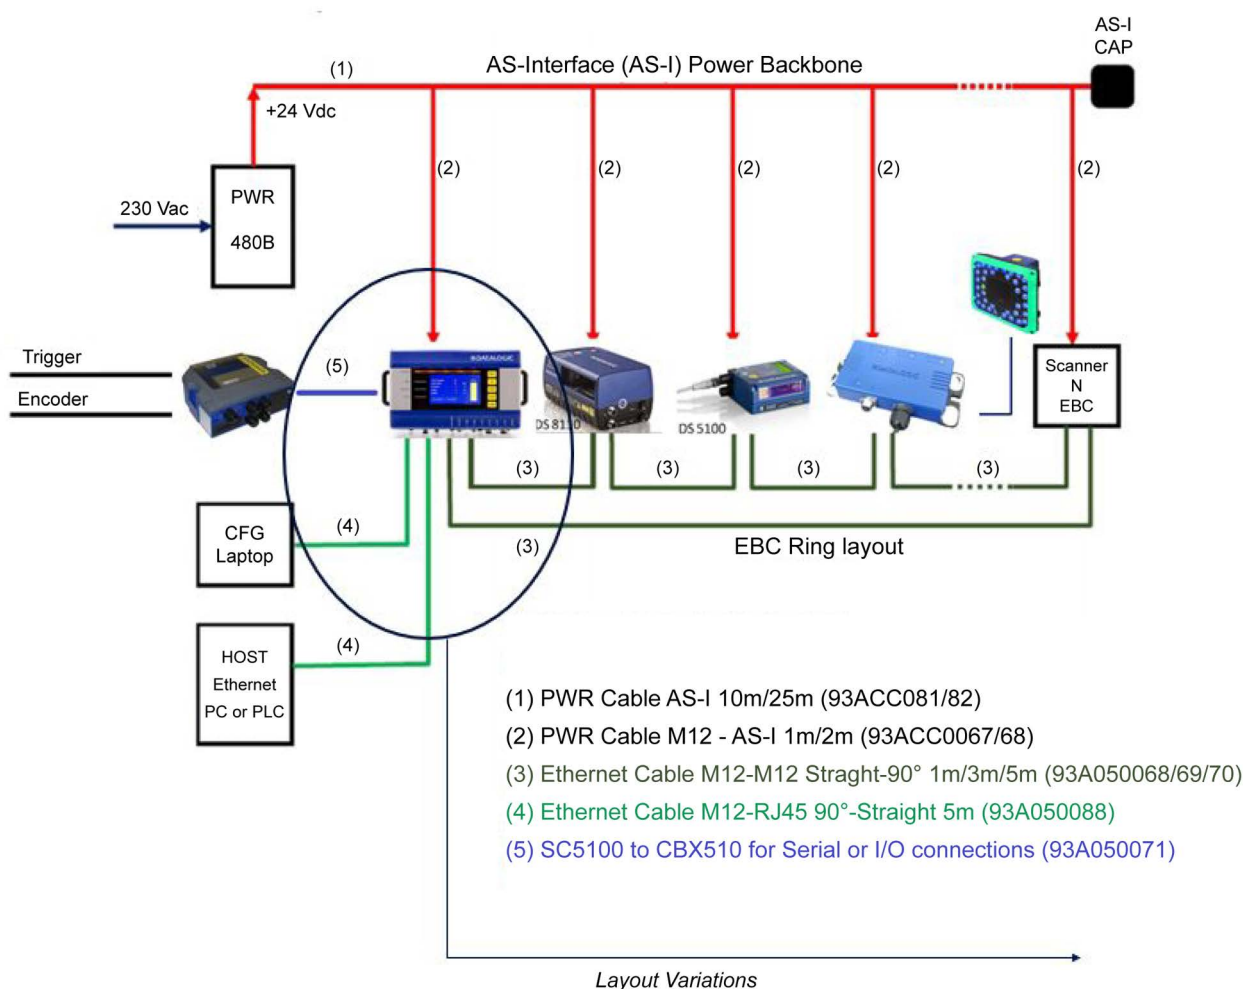


COM to Host

The host can be connected via COM (RS232 or RS422) to the controller through a CBX510.

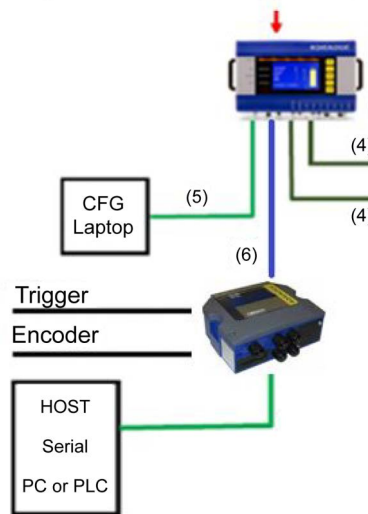

Fieldbus to Host


The host can be connected to a SC5100 dedicated Fieldbus model.

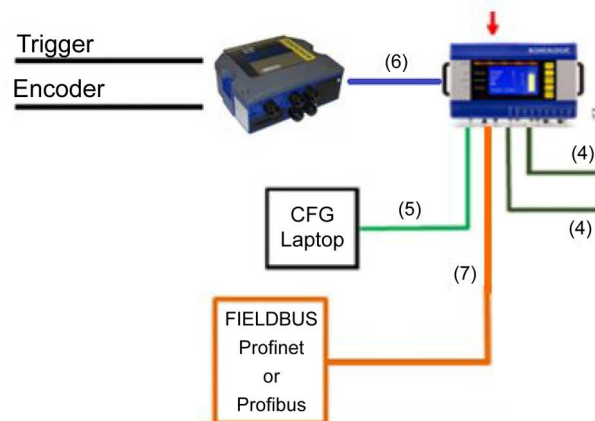

EBC - Syncnet Mixed Layout

The SC5100 controller allows compatible Slave devices to connect to a Syncnet Network.


The EBC controller in this layout allows communication between Laser Scanners, AV readers and Matrix readers.

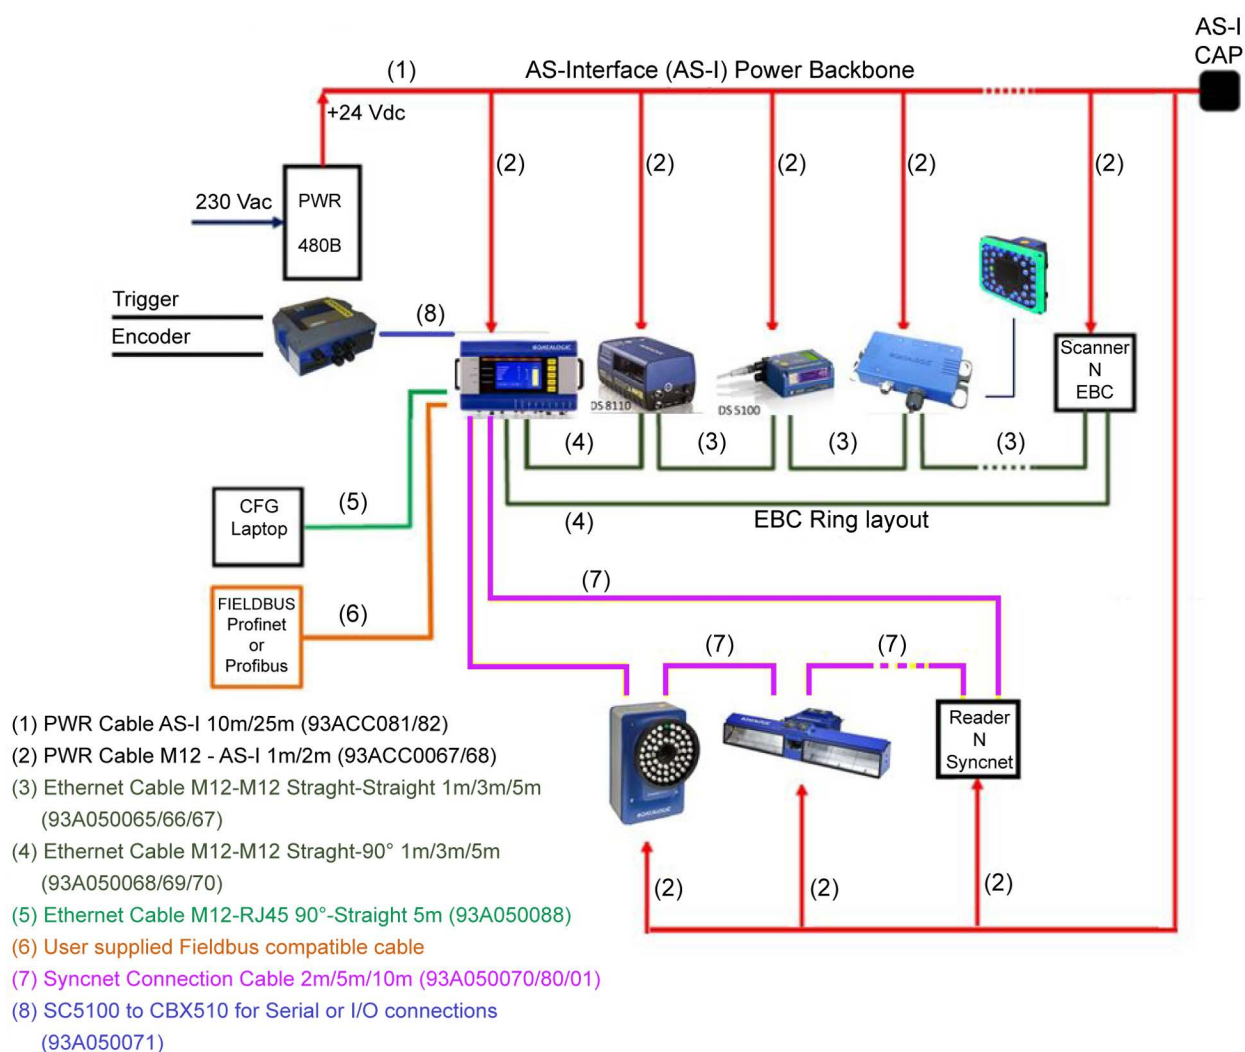

Redundant System Layout


For large local EBC networks, a redundant system can be configured in which two controllers are used together with their respective PWR power supply units. The scanners are distributed equally between the PWR units.

In this case, one of the controllers acts as a Working Master or active unit, while the other serves as a Protecting Master or backup unit.

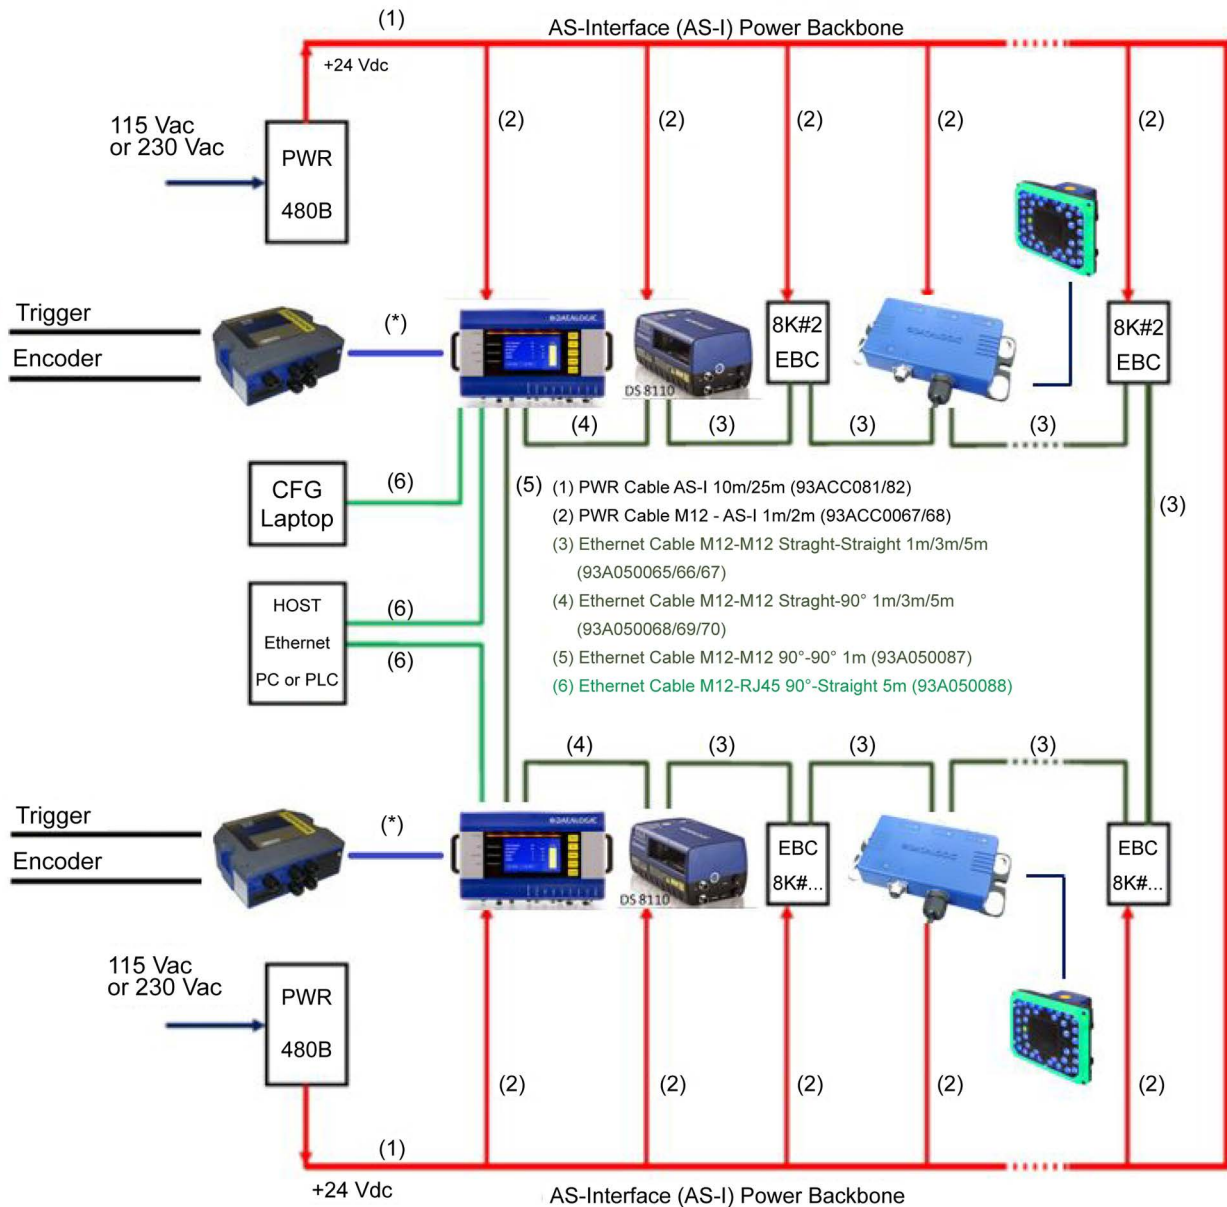

Redundant System Layout with Host supporting Serial COM Communications

A host that supports COM communications can be connected to the controller through a CBX510 (one for each controller).

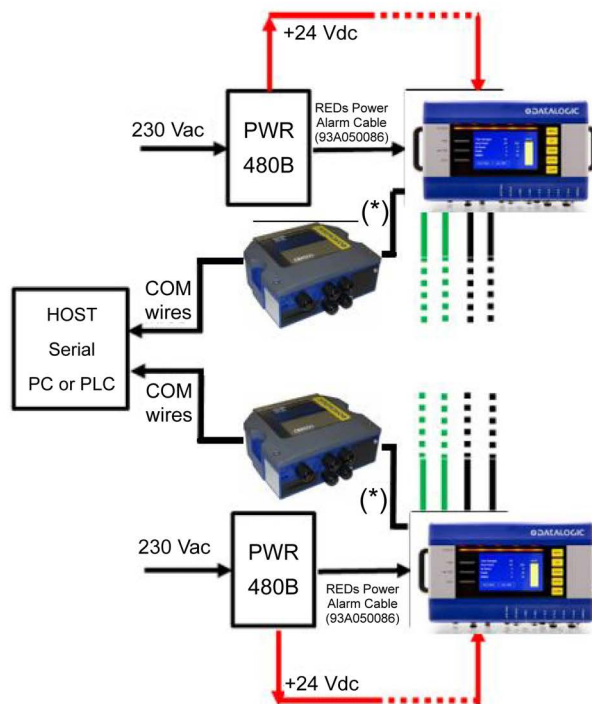

(*) SC5100 to CBX510 for Serial or I/O connections (93A050071)

TECHNICAL SPECIFICATIONS

ELECTRICAL FEATURES

Power

Supply Voltage	24 Vdc
Consumption *	0.05 A
Overcurrent protection	2.6 A

* Consumption of the EBC Connection Module alone. Total Power Consumption is given by adding the EBC Connection Module power consumption to that of all the devices powered through the EBC Connection Module (reading device, illuminator). Refer to the manuals of the connected devices for details about their power consumption.

COMMUNICATION INTERFACES

Ethernet

Pigtail (up to 10 Mbps)
EBC (10/100 Mbps)

USER INTERFACE

LED indicators

Power In (Blue)
External Illuminator (Blue)
2 EBC Links (Orange)

PHYSICAL FEATURES

Dimensions	H x W x L 170 x 72 x 32 mm (6.7 x 2.8 x 1.3 in)
Pigtail cable length	50 mm (2 in)
Weight	435 g (15.3 oz)
Material	Aluminum

ENVIRONMENTAL FEATURES	
Operating temperature	-10 to 50 °C (+14 to 122 °F)
Storage temperature	-20 to 70 °C (-4 to 158 °F)
Humidity max.	90% non condensing
Sinusoidal vibration resistance EN 60068-2-6	14 mm @ 2 to 10 Hz; 1.5 mm @ 13 to 55 Hz; 2 gn @ 70 to 500 Hz; 2 hours on each axis
Bump resistance EN 60068-2-29	30 g; 6 mm; 5000 shocks on each axis
Shock resistance EN 60068-2-29	30 g; 11 ms; 3 shocks on each axis
Protection class EN 60529	IP65 and IP67 **

** When all the M12 connectors and reading devices are correctly connected (or closed with proper protection caps).

GLOSSARY

AIM

(Association for Automatic Identification and Mobility): AIM Global is the international trade association representing automatic identification and mobility technology solution providers.

AIM DPM Quality Guideline

Standard applicable to the symbol quality assessment of direct part marking (DPM) performed in using two-dimensional bar code symbols. It defines modifications to the measurement and grading of several symbol quality parameters.

Barcodes (1D Codes)

A pattern of variable-width bars and spaces which represents numeric or alphanumeric data in machine-readable form. The general format of a barcode symbol consists of a leading margin, start character, data or message character, check character (if any), stop character, and trailing margin. Within this framework, each recognizable symbology uses its own unique format.

BIOS

Basic Input Output System. A collection of ROM-based code with a standard API used to interface with standard PC hardware.

Bit

Binary digit. One bit is the basic unit of binary information. Generally, eight consecutive bits compose one byte of data. The pattern of 0 and 1 values within the byte determines its meaning.

Bits per Second (bps)

Number of bits transmitted or received per second.

Bright Field Illumination

Lighting of surfaces at high (narrow) angles used to provide maximum reflection of the light to the reader's lens. This is effective on surfaces that absorb light or are not highly reflective and also on low contrast codes.

Byte

On an addressable boundary, eight adjacent binary digits (0 and 1) combined in a pattern to represent a specific character or numeric value. Bits are numbered from the right, 0 through 7, with bit 0 the low-order bit. One byte in memory can be used to store one ASCII character.

Composite Symbologies

Consist of a linear component, which encodes the item's primary data, and an adjacent 2D composite component, which encodes supplementary data to the linear component.

Dark Field Illumination

Lighting of surfaces at wide angles used to avoid direct reflection of the light into the reader's lens. Typically this type of lighting is used in DPM solutions to enhance reflectance of the uneven surface due to the symbol marking technique. It is also used with very reflective surfaces.

Decode

To recognize a barcode symbology (*e.g.*, Codabar, Code 128, Code 3 of 9, UPC/EAN, etc.) and analyze the content of the barcode scanned.

Depth of Field

The difference between the minimum and the maximum distance of the object in the field of view that appears to be in focus.

Diffused Illumination

Distributed soft lighting from a wide variety of angles used to eliminate shadows and direct reflection effects from highly reflective surfaces.

Direct Part Mark (DPM)

A symbol marked on an object using specific techniques like dot peening, laser etching, chemical etching, etc.

EEPROM

Electrically Erasable Programmable Read-Only Memory. An on-board non-volatile memory chip.

Element

The basic unit of data encoding in a 1D or 2D symbol. A single bar, space, cell, dot.

Exposure Time

For digital cameras based on image sensors equipped with an electronic shutter, it defines the time during which the image will be exposed to the sensor to be acquired.

Flash

Non-volatile memory for storing application and configuration files.

Host

A computer that serves other terminals in a network, providing services such as network control, database access, special programs, supervisory programs, or programming languages.

Image Processing

Any form of information processing for which the input is an image and the output is for instance a set of features of the image.

Image Resolution

The number of rows and columns of pixels in an image. The total number of pixels of an image sensor.

Image Sensor

Device converting a visual image to an electric signal. It is usually an array of CCD (Charge Coupled Devices) or CMOS (Complementary Metal Oxide Semiconductor) pixel sensors.

IEC

(International Electrotechnical Commission): Global organization that publishes international standards for electrical, electronic, and other technologies.

IP Address

The terminal's network address. Networks use IP addresses to determine where to send data that is being transmitted over a network. An IP address is a 32-bit number referred to as a series of 8-bit numbers in decimal dot notation (e.g., 130.24.34.03). The highest 8-bit number you can use is 254.

ISO

(International Organization for Standardization): A network of the national standards institutes of several countries producing world-wide industrial and commercial standards.

LED (Light Emitting Diode)

A low power electronic light source commonly used as an indicator light. It uses less power than an incandescent light bulb but more than a Liquid Crystal Display (LCD).

LED Illuminator

LED technology used as an extended lighting source in which extra optics added to the chip allow it to emit a complex radiated light pattern.

Matrix Symbolologies (2D Codes)

An arrangement of regular polygon shaped cells where the center-to-center distance of adjacent elements is uniform. Matrix symbols may include recognition patterns which do not follow the same rules as the other elements within the symbol.

Multi-row (or Stacked) Symbolologies

Symbolologies where a long symbol is broken into sections and stacked one upon another similar to sentences in a paragraph.

RAM

Random Access Memory. Data in RAM can be accessed in random order, and quickly written and read.

Symbol Verification

The act of processing a code to determine whether or not it meets specific requirements.

Transmission Control Protocol/Internet Protocol (TCP/IP)

A suite of standard network protocols that were originally used in UNIX environments but are now used in many others. The TCP governs sequenced data; the IP governs packet forwarding. TCP/IP is the primary protocol that defines the Internet.

© 2020-2023 Datalogic S.p.A. and /or its affiliates • All rights reserved • Without limiting the rights under copyright, no part of this documentation may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means, or for any purpose, without the express written permission of Datalogic S.p.A. and/or its affiliates • Datalogic and the Datalogic logo are registered trademarks of Datalogic S.p.A. in many countries, including the U.S. and the E.U.



Datalogic S.r.l.

Via S. Vitalino, 13 | 40012 Calderara di Reno | Bologna - Italy
Tel. +39 051 3147011 | Fax +39 051 3147205